

Configuring Initial Properties for the SDX SNMP Agent (C-Web Interface)

To configure properties for the SDX SNMP agent:

1. Click **Configure**, and expand **SNMP > Agent > Initial**.

The Initial pane appears.

2. Enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- [Configuring Initial Properties for the SDX SNMP Agent \(C-Web Interface\) on page 1](#)
 - [Configuring General Properties for the SDX SNMP Agent \(C-Web Interface\)](#)
 - [Configuring the SDX SNMP Agent \(C-Web Interface\)](#)
 - [Monitoring the SDX SNMP Agent \(C-Web Interface\)](#)

Published: 2009-09-18