

## Configuring System Information for the SNMP Agent (C-Web Interface)

---

To configure properties for the SNMP agent:

1. Click **Configure**, and expand **SNMP > Agent**.

The Agent pane appears.

2. Enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- Configuring the SNMP Agent (C-Web Interface)
  - Configuring System Information for the SNMP Agent (SRC CLI)
  - Configuring SNMP Custom Monitors (C-Web Interface)

---

Published: 2009-09-18