

Configuring the Pseudo-RADIUS Server for External Subscriber Monitor (C-Web Interface)

To configure the RADIUS accounting server:

1. Click **Configure > Slot**, then a specified slot (for example, slot0).
2. Expand **External Subscriber Monitor**.
3. Click **Radius Accounting**.

The RADIUS Accounting pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

Published: 2009-09-18