

Starting the JPS (C-Web Interface)

You must start the JPS when you install the JPS without rebooting the JPS host.

To start the JPS:

1. Click **Manage > Enable**.

The Enable pane appears.

2. From the **Component** list, select **JPS**, and click **OK**.

The system responds with a start message. If the JPS is already running, the system responds with a warning message.

- Related Topics**
- Restarting the JPS (C-Web Interface)
 - Stopping the JPS (C-Web Interface)
 - Monitoring the SDX SNMP Agent (C-Web Interface)
 - Displaying JPS Status (C-Web Interface)
 - Configuring the JPS (C-Web Interface)
 - Overview of the JPS

Published: 2009-09-18