

Stopping a NIC Host on a C Series Controller (SRC CLI)

If you run NIC in client/server mode, you can stop the NIC host independently of the NIC proxy.

To stop a NIC host:

- From operational mode, disable the NIC.

```
user@host> disable component nic
```

- Related Topics**
- Stopping a NIC Host on a C Series Controller (C-Web Interface)
 - Restarting the NIC (SRC CLI)
 - Restarting a NIC Agent (SRC CLI)
 - Restarting a NIC Resolver (SRC CLI)
 - Changing NIC Configurations (SRC CLI)

Published: 2009-09-15