

## Stopping a NIC Host on a C Series Controller (C-Web Interface)

---

If you run the NIC in client/server mode, you can stop the NIC host independently of the NIC proxy.

To stop a NIC host:

1. Click **Manage > Disable**.
2. In the Component list in the main pane, select **NIC**, and click **OK**.

- Related Topics**
- Restarting the NIC (C-Web Interface)
  - Stopping a NIC Host on a C Series Controller (SRC CLI)
  - Starting the NIC (C-Web Interface)

---

Published: 2009-09-18