

Restarting the NIC (SRC CLI)

To restart a NIC host:

- From operational mode, restart the NIC.

```
user@host> request restart nic
```

You can also restart the NIC at the slot level.

- Related Topics**
- Stopping a NIC Host on a C Series Controller (SRC CLI)
 - Restarting a NIC Agent (SRC CLI)
 - Restarting a NIC Resolver (SRC CLI)
 - Changing NIC Configurations (SRC CLI)
 - Restarting the NIC (C-Web Interface)

Published: 2009-09-15