

Restarting the NIC (C-Web Interface)

To restart a NIC host:

1. Click **Manage > Restart**.
2. In the Component list in the main pane, select **NIC**, and click **OK**.

- Related Topics**
- Stopping a NIC Host on a C Series Controller (C-Web Interface)
 - Restarting the NIC (SRC CLI)
 - Starting the NIC (C-Web Interface)
 - Configuring the NIC (C-Web Interface)

Published: 2009-09-18