

## Starting the NIC (SRC CLI)

---

Start the NIC component before you configure it. When you enable NIC for the first time, it creates the default operating properties for the component.

To start NIC:

- From operational mode, enable the NIC.  

```
user@host> enable component nic
```

Starting NICHOST: may take a few minutes...

- Related Topics**
- Starting the NIC (C-Web Interface)
  - Configuring the NIC (SRC CLI)
  - Reviewing and Changing Operating Properties for the NIC (SRC CLI)
  - Restarting the NIC (SRC CLI)
  - Stopping a NIC Host on a C Series Controller (SRC CLI)

---

Published: 2009-09-15