

Before You Configure Redundancy for a Redirect Server

If you plan to use a redundant configuration for the redirect server, ensure that:

- If you use a next-hop address for policies that capture web traffic and send it to the redirect server, that the virtual IP address to be used is also the next-hop address.
- The redirect server has SNMP write access to the virtual routers connected to it. Each VR must have at least a write community configured. (The static route from the virtual IP address to the server's real IP address is installed on the router through SNMP.)
- If additional access controls are enabled on the JUNOSe router, the hosts on which the redirect server runs must be included.

Related Topics

- [Configuring a Redundant Redirect Server \(SRC CLI\)](#)
- [Configuring a Redundant Redirect Server \(C-Web Interface\)](#)
- [Overview of Traffic Redirection](#)
- [Redirect Server Redundancy](#)

Published: 2009-09-13