

Reloading the SAE Configuration

To reload the SAE configuration data from the directory:

```
user@host> request sae load configuration
```

The new configuration takes effect immediately.

- Related Topics**
- Initially Configuring the SAE
 - Reloading the SAE Data
 - For more information about monitoring the SAE data with the SRC CLI, see Viewing Information About the Directory Blacklist with the CLI
 - Reloading Services

Published: 2009-09-15