

Stopping the SAE with the C-Web Interface

To stop the SAE:

1. Click **Manage > Disable**.

The Disable pane appears.

2. From the Component list, select **SAE**, and click **OK**.

- Related Topics**
- Stopping the SAE (SRC CLI)
 - Starting the SAE with the C-Web Interface
 - Role of the SAE

Published: 2009-09-18