

Starting the SDX SNMP Agent (C-Web Interface)

You must configure the SNMP agent and then manually start the agent. If you attempt to manually start the SNMP agent before it is configured, the software displays a message that the agent has not been configured and cannot start.

The SNMP agent automatically restarts in the event of a host reboot or process failure that stops the agent.

Before you start the SDX SNMP agent:

1. Perform the initial configuration tasks on the C Series Controller.
2. Configure the SDX SNMP agent.

See [Configuring the SDX SNMP Agent \(C-Web Interface\)](#).

Manually start the SDX SNMP agent the first time it runs. Thereafter, the agent automatically restarts.

To start the SNMP agent:

1. Click **Manage > Enable**.
2. From the Component box, select **agent**.

The system responds with a start message. If the SNMP agent is already running, the system responds with a warning message indicating that fact.

- Related Topics**
- [Starting the SDX SNMP Agent](#)
 - [Stopping the SDX SNMP Agent \(C-Web Interface\)](#)
 - [Monitoring the SDX SNMP Agent \(C-Web Interface\)](#)

Published: 2009-09-18