

Starting External Subscriber Monitor with the C-Web Interface (C-Web Interface)

To start the External Subscriber Monitor:

1. Click **Manage > Enable**.

The Enable pane appears.

2. From the Component list, select **exsubmonr**, and click **OK**.

Published: 2009-09-18