

Verifying the Configuration for SRC Directory Access

Purpose Verify the configuration for directory connections.

Action 1. From configuration mode, access the configuration statement that configures the directory connection for the CLI.

```
[edit]
user@host# edit system ldap client
```

2. Run the show command. For example:

```
[edit system ldap client]
user@host# show
base-dn o=UMC;
url ldap://127.0.0.1;
principal cn=cli,ou=components,o=operators,<base>;
credentials *****;
timeout 10;
time-limit 5000;
eventing;
polling-interval 30;
connection-manager-id CLI_DATA_MANAGER;
dispatcher-pool-size 1;
event-base-dn o=UMC;
signature-dn o=UMC;
blacklist;
```

Related Topics

- Changing Access to the Directory that Stores SRC Configuration Data
- Viewing Information About the SRC CLI

Published: 2009-09-25