

## Viewing Statistics for Device Drivers with the CLI

---

**Purpose** View SNMP statistics for all device drivers.

**Action** user@host> **show sae statistics device common**

### SNMP Statistics

Driver type	JUNOSE COPS
Number of close requests	0
Number of connections accepted	0
Number of current connections	0
Number of open requests	0
Server address	0.0.0.0
Server port	3288
Time since last redirect	0

### SNMP Statistics

Driver type	PACKETCABLE COPS
Number of close requests	0
Number of connections accepted	0
Number of current connections	0
Number of open requests	0
Server address	0.0.0.0
Server port	0
Time since last redirect	0

### SNMP Statistics

Driver type	JUNOS
Number of close requests	0
Number of connections accepted	0
Number of current connections	0
Number of open requests	0
Server address	0.0.0.0
Server port	3333
Time since last redirect	0

The value of the server address can be either an IPv4 or IPv6 address, depending on the platform.

- Related Topics**
- Shutting Down the Device Drivers (C-Web Interface)
  - Viewing Information About SAE Device Drivers with the CLI
  - Viewing SNMP Information for Routers and Devices with the CLI
  - Viewing Statistics for Specific Device Drivers with the CLI

---

Published: 2009-09-10