

## Local Properties for SRC Components

---

Before you configure an SRC component, configure the component's local properties. In many cases you can use the default configuration. From the CLI, local properties are configured for a slot. On a C Series Controller, the slot configuration is applied to the appropriate slot.

- Related Topics**
- For information about managing SRC components with the SRC CLI, see the *SRC PE CLI User Guide*
  - SRC Component Overview
  - Configuring SRC Components
  - Configuring Basic Local Properties
  - Viewing Information About Components Installed (SRC CLI)

---

Published: 2009-09-25