

Creating an SRC Configuration

You configure the SRC software by entering configuration mode and creating a hierarchy of configuration mode statements.

Users must have configure permission to view and use the `configure` command to enter configuration mode. When in configuration mode, users can view and modify only those statements for which they have access privileges set.

- Related Topics**
- SRC Configuration Updates
 - Understanding SRC CLI Configuration Mode
 - Entering Configuration Mode
 - Committing a Configuration and Exiting Configuration Mode
 - When Multiple Users Configure the Software
 - Verifying a Configuration

Published: 2009-09-10