

Obtaining an SRC License

Before you install the SRC software, collect information about the system that will run the SAE as described in the following sections; then contact Juniper Networks Customer Services and Support and provide this system information to obtain a license.

Pilot License

To obtain a pilot license, you must provide the following information:

- Username to be listed in the license key
- Host ID of the SAE host (or the host IDs of all hosts if you have more than one)
- Number of concurrent users that you want to be able to connect to the SAE

You can determine the host ID by issuing the following command on a C Series Controller:

```
user@host> show system information
```

Look for the value for **Hostid** in the output; for example:

```
Hostid      e30a2e07
```

Server License

To obtain a server license, you must provide the following information:

- Username to be listed in the license key
- Maximum number of concurrently active SAE services that you require
- Time interval for which you need the server license
- IP address or hostname of the license server. The SAE requires access to this IP address or hostname.

Related Topics

- Types of SRC Licenses
- Installing a Pilot License (SRC CLI)
- Installing Server Licenses for C Series Controllers (SRC CLI)

Published: 2009-09-25