

Configuring SRC ACP

To use SRC ACP in an SRC network, perform the following configuration tasks:

1. (Optional) Creating Grouped Configurations for SRC ACP
2. Configuring Local Properties for SRC ACP
3. Configuring the SAE for SRC ACP
4. Configuring SRC ACP Properties
5. (Edge and dual mode only) Configuring SRC ACP to Manage the Edge Network
6. (Backbone and dual mode only) Configuring SRC ACP to Manage the Backbone Network
7. Starting SRC ACP

You can automate and scale the configuration of congestion points using congestion point classification. For more information, see [Classifying Congestion Points](#).

Related Topics

- [Configuring SRC ACP \(C-Web Interface\)](#)
- [Viewing General Statistics for SRC ACP \(C-Web Interface\)](#)
- [Configuration Statements for SRC ACP](#)
- [Overview of SRC ACP](#)

Published: 2009-09-15