

Defining a Congestion Point Profile (C-Web Interface)

You can create a congestion point profile that automatically performs congestion point classification. This profile supports only edge mode and dual mode for SRC ACP.

To define a congestion point profile:

1. Click **Configure > Shared > Congestion Points**.

The Congestion Point Profile pane appears.

2. In the Create new list, select **Profile**. Type a name for the new profile in the dialog box, and click **OK**.

The Profile screen appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Congestion Point Expressions
 - Classifying Interfaces (SRC CLI).
 - Configuring Congestion Point Classification (C-Web Interface)
 - Overview of Congestion Point Classification

Published: 2009-09-18