

Configuring SRC ACP (C-Web Interface)

To use SRC Admission Control Plug-In (ACP) in the SRC network, you must perform some configuration. For information about these configuration procedures, see:

1. (Optional) Configure a grouped configuration for SRC ACP.
2. Configuring Local Properties for SRC ACP (C-Web Interface)
3. Configuring the SAE for SRC ACP (C-Web Interface)
4. Configuring SRC ACP Properties (C-Web Interface)
5. (Edge and dual mode only) Configuring SRC ACP to Manage the Edge Network (C-Web Interface)
6. (Backbone and dual mode only) Configuring SRC-ACP to Manage the Backbone Network (C-Web Interface)

You can automate and scale the configuration of congestion points using congestion point classification. For more information, see [Configuring NIC Test Data \(SRC CLI\)](#) and [Configuring Congestion Point Classification \(C-Web Interface\)](#).

- Related Topics**
- [Configuring ACP to Store Log Messages in a File \(C-Web Interface\)](#)
 - [Overview of SRC ACP](#)

Published: 2009-09-18