

## Configuring RADIUS Authentication (C-Web Interface)

---

To configure information about RADIUS servers for authentication:

1. Click **Configure > System**.

The System pane appears.

2. From the Create new list, select **RADIUS Server**.
3. Type an IPv4 address or IPv6 address in the dialog box, and click **OK**.

The RADIUS Server pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

To configure a set of users that share a single account for authorization purposes, you create a template user.

- Related Topics**
- Configuring RADIUS Authentication (SRC CLI)
  - Configuring RADIUS and TACACS + Authentication on a C Series Controller (C-Web Interface)
  - Configuring Authentication Order
  - Removing an Authentication Method from the Authentication Order

---

Published: 2009-09-18