

Modifying the JPS Configuration

To modify the current JPS configuration:

1. Configure general properties for the JPS, including Java heap memory, maximum number of buffered messages for CMTS and application manager destinations, and policy server identifiers.

See [Configuring General Properties for the JPS](#) .

See [Specifying Policy Server Identifiers in Messages](#) .

2. Configure logging destinations for the JPS.

See [Configuring Logging Destinations for the JPS](#) .

3. Configure the connections to the JPS interfaces.

See [Specifying Connections to the Application Managers](#) .

See [Specifying Connections to CMTS Devices](#) .

- Related Topics**
- [Overview of the JPS](#)
 - [Modifying the JPS Configuration \(C-Web Interface\)](#)
 - [Configuring the JPS](#)
 - [Viewing JPS State](#)

Published: 2009-09-23