

Configuring Information to Test the Network Publisher (C-Web Interface)

You can use an input file to verify that the network publisher is collecting information as configured or to set up a demonstration for an application.

To configure the network publisher to use an input file:

- Click **Configure**, expand **Slot**, expand the slot for which you want to configure the network publisher, and then expand **Network Publisher > Routers > Test Mode**.

Or

Click **Configure**, expand **Slot**, expand the slot for which you want to configure the network publisher, and then expand **Network Publisher > Routers > *specific-router* > Test Mode**.

The Test Mode pane appears.

- Select **Enable Input File**.

Related Topics

- Troubleshooting Network Publisher Operations
- Configuring the Network Publisher (C-Web Interface)
- Overview of the Network Publisher

Published: 2009-09-18