

Configuring the NIC (SRC CLI)

Before you configure the NIC, complete the prerequisite tasks.

See [Before You Configure the NIC](#) .

To configure the NIC:

1. Start the NIC component.

See [Starting the NIC \(SRC CLI\)](#).

2. Configure NIC operating properties.

See [Reviewing and Changing Operating Properties for the NIC \(SRC CLI\)](#).

3. Configure NIC replication.

See [Reviewing and Changing Operating Properties for the NIC \(SRC CLI\)](#).

4. (Optional) If you plan to use a configuration scenario other than OnePop (the default), delete any data for the OnePop scenario and configure the scenario name to specify the configuration scenario.

See [Changing NIC Configurations \(SRC CLI\)](#).

5. Configure a NIC scenario.

See [Configuring a NIC Scenario \(SRC CLI\)](#).

6. Verify the NIC configuration.

See [Verifying Configuration for the NIC \(SRC CLI\)](#).

- Related Topics**
- [Testing a NIC Resolution \(SRC CLI\)](#)
 - [Configuration Statements for the NIC](#)

Published: 2009-09-15