

Configuring an NTP Peer for a C Series Controller (C-Web Interface)

To configure NTP to operate as a peer:

1. Click **Configure**, expand **System**, and then click **NTP**.

The NTP pane appears.

2. In the Create new list, select **Peer**. Type an IPv4 or IPv6 address for the server and click **OK**.
3. Enter information as described in the Help text in the main pane, and click **Apply**.



NOTE: If the remote system has authentication enabled, specify an authentication key and value. The system transmits the specified authentication key when transmitting packets.

- Related Topics**
- NTP Support on C Series Controllers
 - Configuring NTP on a C Series Controller

Published: 2009-09-18