

## Specifying the PCMM Classifier Type (SRC CLI)

---

Use the following configuration statement to specify which version of the PCMM classifiers you are using:

```
shared sae configuration driver pcmm {  
    disable-pcmm-iO3-policy disable-pcmm-iO3-policy ;  
}
```

To specify whether or not the SAE sends classifiers to the router that comply with PCMM IO3:

1. From configuration mode, access the configuration statement that configures the PCMM driver.

```
user@host# edit shared sae configuration driver pcmm
```

2. Enable or disable the SAE to send classifiers to the router that comply with PCMM IO3. Disable this option if your network deployment has CMTS devices that do not support PCMM IO3.

```
[edit shared sae configuration driver pcmm]  
user@host# set disable-pcmm-iO3-policy disable-pcmm-iO3-policy
```

- Related Topics**
- Before You Configure Classify-Traffic Conditions
  - Delivering QoS Services in a Cable Environment
  - Configuring Classify-Traffic Conditions
  - Specifying the PCMM Classifier Type (C-Web Interface)

---

Published: 2009-09-22