

Changing the Number of Requests That the Redirect Server Accepts (C-Web Interface)

If you want to change the number of redirection requests that the redirect server accepts, change the values for the request rates and the client rates.

To configure the number of redirection requests that the redirect server can accept:

1. Click **Configure > Redirect Server**.

The Redirect Server pane appears.

2. Change the values in the following boxes as described in the Help text in the main pane:
 - Request Rate
 - Request Burst Size
 - Client Rate
 - Client Burst Size
3. Click **Apply**.

- Related Topics**
- Overview of Traffic Redirection
 - Configuring the Redirect Server (C-Web Interface)

Published: 2009-09-18