

Initially Configuring the SAE

To initially configure the SAE:

- (Optional) Create a configuration group for the SAE.

See [Creating Grouped Configurations for the SAE \(SRC CLI\)](#)

- Configure local properties for the SAE.

See [Configuring Local Properties for the SAE \(SRC CLI\)](#)

- Configure a local IP address and NAS ID that the SAE uses to communicate with RADIUS servers.

See [Configuring the RADIUS Local IP Address and NAS ID \(SRC CLI\)](#)

- Configure directory connection properties for the SAE.

- Configure directory eventing properties for the SAE.

See [Configuring Initial Directory Eventing Properties for SRC Components](#)

Related Topics

- [Initially Configuring the SAE with the C-Web Interface](#)
- [Reloading the SAE Configuration](#)
- [Starting the SAE \(SRC CLI\)](#)

Published: 2009-09-25