

## Configuring the SAE to Manage PCMM Devices (C-Web Interface)

---

The SAE connects to the PCMM device by using a COPS over TCP connection. The PCMM device driver controls this connection.

To configure the SAE to manage PCMM devices:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver**, and then click **PCCM**.

The PCCM pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- For information about setting up SAE groups, see [\[Unresolved xref\]](#)
  - Configuring the SAE to Manage PCMM Devices (SRC CLI)
  - Configuring PCMM Record-Keeping Server Plug-Ins (SRC CLI)
  - Using the SAE in a PCMM Environment

---

Published: 2009-09-18