

Configuring SAE Properties for the Event Notification API (C-Web Interface)

To configure properties for the event notification API:

1. Click **Configure**, expand **Shared > SAE**, and then expand the SAE group for which you want to manage devices.
2. In the side pane, expand **Configuration > External Interface Features: event**, and then click **Event API**.

The Event API pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

Related Topics

- Configuring an SAE Group
- Configuring SAE Properties for the Event Notification API (SRC CLI)
- Using the SAE in a PCMM Environment

Published: 2009-09-18