

## Configuring the SAE to Manage JUNOSe Routers (C-Web Interface)

---

To set up the SAE to manage JUNOSe routers, configure a router driver that specifies a COPS server that can accept COPS connections from the COPS client in JUNOSe routers.

To configure the SAE to manage JUNOSe routers:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver**, and then click **JUNOSe**.

The JUNOSe pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- Configuring the SAE to Manage JUNOSe Routers with the CLI
  - Developing Router Initialization Scripts for JUNOSe Routers, JUNOS Routing Platforms, and Network Devices
  - Monitoring Interactions Between the SAE and the JUNOSe Router
  - Troubleshooting Problems with Managing JUNOSe Routers
  - COPS Connection Between JUNOSe Routers and the SAE

---

Published: 2009-09-18