

## Configuring Service Scopes (C-Web Interface)

---

The tasks to configure a service scope are:

1. Adding Service Scopes (C-Web Interface) on page 1
2. Assigning Services and Mutex Groups to Service Scopes (C-Web Interface) on page 1
3. Assigning Service Scopes to VRs or Subscribers (C-Web Interface) on page 1

### Adding Service Scopes (C-Web Interface)

To add a service scope:

1. Click **Configure > Services**.

The Services pane appears.

2. From the Create new list, select **Scope**.
3. Enter a name for the new Scope, and click **OK**.

The Scope: *< name >* pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

### Assigning Services and Mutex Groups to Service Scopes (C-Web Interface)

To assign services and mutex groups to a scope:

1. Click **Configure**, and expand **Services**.
2. Click the specified scope.

The Scope: *< name >* pane appears.

3. From the Create new list, select **Mutex Group** or **Service**.
4. In the dialog box, type a name for the new mutex group or service, and click **OK**.

### Assigning Service Scopes to VRs or Subscribers (C-Web Interface)

You can assign multiple service scopes to a VR or subscriber, and you can assign a service scope to multiple VRs and subscribers.

To assign a service scope:

1. Click **Configure**, and expand **Shared**.
2. Expand **Network** and the specified device.
3. Click the specified virtual router.

The Virtual Router: *< name >* pane appears.

4. In the **Scope** box, select a virtual router as described in the Help text in the main pane, and click **Apply**.

**Related Topics** ■ *SRC PE Services and Policies Guide*

---

Published: 2009-09-18