

Setting the System Date (SRC CLI)

If you need to set the date and time on the system and NTP is not configured, you can use the **set date** command. This command is available only if NTP is not running on the system.

To set the system date and time:

- In operational mode, set the date and time in the format YYYYMMDDhhmm.ss.

```
user@host> set date date
```

For example, to set the date and time to 1:05 PM on February 21, 2007:

```
user@host> set date 200702211305:00
```

- Related Topics**
- Setting the Time Zone (SRC CLI)
 - Viewing the System Date and Time (C-Web Interface)
 - NTP Support on C Series Controllers

Published: 2009-09-25