

Configuring Event Notification for the External Subscriber Monitor (C-Web Interface)

To configure event notification for External Subscriber Monitor:

1. Click **Configure > Slot**, then a specified slot (for example, slot0).
2. Expand **External Subscriber Monitor**, and then click **Event Notification**.

The Event Notification pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

Published: 2009-09-18