

Stopping the JPS (C-Web Interface)

To stop the JPS:

1. Click **Manage > Disable**.

The Disable pane appears.

2. From the **Component** list, select **JPS**, and click **OK**.

The system responds with a shutdown message. If the JPS is not running when you issue the command, the system responds with a status message.

- Related Topics**
- Starting the JPS (C-Web Interface)
 - Restarting the JPS (C-Web Interface)
 - Monitoring the SDX SNMP Agent (C-Web Interface)

Published: 2009-09-18