

Running the Network Publisher

You run the network publisher each time you want to collect information from routing tables on JUNOS routing platforms.

Before you run the network publisher, make sure that:

- The network publisher is configured.
- The NIC is enabled.

To run the network publisher:

- From operational mode, run one of the following commands:

```
user@host> request network-publisher execute
```

```
user@host> request network-publisher slot 0 execute
```

- Related Topics**
- Before You Configure and Run the Network Publisher
 - Configuring the Network Publisher
 - Starting the NIC (SRC CLI)
 - Overview of the Network Publisher
 - Overview of Files to Test Network Publisher

Published: 2009-09-15