

Starting the NIC (C-Web Interface)

Start the NIC component before you configure a NIC configuration scenario.

To start the NIC component:

1. Select **Manage > Enable**.

The Enable pane appears.

2. In the Component box, select **NIC**, and click **OK**.

- Related Topics**
- Before You Configure the NIC
 - Starting the NIC (SRC CLI)
 - Configuring the NIC (C-Web Interface)
 - Restarting the NIC (C-Web Interface)
 - Stopping a NIC Host on a C Series Controller (C-Web Interface)

Published: 2009-09-18