

## Starting the SAE with the C-Web Interface

---

You must configure licenses before you start the SAE. When you start the SAE, the software verifies that a valid license is available. If no license is found, the SAE does not start.

To start the SAE:

1. Click **Manage > Enable**.

The Enable pane appears.

2. From the Component list, select **SAE**, and click **OK**.

- Related Topics**
- Starting the SAE (SRC CLI)
  - Initially Configuring the SAE with the C-Web Interface
  - Stopping the SAE with the C-Web Interface
  - Viewing Information About the Directory Blacklist
  - Role of the SAE

---

Published: 2009-09-18