

## Viewing General Statistics for SRC ACP (C-Web Interface)

**Purpose** View general statistics for SRC ACP.

**Action** To view general statistics for SRC ACP:

1. Click **ACP > Statistics > General**.

The Statistics/General pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'ACP Statistics / General'. It features a 'Slot' input box with a value of '0'. A tooltip explains: 'Number of the slot for which you want to configure values. Value: Currently, the chassis has only one slot. The valid value is 0. Default value: 0'. Below the input box are 'OK' and 'Reset' buttons. The footer contains copyright information for Juniper Networks, Inc. (2007) and the slogan 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display general statistics.
3. Click **OK**.

The Statistics/General pane displays general SRC ACP statistics.

- Related Topics**
- Configuring SRC ACP (C-Web Interface)
  - Viewing Statistics for the SRC ACP Directory (C-Web Interface)
  - Viewing Device Statistics for SRC ACP (C-Web Interface)

Published: 2009-09-15