

Viewing JPS CMTS Connections with the C-Web Interface

Purpose View information about the current JPS network connections for the CMTS device.

Action 1. Click **JPS > Statistics > CMTS > Connections**.

The Statistics/CMTS/Connections pane appears.

The screenshot shows the Juniper C-Web Interface. At the top, there is a navigation bar with tabs: Monitor, Configure, Diagnose, and Manage. The 'Monitor' tab is active. Below the navigation bar, there is a sidebar on the left with a list of components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS (highlighted), NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area displays the 'JPS Statistics / CMTS / Connections' pane. This pane contains an 'Ip Address' input box with a 'Reset' button below it. To the right of the input box, there is a text area with the following information: 'IP address for the CMTS device. Value: All or part of the IP address. If the IP address filter is not specified, all CMTS devices are selected. Default: No value'. At the bottom of the interface, there is a footer with copyright information: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the IP Address box, enter the IP address, or leave the box blank to display all CMTS connections.
3. Click **OK**.

The Statistics/CMTS/Connections pane displays the CMTS connection statistics.

- Related Topics**
- Viewing JPS State
 - Specifying Connections to CMTS Devices (C-Web Interface)
 - Viewing JPS CMTS Statistics with the C-Web Interface
 - Viewing JPS CMTS Locator Statistics with the C-Web Interface
 - Overview of the JPS

Published: 2009-09-23