

## Verifying Configuration for the NIC (SRC CLI)

---

**Purpose** After you complete the NIC configuration, verify the local NIC configuration and the NIC configuration scenario information.

**Action** To verify NIC configuration:

1. In configuration mode, run the **show** command at the [edit slot 0 nic] hierarchy level.

```
[edit slot 0 nic]  
user@host# show
```

2. In configuration mode, run the **show** command at the [edit shared nic scenario *name* ] hierarchy level.

For example:

```
[edit shared nic scenario OnePop]  
user@host# show
```

- Related Topics**
- Starting the NIC (SRC CLI)
  - Configuring the NIC (SRC CLI)
  - Testing a NIC Resolution (SRC CLI)
  - Changing NIC Configurations (SRC CLI)

---

Published: 2009-09-15