

## Viewing Statistics for Specific JUNOSe Device Drivers (SRC CLI)

---

**Purpose** Display statistics for a specific JUNOSe device driver.

**Action** Use the following operational mode command:

```
show sae statistics device <name name> < (brief) >
```

For example:

```
user@host> show sae statistics device name default@dryad
SNMP Statistics
Add notification handle time      6
Change notification handle time   0
Client ID                        default@dryad
Delete notification handle time   0
Failover IP                      0.0.0.0
Failover port                    0
Handle message time              60
Job queue age                    0
Job queue time                   4
Number message send              158
Number of added jobs             9
Number of add notifications      4
Number of change notifications   0
Number of delete notifications   0
Number of managed interfaces     4
Number of message errors         0
Number of message timeouts       0
Number of removed jobs          9
Number of user session established 0
Number of user session removed   0
Router type                      JUNOSe COPS
Up time                          172286
Using failover server            false
```

- Related Topics**
- Troubleshooting Problems with Managing JUNOSe Routers
  - Viewing Statistics for All JUNOSe Device Drivers (SRC CLI)
  - Monitoring Interactions Between the SAE and the JUNOSe Router
  - Viewing the State of JUNOSe Device Drivers (C-Web Interface)

---

Published: 2009-09-15