

# Network Configuration Example

Adding a New Routing Device to Your Network

Release

# 10.4



Published: 2010-10-08

Revision 1

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

#### *Junos® OS Network Configuration Example Adding a New Routing Device to Your Network*

Release 10.4

Copyright © 2010, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Writing: Michael Scruggs  
Editing: Katie Smith, Roy Spencer  
Cover Design: Edmonds Design

Revision History  
October 2010—R1 Junos 10.4

The information in this document is current as of the date listed in the revision history.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. The Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

**READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE.** BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).



# Table of Contents

Adding a New Routing Device to Your Network . . . . .	1
Example: Adding a New Routing Device to Your Network . . . . .	3





## Adding a New Routing Device to Your Network

---

This document describes how to configure a new Juniper Networks routing device with a single Routing Engine or dual Routing Engines. You will learn how to log in to the router management console interface for the first time, how to log in to your routing device's management Ethernet port, and how to start the command-line interface (CLI) in configuration mode.

From configuration mode, you will learn how to configure your administration user accounts and how to add the management console to the network. Finally, you will learn how to commit the changes you have configured.

You use the router management console interface to do all the configuring for your routing device. The two ways to access the router management console interface are the J-Web graphical user interface (GUI) or the CLI.

### **Related Documentation**

- [Example: Adding a New Routing Device to Your Network on page 3](#)



## Example: Adding a New Routing Device to Your Network

---

This example illustrates how to add a new routing device to your network. The tasks are organized into the following sections:

- Requirements on page 3
- Connecting to the Management Console Port on page 4
- Configuring New Routing Devices with a Single Routing Engine on page 6
- Configuring New Routing Devices with Dual Routing Engines on page 11

### Requirements

Before you begin, you need to know:

- How to use your asynchronous terminal emulation application or terminal server to connect to your routing device
- The IP address of your DNS server
- The management Ethernet interface IP address and prefix length



NOTE: If you have a routing device with dual Routing Engines, you need unique management Ethernet interface IP addresses for each configuration group, and both groups need to have the same prefix length. For more information about configuration groups, see [Creating a Junos Configuration Group](#).

- The IP address of your backup router
- The remote subnet address if you are configuring static routes

If you do not know where to find any of this information, contact your service provider. If you need help using your asynchronous terminal emulation application or terminal server, contact the supplier of your asynchronous terminal emulation application.

You also need to create:

- The password for the root administration user account
- The username of the management console user account
- The password for the management console user account
- The domain name for your routing device
- The hostname of your routing device (must be less than 256 characters)



NOTE: If you have a routing device with dual Routing Engines, you need to create a unique hostname for each configuration group. For more information about hostnames for configuration groups, see the section “Setting Up Routing Engine Configuration Groups for Routing Devices with Dual Routing Engines.”

## Connecting to the Management Console Port

You connect to your routing device by connecting to the management console port through a terminal server or by connecting directly to the management console port. This document describes both methods.

### Connecting to the Management Console Port Through a Terminal Server

A terminal server, also known as a console server, is a specialized device that provides a network connection to an out-of-band console port.

When configuring a terminal server to communicate with the console port on a network device running the Junos OS, use the following parameters:

- Bits per second: 9600
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow Control: None

After connecting to your routing console, you can log in to the routing device.

### Connecting Directly to the Management Console Port

Juniper Network devices include an out-of-band management console port. This management console port is used to configure the device when it is first received from the factory and whenever in-band configuration is not available. Access the management console port using a 9-pin D-subminiature (D-sub) or an RJ-45 Ethernet serial connector. In either case, you must connect to this console port using standard RS-232 protocols.



NOTE: For more information on RS-232 protocols, refer to <http://www.juniper.net/techpubs/software/jseries/junos90/jseries-config-guide-basic/rs-232.html#serial-interfaces-rs-232-section>.

To connect to the management console port:

1. Physically connect the administration computer's serial port to the device's out-of-band console port.
  - If you are using an Ethernet cable, you must use an RJ-45 rollover cable.
  - If you are using a serial cable, you must use a null modem cable.
2. Launch your asynchronous terminal emulation application.

Most operating systems have asynchronous terminal emulation applications already installed:

- The Windows operating system has HyperTerminal installed.
- The MAC operating system has Terminal.app installed.
- UNIX or Linux operating systems have a default terminal window application installed.



**NOTE:** Many newer laptops do not include a standard 9-pin serial port. When using a laptop without a serial port, you must have a USB-to-serial-port adapter before you can directly connect to the out-of-band console port with the laptop.

---

3. Verify that the asynchronous terminal emulation application is using the correct serial or USB port.
4. Configure the port settings as follows:
  - Bits per second: 9600
  - Data bits: 8
  - Parity: None
  - Stop bits: 1
  - Flow Control: None

After connecting to your routing console, you can log in and configure your new routing device.

To configure a new routing device with a single Routing Engine, see the following section, "Configuring New Routing Devices with a Single Routing Engine."

To configure a new routing device with dual Routing Engines, see the section "Configuring New Routing Devices with Dual Routing Engines."

## Configuring New Routing Devices with a Single Routing Engine

This section describes the procedures for configuring a new routing device with a single Routing Engine. The section is organized into the following tasks:

- Logging in to the Management Console Interface on page 6
- Configuring Administration User Accounts on page 7
- Adding the Ethernet Management Console to the Network for Routing Devices with a Single Routing Engine on page 8
- Committing Changes for Routing Devices with a Single Routing Engine on page 9

### Logging in to the Management Console Interface

**Step-by-Step Procedure** To log in to the routing device's console interface and start the CLI in configuration mode:

1. Verify that your routing device is powered on. Refer to the specific getting started guide for your routing device for additional information.
2. Open your SSH, Telnet, and Rlogin application (such as HyperTerminal), and navigate to the console port. If you need help, contact the supplier of your application.
3. When you first access the console port, the routing device is in the amnesiac state, meaning that it is in the factory install state and ready to be configured.

Amnesiac <tttyd0>

4. Log in through the management console port with the username **root**. You are now logged in as the root administration account, denoted by the @% symbols.

login: root  
root@%



**NOTE:** When the routing device is in the factory install state, the root administration user account is not associated with a password. You must add a password to the root administration account before you can successfully commit a configuration. For more information about configuring administration user accounts, see the following section, "Configuring Administration User Accounts."

5. Start the CLI by typing **cli**. The CLI initially opens in operational mode, denoted by the > symbol after the root username.

root@% cli  
root>

6. Enter configuration mode by typing **configure**. The > symbol is replaced by the # symbol, verifying that you are in configuration mode.

root> configure

[edit]

```
root#
```

You are now logged in to the router console and ready to configure the administration user accounts.

### Configuring Administration User Accounts

#### Step-by-Step Procedure

Administration user accounts are used to log in to the routing device through the management console. To configure administration user accounts:

1. Add a password to the root administration user account by typing **set system root-authentication plain-text-password**.

```
[edit]
```

```
root# set system root-authentication plain-text-password
```

The **New password** prompt appears. Type in your new password and then retype it at the second prompt.

```
New password: password
```

```
Retype new password: password
```

2. Create a management console administration user account by typing **set system login user *user-name* authentication plain-text password**, where *user-name* is the username you are creating.

```
[edit]
```

```
root# set system login user user-name authentication plain-text-password
```

The **New password** prompt appears. Type in your new password and then retype it at the second prompt.

```
New Password: password
```

```
Retype new password: password
```

3. Set the management console administration user account class to superuser by typing **set system login user *user-name* class super-user**.

```
[edit]
```

```
root# set system login user user-name class super-user
```

The superuser class allows this user account to have full access privileges for the CLI commands and configuration statements.



**NOTE:** The Junos OS contains four predefined login classes, including the superuser class. Depending on your needs, you can create administration user accounts with different login classes. You can even create your own login classes.

For more information about login classes, see [Junos OS Login Classes Overview](#).

Repeat this procedure to add more than one management console user account.

You are now ready to add the out-of-band Ethernet management console port to the network. See the following section, “Adding the Ethernet Management Console to the Network for Routing Devices with a Single Routing Engine.”

### Adding the Ethernet Management Console to the Network for Routing Devices with a Single Routing Engine

#### Step-by-Step Procedure

To add the management console to the network:

1. Specify the hostname for your routing device by typing **set system host-name *host-name***, where *host-name* is the hostname you are creating.

[edit]

root# **set system host-name *host-name***



NOTE: The hostname for your routing device is used to display the name of the Routing Engine in the CLI. It is not used by the DNS server to resolve to the correct IP address. For example, the hostname is displayed in the command-line prompt when the user is logged in to the CLI:

*user-name@host-name>*

2. Configure the IP address of the DNS server by typing **set system name-server *address***.

[edit]

root# **set system name-server *address***

3. Configure the router domain name by typing **set system domain-name *domain-name***.

[edit]

root# **set system domain-name *domain-name***

4. Specify the management Ethernet interface IP address and prefix length by typing **set interfaces fxp0 unit 0 family inet address *address/prefix-length***.

[edit]

root# **set interfaces fxp0 unit 0 family inet address *address/prefix-length***

5. The backup router is used only while the routing protocol process is not running. Choose a router that is directly connected to the local router by way of the management interface. The router uses this backup router only when it is booting and only or when the Junos OS routing software (the routing protocol process, rpd) is not running.

Configure the IP address of a backup router by typing **set system backup-router *address***.

[edit]

root# **set system backup-router *address***

6. (Optional) If your management Ethernet port is not configured with a dynamic routing protocol, you need to set up a static route to reach a remote system. You need to know the remote subnet address in order to complete the setup.



Configure a static route by typing **set routing-options static route *remote-subnet* next-hop *IP-address* retain no-readvertise**.

```
[edit]
root# set routing-options static route remote-subnet next-hop IP-address retain
no-readvertise
```

For more information about static routes, see [Configuring Static Routes](#).

7. Enable the telnet service by typing **set system services telnet**.

```
[edit]
root# set system services telnet
```

Telnet is now enabled on your routing device.

After adding the management console to the network, commit the configuration changes. See the following section, “Committing Changes for Routing Devices with a Single Routing Engine.”

### Committing Changes for Routing Devices with a Single Routing Engine

#### Step-by-Step Procedure

To commit the changes made to the configuration file:

1. Review the changes made to the configuration file by typing **show**.

```
root# show
```

The configuration is displayed. The following configuration is an example and may not be the same as the configuration on your screen.

```
root# show
## Last changed: 2008-08-27 22:30:42 UTC
version 9.3B1.5;
system {
  host-name tp8;
  domain-name subnet.juniper.net;
  backup-router 192.168.71.254;
  root-authentication {
    encrypted-password "xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx"; ## SECRET-DATA
  }
  name-server {
    192.168.5.68;
    172.17.28.101;
  }
  login {
    user admin {
      class super-user;
      authentication {
        encrypted-password "xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx"; ## SECRET-DATA
      }
    }
  }
}
services {
  telnet;
}
syslog {
  user * {
```

```
        any emergency;
    }
    file messages {
        any notice;
        authorization info;
    }
    file interactive-commands {
        interactive-commands any;
    }
}
}
interfaces {
    fxp0 {
        unit 0 {
            family inet {
                address 192.128.69.205/21;
            }
        }
    }
}
routing-options {
    static {
        route 10.10.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 192.168.0.0/16 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
    }
}
```

2. After you have reviewed your configuration and are satisfied with it, commit the changes by typing **commit**. If your changes were committed successfully, **commit complete** appears.

```
[edit]
root# commit
commit complete
```



NOTE: If you receive an error message after committing your changes, repeat Step 1 in this procedure to review your configuration and find the errors. You can delete incorrect entries by using the **delete** command.

For example, to delete a hostname from the configuration, type **delete system host-name *host-name***.

```
[edit]
root# delete system host-name host-name
```

You can re-enter the correct information using any of the previous procedures for your routing device with a single Routing Engine.

---

3. After completing the initial configuration and committing your changes, exit the configuration mode by typing **exit**.

```
[edit]
root# exit
Exiting configuration mode
```

```
root>
```

When the # symbol is replaced by the > symbol, you have successfully exited configuration mode and have returned to operational mode.

4. To exit operational mode and to end your session, type **exit**.

```
root> exit
```

You are now logged out of the routing device.

## Configuring New Routing Devices with Dual Routing Engines

This section describes the procedures for configuring a new routing device with dual Routing Engines. The section is organized into the following tasks:

- Logging in to the Management Console Interface on page 11
- Configuring Administration User Accounts on page 12
- Setting Up Routing Engine Configuration Groups for New Routing Devices with Dual Routing Engines on page 13
- Completing the Ethernet Management Console Configuration for New Routing Devices with Dual Routing Engines on page 15
- Committing and Synchronizing Changes for New Routing Devices with Dual Routing Engines on page 16

### Logging in to the Management Console Interface

#### Step-by-Step Procedure

To log in to the routing device's console interface and start the CLI in configuration mode:

1. Verify that your routing device is powered on. Refer to the specific getting started guide for your routing device for additional information.
2. Open your SSH, Telnet, and Rlogin application (such as HyperTerminal), and navigate to the console port. If you need help, contact the supplier of your application.
3. When you first access the console port, the routing device is in the amnesiac state, meaning that it is in the factory install state and ready to be configured.

```
Amnesiac <tttyd0>
```

4. Log in through the management console port with the username **root**. You are now logged in as the root administration account, denoted by the @% symbols.

```
login: root
root@%
```



NOTE: When the routing device is in the factory install state, the root administration user account is not associated with a password. You must add a password to the root administration account before you can successfully commit a configuration. For more information about configuring administration user accounts, see the following section, “Configuring Administration User Accounts.”

5. Start the CLI by typing **cli**. The CLI initially opens in operational mode, denoted by the > symbol after the root username.

```
root@% cli
root>
```

6. Enter configuration mode by typing **configure**. The > symbol is replaced by the # symbol, verifying that you are in configuration mode.

```
root> configure
```

```
[edit]
root#
```

You are now logged in to the router console and ready to configure the administration user accounts.

### Configuring Administration User Accounts

#### Step-by-Step Procedure

Administration user accounts are used to log in to the routing device through the management console. To configure administration user accounts:

1. Add a password to the root administration user account by typing **set system root-authentication plain-text-password**.

```
[edit]
root# set system root-authentication plain-text-password
```

The **New password** prompt appears. Type in your new password and then retype it at the second prompt.

```
New password: password
Retype new password: password
```

2. Create a management console administration user account by typing **set system login user *user-name* authentication plain-text password**, where *user-name* is the username you are creating.

```
[edit]
root# set system login user user-name authentication plain-text-password
```

The **New password** prompt appears. Type in your new password then retype it at the second prompt.

```
New Password: password
Retype new password: password
```

- Set the management console administration user account class to superuser by typing **set system login user *user-name* class super-user**.

[edit]

```
root# set system login user user-name class super-user
```

The superuser class allows this user account to have full access privileges for the CLI commands and configuration statements.



NOTE: The Junos OS contains four predefined login classes, including the superuser class. Depending on your needs, you can create administration user accounts with different login classes. You can even create your own login classes.

For more information about login classes, see [Junos OS Login Classes Overview](#).

Repeat this procedure to add more than one management console user account.

You are now ready to set up your Routing Engine configuration groups. See the following section, “Setting Up Routing Engine Configuration Groups for New Routing Devices with Dual Routing Engines.”

### Setting Up Routing Engine Configuration Groups for New Routing Devices with Dual Routing Engines

#### Step-by-Step Procedure

In a routing device with two Routing Engines, one configuration should be shared between both Routing Engines. This ensures that both Routing Engine configurations are identical. Within this configuration, you need to create two Routing Engine groups, one for each Routing Engine that includes parameters specific to each Routing Engine.

For more information about creating configuration groups, see [Creating a Junos Configuration Group](#).

For more information about the initial configuration for redundant routing engine systems, see [Initial Routing Engine Configuration Example](#).

To set up the Routing Engine configuration groups:

- Create the configuration group **re0** by typing **set groups re0**. The **re0** group is a special group designator that is only used by the Routing Engine in slot 0 in a redundant routing platform.

[edit]

```
root# set groups re0
```

- Navigate to the **groups re0** level of the configuration hierarchy by typing **edit groups re0**.

[edit]

```
root# edit groups re0
```

Notice that the hierarchy level changes to **[edit groups re0]**.

```
[edit groups re0]
root#
```

3. Specify the hostname for your routing device by typing **set system host-name *host-name***, where *host-name* is the hostname you are creating.

```
[edit groups re0]
root# set system host-name host-name
```

You need to create different hostnames for each configuration group of your routing device. Typically, the hostnames are similar, as shown in the following example:

```
re0 {
  system {
    host-name router1-re0;
  }
}

re1 {
  system {
    host-name router1-re1;
  }
}
```

Notice that the only difference between the hostnames is the specification of the configuration group.



**NOTE:** The hostname for your routing device is used to display the name of the Routing Engine in the CLI. It is not used by the DNS server to resolve to the correct IP address. For example, the hostname is displayed in the command-line prompt when the user is logged in to the CLI:

```
user-name@host-name>
```

4. Specify the management Ethernet port IP address and prefix length by typing **set interfaces fxp0 unit 0 family inet address *address/prefix-length***. For more information about management Ethernet interfaces, see Management Ethernet Interface Overview.

```
[edit groups re0]
root# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

Type **top** to return to the top level of the hierarchy. Notice that the hierarchy level changes to **[edit]**, verifying that you are at the top of the hierarchy.

```
[edit groups re0]
root# top
```

```
[edit]
root#
```

5. Create the configuration group **re1** by typing **set groups re1**.

```
[edit]
root# set groups re1
```

6. Navigate to the **groups re1** level of the hierarchy by typing **edit groups re1**.
 

```
[edit]
root# edit groups re1
```
7. Specify the hostname for your routing device by typing **set system host-name *host-name***, where *host-name* is the hostname you are creating.
 

```
[edit groups re1]
root# set system host-name host-name
```
8. Specify the management Ethernet interface IP address and prefix length by typing **set interfaces fxp0 unit 0 family inet address *address/prefix-length***.
 

```
[edit groups re1]
root# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

Type **top** to return to the top level of the hierarchy.

```
[edit groups re1]
root# top
```

```
[edit]
root#
```
9. Specify the group application order by typing **set apply-groups [ re0 re1 ]**. This ensures that both Routing Engines have their own IP addresses to maintain a single configuration file. For more information about maintaining a single configuration file, see *Maintain a Single Configuration File for Both Routing Engines*.
 

```
[edit]
root# set apply-groups [ re0 re1 ]
```

Now that the Routing Engine configuration groups are set, see the following section, “Completing the Ethernet Management Console Configuration for New Routing Devices with Dual Routing Engines” to complete the configuration.

### Completing the Ethernet Management Console Configuration for New Routing Devices with Dual Routing Engines

#### Step-by-Step Procedure

To configure the global management console parameters:

1. Configure the IP address of the DNS server by typing **set system name-server *address***.
 

```
[edit]
root# set system name-server address
```
2. Configure the router domain name by typing **set system domain-name *domain-name***.
 

```
[edit]
root# set system domain-name domain-name
```
3. The backup router is used only while the routing protocol process is not running. Choose a router that is directly connected to the local router by way of the management interface. The router uses this backup router only when it is booting and only or when the Junos OS routing software (the routing protocol process, rpd) is not running.

For routers with two Routing Engines, the backup Routing Engine, **RE1**, uses the backup router as a default gateway after the router boots. This enables you to access the backup Routing Engine. (**RE0** is the default master Routing Engine.)

Configure the IP address of a backup router by typing **set system backup-router address**.

```
[edit]
root# set system backup-router address
```

4. (Optional) If your management Ethernet port is not configured with a dynamic routing protocol, you need to set up a static route to reach a remote system. You need to know the remote subnet address in order to complete the setup.

Configure a static route by typing **set routing-options static route remote-subnet next-hop IP-address retain no-readvertise**.

```
[edit]
root# set routing-options static route remote-subnet next-hop IP-address retain
no-readvertise
```

For more information about static routes, see *Configuring Static Routes*.

5. Enable the telnet service by typing **set system services telnet**.

```
[edit]
root# set system services telnet
```

Telnet is now enabled on your routing device.

You can now synchronize and commit your changes. See the following section, “Committing and Synchronizing Changes for New Routing Devices with Dual Routing Engines.”

### Committing and Synchronizing Changes for New Routing Devices with Dual Routing Engines

**Step-by-Step Procedure** After completing all your configuration changes, you need to commit the changes to implement them. Before committing the changes, review your configuration choices, and then synchronize the configuration that is shared between both Routing Engines.

To commit and synchronize your changes:

1. Review the changes made to the configuration file by typing **show**.

```
root# show
```

The configuration is displayed. The following configuration is an example and may not be the same as the configuration on your screen.

```
root# show
## Last changed: 2008-10-17 18:32:25 UTC
version 9.1R1.8;
groups {
  re0 {
    system {
      host-name spice-re0;
    }
  }
}
```



```

    interfaces {
        fxp0 {
            unit 0 {
                family inet {
                    address 192.168.69.155/21;
                }
            }
        }
    }
}
re1 {
    system {
        host-name spice-re1;
    }
    interfaces {
        fxp0 {
            unit 0 {
                family inet {
                    address 192.168.70.72/21;
                }
            }
        }
    }
}
global;
}
apply-groups [ re0 re1 ];
system {
    domain-name englab.juniper.net;
    backup-router 192.168.71.254;
    root-authentication {
        encrypted-password "xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx"; ## SECRET-DATA
    }
    name-server {
        192.168.1.1;
    }
    login {
        user admin {
            uid 2001;
            class super-user;
            authentication {
                encrypted-password "xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx"; ## SECRET-DATA
            }
        }
    }
}
services {
    telnet;
}
syslog {
    user * {
        any emergency;
    }
    file messages {
        any notice;
        authorization info;
    }
}
```

```
file interactive-commands {  
    interactive-commands any;  
}  
}  
}  
routing-options {  
    static {  
        /* corporate office */  
        route 10.10.0.0/12 {  
            next-hop 192.168.71.254;  
            retain;  
            no-readvertise;  
        }  
    }  
}
```

2. After you have reviewed your configuration and are satisfied with it, commit and synchronize the configuration by typing **commit synchronize**. The **commit synchronize** command commits the new configuration on both Routing Engines simultaneously.

```
[edit]  
root# commit synchronize  
re0:  
configuration check succeeds  
re1:  
commit complete  
re0:  
commit complete
```



NOTE: If you receive an error message after committing your changes, repeat Step 1 in this procedure to review your configuration and find the errors. You can delete incorrect entries by using the **delete** command.

For example, to delete a hostname from the configuration, type **delete system host-name *host-name***.

```
[edit]  
root# delete system host-name host-name
```

You can re-enter the correct information using any of the previous procedures for your routing device with dual Routing Engines.

3. After completing the initial configuration and committing your changes, exit the configuration mode by typing **exit**.

```
[edit]  
root# exit  
Exiting configuration mode
```

```
root>
```

When the # symbol is replaced by the > symbol, you have successfully exited configuration mode and have returned to operational mode.

4. To exit operational mode and to end your session, type **exit**.

```
root> exit
```

You are now logged out of the routing device.

**Related  
Documentation**

- Adding a New Routing Device to Your Network on page 1

