



Junos[®] OS

Class of Service Configuration Guide

Release
12.3



Published: 2012-12-26

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Junos® OS Class of Service Configuration Guide
Release 12.3
Copyright © 2012, Juniper Networks, Inc.
All rights reserved.

Revision History
October 2012— Junos OS 12.3

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Abbreviated Table of Contents

	About the Documentation	xxix
Part 1	CoS Overview	
Chapter 1	CoS Overview	3
Chapter 2	Class of Service Configuration Statements	29
Part 2	CoS Configuration Components	
Chapter 3	Classifying Packets by Behavior Aggregate	41
Chapter 4	Defining Code-Point Aliases	69
Chapter 5	Classifying Packets Based on Various Packet Header Fields	75
Chapter 6	Configuring Tricolor Marking Policers	95
Chapter 7	Configuring Forwarding Classes	123
Chapter 8	Configuring Forwarding Policy Options	141
Chapter 9	Configuring Fragmentation by Forwarding Class	151
Chapter 10	Configuring Schedulers	157
Chapter 11	Configuring Hierarchical Schedulers	223
Chapter 12	Configuring Queue-Level Bandwidth Sharing	245
Chapter 13	Configuring RED Drop Profiles	253
Chapter 14	Rewriting Packet Header Information	261
Part 3	CoS Configuration on Various PIC Types	
Chapter 15	Hardware Capabilities and Routing Engine Protocol Queue Assignments	289
Chapter 16	Configuring CoS for Tunnels	311
Chapter 17	Configuring CoS on Services PICs	317
Chapter 18	Configuring CoS on Enhanced IQ PICs	327
Chapter 19	Configuring CoS on Ethernet IQ2 and Enhanced IQ2 PICs	363
Chapter 20	Configuring CoS on SONET/SDH OC48/STM16 IQE PICs	387
Chapter 21	Configuring CoS on 10-Gigabit Ethernet LAN/WAN PICs with SFP+	421
Chapter 22	Configuring CoS on Enhanced Queuing DPCs	431
Chapter 23	Configuring CoS on MIC and MPC Interfaces	449
Chapter 24	Configuring CoS on Circuit Emulation ATM MIC Interfaces	497

Part 4	CoS Configuration for Specific Transports	
Chapter 25	Configuring Schedulers on Aggregated Ethernet and SONET/SDH Interfaces	503
Chapter 26	Configuring CoS on ATM Interfaces	515
Chapter 27	Configuring CoS on Ethernet Interfaces	535
Chapter 28	Configuring CoS for MPLS	541
Part 5	CoS Configuration Examples and Statements	
Chapter 29	CoS Configuration Examples	547
Chapter 30	Summary of CoS Configuration Statements	553
Part 6	Index	
	Index	745
	Index of Statements and Commands	759

Table of Contents

	About the Documentation	xxix
	Junos OS Documentation and Release Notes	xxix
	Supported Platforms	xxix
	Using the Examples in This Manual	xxx
	Merging a Full Example	xxx
	Merging a Snippet	xxxi
	Documentation Conventions	xxxi
	Documentation Feedback	xxxii
	Requesting Technical Support	xxxiii
	Self-Help Online Tools and Resources	xxxiii
	Opening a Case with JTAC	xxxiv
Part 1	CoS Overview	
Chapter 1	CoS Overview	3
	CoS Overview	3
	CoS Standards	4
	Understanding Packet Flow Across a Network	4
	Junos CoS Components	5
	Default CoS Settings	7
	CoS Input and Output Configuration	9
	CoS Inputs and Outputs Overview	9
	CoS Inputs and Outputs Examples	9
	Packet Flow Within Routers	10
	Packet Flow Within Routers Overview	10
	Packet Flow on Juniper Networks J Series Services Routers	11
	Packet Flow on Juniper Networks M Series Multiservice Edge Routers	11
	Incoming I/O Manager ASIC	12
	Internet Processor ASIC	12
	Outgoing I/O Manager ASIC	13
	Enhanced CFEB and CoS on M7i and M10i Multiservice Edge Routers	13
	Packet Flow on MX Series Ethernet Services Routers	14
	Example of Packet Flow on MX Series 3D Universal Edge Routers	16
	Packet Flow on Juniper Networks T Series Core Routers	17
	Incoming Switch Interface ASICs	18
	T Series Routers Internet Processor ASIC	18
	Queuing and Memory Interface ASICs	19
	Outgoing Switch Interface ASICs	19

	Packet Flow Through the CoS Process	20
	Packet Flow Through the CoS Process Overview	20
	Packet Flow Through the CoS Process Configuration Example	22
	CoS Applications Overview	23
	Interface Types That Do Not Support CoS	25
	VPLS and Default CoS Classification	26
Chapter 2	Class of Service Configuration Statements	29
	[edit chassis] Hierarchy Level	29
	[edit class-of-service] Hierarchy Level	30
	[edit firewall] Hierarchy Level	34
	[edit interfaces] Hierarchy Level	35
	[edit services cos] Hierarchy Level	37
Part 2	CoS Configuration Components	
Chapter 3	Classifying Packets by Behavior Aggregate	41
	BA Classifier Overview	41
	BA Classifier Configuration Hierarchy	43
	Overview of BA Classifier Types	44
	Default Behavior Aggregate Classification Overview	44
	BA Classifier Default Values	45
	Default IP Precedence Classifier (ipprec-compatibility)	45
	Default MPLS EXP Classifier	46
	Default DSCP and DSCP IPv6 Classifier	46
	Default IEEE 802.1p Classifier	48
	Default IEEE 802.1ad Classifier	48
	Default IP Precedence Classifier (ipprec-default)	49
	Defining Classifiers	50
	Importing a Classifier	51
	Applying Classifiers to Logical Interfaces	52
	DSCP Classifier Configuration Examples	55
	Configuring BA Classifiers for Bridged Ethernet	57
	Tunneling and BA Classifiers	58
	Applying DSCP IPv6 Classifiers	59
	Applying MPLS EXP Classifiers to Routing Instances	59
	Configuring Global Classifiers and Wildcard Routing Instances	61
	Examples: Applying MPLS EXP Classifiers to Routing Instances	61
	Applying MPLS EXP Classifiers for Explicit-Null Labels	63
	Setting Packet Loss Priority	64
	Example: Overriding the Default PLP on M320 Routers	64
	Configuring and Applying IEEE 802.1ad Classifiers	65
	Defining Custom IEEE 802.1ad Maps	65
	Applying Custom IEEE 802.1ad Maps	65
	Verifying Custom IEEE 802.1ad Map Configuration	66
	Understanding DSCP Classification for VPLS	66
	Example: Configuring DSCP Classification for VPLS	66
	BA Classifiers and ToS Translation Tables	68

Chapter 4	Defining Code-Point Aliases	69
	Default Code-Point Alias Overview	69
	Default CoS Values	70
	Defining Code Point Aliases for Bit Patterns	72
Chapter 5	Classifying Packets Based on Various Packet Header Fields	75
	Multifield Classifier Overview	76
	Configuring Multifield Classifiers	76
	Example: Classifying Packets Based on Their Destination Address	78
	Example: Configuring and Verifying a Complex Multifield Filter	78
	Configuring a Complex Multifield Filter	79
	Verifying a Complex Multifield Filter	80
	Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets	81
	Overview of Simple Filters	84
	Example: Configuring a Simple Filter	85
	Configuring Logical Bandwidth Policers	86
	Example: Configuring a Logical Bandwidth Policer	86
	Two-Color Policers and Shaping Rate Changes	87
	Example: Two-Color Policers and Shaping Rate Changes	88
	Understanding IEEE 802.1p Inheritance push and swap from a Transparent Tag	88
	Configuring IEEE 802.1p Inheritance push and swap from the Transparent Tag	89
	Classifiers and Rewrite Rules at the Global and Physical Interface Levels Overview	91
	Configuring Classifiers and Rewrite Rules at the Global and Physical Interface Levels	92
Chapter 6	Configuring Tricolor Marking Policers	95
	Policer Overview	96
	Platform Support for Tricolor Marking	98
	Tricolor Marking Architecture	99
	Configuring Tricolor Marking	100
	Tricolor Marking Limitations	101
	Configuring Single-Rate Tricolor Marking	102
	Configuring Color-Blind Mode for Single-Rate Tricolor Marking	102
	Configuring Color-Aware Mode for Single-Rate Tricolor Marking	103
	Effect on Low PLP of Single-Rate Policer	103
	Effect on Medium-Low PLP of Single-Rate Policer	104
	Effect on Medium-High PLP of Single-Rate Policer	104
	Effect on High PLP of Single-Rate Policer	105
	Configuring Two-Rate Tricolor Marking	105
	Configuring Color-Blind Mode for Two-Rate Tricolor Marking	105
	Configuring Color-Aware Mode for Two-Rate Tricolor Marking	106
	Effect on Low PLP of Two-Rate Policer	106
	Effect on Medium-Low PLP of Two-Rate Policer	107
	Effect on Medium-High PLP of Two-Rate Policer	107
	Effect on High PLP of Two-Rate Policer	107

	Enabling Tricolor Marking	108
	Configuring Tricolor Marking Policers	108
	Applying Tricolor Marking Policers to Firewall Filters	110
	Example: Applying a Two-Rate Tricolor Marking Policar to a Firewall Filter	110
	Applying Firewall Filter Tricolor Marking Policers to Interfaces	111
	Example: Applying a Single-Rate Tricolor Marking Policar to an Interface	111
	Applying Layer 2 Policers to Gigabit Ethernet Interfaces	112
	Examples: Applying Layer 2 Policers to a Gigabit Ethernet Interface	112
	Using BA Classifiers to Set PLP	113
	Using Multifield Classifiers to Set PLP	113
	Configuring PLP for Drop-Profile Maps	115
	Configuring Rewrite Rules Based on PLP	115
	Example: Configuring and Verifying Two-Rate Tricolor Marking	116
	Applying a Policar to the Input Interface	116
	Applying Profiles to the Output Interface	117
	Marking Packets with Medium-Low Loss Priority	118
	Verifying Two-Rate Tricolor Marking Operation	119
	Policar Support for Aggregated Ethernet and SONET Bundles Overview	120
Chapter 7	Configuring Forwarding Classes	123
	Overview of Forwarding Classes	123
	Output Queue Assignments Based on Forwarding Class	123
	Devices That Support Up to Four Forwarding Classes	124
	Devices That Support Up to 16 Forwarding Classes	124
	Default and Configurable Packet Loss Priority Values	125
	Configuration Statements Used to Configure and Apply Forwarding Classes	125
	Default Forwarding Classes	126
	Configuring Forwarding Classes	128
	Applying Forwarding Classes to Interfaces	129
	Classifying Packets by Egress Interface	129
	Example: DSCP IPv6 Rewrites and Forwarding Class Maps	131
	Assigning Forwarding Class and DSCP Value for Routing Engine-Generated Traffic	132
	Overriding Fabric Priority Queuing	133
	Configuring Up to 16 Forwarding Classes	134
	Enabling Eight Queues on Interfaces	136
	Multiple Forwarding Classes and Default Forwarding Classes	137
	PICs Restricted to Four Queues	138
	Examples: Configuring Up to 16 Forwarding Classes	139
Chapter 8	Configuring Forwarding Policy Options	141
	Forwarding Policy Options Overview	141
	Configuring CoS-Based Forwarding	142
	Overriding the Input Classification	144
	Example: Configuring CoS-Based Forwarding	145
	Example: Configuring CoS-Based Forwarding for Different Traffic Types	147
	Example: Configuring CoS-Based Forwarding for IPv6	148

Chapter 9	Configuring Fragmentation by Forwarding Class	151
	Fragmentation by Forwarding Class Overview	151
	Configuring Fragmentation by Forwarding Class	152
	Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16	
	DLCI	153
	Example: Configuring Fragmentation by Forwarding Class	153
	Example: Configuring Drop Timeout Interval by Forwarding Class	154
Chapter 10	Configuring Schedulers	157
	Schedulers Overview	158
	Default Schedulers Overview	159
	Configuring Schedulers	160
	Configuring the Scheduler Buffer Size	160
	Configuring Large Delay Buffers for Slower Interfaces	162
	Maximum Delay Buffer for NxDSO Interfaces	165
	Example: Configuring Large Delay Buffers for Slower Interfaces	167
	Enabling and Disabling the Memory Allocation Dynamic per Queue	170
	Configuring Drop Profile Maps for Schedulers	171
	Configuring Scheduler Transmission Rate	172
	Example: Configuring Scheduler Transmission Rate	174
	Allocation of Leftover Bandwidth	174
	Priority Scheduling Overview	175
	Platform Support for Priority Scheduling	176
	Configuring Schedulers for Priority Scheduling	177
	Example: Configuring Priority Scheduling	178
	Configuring Strict-High Priority on M Series and T Series Routers	178
	Configuring Scheduler Maps	179
	Applying Scheduler Maps Overview	180
	Applying Scheduler Maps to Physical Interfaces	181
	Applying Scheduler Maps and Shaping Rate to Physical Interfaces on IQ	
	PICs	181
	Shaping Rate Calculations	182
	Examples: Applying a Scheduler Map and Shaping Rate to Physical	
	Interfaces	183
	Example: Configuring VLAN Shaping on Aggregated Interfaces	187
	Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs	188
	Example: Applying Scheduler Maps and Shaping Rate to DLCIs and	
	VLANs	193
	Configuring Per-Unit Schedulers for Channelized Interfaces	195
	Applying a Shaping Rate to Physical Interfaces Overview	197
	Configuring the Shaping Rate for Physical Interfaces	198
	Oversubscribing Interface Bandwidth	199
	Verifying Configuration of Bandwidth Oversubscription	204
	Examples: Oversubscribing Interface Bandwidth	204
	Providing a Guaranteed Minimum Rate	207
	Verifying Configuration of Guaranteed Minimum Rate	210
	Example: Providing a Guaranteed Minimum Rate	210

	Applying Scheduler Maps to Packet Forwarding Component Queues	211
	Applying Custom Schedulers to Packet Forwarding Component Queues . .	212
	Examples: Scheduling Packet Forwarding Component Queues	213
	Default Fabric Priority Queuing	217
	Associating Schedulers with Fabric Priorities	217
	Example: Associating a Scheduler with a Fabric Priority	217
	Configuring the Number of Schedulers for Ethernet IQ2 PICs	218
	Ethernet IQ2 PIC Schedulers	218
	Example: Configuring a Scheduler Number for an Ethernet IQ2 PIC Port . .	219
	Ethernet IQ2 PIC RTT Delay Buffer Values	220
	Configuring Rate Limiting and Sharing of Excess Bandwidth on Multiservices PICs	220
Chapter 11	Configuring Hierarchical Schedulers	223
	Hierarchical Schedulers Terminology	223
	Configuring Hierarchical Schedulers for CoS	225
	Configuring Interface Sets	226
	Applying Interface Sets	228
	Interface Set Caveats	228
	Hierarchical Schedulers and Traffic Control Profiles	230
	Example: Four-Level Hierarchy of Schedulers	231
	Configuring the Interface Sets	232
	Configuring the Interfaces	232
	Configuring the Traffic Control Profiles	233
	Configuring the Schedulers	233
	Configuring the Drop Profiles	234
	Configuring the Scheduler Maps	234
	Applying the Traffic Control Profiles	235
	Hierarchical Schedulers on Aggregated Ethernet Interfaces Overview	236
	Configuring Hierarchical Schedulers on Aggregated Ethernet Interfaces	237
	Controlling Remaining Traffic	237
	Configuring Internal Scheduler Nodes	240
	PIR-Only and CIR Mode	241
	Priority Propagation	242
Chapter 12	Configuring Queue-Level Bandwidth Sharing	245
	Bandwidth Sharing on Nonqueuing Packet Forwarding Engines Overview	245
	Configuring Rate Limits on Nonqueuing Packet Forwarding Engines	246
	Excess Rate and Excess Priority Configuration Examples	247
Chapter 13	Configuring RED Drop Profiles	253
	RED Drop Profiles Overview	253
	Default Drop Profile	255
	Configuring RED Drop Profiles	255
	Packet Loss Priority Configuration Overview	256
	Example: Configuring RED Drop Profiles	257
	Configuring Weighted RED Buffer Occupancy	258
	Example: Configuring Weighted RED Buffer Occupancy	259

Chapter 14	Rewriting Packet Header Information	261
	Rewriting Packet Header Information Overview	262
	Applying Default Rewrite Rules	263
	Configuring Rewrite Rules	264
	Header Bits Preserved, Cleared, and Rewritten	265
	Applying Rewrite Rules to Output Logical Interfaces	266
	Setting IPv6 DSCP and MPLS EXP Values Independently	268
	Configuring DSCP Values for IPv6 Packets Entering the MPLS Tunnel	268
	Assigning the Default Frame Relay DE Loss Priority Map to an Interface	270
	Defining a Custom Frame Relay Loss Priority Map	271
	Applying IEEE 802.1p Rewrite Rules to Dual VLAN Tags	271
	Example: Applying an IEEE 802.1p Rewrite Rule to Dual VLAN Tags	272
	Applying IEEE 802.1ad Rewrite Rules to Dual VLAN Tags	273
	Example: Applying an IEEE 802.1ad Rewrite Rule to Dual VLAN Tags	273
	Example: Per-Node Rewriting of EXP Bits	274
	Rewriting MPLS and IPv4 Packet Headers	275
	Example: Rewriting MPLS and IPv4 Packet Headers	276
	Example: Simultaneous DSCP and EXP Rewrite	278
	Rewriting the EXP Bits of All Three Labels of an Outgoing Packet	278
	Example: Rewriting the EXP Bits of All Three Labels of an Outgoing Packet	279
	Rewriting IEEE 802.1p Packet Headers with an MPLS EXP Value	280
	Configuring the IEEE 802.1p Field for CoS Host Outbound Traffic	282
	Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic	282
	Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface	283
	Setting Ingress DSCP Bits for Multicast Traffic over Layer 3 VPNs	284
Part 3	CoS Configuration on Various PIC Types	
Chapter 15	Hardware Capabilities and Routing Engine Protocol Queue Assignments	289
	Hardware Capabilities and Limitations	289
	CoS Hardware Capabilities and Limitations on J Series, M Series, and T Series Routers	289
	CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches	295
	CoS Capabilities and Limitations on IQ2 and IQ2E PICs (M Series and T Series Platforms)	298
	M320 Routers FPCs and CoS	298
	MX Series Router CoS Hardware Capabilities and Limitations	300
	Default Routing Engine Protocol Queue Assignments	301
	Changing the Routing Engine Outbound Traffic Defaults	303
	CoS Features of Router Hardware and Interface Families	304
	CoS Features of the Router Hardware, PIC, and MIC and MPC Interface Families	304
	Scheduling on the Router Hardware, PIC, and MIC and MPC Interface Families	305
	Schedulers on the Router Hardware, PIC, and MIC and MPC Families	305

	Queuing Parameters for the Router Hardware, PIC, and MIC and MPC	
	Interface Families	306
	Junos Trio Chipset on MX Series FAQs	307
Chapter 16	Configuring CoS for Tunnels	311
	CoS for Tunnels Overview	311
	Configuring CoS for Tunnels	312
	Example: Configuring CoS for Tunnels	312
	Example: Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header . . .	315
Chapter 17	Configuring CoS on Services PICs	317
	Overview of CoS on Services PICs	317
	Configuring CoS Rules	318
	Configuring Match Conditions in a CoS Rule	320
	Configuring Actions in a CoS Rule	321
	Configuring Application Profiles	321
	Configuring Reflexive and Reverse CoS Actions	322
	Configuring CoS Rule Sets	323
	Output Packet Rewriting	323
	Allocating Excess Bandwidth Among Frame Relay DLCIs on Multiservices	
	PICs	323
	Multiservices PIC ToS Translation	325
	Example: Configuring CoS Rules	325
Chapter 18	Configuring CoS on Enhanced IQ PICs	327
	CoS on Enhanced IQ PICs Overview	327
	Configuring ToS Translation Tables	328
	Configuring Excess Bandwidth Sharing on IQE PICs	332
	IQE PIC Excess Bandwidth Sharing Overview	332
	IQE PIC Excess Bandwidth Sharing Configuration	333
	Calculation of Expected Traffic on IQE PIC Queues	335
	Excess Bandwidth Calculations Terminology	335
	Excess Bandwidth Basics	335
	Logical Interface Modes on IQE PICs	337
	Default Rates for Queues on IQE PICs	341
	Sample Calculations of Excess Bandwidth Sharing on IQE PICs	343
	Configuring Layer 2 Policing on IQE PICs	356
	Layer 2 Policer Limitations	357
	Configuring Layer 2 Policers on IQE PICs	358
	Configuring Low-Latency Static Policers on IQE PICs	359
	Assigning Default Frame Relay Rewrite Rule to IQE PICs	360
	Defining Custom Frame Relay Rewrite Rule on IQE PICs	361
Chapter 19	Configuring CoS on Ethernet IQ2 and Enhanced IQ2 PICs	363
	CoS on Enhanced IQ2 PICs Overview	363
	Setting the Number of Egress Queues on IQ2 and Enhanced IQ2 PICs	365
	Configuring Rate Limits on IQ2 and Enhanced IQ2 PICs	365
	Configuring Shaping on 10-Gigabit Ethernet IQ2 PICs	367
	Shaping Granularity Values for Enhanced Queuing Hardware	369

	Understanding Burst Size Configuration on IQ2 and IQ2E Interfaces	371
	Configuring Burst Size for Shapers on IQ2 and IQ2E Interfaces	372
	Differences Between Gigabit Ethernet IQ and Gigabit Ethernet IQ2 PICs	373
	Configuring Traffic Control Profiles for Shared Scheduling and Shaping	374
	Configuring a Separate Input Scheduler for Each Interface	376
	Configuring Per-Unit Scheduling for GRE Tunnels Using IQ2 and IQ2E PICs	377
	Configuring Hierarchical Input Shapers	379
	Configuring a Policer Overhead	379
	Example: Configuring a CIR and a PIR on Ethernet IQ2 Interfaces	380
	Example: Configuring Shared Resources on Ethernet IQ2 Interfaces	382
Chapter 20	Configuring CoS on SONET/SDH OC48/STM16 IQE PICs	387
	CoS on SONET/SDH OC48/STM16 IQE PIC Overview	388
	Packet Classification on SONET/SDH OC48/STM16 IQE PICs	390
	Scheduling and Shaping on SONET/SDH OC48/STM16 IQE PICs	391
	Scaling for SONET/SDH OC48/STM16 IQE PICs	393
	Translation Table on SONET/SDH OC48/STM16 IQE PICs	394
	Priority Mapping on SONET/SDH OC48/STM16 IQE PICs	394
	MDRR on SONET/SDH OC48/STM16 IQE PICs	396
	WRED on SONET/SDH OC48/STM16 IQE PICs	396
	Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs	396
	Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs	396
	Forwarding Class to Queue Mapping on SONET/SDH OC48/STM16 IQE PICs	397
	Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs	397
	Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs	398
	Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs Overview	398
	Example: Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs	402
	Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs	409
	Configuring Scheduling, Shaping, and Priority Mapping on SONET/SDH OC48/STM16 IQE PICs	409
	Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs	410
	Configuring WRED on SONET/SDH OC48/STM16 IQE PICs	411
	Configuring Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs	411
	Configuring Rewrite Rules on SONET/SDH OC48/STM16 IQE PIC	411
	Configuring Forwarding Classes on SONET/SDH OC48/STM16 IQE PIC	411
	Example: Transmit Rate Adding Up to More than 100 Percent	412
	Example: Priority Mapping on SONET/SDH OC48/STM16 IQE PICs	413
	Example: Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs	415
	Example: Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs	418
	Example: Configuring a CIR and a PIR on SONET/SDH OC48/STM16 IQE Interfaces	419
	Example: Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs	420
	Example: Configuring WRED on SONET/SDH OC48/STM16 IQE PICs	420

Chapter 21	Configuring CoS on 10-Gigabit Ethernet LAN/WAN PICs with SFP+ 421
	CoS on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview 421
	DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ 422
	Configuring DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC 425
	BA and Fixed Classification on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview 426
	Example: Configuring IEEE 802.1p BA Classifier on 10-Gigabit Ethernet LAN/WAN PICs 427
	Queuing on 10-Gigabit Ethernet LAN/WAN PICs Properties 428
	Example: Mapping Forwarding Classes to CoS Queues on 10-Gigabit Ethernet LAN/WAN PICs 428
	Scheduling and Shaping on 10-Gigabit Ethernet LAN/WAN PICs Overview . . . 429
	Example: Configuring Shaping Overhead on 10-Gigabit Ethernet LAN/WAN PICs 430
Chapter 22	Configuring CoS on Enhanced Queuing DPCs 431
	Enhanced Queuing DPC Hardware Properties 431
	Configuring Rate Limits on Enhanced Queuing DPCs 434
	Configuring Simple Filters on Enhanced Queuing DPCs 435
	Configuring WRED on Enhanced Queuing DPCs 437
	Configuring MDRR on Enhanced Queuing DPCs 438
	Configuring Excess Bandwidth Sharing 440
	Excess Bandwidth Sharing and Minimum Logical Interface Shaping 440
	Selecting Excess Bandwidth Sharing Proportional Rates 441
	Mapping Calculated Weights to Hardware Weights 442
	Allocating Weight with Only Shaping Rates or Unshaped Logical Interfaces 442
	Sharing Bandwidth Among Logical Interfaces 443
	Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs 445
	Configuring Customer VLAN (Level 3) Shaping on Enhanced Queuing DPCs . . 446
Chapter 23	Configuring CoS on MIC and MPC Interfaces 449
	CoS on MIC and MPC Features Overview 450
	CoS Capabilities and Limitations on MPCs and MICs 453
	Scheduler Node Scaling on MIC and MPC Interfaces Overview 454
	Dedicated Queue Scaling for CoS Configurations on MIC and MPC Interfaces Overview 455
	Queue Scaling for MIC and MPC Combinations 456
	Distribution of Queues on 30-Gigabit Ethernet Queuing MPCs 456
	Distribution of Queues on 60-Gigabit Ethernet MPCs 458
	Determining Maximum Egress Queues and Subscriber Interfaces per Port 458

Managing Remaining Queues	459
Managing Dedicated and Remaining Queues for Static CoS Configurations on MIC and MPC Interfaces	459
Configuring the Maximum Number of Queues for MIC and MPC Interfaces	460
Configuring Remaining Common Queues on MIC and MPC Interfaces	460
Verifying the Number of Dedicated Queues Configured on MIC and MPC Interfaces	461
Excess Bandwidth Distribution on MIC and MPC Interfaces Overview	461
Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs	462
Per-Priority Shaping on MIC and MPC Interfaces Overview	464
Example: Configuring Per-Priority Shaping on MIC and MPC Interfaces	468
Traffic Burst Management on MIC and MPC Interfaces Overview	475
Guidelines for Configuring the Burst Size	475
How the System Calculates the Burst Size	476
CoS on Ethernet Pseudowires in Universal Edge Networks Overview	477
Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks . .	477
CoS Scheduling Policy on Logical Tunnel Interfaces Overview	478
Configuring a CoS Scheduling Policy on Logical Tunnel Interfaces	479
Bandwidth Management for Downstream Traffic in Edge Networks	
Overview	480
Guidelines for Configuring the Shaping Mode	481
Guidelines for Configuring Byte Adjustments	481
Relationship with Other CoS Features	481
Setting the Shaping-Rate and Overhead-Accounting Class-of-Service Attributes Based on Access Line Information	482
Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates	482
Example: Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates	483
Managing Traffic with Different Encapsulations	484
Managing Downstream Cell-Based Traffic	485
CoS for L2TP LNS Inline Services Overview	486
Guidelines for Applying CoS to the LNS	486
Hardware Requirements for Inline Services on the LNS	486
Configuring Static CoS for an L2TP LNS Inline Service	487
Intelligent Oversubscription on the MIC and MPC Interfaces Overview	489
Configuring Ingress Hierarchical CoS on MPC and MIC Interfaces	491
Class of Service on Application Services Modular Line Card Overview	492
CoS Implementation in HTTP Reverse Proxy Scenario	493
CoS Implementation in Transparent Proxy Scenario	493
CoS Implementation in Mixed-Mode Scenario	494
MX Series QoS FAQ Overview	494
Chapter 24	
Configuring CoS on Circuit Emulation ATM MIC Interfaces	497
CoS on Circuit Emulation ATM MICs Overview	497
Configuring CoS on Circuit Emulation ATM MICs	498

Part 4	CoS Configuration for Specific Transports	
Chapter 25	Configuring Schedulers on Aggregated Ethernet and SONET/SDH Interfaces	503
	Configuring Schedulers on Aggregated Interfaces	503
	Limitations on CoS for Aggregated Interfaces	504
	Examples: Configuring CoS on Aggregated Interfaces	506
	Example: Configuring Scheduling Modes on Aggregated Interfaces	508
Chapter 26	Configuring CoS on ATM Interfaces	515
	CoS on ATM Interfaces Overview	515
	Configuring Linear RED Profiles on ATM Interfaces	516
	Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces	517
	Example: Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces	519
	Configuring Scheduler Maps on ATM Interfaces	520
	Enabling Eight Queues on ATM Interfaces	522
	Example: Enabling Eight Queues on ATM2 IQ Interfaces	523
	Verifying the Configuration	527
	Configuring VC CoS Mode on ATM Interfaces	527
	Copying the PLP Setting to the CLP Bit on ATM Interfaces	528
	Applying Scheduler Maps to Logical ATM Interfaces	528
	Example: Configuring CoS for ATM2 IQ VC Tunnels	529
	Configuring CoS for L2TP Tunnels on ATM Interfaces	530
	Configuring IEEE 802.1p BA Classifiers for Ethernet VPLS Over ATM	531
	Example: Combine Layer 2 and Layer 3 Classification on the Same ATM Physical Interface	532
Chapter 27	Configuring CoS on Ethernet Interfaces	535
	CoS for L2TP Tunnels on Ethernet Interface Overview	535
	Configuring CoS for L2TP Tunnels on Ethernet Interfaces	536
	Configuring LNS CoS for Link Redundancy	537
	Example: L2TP LNS CoS Support for Link Redundancy	538
Chapter 28	Configuring CoS for MPLS	541
	CoS for MPLS Overview	541
	Configuring CoS for MPLS Traffic	542
Part 5	CoS Configuration Examples and Statements	
Chapter 29	CoS Configuration Examples	547
	Example: Configuring Classifiers, Rewrite Markers, and Schedulers	547
	Example: Configuring a CoS Policy for IPv6 Packets	552
Chapter 30	Summary of CoS Configuration Statements	553
	action	553
	address (CoS on ATM Interfaces)	554
	adjust-minimum	554
	adjust-percent	555
	application-profile	556

application-sets (Services CoS)	557
applications (Services CoS)	557
atm-options	558
atm-policer	560
atm-scheduler-map	561
atm-service	561
buffer-size (Schedulers)	562
cbr	563
cdvt	564
class	565
class (CoS-Based Forwarding)	565
class (Forwarding Classes)	566
class-of-service	566
classification-override	567
classifiers	568
classifiers (Application)	568
classifiers (Application for Routing Instances)	569
classifiers (Definition)	570
classifiers (Physical Interface)	571
code-point	571
code-point-aliases	572
code-points	573
copy-plp-all	573
copy-tos-to-outer-ip-header	574
data (FTP)	574
default (CoS Host Outbound Traffic)	575
delay-buffer-rate	576
destination (Interfaces)	577
destination-address (CoS)	578
discard (Forwarding Class)	578
drop-probability	579
drop-probability (Interpolated Value)	579
drop-probability (Percentage)	579
drop-profile (Schedulers)	580
drop-profile-map (Schedulers)	580
drop-profiles (Class-of-Service)	581
drop-timeout (Forwarding Class)	582
dscp	583
dscp (AS PIC Classifiers)	583
dscp (Classifier on Physical Interface)	584
dscp (Multifield Classifier)	584
dscp (Rewrite Rules)	585
dscp (Rewrite Rules on Physical Interface)	585
dscp-code-point (Class-of-Service)	586
dscp-ipv6 (Class-of-Service)	587
egress-policer-overhead	588
egress-shaping-overhead	589
epd-threshold	590
excess-bandwidth-share	591

excess-priority	592
excess-rate	593
excess-rate-high	594
excess-rate-low	594
exp	595
exp-push-push-push	596
exp-swap-push-push	597
fabric (Class-of-Service)	598
family	599
family (CoS on ATM Interfaces)	599
family (Multifield Classifier)	600
fill-level	601
fill-level (Drop Profiles)	601
fill-level (Interpolated Value)	602
filter	603
filter (Applying to an Interface)	603
filter (Configuring)	604
firewall	605
forwarding-class	606
forwarding-class (AS PIC Classifiers)	606
forwarding-class (ATM2 IQ Scheduler Maps)	607
forwarding-class (BA Classifiers)	607
forwarding-class (Forwarding Policy)	608
forwarding-class (Fragmentation)	609
forwarding-class (Interfaces)	609
forwarding-class (Multifield Classifiers)	610
forwarding-class (Restricted Queues)	610
forwarding-classes (Class-of-Service)	611
forwarding-classes-interface-specific	612
forwarding-policy	613
fragment-threshold	614
fragmentation-map	615
fragmentation-maps	616
frame-relay-de (Assigning to an Interface)	617
frame-relay-de (Defining Loss Priority Maps)	618
frame-relay-de (Defining Loss Priority Rewrites)	619
from	620
ftp (Class-Of-Service)	620
guaranteed-rate	621
hierarchical-scheduler	622
high-plp-max-threshold	623
high-plp-threshold	623
host-outbound-traffic	624
ieee-802.1 (Classifier on Physical Interface)	625
ieee-802.1 (Host Outbound Traffic)	626
ieee-802.1 (Rewrite Rules on Logical Interface)	627
ieee-802.1 (Rewrite Rules on Physical Interface)	628
ieee-802.1ad	629
if-exceeding	630

import	631
import (Classifiers)	631
import (Rewrite Rules)	631
inet-precedence	632
inet-precedence (Classifier on Physical Interface)	633
inet-precedence (Rewrite Rules on Physical Interface)	633
ingress-policer-overhead	634
ingress-shaping-overhead	634
input-excess-bandwidth-share	635
input-policer	636
input-scheduler-map	637
input-shaping-rate	638
input-shaping-rate (Logical Interface)	638
input-shaping-rate (Physical Interface)	639
input-three-color	640
input-traffic-control-profile	641
input-traffic-control-profile-remaining	642
interfaces	643
interface-set (Hierarchical Schedulers)	645
internal-node	645
interpolate	646
irb	647
layer2-policer	648
linear-red-profile	649
linear-red-profiles	650
logical-interface-policer	651
loss-priority	652
loss-priority (BA Classifiers)	652
loss-priority (Normal Filter)	653
loss-priority (Rewrite Rules)	653
loss-priority (Scheduler Drop Profiles)	654
loss-priority (Simple Filter)	655
loss-priority-maps	655
loss-priority-maps (Assigning to an Interface)	656
loss-priority-rewrites	657
loss-priority-rewrites (Assigning to an Interface)	658
low-plp-max-threshold	658
low-plp-threshold	659
lsp-next-hop (CoS-Based Forwarding)	659
match-direction	660
max-burst-size	660
max-queues-per-interface	661
member-link-scheduler	662
mode (Layer 2 Tunneling Protocol Shaping)	662
multilink-class	663
next-hop (Class-Of-Service)	663
next-hop-map	664
no-fragmentation	665
non-lsp-next-hop	665

no-per-unit-scheduler	666
output-forwarding-class-map	666
output-policer	667
output-three-color	668
output-traffic-control-profile	669
output-traffic-control-profile-remaining	670
peak-rate	670
overhead-accounting	671
per-session-scheduler	672
per-unit-scheduler	673
plp-copy-all	674
plp-to-clp	674
policer	675
policer (Applying to an Interface)	675
policer (Configuring)	676
policing-action	678
priority	679
priority (ATM2 IQ Schedulers)	679
priority (Fabric Queues, Schedulers)	680
priority (Fabric Priority)	681
priority (Schedulers)	682
protocol	683
protocol (Rewrite Rules)	683
protocol (Schedulers)	684
q-pic-large-buffer	685
queue	686
queue (Global Queues)	686
queue (Restricted Queues)	687
queue-depth	687
red-buffer-occupancy	688
(reflexive reverse)	689
restricted-queues	689
rewrite-rules	690
rewrite-rules (Definition)	690
rewrite-rules (Interfaces)	691
rewrite-rules (Physical Interfaces)	692
rewrite-rules (CoS Host Outbound Traffic)	692
routing-instances (Class of Service)	693
rtvbr	694
rule	695
rule-set (Services CoS)	696
scheduler	697
scheduler (Fabric Queues)	697
scheduler (Scheduler Map)	697
scheduler-map	698
scheduler-map (Fabric Queues)	698
scheduler-map (Interfaces and Traffic-Control Profiles)	699
scheduler-map-chassis	700

scheduler-maps	701
scheduler-maps (For ATM2 IQ Interfaces)	701
scheduler-maps (For Most Interface Types)	702
schedulers	703
schedulers (Class of Service)	703
schedulers (Interfaces)	704
services (Class-Of-Service)	704
shaping	705
shaping-rate	706
shaping-rate (Applying to an Interface)	707
shaping-rate (Limiting Excess Bandwidth Usage)	709
shaping-rate (Oversubscribing an Interface)	710
shaping-rate-excess-high	711
shaping-rate-excess-low	712
shaping-rate-priority-high	713
shaping-rate-priority-low	714
shaping-rate-priority-medium	715
shared-bandwidth-policer	716
shared-instance	716
shared-scheduler	717
simple-filter	718
simple-filter (Applying to an Interface)	718
simple-filter (Configuring)	719
sip (Application Profile)	720
source-address (Services CoS)	720
sustained-rate	721
syslog (Services CoS)	721
system-defaults	722
term	723
term (AS PIC Classifiers)	723
term (Normal Filter)	724
term (Simple Filter)	725
then	726
three-color-policer	727
three-color-policer (Applying)	727
three-color-policer (Configuring)	728
traffic-control-profiles	729
traffic-manager	730
translation-table	732
transmit-rate (Schedulers)	733
transmit-weight	735
transparent	735
tri-color	736
unit	737
vbr	738
vc-cos-mode	739
vci	740
video (Application Profile)	741
vlan-tag	741

	voice (Application Profile)	742
Part 6	Index	
	Index	745
	Index of Statements and Commands	759

List of Figures

Part 1	CoS Overview	
Chapter 1	CoS Overview	3
	Figure 1: Packet Flow Across the Network	5
	Figure 2: M Series Routers Packet Forwarding Engine Components and Data Flow	12
	Figure 3: MX Series Router Packet Forwarding and Data Flow	14
	Figure 4: Packet Handling on the M Series and T Series Routers	15
	Figure 5: Packet Handling on the MX Series Routers	16
	Figure 6: T Series Router Packet Forwarding Engine Components and Data Flow	18
	Figure 7: CoS Classifier, Queues, and Scheduler	21
	Figure 8: Packet Flow Through CoS Configurable Components	21
Part 2	CoS Configuration Components	
Chapter 6	Configuring Tricolor Marking Policers	95
	Figure 9: Flow of Tricolor Marking Policer Operation	99
	Figure 10: Tricolor Marking Sample Topology	116
Chapter 7	Configuring Forwarding Classes	123
	Figure 11: Customer-Facing and Core-Facing Forwarding Classes	134
Chapter 8	Configuring Forwarding Policy Options	141
	Figure 12: Sample CoS-Based Forwarding	145
Chapter 10	Configuring Schedulers	157
	Figure 13: Aggregated Ethernet Primary and Backup Links	188
Chapter 11	Configuring Hierarchical Schedulers	223
	Figure 14: Building a Scheduler Hierarchy	231
	Figure 15: Handling Remaining Traffic	238
	Figure 16: Another Example of Handling Remaining Traffic	239
	Figure 17: Hierarchical Schedulers and Priorities	243
Chapter 13	Configuring RED Drop Profiles	253
	Figure 18: Segmented and Interpolated Drop Profiles	254
	Figure 19: Segmented and Interpolated Drop Profiles	257
Chapter 14	Rewriting Packet Header Information	261
	Figure 20: Packet Flow Across the Network	262

Part 3	CoS Configuration on Various PIC Types	
Chapter 16	Configuring CoS for Tunnels	311
	Figure 21: CoS with a Tunnel Configuration	313
Chapter 23	Configuring CoS on MIC and MPC Interfaces	449
	Figure 22: MIC and MPC Interface Per-Unit Scheduler Node Scaling	454
	Figure 23: MIC and MPC Interface Hierarchical Scheduling Node Scaling	455
	Figure 24: Distribution of Queues on the 30-Gigabit Ethernet Queuing MPC with One MIC	457
	Figure 25: Distribution of Queues on the 30-Gigabit Ethernet Queuing MPC with Two MICs	457
	Figure 26: Distribution of Queues on the 60-Gigabit Ethernet Enhanced Queuing MPC	458
	Figure 27: Architecture for MIC and MPC Interface Per-Priority Shaping	466
	Figure 28: Scheduling Hierarchy for Per-Priority Shaping	467
	Figure 29: Example MIC and MPC Interface Scheduling Hierarchy	469
	Figure 30: Sample Burst Shaping Rates	475
	Figure 31: Sample Network Topology for Downstream Traffic	483
	Figure 32: Processing of CoS Parameters in an L2TP LNS Inline Service	486
Part 4	CoS Configuration for Specific Transports	
Chapter 25	Configuring Schedulers on Aggregated Ethernet and SONET/SDH Interfaces	503
	Figure 33: Scaled Mode for Aggregated Ethernet Interfaces	511
	Figure 34: Replicated Mode for Aggregated Ethernet Interfaces	513
Chapter 26	Configuring CoS on ATM Interfaces	515
	Figure 35: Example Topology for Router with Eight Queues	523
Chapter 27	Configuring CoS on Ethernet Interfaces	535
	Figure 36: Topology to Verify Link Redundancy Support for L2TP LNS CoS	539

List of Tables

	About the Documentation	xxix
	Table 1: Text and Syntax Conventions	xxxi
Part 1	CoS Overview	
Chapter 1	CoS Overview	3
	Table 2: CoS Mappings—Inputs and Outputs	9
	Table 3: Default VPLS Classifiers	26
Part 2	CoS Configuration Components	
Chapter 3	Classifying Packets by Behavior Aggregate	41
	Table 4: Default IP Precedence Classifier	45
	Table 5: Default MPLS Classifier	46
	Table 6: Default DSCP Classifier	47
	Table 7: Default IEEE 802.1p Classifier	48
	Table 8: Default IEEE 802.1ad Classifier	49
	Table 9: Default IP Precedence (ipprec-default) Classifier	50
	Table 10: Logical Interface Classifier Combinations	52
	Table 11: Default MPLS EXP Classification Table	59
Chapter 4	Defining Code-Point Aliases	69
	Table 12: Default CoS Values	70
Chapter 6	Configuring Tricolor Marking Policers	95
	Table 13: Policer Actions	97
	Table 14: Color-Blind Mode TCM Color-to-PLP Mapping	102
	Table 15: Color-Aware Mode TCM PLP Mapping	103
	Table 16: Color-Blind Mode TCM Color-to-PLP Mapping	105
	Table 17: Color-Aware Mode TCM Mapping	106
	Table 18: Tricolor Marking Policer Statements	109
Chapter 7	Configuring Forwarding Classes	123
	Table 19: Default Forwarding Classes	126
	Table 20: Sample Forwarding Class-to-Queue Mapping	134
Chapter 10	Configuring Schedulers	157
	Table 21: Buffer Size Temporal Value Ranges by Router Type	161
	Table 22: Recommended Delay Buffer Sizes	162
	Table 23: Maximum Delay Buffer with q-pic-large-buffer Enabled by Interface	163
	Table 24: Delay-Buffer Calculations	165

	Table 25: NxDSO Transmission Rates and Delay Buffers	166
	Table 26: Scheduling Priority Mappings by FPC Type	177
	Table 27: Shaping Rate and WRR Calculations by PIC Type	183
	Table 28: Transmission Scheduling Support by Interfaces Type	190
	Table 29: Bandwidth and Delay Buffer Allocations by Configuration Scenario . .	202
	Table 30: Bandwidth and Delay Buffer Allocations by Configuration Scenario . .	210
	Table 31: Scheduler Allocation for an Ethernet IQ2 PIC	219
	Table 32: RTT Delay Buffers for IQ2 PICs	220
Chapter 11	Configuring Hierarchical Schedulers	223
	Table 33: Hierarchical Scheduler Nodes	224
	Table 34: Queue Priority	242
	Table 35: Internal Node Queue Priority for CIR Mode	242
	Table 36: Internal Node Queue Priority for PIR-Only Mode	243
Chapter 12	Configuring Queue-Level Bandwidth Sharing	245
	Table 37: Current Behavior with Multiple Priority Levels	247
	Table 38: Current Behavior with Same Priority Levels	248
	Table 39: Current Behavior with Strict-High Priority	248
	Table 40: Strict-High Priority with Higher Load	249
	Table 41: Sharing with Multiple Priority Levels	249
	Table 42: Sharing with the Same Priority Levels	249
	Table 43: Sharing with at Least One Strict-High Priority	250
	Table 44: Sharing with at Least One Strict-High Priority and Higher Load	250
	Table 45: Sharing with at Least One Strict-High Priority and Rate Limit	251
Chapter 14	Rewriting Packet Header Information	261
	Table 46: Default Packet Header Rewrite Mappings	263
	Table 47: Default MPLS EXP Rewrite Table	275
Part 3	CoS Configuration on Various PIC Types	
Chapter 15	Hardware Capabilities and Routing Engine Protocol Queue Assignments	289
	Table 48: Comparison of CoS Hardware Capabilities and Limitations	290
	Table 49: CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches	295
	Table 50: Drop Priority Classification for Packet Sent from Enhanced III to Enhanced II FPC on M320 Routers	299
	Table 51: Drop Priority Classification for Packet Sent from Enhanced II FPC Without Tricolor Marking to Enhanced III FPC on M320 Routers	299
	Table 52: Drop Priority Classification for Packet Sent from Enhanced II FPC with Tricolor Marking to Enhanced III FPC on M320 Routers	299
	Table 53: Routing Engine Protocol Queue Assignments	301
	Table 54: CoS Features of the Router Hardware and Interface Families Compared	304
	Table 55: Scheduling on Router Hardware and Interface Families Compared . .	305
	Table 56: Schedulers on the Router Hardware and Interface Families Compared	305

	Table 57: Queue Parameters on the Router Hardware and Interface Families Compared	306
Chapter 18	Configuring CoS on Enhanced IQ PICs	327
	Table 58: Default Handling of Excess Traffic	332
	Table 59: Basic Example of Excess Bandwidth	336
	Table 60: Hardware Use of Basic Example Parameters	336
	Table 61: Default Mode Example for IQE PICs	338
	Table 62: Undersubscribed PIR Mode Example for IQE PICs	339
	Table 63: Oversubscribed PIR Mode Example for IQE PICs	340
	Table 64: CIR Mode Example for IQE PICs	340
	Table 65: Excess Rate Mode Example for IQE PICs	341
	Table 66: Default Queue Rates on the IQE PIC	341
	Table 67: PIR Mode, with No Excess Configuration	343
	Table 68: PIR Mode, with No Excess Hardware Behavior	344
	Table 69: PIR Mode with Transmit Rate Configuration	344
	Table 70: PIR Mode with Transmit Rate Hardware Behavior	344
	Table 71: Second PIR Mode with Transmit Rate Configuration Example	345
	Table 72: Second PIR Mode with Transmit Rate Hardware Behavior Example	345
	Table 73: PIR Mode with Transmit Rate and Excess Rate Configuration	346
	Table 74: PIR Mode with Transmit Rate and Excess Rate Hardware Behavior	346
	Table 75: Excess Rate Configuration	346
	Table 76: Excess Rate Hardware Behavior	347
	Table 77: PIR Mode Generating Error Condition	347
	Table 78: PIR Mode Generating Error Condition Behavior	347
	Table 79: CIR Mode with No Excess Rate Configuration	348
	Table 80: CIR Mode with No Excess Rate Hardware Behavior	348
	Table 81: CIR Mode with Some Shaping Rates and No Excess Rate Configuration	349
	Table 82: CIR Mode with Some Shaping Rates and No Excess Rate Hardware Behavior	349
	Table 83: CIR Mode with Shaping Rates and Transmit Rates and No Excess Rate Configuration	350
	Table 84: CIR Mode with Shaping Rates and Transmit Rates and No Excess Rate Hardware Behavior	350
	Table 85: CIR Mode with Shaping Rates Greater Than Logical Interface Shaping Rate Configuration	351
	Table 86: CIR Mode with Shaping Rates Greater Than Logical Interface Shaping Rate Hardware Behavior	351
	Table 87: CIR Mode with Excess Rate Configuration	352
	Table 88: CIR Mode with Excess Rate Hardware Behavior	352
	Table 89: Oversubscribed PIR Mode with Transmit Rate Configuration	353
	Table 90: Oversubscribed PIR Mode with Transmit Rate Hardware Behavior	353
	Table 91: Oversubscribed PIR Mode with Transmit Rate and Excess Rate Configuration	354
	Table 92: Oversubscribed PIR Mode with Transmit Rate and Excess Rate Hardware Behavior	354
	Table 93: CIR Mode with Transmit Rate and Excess Rate Configuration	355
	Table 94: CIR Mode with Transmit Rate and Excess Rate Hardware Behavior	355

	Table 95: Excess Priority Configuration	356
Chapter 19	Configuring CoS on Ethernet IQ2 and Enhanced IQ2 PICs	363
	Table 96: Shaper Accuracy of 1-Gbps Ethernet at the Logical Interface Level	369
	Table 97: Shaper Accuracy of 10-Gbps Ethernet at the Logical Interface Level	369
	Table 98: Shaper Accuracy of 1-Gbps Ethernet at the Interface Set Level	370
	Table 99: Shaper Accuracy of 10-Gbps Ethernet at the Interface Set Level	370
	Table 100: Shaper Accuracy of 1-Gbps Ethernet at the Physical Port Level	371
	Table 101: Shaper Accuracy of 10-Gbps Ethernet at the Physical Port Level	371
Chapter 20	Configuring CoS on SONET/SDH OC48/STM16 IQE PICs	387
	Table 102: Computation of CIR and PIR on the Logical Interfaces	391
	Table 103: Computation of Rate for the Rate Limit Configured on the Queue with Transmit Rate Percentage	392
	Table 104: Scaling for SONET/SDH OC48/STM16 IQE PIC	393
	Table 105: Junos OS Priorities Mapped to SONET/SDH OC48/STM16 IQE PIC Hardware Priorities	395
	Table 106: Queue-Level Mapping for Excess Priority and Excess Rate	395
	Table 107: Rebased Transmission Rates and remainder Calculation	401
	Table 108: Priority Mapping and Output Calculation for Different Queues on the SONET/SDH OC48/STM16 IQE PIC	415
Chapter 21	Configuring CoS on 10-Gigabit Ethernet LAN/WAN PICs with SFP+	421
	Table 109: CoS Statements Supported on the 10-Gigabit Ethernet LAN/WAN PICs	422
	Table 110: Port Groups on 10-Gigabit Ethernet LAN/WAN PICs	429
Chapter 22	Configuring CoS on Enhanced Queuing DPCs	431
	Table 111: IQ2 PIC and Enhanced Queuing DPC Compared	431
	Table 112: Junos Priorities Mapped to Enhanced Queuing DPC Hardware Priorities	439
	Table 113: Shaping Rates and WFQ Weights	441
	Table 114: Example Shaping Rates and WFQ Weights	441
	Table 115: Rounding Configured Weights to Hardware Weights	442
	Table 116: Allocating Weights with PIR and CIR on Logical Interfaces	442
	Table 117: Sharing Bandwidth Among Logical Interfaces	443
	Table 118: First Example of Bandwidth Sharing	444
	Table 119: Second Example of Bandwidth Sharing	444
	Table 120: Final Example of Bandwidth Sharing	445
Chapter 23	Configuring CoS on MIC and MPC Interfaces	449
	Table 121: MPC Interfaces Shaping Granularities	451
	Table 122: Dedicated Queues for MIC and MPC Interfaces	456
	Table 123: Applying Traffic Control Profiles	474
	Table 124: Hardware Requirements for L2TP LNS Inline Services	487
Part 4	CoS Configuration for Specific Transports	
Chapter 28	Configuring CoS for MPLS	541
	Table 125: LSR Default Classification	541

About the Documentation

- [Junos OS Documentation and Release Notes on page xxix](#)
- [Supported Platforms on page xxix](#)
- [Using the Examples in This Manual on page xxx](#)
- [Documentation Conventions on page xxxi](#)
- [Documentation Feedback on page xxxii](#)
- [Requesting Technical Support on page xxxiii](#)

Junos OS Documentation and Release Notes

For a list of related Junos OS documentation, see <http://www.juniper.net/techpubs/software/junos/>.

If the information in the latest release notes differs from the information in the documentation, follow the *Junos OS Release Notes*.

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

Juniper Networks supports a technical book program to publish books by Juniper Networks engineers and subject matter experts with book publishers around the world. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration using the Junos operating system (Junos OS) and Juniper Networks devices. In addition, the Juniper Networks Technical Library, published in conjunction with O'Reilly Media, explores improving network security, reliability, and availability using Junos OS configuration techniques. All the books are for sale at technical bookstores and book outlets around the world. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- [EX Series](#)
- [J Series](#)
- [M Series](#)
- [MX Series](#)

- [SRX Series](#)
- [T Series](#)

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the CLI User Guide.

Documentation Conventions

Table 1 on page xxxi defines the text and syntax conventions used in this guide.

Table 1: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies book names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i>

Table 1: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area <i>area-id</i>] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
J-Web GUI Conventions		
Bold text like this	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at

<https://www.juniper.net/cgi-bin/docbugreport/> . If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

CoS Overview

- [CoS Overview on page 3](#)
- [Class of Service Configuration Statements on page 29](#)

CHAPTER 1

CoS Overview

This chapter discusses the following topics:

- [CoS Overview on page 3](#)
- [CoS Standards on page 4](#)
- [Understanding Packet Flow Across a Network on page 4](#)
- [Junos CoS Components on page 5](#)
- [Default CoS Settings on page 7](#)
- [CoS Input and Output Configuration on page 9](#)
- [Packet Flow Within Routers on page 10](#)
- [Packet Flow Through the CoS Process on page 20](#)
- [CoS Applications Overview on page 23](#)
- [Interface Types That Do Not Support CoS on page 25](#)
- [VPLS and Default CoS Classification on page 26](#)

CoS Overview

When a network experiences congestion and delay, some packets must be dropped. The Juniper Networks® Junos® operating system (Junos OS) class of service (CoS) enables you to divide traffic into classes and offer various levels of throughput and packet loss when congestion occurs. This allows packet loss to happen according to rules that you configure.

For interfaces that carry IPv4, IPv6, and MPLS traffic, you can configure the Junos OS CoS features to provide multiple classes of service for different applications. On the router, you can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a random early detection (RED) algorithm.

The Junos OS CoS features provide a set of mechanisms that you can use to provide differentiated services when best-effort traffic delivery is insufficient. In designing CoS applications, you must give careful consideration to your service needs, and you must thoroughly plan and design your CoS configuration to ensure consistency across all

routers in a CoS domain. You must also consider all the routers and other networking equipment in the CoS domain to ensure interoperability among all equipment.

Because Juniper Networks routers implement CoS in hardware rather than in software, you can experiment with and deploy CoS features without adversely affecting packet forwarding and routing performance.

**Related
Documentation**

- [Hardware Capabilities and Limitations on page 289](#)

CoS Standards

The standards for Juniper Networks® Junos® operating system (Junos OS) class of service (CoS) capabilities are defined in the following RFCs:

- RFC 2474, *Definition of the Differentiated Services Field in the IPv4 and IPv6 Headers*
- RFC 2597, *Assured Forwarding PHB Group*
- RFC 2598, *An Expedited Forwarding PHB*
- RFC 2698, *A Two Rate Three Color Marker*


Understanding Packet Flow Across a Network

CoS works by examining traffic entering at the edge of your network. The edge routers classify traffic into defined service groups, to provide the special treatment of traffic across the network. For example, voice traffic can be sent across certain links, and data traffic can use other links. In addition, the data traffic streams can be serviced differently along the network path to ensure that higher-paying customers receive better service. As the traffic leaves the network at the far edge, you can reclassify the traffic.

To support CoS, you must configure each router in the network. Generally, each router examines the packets that enter it to determine their CoS settings. These settings then dictate which packets are first transmitted to the next downstream router. In addition, the routers at the edges of the network might be required to alter the CoS settings of the packets that enter the network from the customer or peer networks.

In [Figure 1 on page 5](#), Router A is receiving traffic from a customer network. As each packet enters, Router A examines the packet's current CoS settings and classifies the traffic into one of the groupings defined by the Internet service provider (ISP). This definition allows Router A to prioritize its resources for servicing the traffic streams it is receiving. In addition, Router A might alter the CoS settings (forwarding class and loss priority) of the packets to better match the ISP's traffic groups. When Router B receives the packets, it examines the CoS settings, determines the appropriate traffic group, and processes the packet according to those settings. It then transmits the packets to Router C, which performs the same actions. Router D also examines the packets and determines the appropriate group. Because Router D sits at the far end of the network, the ISP might decide once again to alter the CoS settings of the packets before Router D transmits them to the neighboring network.

Figure 1: Packet Flow Across the Network

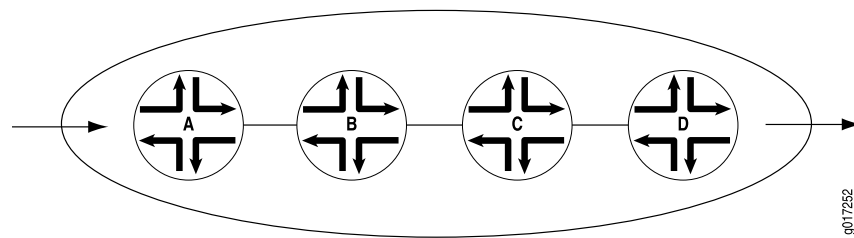

Junos CoS Components

The Juniper Networks® Junos® operating system (Junos OS) CoS consists of many components that you can combine and tune to provide the level of services required by customers.

The Junos OS CoS components include:

- Code-point aliases—A *code-point alias* assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components, such as classifiers, drop-profile maps, and rewrite rules.
- Classifiers—*Packet classification* refers to the examination of an incoming packet. This function associates the packet with a particular CoS servicing level. In the Junos OS, classifiers associate incoming packets with a forwarding class and loss priority and, based on the associated forwarding class, assign packets to output queues. Two general types of classifiers are supported:
 - Behavior aggregate or CoS value traffic classifiers—A *behavior aggregate* (BA) is a method of classification that operates on a packet as it enters the router. The CoS value in the packet header is examined, and this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, DSCP IPv6 value, IP precedence value, MPLS EXP bits, and IEEE 802.1p value. The default classifier is based on the IP precedence value.
 - Multifield traffic classifiers—A *multifield* classifier is a second method for classifying traffic flows. Unlike a behavior aggregate, a multifield classifier can examine multiple fields in the packet. Examples of some fields that a multifield classifier can examine include the source and destination address of the packet as well as the source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.
- Forwarding classes—The *forwarding classes* affect the forwarding, scheduling, and marking policies applied to packets as they transit a router. The forwarding class plus the loss priority define the per-hop behavior. Four categories of forwarding classes are supported: best effort, assured forwarding, expedited forwarding, and network control. For Juniper Networks M Series Multiservice Edge Routers, four forwarding classes are supported. You can configure up to one each of the four types of forwarding classes. For M120 and M320 Multiservice Edge Routers, Juniper Networks MX Series 3D Universal Edge Routers, and Juniper Networks T Series Core Routers, 16 forwarding classes are

supported, so you can classify packets more granularly. For example, you can configure multiple classes of expedited forwarding (EF) traffic: EF, EF1, and EF2.

- **Loss priorities**—*Loss priorities* allow you to set the priority of dropping a packet. Loss priority affects the scheduling of a packet without affecting the packet's relative ordering. You can use the packet loss priority (PLP) bit as part of a congestion control strategy. You can use the loss priority setting to identify packets that have experienced congestion. Typically you mark packets exceeding some service level with a high loss priority. You set loss priority by configuring a classifier or a policer. The loss priority is used later in the workflow to select one of the drop profiles used by RED.
- **Forwarding policy options**—These options allow you to associate forwarding classes with next hops. Forwarding policy also allows you to create classification overrides, which assign forwarding classes to sets of prefixes.
- **Transmission scheduling and rate control**—These parameters provide you with a variety of tools to manage traffic flows:
 - **Queuing**—After a packet is sent to the outgoing interface on a router, it is queued for transmission on the physical media. The amount of time a packet is queued on the router is determined by the availability of the outgoing physical media as well as the amount of traffic using the interface.
 - **Schedulers**—An individual router interface has multiple queues assigned to store packets. The router determines which queue to service based on a particular method of scheduling. This process often involves a determination of which type of packet should be transmitted before another. The Junos OS schedulers allow you to define the priority, bandwidth, delay buffer size, rate control status, and RED drop profiles to be applied to a particular queue for packet transmission.
 - **Fabric schedulers**—For M320 and T Series routers only, fabric schedulers allow you to identify a packet as high or low priority based on its forwarding class, and to associate schedulers with the fabric priorities.
 - **Policers for traffic classes**—*Policers* allow you to limit traffic of a certain class to a specified bandwidth and burst size. Packets exceeding the policer limits can be discarded, or can be assigned to a different forwarding class, a different loss priority, or both. You define policers with filters that can be associated with input or output interfaces.
- **Rewrite rules**—A *rewrite rule* sets the appropriate CoS bits in the outgoing packet. This allows the next downstream router to classify the packet into the appropriate service group. Rewriting, or marking, outbound packets is useful when the router is at the border of a network and must alter the CoS values to meet the policies of the targeted peer.

Default CoS Settings

If you do not configure any CoS settings on your router, the software performs some CoS functions to ensure that user traffic and protocol packets are forwarded with minimum delay when the network is experiencing congestion. Some default mappings are automatically applied to each logical interface that you configure. Other default mappings, such as explicit default classifiers and rewrite rules, are in operation only if you explicitly associate them with an interface.

You can display default CoS settings by issuing the **show class-of-service** operational mode command. This section includes sample output displaying the default CoS settings. The sample output is truncated for brevity.

show class-of-service

```
user@host> show class-of-service
```

Default Forwarding Classes

Forwarding class	Queue
best-effort	0
expedited-forwarding	1
assured-forwarding	2
network-control	3

Default Code-Point Aliases

```
Code point type: dscp
  Alias      Bit pattern
  af11      001010
  af12      001100
...
Code point type: dscp-ipv6
...
Code point type: exp
...
Code point type: ieee-802.1
...
Code point type: inet-precedence
...
```

Default Classifiers

```
Classifier: dscp-default, Code point type: dscp, Index: 7
...

Classifier: dscp-ipv6-default, Code point type: dscp-ipv6, Index: 8
...

Classifier: exp-default, Code point type: exp, Index: 9
...

Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 10
...

Classifier: ipprec-default, Code point type: inet-precedence, Index: 11
...
```

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 12
...

Default Frame Relay Loss Priority Map

Loss-priority-map: frame-relay-de-default, Code point type: frame-relay-de, Index: 13

Code point	Loss priority
0	low
1	high

Default Rewrite Rules

Rewrite rule: dscp-default, Code point type: dscp, Index: 24

Forwarding class	Loss priority	Code point
best-effort	low	000000
best-effort	high	000000

...

Rewrite rule: dscp-ipv6-default, Code point type: dscp-ipv6, Index: 25
...

Rewrite rule: exp-default, Code point type: exp, Index: 26
...

Rewrite rule: ieee8021p-default, Code point type: ieee-802.1, Index: 27
...

Rewrite rule: ipprec-default, Code point type: inet-precedence, Index: 28
...

Default Drop Profile

Drop profile: <default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Default Schedulers

Scheduler map: <default>, Index: 2

Scheduler: <default-be>, Forwarding class: best-effort, Index: 17
Transmit rate: 95 percent, Rate Limit: none, Buffer size: 95 percent, Priority: low

Drop profiles:

Loss priority	Protocol	Index	Name
Low	Any	1	<default-drop-profile>
High	Any	1	<default-drop-profile>

...

Related Documentation

- [Default Forwarding Classes on page 126](#)
- [Default Behavior Aggregate Classification Overview on page 44](#)
- [Default Drop Profile on page 255](#)
- [Default Schedulers Overview on page 159](#)
- [Default Fabric Priority Queuing on page 217](#)

CoS Input and Output Configuration

This topic includes the following:

- [CoS Inputs and Outputs Overview on page 9](#)
- [CoS Inputs and Outputs Examples on page 9](#)

CoS Inputs and Outputs Overview

Some CoS components map one set of values to another set of values. Each mapping contains one or more inputs and one or more outputs.

Some CoS components map one set of values to another set of values. Each mapping contains one or more inputs and one or more outputs. When you configure a mapping, you set the outputs for a given set of inputs, as shown in [Table 2 on page 9](#).

Table 2: CoS Mappings—Inputs and Outputs

CoS Mappings	Inputs	Outputs	Comments
classifiers	code-points	forwarding-class loss-priority	The map sets the forwarding class and PLP for a specific set of code points.
drop-profile-map	loss-priority protocol	drop-profile	The map sets the drop profile for a specific PLP and protocol type.
rewrite-rules	loss-priority	code-points	The map sets the code points for a specific forwarding class and PLP.

- Related Documentation
- [Default Behavior Aggregate Classification Overview on page 44](#)
 - [Configuring Drop Profile Maps for Schedulers on page 171](#)
 - [Applying Default Rewrite Rules on page 263](#)
 - [CoS Inputs and Outputs Examples on page 9](#)

CoS Inputs and Outputs Examples

Here are examples of configurations for classifiers, drop-profile maps, and rewrite rules.

In the following classifier example, packets with EXP bits **000** are assigned to the **data-queue** forwarding class with a **low** loss priority, and packets with EXP bits **001** are assigned to the **data-queue** forwarding class with a **high** loss priority.

```
[edit class-of-service]
classifiers {
  exp exp_classifier {
    forwarding-class data-queue {
      loss-priority low code-points 000;
      loss-priority high code-points 001;
    }
  }
}
```

In the following drop-profile map example, the scheduler includes two drop-profile maps, which specify that packets are evaluated by the **low-drop** drop profile if they have a **low** loss priority and are from any protocol. Packets are evaluated by the **high-drop** drop profile if they have a **high** loss priority and are from any protocol.

```
[edit class-of-service]
schedulers {
  best-effort {
    drop-profile-map loss-priority low protocol any drop-profile low-drop;
    drop-profile-map loss-priority high protocol any drop-profile high-drop;
  }
}
```

In the following rewrite rule example, packets in the **be** forwarding class with **low** loss priority are assigned the EXP bits **000**, and packets in the **be** forwarding class with **high** loss priority are assigned the EXP bits **001**.

```
[edit class-of-service]
rewrite-rules {
  exp exp-rw {
    forwarding-class be {
      loss-priority low code-point 000;
      loss-priority high code-point 001;
    }
  }
}
```

Related Documentation

- [CoS Inputs and Outputs Overview on page 9](#)

Packet Flow Within Routers

Packet flow differs by router type. This topic discusses the following:

- [Packet Flow Within Routers Overview on page 10](#)
- [Packet Flow on Juniper Networks J Series Services Routers on page 11](#)
- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)
- [Example of Packet Flow on MX Series 3D Universal Edge Routers on page 16](#)
- [Packet Flow on Juniper Networks T Series Core Routers on page 17](#)

Packet Flow Within Routers Overview

Although the architecture of Juniper Networks routers different in detail, the overall flow of a packet within the router remains consistent.

When a packet enters a Juniper Networks router, the PIC or other interface type receiving the packet retrieves it from the network and verifies that the link-layer information is valid. The packet is then passed to the concentrator device such as a Flexible PIC Concentrator (FPC), where the data link and network layer information is verified. In addition, the FPC is responsible for segmenting the packet into 64-byte units called J-cells. These cells are then written into packet storage memory while a notification cell

is sent to the route lookup engine. The destination address listed in the notification cell is located in the forwarding table, and the next hop of the packet is written into the result cell. This result cell is queued on the appropriate outbound FPC until the outgoing interface is ready to transmit the packet. The FPC then reads the J-cells out of memory, re-forms the original packet, and sends the packet to the outgoing PIC, where it is transmitted back into the network.

**Related
Documentation**

- [Packet Flow on Juniper Networks J Series Services Routers on page 11](#)
- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)
- [Packet Flow on Juniper Networks T Series Core Routers on page 17](#)

Packet Flow on Juniper Networks J Series Services Routers

On J Series Services Routers, some of the hardware components associated with larger routers are virtualized.

These virtualized components include Packet Forwarding Engines, Routing Engines, and their associated ASICs. For this reason, packet flow on J Series routers cannot be described in terms of discrete hardware components.


**Related
Documentation**

- [Packet Flow Within Routers Overview on page 10](#)
- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)
- [Packet Flow on Juniper Networks T Series Core Routers on page 17](#)

Packet Flow on Juniper Networks M Series Multiservice Edge Routers

On M Series Multiservice Edge Routers, CoS actions are performed in several locations in a Juniper Networks router: the incoming I/O Manager ASIC, the Internet Processor II ASIC, and the outgoing I/O Manager ASIC. These locations are shown in [Figure 2 on page 12](#).

Figure 2: M Series Routers Packet Forwarding Engine Components and Data Flow

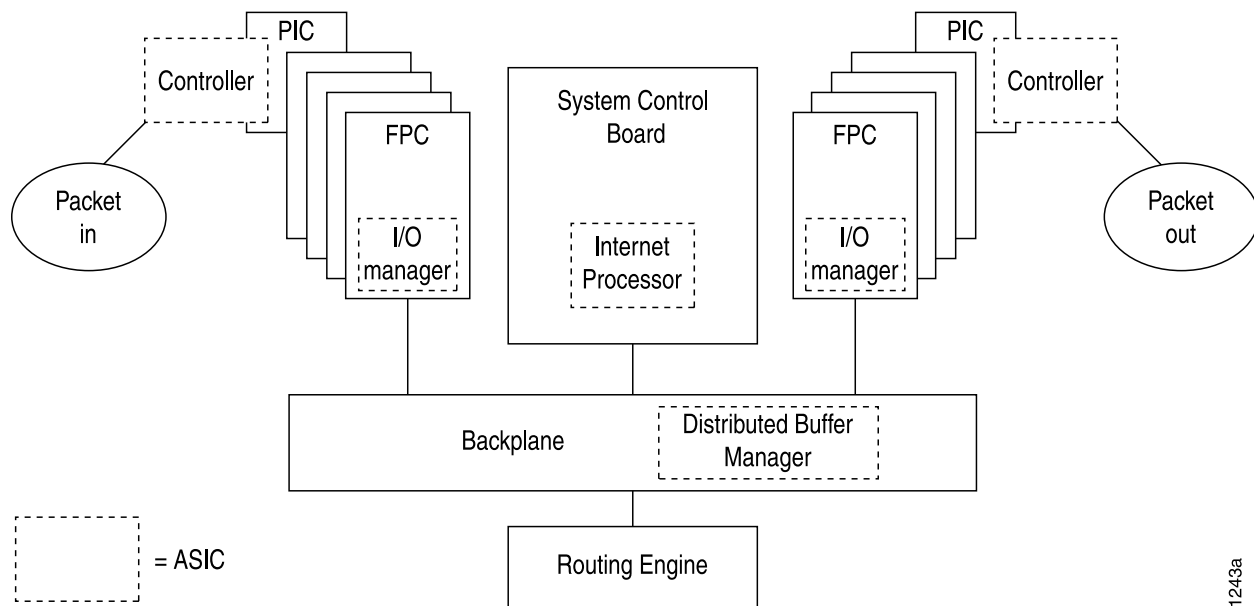

1243a

This topic describes the packet flow through the following components in more detail:

- [Incoming I/O Manager ASIC on page 12](#)
- [Internet Processor ASIC on page 12](#)
- [Outgoing I/O Manager ASIC on page 13](#)
- [Enhanced CFEB and CoS on M7i and M10i Multiservice Edge Routers on page 13](#)

[Incoming I/O Manager ASIC](#)

When a data packet is passed from the receiving interface to its connected FPC, it is received by the I/O Manager ASIC on that specific FPC. During the processing of the packet by this ASIC, the information in the packet's header is examined by a behavior aggregate (BA) classifier. This classification action associates the packet with a particular forwarding class. In addition, the value of the packet's loss priority bit is set by this classifier. Both the forwarding class and loss priority information are placed into the notification cell, which is then transmitted to the Internet Processor II ASIC.

[Internet Processor ASIC](#)

The Internet Processor II ASIC receives notification cells representing inbound data packets and performs route lookups in the forwarding table. This lookup determines the outgoing interface on the router and the next-hop IP address for the data packet. While the packet is being processed by the Internet Processor II ASIC, it might also be evaluated by a firewall filter, which is configured on either the incoming or outgoing interface. This filter can perform the functions of a multifold classifier by matching on multiple elements within the packet and overwriting the forwarding class, loss priority settings, or both within the notification cell. Once the route lookup and filter evaluations are complete, the notification cell, now called the result cell, is passed to the I/O Manager ASIC on the FPC associated with the outgoing interface.

Outgoing I/O Manager ASIC

When the result cell is received by the I/O Manager ASIC, it is placed into a queue to await transmission on the physical media. The specific queue used by the ASIC is determined by the forwarding class associated with the data packet. The configuration of the queue itself helps determine the service the packet receives while in this queued state. This functionality guarantees that certain packets are serviced and transmitted before other packets. In addition, the queue settings and the packet's loss priority setting determine which packets might be dropped from the network during periods of congestion.

In addition to queuing the packet, the outgoing I/O Manager ASIC is responsible for ensuring that CoS bits in the packet's header are correctly set before it is transmitted. This rewrite function helps the next downstream router perform its CoS function in the network.

Enhanced CFEB and CoS on M7i and M10i Multiservice Edge Routers

The Enhanced Compact Forwarding Engine Board (CFEB-E) for the M7i and M10i Multiservice Edge Routers provides additional hardware performance, scaling, and functions, as well as enhanced CoS software capabilities.

The enhanced CoS functions available with the CFEB-E on M7i and M10i routers include:

- Support for 16 forwarding classes and 8 queues
- Support for four loss priorities (medium-high and medium-low in addition to high and low)
- Support for hierarchical policing with tricolor marking, both single-rate tricolor marking (TCM) and two-rate TCM (trTCM)


Related Documentation

- [Packet Flow Within Routers Overview on page 10](#)
- [Packet Flow on Juniper Networks J Series Services Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)
- [Packet Flow on Juniper Networks T Series Core Routers on page 17](#)

Packet Flow on MX Series Ethernet Services Routers

The CoS architecture for MX Series Ethernet Services Routers, such as the MX960 router, is in concept similar to, but in particulars different from, other routers. The general architecture for MX Series routers is shown in [Figure 3 on page 14](#). [Figure 3 on page 14](#) illustrates packet flow through a Dense Port Concentrator (DPC).

Figure 3: MX Series Router Packet Forwarding and Data Flow

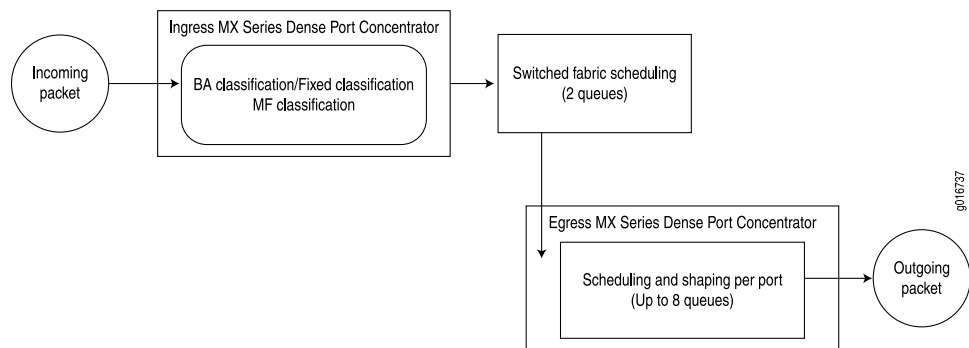

NOTE: All Layer 3 Junos OS CoS functions are supported on the MX Series routers. In addition, Layer 3 CoS capabilities, with the exception of traffic shaping, are supported on virtual LANs (VLANs) that span multiple ports.

The MX Series router can be equipped with Dense Port Concentrators (DPCs), Flexible PIC Concentrators (FPCs) and associated Physical Interface Cards (PICs), or Trio Modular Port Concentrators (MPCs) and associated Modular Interface Cards (MICs). In all cases, the command-line interface (CLI) configuration syntax refers to FPCs, PICs, and ports (*type-fpc/pic/port*).



NOTE: The MX80 router is a single-board router with a built-in Routing Engine and one Packet Forwarding Engine, which can have up to four Modular Interface Cards (MICs) attached to it. The Packet Forwarding Engine has two “pseudo” Flexible PIC Concentrators (FPC 0 and FPC1). Because there is no switching fabric, the single Packet Forwarding Engine takes care of both ingress and egress packet forwarding.

.Fixed classification places all packets in the same forwarding class, or the usual multifield or behavior aggregate (BA) classifications can be used to treat packets differently. BA classification with firewall filters can be used for classification based on IP precedence, DSCP, IEEE, or other bits in the frame or packet header.

However, the MX Series routers can also employ multiple BA classifiers on the same logical interface. The logical interfaces do not have to employ the same type of BA classifier. For example, a single logical interface can use classifiers based on IP precedence as well as IEEE 802.1p. If the CoS bits of interest are on the inner VLAN tag of a dual-tagged

VLAN interface, the classifier can examine either the inner or outer bits. (By default, the classification is done based on the outer VLAN tag.)

Internal fabric scheduling is based on only two queues: high and low priority. Strict-high priority queuing is also supported in the high-priority category.


Egress port scheduling supports up to eight queues per port using a form of round-robin queue servicing. The supported priority levels are strict-high, high, medium-high, medium-low, and low. The MX Series router architecture supports both early discard and tail drop on the queues.

All CoS features are supported at line rate.

The fundamental flow of a packet subjected to CoS is different in the MX Series router with integrated chips than it is in the M Series Multiservice Edge Router and T Series Core Router, which have a different packet-handling architecture.


The way that a packet makes its way through an M Series or T Series router with Intelligent Queuing 2 (IQ2) PICs is shown in [Figure 4 on page 15](#). Note that the per-VLAN scheduling and shaping are done on the PIC whereas all other CoS functions at the port level are performed on the Packet Forwarding Engine.

Figure 4: Packet Handling on the M Series and T Series Routers

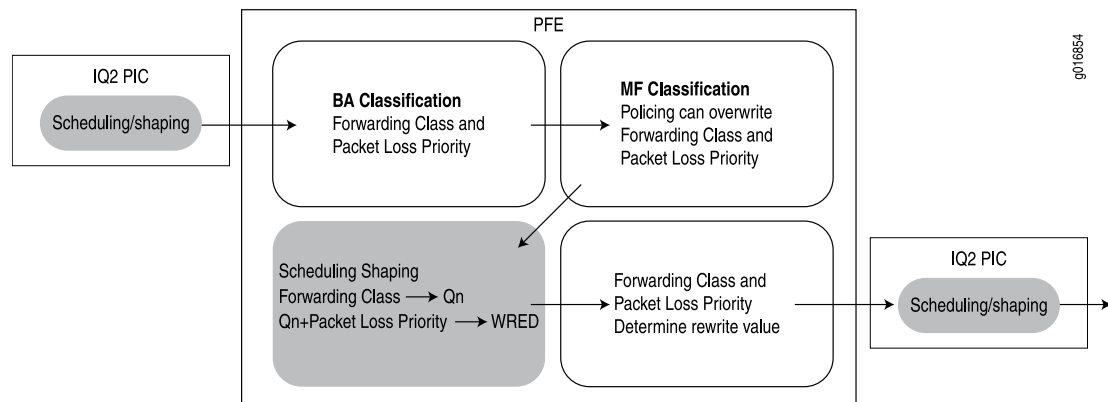

The way that a packet makes its way through an MX Series router is shown in [Figure 5 on page 16](#). Note that the scheduling and shaping are done with an integrated architecture along with all other CoS functions. In particular, scheduling and shaping are done on the Ethernet services engine network processing unit (ESE NPU). Hierarchical scheduling is supported on the output side as well as the input side.

Figure 5: Packet Handling on the MX Series Routers

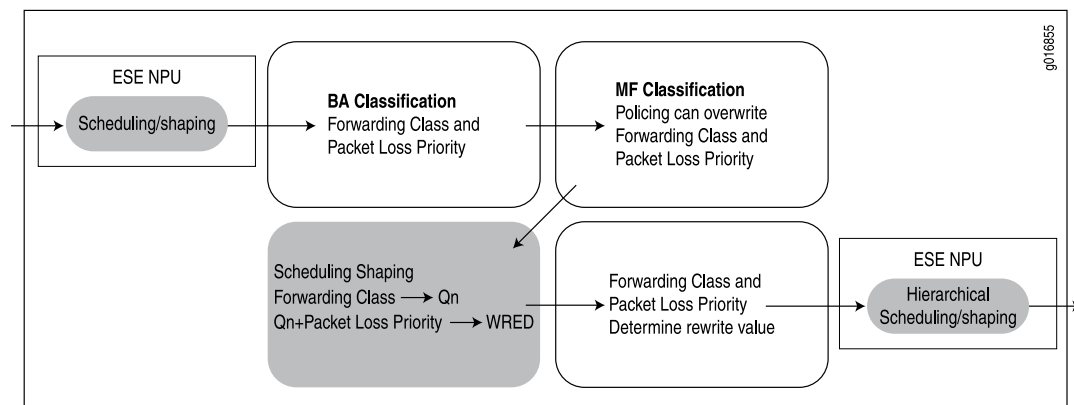

Related Documentation

- [Packet Flow Within Routers Overview on page 10](#)
- [Packet Flow on Juniper Networks J Series Services Routers on page 11](#)
- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Example of Packet Flow on MX Series 3D Universal Edge Routers on page 16](#)
- [Packet Flow on Juniper Networks T Series Core Routers on page 17](#)

Example of Packet Flow on MX Series 3D Universal Edge Routers

MX Series routers, especially the MX960 3D Universal Edge Router, have several features that differ from the usual CoS features in the Junos OS.

The MX960 router allows fixed classification of traffic. All packets on a logical interface can be put into the same forwarding class:

```
[edit class-of-service interfaces ge-1/0/0 unit 0]
forwarding-class af;
```

As on other routers, the MX Series routers allow BA classification, the classifying of packets into different forwarding classes (up to eight) based on a value in the packet header. However, MX Series routers allow a mixture of BA classifiers (IEEE 802.1p and others) for logical interfaces on the same port, as shown in the following example:

```
[edit class-of-service interfaces ge-0/0/0 unit 0]
classifiers {
  inet-precedence IPPRCE-BA-1;
  ieee-802.1 DOT1P-BA-1;
}
```

In this case, the IEEE classifier is applied to Layer 2 traffic and the Internet precedence classifier is applied to Layer 3 (IP) traffic. The IEEE classifier can also perform BA classification based on the bits of either the inner or outer VLAN tag on a dual-tagged logical interface, as shown in the following example:

```
[edit class-of-service interfaces ge-0/0/0]
unit 0 {
  classifiers {
```

```

        ieee-802.1 DOT1-BA-1 {
            vlan-tag inner;
        }
    }
}
unit 1 {
    classifiers {
        ieee-802.1 DOT1-BA-1 {
            vlan-tag outer;
        }
    }
}

```



NOTE: The example above does not apply to single-tagged packets. The following example shows how to configure the classifier on single-tagged interfaces:

```

[edit class-of-service interfaces ge-0/0/0]
unit 0 {
    classifiers {
        ieee-802.1 DOT1-BA-1;
    }
}

```

The default action is based on the outer VLAN tag's IEEE precedence bits.

As on other routers, the BA classification can be overridden with a multifield classifier in the action part of a firewall filter. Rewrites are handled as on other routers, but MX Series routers support classifications and rewrites for aggregated Ethernet (ae-) logical interfaces.

On MX Series routers, the 64 classifier limit is a theoretical upper limit. In practice, you can configure 63 classifiers. Three values are used internally by the default IP precedence, IPv6, and EXP classifiers. Two other classifiers are used for forwarding class and queue operations. This leaves 58 classifiers for configuration purposes. If you configure Differentiated Services code point (DSCP) rewrites for MPLS, the maximum number of classifiers you can configure is less than 58.


On MX Series routers, IEEE 802.1 classifier bit rewrites are determined by forwarding class and packet priority, not by queue number and packet priority as on other routers.

Related Documentation

- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)

Packet Flow on Juniper Networks T Series Core Routers

On T Series Core Routers, CoS actions are performed in several locations: the incoming and outgoing Switch Interface ASICs, the T Series router Internet Processor ASIC, and the Queuing and Memory Interface ASICs. These locations are shown in [Figure 6 on page 18](#).

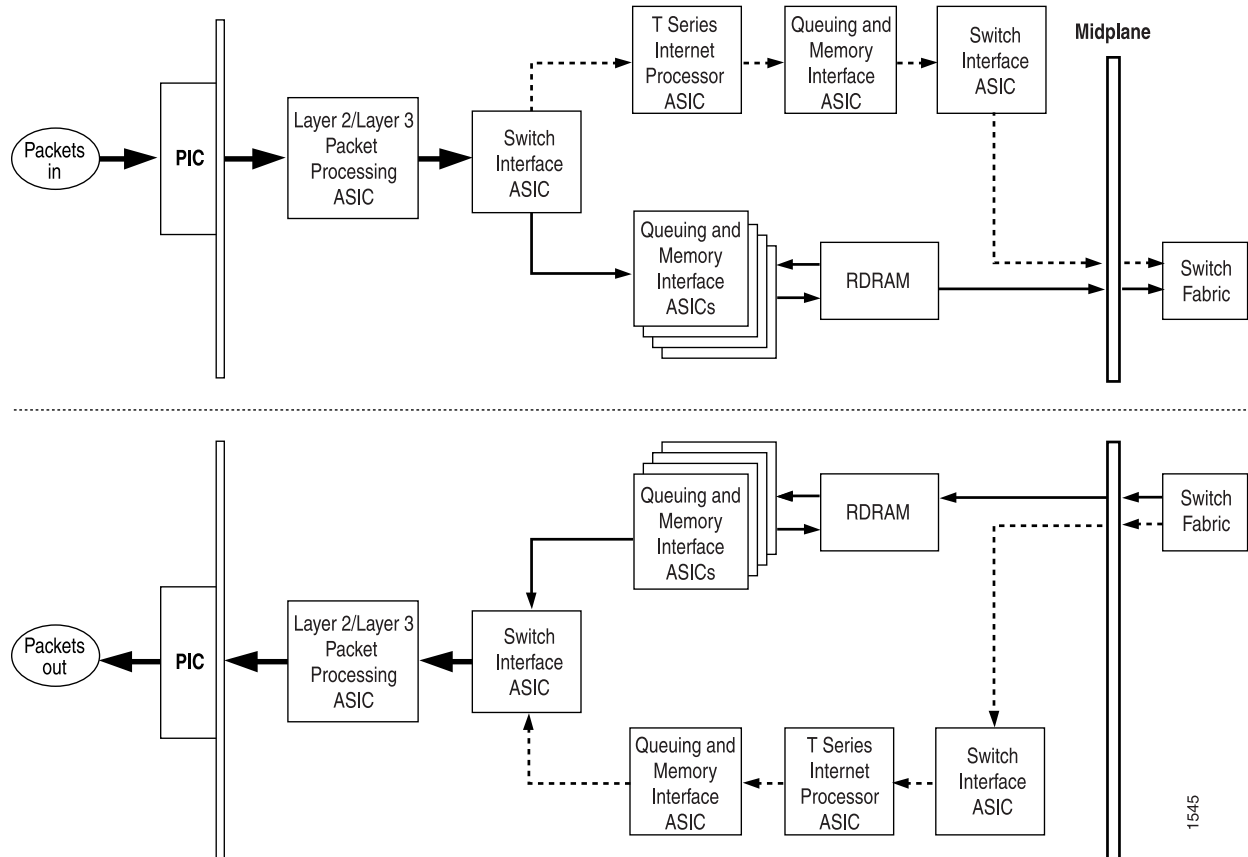Figure 6: T Series Router Packet Forwarding Engine Components and Data Flow


This topic describes the packet flow through the following components in more detail:

- [Incoming Switch Interface ASICs on page 18](#)
- [T Series Routers Internet Processor ASIC on page 18](#)
- [Queuing and Memory Interface ASICs on page 19](#)
- [Outgoing Switch Interface ASICs on page 19](#)

Incoming Switch Interface ASICs

When a data packet is passed from the receiving interface to its connected FPC, it is received by the incoming Switch Interface ASIC on that specific FPC. During the processing of the packet by this ASIC, the information in the packet's header is examined by a BA classifier. This classification action associates the packet with a particular forwarding class. In addition, the value of the packet's loss priority bit is set by this classifier. Both the forwarding class and loss priority information are placed into the notification cell, which is then transmitted to the T Series router Internet Processor ASIC.

T Series Routers Internet Processor ASIC

The T Series router Internet Processor ASIC receives notification cells representing inbound data packets and performs route lookups in the forwarding table. This lookup determines the outgoing interface on the router and the next-hop IP address for the data packet.

While the packet is being processed by the T Series router Internet Processor ASIC, it might also be evaluated by a firewall filter, which is configured on either the incoming or outgoing interface. This filter can perform the functions of a multifield classifier by matching on multiple elements within the packet and overwriting the forwarding class settings, loss priority settings, or both within the notification cell. Once the route lookup and filter evaluations are complete, the notification cell, now called the result cell, is passed to the Queuing and Memory Interface ASICs.

Queuing and Memory Interface ASICs

The Queuing and Memory Interface ASICs pass the data cells to memory for buffering. The data cells are placed into a queue to await transmission on the physical media. The specific queue used by the ASICs is determined by the forwarding class associated with the data packet. The configuration of the queue itself helps determine the service the packet receives while in this queued state. This functionality guarantees that certain packets are serviced and transmitted before other packets. In addition, the queue settings and the packet's loss priority setting determine which packets might be dropped from the network during periods of congestion.

In addition to queuing the packet, the outgoing I/O Manager ASIC is responsible for ensuring that CoS bits in the packet's header are correctly set before it is transmitted. This rewrite function helps the next downstream router perform its CoS function in the network.

The Queuing and Memory Interface ASIC sends the notification to the Switch Interface ASIC facing the switch fabric, unless the destination is on the same Packet Forwarding Engine. In this case, the notification is sent back to the Switch Interface ASIC facing the outgoing ports, and the packets are sent to the outgoing port without passing through the switch fabric. The default behavior is for fabric priority queuing on egress interfaces to match the scheduling priority you assign. High-priority egress traffic is automatically assigned to high-priority fabric queues.

The Queuing and Memory Interface ASIC forwards the notification, including next-hop information, to the outgoing Switch Interface ASIC.

Outgoing Switch Interface ASICs

The destination Switch Interface ASIC sends bandwidth grants through the switch fabric to the originating Switch Interface ASIC. The Queuing and Memory Interface ASIC forwards the notification, including next-hop information, to the Switch Interface ASIC. The Switch Interface ASIC sends read requests to the Queuing and Memory Interface ASIC to read the data cells out of memory, and passes the cells to the Layer 2 or Layer 3 Packet Processing ASIC. The Layer 2 or Layer 3 Packet Processing ASIC reassembles the data cells into packets, adds Layer 2 encapsulation, and sends the packets to the outgoing PIC interface. The outgoing PIC sends the packets out into the network.

Related Documentation

- [Packet Flow Within Routers Overview on page 10](#)
- [Packet Flow on Juniper Networks J Series Services Routers on page 11](#)
- [Packet Flow on Juniper Networks M Series Multiservice Edge Routers on page 11](#)
- [Packet Flow on MX Series Ethernet Services Routers on page 14](#)

Packet Flow Through the CoS Process

This topic consists of the following:

- [Packet Flow Through the CoS Process Overview on page 20](#)
- [Packet Flow Through the CoS Process Configuration Example on page 22](#)

Packet Flow Through the CoS Process Overview

Perhaps the best way to understand Junos CoS is to examine how a packet is treated on its way through the CoS process. This topic includes a description of each step and figures illustrating the process.

The following steps describe the CoS process:

1. A logical interface has one or more classifiers of different types applied to it (at the **[edit class-of-service interfaces]** hierarchy level). The types of classifiers are based on which part of the incoming packet the classifier examines (for example, EXP bits, IEEE 802.1p bits, or DSCP bits). You can use a translation table to rewrite the values of these bits on ingress.



NOTE: You can only rewrite the values of these bits on ingress on the Juniper Networks M40e, M120, M320 Multiservice Edge Routers, and T Series Core Routers with IQE PICs. For more information about rewriting the values of these bits on ingress, see [“Configuring ToS Translation Tables” on page 328](#).

2. The classifier assigns the packet to a forwarding class and a loss priority (at the **[edit class-of-service classifiers]** hierarchy level).
3. Each forwarding class is assigned to a queue (at the **[edit class-of-service forwarding-classes]** hierarchy level).
4. Input (and output) policers meter traffic and might change the forwarding class and loss priority if a traffic flow exceeds its service level.
5. The physical or logical interface has a scheduler map applied to it (at the **[edit class-of-service interfaces]** hierarchy level).

At the **[edit class-of-service interfaces]** hierarchy level, the **scheduler-map** and **rewrite-rules** statements affect the outgoing packets, and the **classifiers** statement affects the incoming packets.
6. The scheduler defines how traffic is treated in the output queue—for example, the transmit rate, buffer size, priority, and drop profile (at the **[edit class-of-service schedulers]** hierarchy level).
7. The scheduler map assigns a scheduler to each forwarding class (at the **[edit class-of-service scheduler-maps]** hierarchy level).

8. The drop-profile defines how aggressively to drop packets that are using a particular scheduler (at the **[edit class-of-service drop-profiles]** hierarchy level).
9. The rewrite rule takes effect as the packet leaves a logical interface that has a rewrite rule configured (at the **[edit class-of-service rewrite-rules]** hierarchy level). The rewrite rule writes information to the packet (for example, EXP or DSCP bits) according to the forwarding class and loss priority of the packet.

Figure 7 on page 21 and Figure 8 on page 21 show the components of the Junos CoS features, illustrating the sequence in which they interact.

Figure 7: CoS Classifier, Queues, and Scheduler


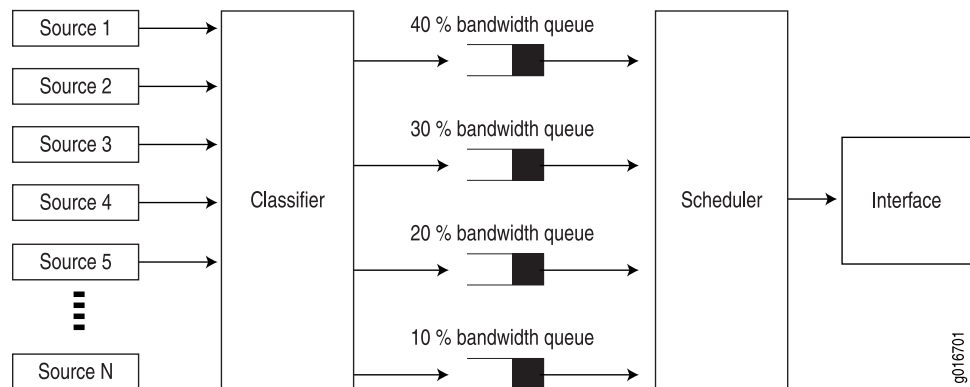


Figure 8: Packet Flow Through CoS Configurable Components

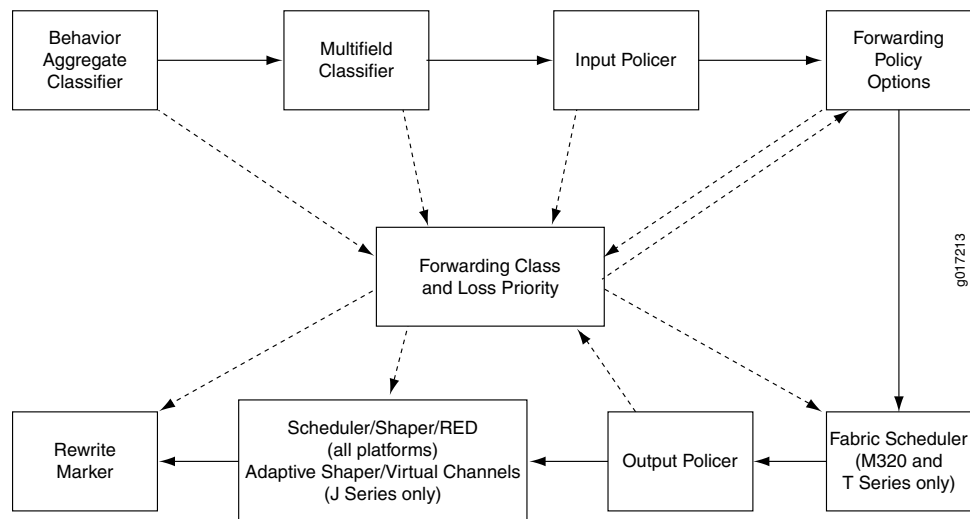

Each outer box in Figure 8 on page 21 represents a process component. The components in the upper row apply to inbound packets, and the components in the lower row apply to outbound packets. The arrows with the solid lines point in the direction of packet flow.

The middle box (forwarding class and loss priority) represents two data values that can either be inputs to or outputs of the process components. The arrows with the dotted lines indicate inputs and outputs (or settings and actions based on settings). For example, the multifield classifier sets the forwarding class and loss priority of incoming packets.

This means that the forwarding class and loss priority are outputs of the classifier; thus, the arrow points away from the classifier. The scheduler receives the forwarding class and loss priority settings, and queues the outgoing packet based on those settings. This means that the forwarding class and loss priority are inputs to the scheduler; thus, the arrow points to the scheduler.

Typically, only a combination of some components (not all) is used to define a CoS service offering.

Related Documentation • [Packet Flow Through the CoS Process Configuration Example on page 22](#)

Packet Flow Through the CoS Process Configuration Example

The following configuration demonstrates the packet flow through the CoS process:

```
[edit class-of-service]
interfaces { # Step 1: Define CoS interfaces.
  so-* {
    scheduler-map sched1;
    unit 0 {
      classifiers {
        exp exp_classifier;
      }
    }
  }
  t3-* {
    scheduler-map sched1;
    unit 0 {
      classifiers {
        exp exp_classifier;
      }
    }
  }
}
classifiers { # Step 2: Define classifiers.
exp exp_classifier {
  forwarding-class data-queue {
    loss-priority low code-points 000;
    loss-priority high code-points 001;
  }
  forwarding-class video-queue {
    loss-priority low code-points 010;
    loss-priority high code-points 011;
  }
  forwarding-class voice-queue {
    loss-priority low code-points 100;
    loss-priority high code-points 101;
  }
  forwarding-class nc-queue {
    loss-priority high code-points 111;
    loss-priority low code-points 110;
  }
}
drop-profiles { # Step 3: Define drop profiles.
```



```

be-red {
    fill-level 50 drop-probability 100;
}
}
forwarding-classes { # Step 4: Define queues.
    queue 0 data-queue;
    queue 1 video-queue;
    queue 2 voice-queue;
    queue 3 nc-queue;
}
schedulers { # Step 5: Define schedulers.
    data-scheduler {
        transmit-rate percent 50;
        buffer-size percent 50;
        priority low;
        drop-profile-map loss-priority high protocol any drop-profile be-red;
    }
    video-scheduler {
        transmit-rate percent 25;
        buffer-size percent 25;
        priority strict-high;
    }
    voice-scheduler {
        transmit-rate percent 20;
        buffer-size percent 20;
        priority high;
    }
    nc-scheduler {
        transmit-rate percent 5;
        buffer-size percent 5;
        priority high;
    }
}
scheduler-maps { # Step 6: Define scheduler maps.
    sched1 {
        forwarding-class data-queue scheduler data-scheduler;
        forwarding-class video-queue scheduler video-scheduler;
        forwarding-class voice-queue scheduler voice-scheduler;
        forwarding-class nc-queue scheduler nc-scheduler;
    }
}

```

**Related
Documentation**

- [Packet Flow Through the CoS Process Overview on page 20](#)

CoS Applications Overview

You can configure CoS features to meet your application needs. Because the components are generic, you can use a single CoS configuration syntax across multiple routers. CoS mechanisms are useful for two broad classes of applications. These applications can be referred to as *in the box* and *across the network*.

In-the-box applications use CoS mechanisms to provide special treatment for packets passing through a single node on the network. You can monitor the incoming traffic on

each interface, using CoS to provide preferred service to some interfaces (that is, to some customers) while limiting the service provided to other interfaces. You can also filter outgoing traffic by the packet's destination, thus providing preferred service to some destinations.

Across-the-network applications use CoS mechanisms to provide differentiated treatment to different classes of packets across a set of nodes in a network. In these types of applications, you typically control the ingress and egress routers to a routing domain and all the routers within the domain. You can use the Junos OS CoS features to modify packets traveling through the domain to indicate the packet's priority across the domain.

Specifically, you modify the CoS code points in packet headers, remapping these bits to values that correspond to levels of service. When all routers in the domain are configured to associate the precedence bits with specific service levels, packets traveling across the domain receive the same level of service from the ingress point to the egress point. For CoS to work in this case, the mapping between the precedence bits and service levels must be identical across all routers in the domain.

The Junos OS CoS applications support the following range of mechanisms:

- **Differentiated Services (DiffServ)**—The CoS application supports DiffServ, which uses 6-bit IPv4 and IPv6 header type-of-service (ToS) byte settings. The configuration uses CoS values in the IP and IPv6 ToS fields to determine the forwarding class associated with each packet.
- **Layer 2 to Layer 3 CoS mapping**—The CoS application supports mapping of Layer 2 (IEEE 802.1p) packet headers to router forwarding class and loss-priority values.

Layer 2 to Layer 3 CoS mapping involves setting the forwarding class and loss priority based on information in the Layer 2 header. Output involves mapping the forwarding class and loss priority to a Layer 2-specific marking. You can mark the Layer 2 and Layer 3 headers simultaneously.
- **MPLS EXP**—Supports configuration of mapping of MPLS experimental (EXP) bit settings to router forwarding classes and vice versa.
- **VPN outer-label marking**—Supports setting of outer-label EXP bits, also known as CoS bits, based on MPLS EXP mapping.

Interface Types That Do Not Support CoS

For original Channelized OC12 PICs, limited CoS functionality is supported. For more information, contact Juniper Networks customer support.

The standard Junos CoS hierarchy is not supported on ATM interfaces. ATM has traffic-shaping capabilities that would override CoS, because ATM traffic shaping is performed at the ATM layer and CoS is performed at the IP layer. For more information about ATM traffic shaping and ATM CoS components, see the Junos® OS Network Interfaces.



NOTE: Transmission scheduling is not supported on 8-port, 12-port, and 48-port Fast Ethernet PICs.

You can configure CoS on all interfaces, except the following:

- **cau4**—Channelized STM1 IQ interface (configured on the Channelized STM1 IQ PIC).
- **coc1**—Channelized OC1 IQ interface (configured on the Channelized OC12 IQ PIC).
- **coc12**—Channelized OC12 IQ interface (configured on the Channelized OC12 IQ PIC).
- **cstm-1**—Channelized STM1 IQ interface (configured on the Channelized STM1 IQ PIC).
- **ct1**—Channelized T1 IQ interface (configured on the Channelized DS3 IQ PIC or Channelized OC12 IQ PIC).
- **ct3**—Channelized T3 IQ interface (configured on the Channelized DS3 IQ PIC or Channelized OC12 IQ PIC).
- **ce1**—Channelized E1 IQ interface (configured on the Channelized E1 IQ PIC or Channelized STM1 IQ PIC).
- **dsc**—Discard interface.
- **fxp**—Management and internal Ethernet interfaces.
- **lo**—Loopback interface. This interface is internally generated.
- **pe**—Encapsulates packets destined for the rendezvous point router. This interface is present on the first-hop router.
- **pd**—De-encapsulates packets at the rendezvous point. This interface is present on the rendezvous point.
- **vt**—Virtual loopback tunnel interface.



NOTE: For channelized interfaces, you can configure CoS on channels, but not at the controller level. For a complex configuration example, see the Junos OS Feature Guides.

- Related Documentation**
- [CoS on ATM Interfaces Overview on page 515](#)

VPLS and Default CoS Classification

A VPLS routing instance with the **no-tunnel-services** option configured has a default classifier applied to the label-switched interface for all VPLS packets coming from the remote VPLS PE. This default classifier is modifiable only on MX Series routers. On T Series, when **no-tunnel-services** option is configured, the custom classifier for VPLS instances is not supported.



NOTE: With **no-tunnel-services** configured, custom classifier for VPLS routing instances on T Series and LMNR based FPC for M320 is not supported. When a wild card configuration or an explicit routing instances are configured for VPLS on CoS CLI, the custom classifier binding results in default classifier binding on Packet Forwarding Engine (PFE).

For example, on routers with eight queues (Juniper Networks M120 and M320 Multiservice Edge Routers, MX Series Ethernet Services Routers, and T Series Core Routers), the default classification applied to **no-tunnel-services** VPLS packets are shown in [Table 3 on page 26](#).

Table 3: Default VPLS Classifiers

MPLS Label EXP Bits	Forwarding Class/Queue
000	0
001	1
010	2
011	3
100	4
101	5
110	6
111	7



NOTE: Forwarding class to queue number mapping is not always one-to-one. Forwarding classes and queues are only the same when default forwarding-class-to-queue mapping is in effect. For more information about configuring forwarding class and queues, see [“Configuring Forwarding Classes” on page 128](#).

On MX Series routers, VPLS filters and policers act on a Layer 2 frame that includes the media access control (MAC) header (after any VLAN rewrite or other rules are applied), but does not include the cyclical redundancy check (CRC) field.



NOTE: On MX Series routers, if you apply a counter in a firewall for egress MPLS or VPLS packets with the EXP bits set to 0, the counter will not tally these packets.

CHAPTER 2

Class of Service Configuration Statements

This topic shows the complete configuration statement hierarchy for class of service (CoS), listing all possible configuration statements and showing their level in the configuration hierarchy. When you are configuring the Junos OS, your current hierarchy level is shown in the banner on the line preceding the **user@host#** prompt.

For a complete list of the Junos configuration statements, see the [Junos OS Hierarchy and RFC Reference](#).

This topic is organized as follows:

- [\[edit chassis\] Hierarchy Level on page 29](#)
- [\[edit class-of-service\] Hierarchy Level on page 30](#)
- [\[edit firewall\] Hierarchy Level on page 34](#)
- [\[edit interfaces\] Hierarchy Level on page 35](#)
- [\[edit services cos\] Hierarchy Level on page 37](#)

[edit chassis] Hierarchy Level

This topic shows the complete configuration for class of service (CoS) statements for the **[edit chassis]** hierarchy level, listing all possible configuration statements and showing their level in the configuration hierarchy. When you are configuring the Junos OS, your current hierarchy level is shown in the banner on the line preceding the **user@host#** prompt.

For a complete list of the Junos configuration statements, see the [Junos OS Hierarchy and RFC Reference](#).

This is not a comprehensive list of statements available at the **[edit chassis]** hierarchy level. Only the statements that are also documented in this manual are listed here. For more information about chassis configuration, see the Junos OS System Basics Configuration Guide.

```
[edit chassis]
fpc slot-number {
  pic pic-number {
    max-queues-per-interface (4 | 8);
    q-pic-large-buffer {
      [ large-scale | small-scale ];
```

```

    }
    red-buffer-occupancy {
        weighted-averaged [ instant-usage-weight-exponent weight-value ];
    }
    traffic-manager {
        egress-shaping-overhead number;
        ingress-shaping-overhead number;
        mode session-shaping;
    }
}
}

```

[edit class-of-service] Hierarchy Level

This topic shows the complete configuration for class of service (CoS) statements for the **[edit class-of-service]** hierarchy level, listing all possible configuration statements and showing their level in the configuration hierarchy. When you are configuring the Junos OS, your current hierarchy level is shown in the banner on the line preceding the **user@host#** prompt.

For a complete list of the Junos OS configuration statements, see the *Junos OS Hierarchy and RFC Reference*.

```

[edit class-of-service]
classifiers {
    (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) classifier-name {
        import (classifier-name | default);
        forwarding-class class-name {
            loss-priority level code-points [ aliases ] [ bit-patterns ];
        }
    }
}
code-point-aliases {
    (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) {
        alias-name bits;
    }
}
copy-plp-all;
drop-profiles {
    profile-name {
        fill-level percentage drop-probability percentage;
        interpolate {
            drop-probability [ values ];
            fill-level [ values ];
        }
    }
}
fabric {
    scheduler-map {
        priority (high | low) scheduler scheduler-name;
    }
}
forwarding-classes {
    class class-name queue-num queue-number priority (high | low);
}

```



```

    queue queue-number class-name priority (high | low) [ policing-priority (premium |
normal) ];
}
forwarding-classes-interface-specific forwarding-class-map-name {
    class class-name queue-num queue-number [ restricted-queue queue-number ];
}
forwarding-policy {
    next-hop-map map-name {
        forwarding-class class-name {
            next-hop [ next-hop-name ];
            lsp-next-hop [ lsp-regular-expression ];
            non-lsp-next-hop;
            discard;
        }
    }
    class class-name {
        classification-override {
            forwarding-class class-name;
        }
    }
}
fragmentation-maps {
    map-name {
        forwarding-class class-name {
            drop-timeout milliseconds;
            fragment-threshold bytes;
            multilink-class number;
            no-fragmentation;
        }
    }
}
host-outbound-traffic {
    dscp-code-point value;
    forwarding-class class-name;
    ieee-802.1 {
        default value;
        rewrite-rules;
    }
}
interfaces {
    interface-name {
        classifiers {
            dscp (classifier-name | default);
            ieee-802.1 (classifier-name | default) vlan-tag (inner | outer | classifier-name);
            inet-precedence (classifier-name | default);
        }
        input-scheduler-map map-name;
        input-shaping-rate rate;
        irb {
            unit logical-unit-number {
                classifiers {
                    dscp (classifier-name | default) {
                        family [ inet mpls ];
                    }
                }
                dscp-ipv6 (classifier-name | default) {
                    family [ inet mpls ];
                }
            }
        }
    }
}

```

```

        exp (classifier-name | default);
        ieee-802.1 (classifier-name | default) vlan-tag (inner | outer | transparent);
    }
    rewrite-rules {
        dscp (rewrite-name | default);
        dscp-ipv6 (rewrite-name | default);
        exp (rewrite-name | default) protocol protocol-types;
        ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
        inet-precedence (rewrite-name | default);
    }
}
}
output-forwarding-class-map forwarding-class-map-name;
member-link-scheduler (replicate | scale);
rewrite-rules {
    dscp (rewrite-name | default);
    ieee-802.1 (rewrite-name | default) vlan-tag (outer);
    inet-precedence (rewrite-name | default);
}
}
scheduler-map map-name;
scheduler-map-chassis map-name;
shaping-rate rate;
unit logical-unit-number {
    classifiers {
        (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) (classifier-name | default)
        family (mpls | inet);
    }
    forwarding-class class-name;
    fragmentation-map map-name;
    input-scheduler-map map-name;
    input-shaping-rate (percent percentage | rate);
    input-traffic-control-profile profile-name shared-instance instance-name;
    loss-priority-maps {
        frame-relay-de (name | default);
    }
    loss-priority-rewrites {
        frame-relay-de (name | default);
    }
}
output-traffic-control-profile profile-name shared-instance instance-name;
per-session-scheduler;
rewrite-rules {
    dscp (rewrite-name | default) protocol protocol-types;
    dscp-ipv6 (rewrite-name | default);
    exp (rewrite-name | default) protocol protocol-types;
    exp-push-push-push default;
    exp-swap-push-push default;
    ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
    inet-precedence (rewrite-name | default) protocol protocol-types;
}
scheduler-map map-name;
shaping-rate rate;
translation-table (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 |
    to-exp-from-exp | to-inet-precedence-from-inet-precedence) table-name;
}
}

```

```

}
loss-priority-maps {
  frame-relay-de (Defining Loss Priority Maps) name {
    loss-priority level code-points [alias | bits ];
  }
}
loss-priority-rewrites {
  frame-relay-de (Defining Loss Priority Maps) name {
    loss-priority level code-point (alias | bits );
  }
}
restricted-queues {
  forwarding-class class-name queue queue-number;
}
rewrite-rules {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | ieee-802.1ad | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point (alias | bits );
    }
  }
}
routing-instances routing-instance-name {
  classifiers {
    exp (classifier-name | default);
    dscp (classifier-name | default);
    dscp-ipv6 (classifier-name | default);
  }
}
scheduler-maps {
  map-name {
    forwarding-class class-name scheduler scheduler-name;
  }
}
schedulers {
  scheduler-name {
    buffer-size (percent percentage | remainder | temporal microseconds);
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
      (any | non-tcp | tcp) drop-profile profile-name;
    excess-priority (low | high);
    excess-rate percent percentage;
    excess-rate (percent percentage | proportion value);
    priority priority-level;
    transmit-rate (rate | percent percentage | remainder) <exact | rate-limit>;
  }
}
system-defaults {
  classifiers (classifier-name | exp)
  traffic-control-profiles profile-name {
    delay-buffer-rate (percent percentage | rate);
    excess-rate (percent percentage | proportion value);
    guaranteed-rate (percent percentage | rate);
    overhead-accounting (frame-mode | cell-mode) <bytes byte-value>;
    scheduler-map map-name;
    shaping-rate (percent percentage | rate);
  }
}

```

```
translation-table {  
  (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp |  
   to-inet-precedence-from-inet-precedence) table-name {  
    to-code-point value from-code-points (* | [ values ] );  
  }  
}  
tri-color;
```

On Juniper Networks MX Series 3D Universal Edge Routers with Enhanced Queuing DPCs, you can configure the following CoS statements at the **[edit class-of-service interfaces]** hierarchy level:

```
interface-set interface-set-name {  
  excess-bandwidth-share (proportional value | equal);  
  internal-node;  
  traffic-control-profiles profile-name;  
  output-traffic-control-profile-remaining profile-name;  
}
```

[edit firewall] Hierarchy Level

The following CoS statements can be configured at the **[edit firewall]** hierarchy level. This is not a comprehensive list of statements available at the **[edit firewall]** hierarchy level.

```
[edit firewall]  
  atm-policer policer-name {  
    cdvt rate;  
    logical-interface-policer;  
    max-burst-size max-burst-size;  
    peak-rate rate;  
    policing-action (discard | discard-tag | count);  
    sustained-rate rate;  
  }  
  family family-name {  
    filter filter-name {  
      term term-name {  
        from {  
          match-conditions;  
        }  
        then {  
          dscp 0;  
          forwarding-class class-name;  
          loss-priority (high | low);  
          three-color-policer {  
            (single-rate | two-rate) policer-name;  
          }  
        }  
      }  
    }  
  }  
  simple-filter filter-name {  
    term term-name {  
      from {  
        match-conditions;  
      }  
      then {
```

```
        forwarding-class class-name;
    loss-priority (high | low | medium);
}
}
}
```

policer *policer-name* {
logical-bandwidth-policer;
shared-bandwidth-policer ;
if-exceeding {
bandwidth-limit rate;
bandwidth-percent number;
burst-size-limit bytes;
}
then {
policer-action;
}
}

three-color-policer *policer-name* {
action {
loss-priority high then discard;
}
logical-interface-policer;
shared-bandwidth-policer ;
single-rate {
(color-aware | color-blind);
committed-information-rate bps;
committed-burst-size bytes;
excess-burst-size bytes;
}
two-rate {
(color-aware | color-blind);
committed-information-rate bps;
committed-burst-size bytes;
peak-information-rate bps;
peak-burst-size bytes;
}
}

The following CoS statements can be configured at the **[edit interfaces]** hierarchy level. This is not a comprehensive list of statements available at the **[edit interfaces]** hierarchy level. Only the statements that are also documented in this manual are listed here. For more information about interface configuration, see the Junos® OS Network Interfaces.

```
[edit interfaces]
interface-name {
  atm-options {
    linear-red-profiles profile-name {
      high-plp-max-threshold percent;
      low-plp-max-threshold percent;
      queue-depth cells high-plp-threshold percent low-plp-threshold percent;
    }
    plp-to-clp;
  }
}
```

```

scheduler-maps map-name {
  forwarding-class class-name {
    epd-threshold cells plp1 cells;
    linear-red-profile profile-name;
    priority (high | low);
    transmit-weight (cells number | percent number);
  }
  vc-cos-mode (alternate | strict);
}
}
per-unit-scheduler;
shared-scheduler;
schedulers number;
unit logical-unit-number {
  atm-scheduler-map (map-name | default);
  copy-tos-to-outer-ip-header;
  family family {
    address address {
      destination address;
    }
    filter {
      input filter-name;
      output filter-name;
    }
    policer {
      input policer-name;
      output policer-name;
    }
    simple-filter {
      input filter-name;
    }
  }
  layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
  }
  plp-to-clp;
  shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
  }
  vci vpi-identifier.vci-identifier;
}
}

```

On the Juniper Networks MX Series Ethernet Services Routers with Enhanced Queuing DPCs and on M Series and T Series routers with IQ2E PIC, you can configure the following CoS statements at the [edit interfaces] hierarchy level:

```

hierarchical-scheduler;
interface-set interface-set-name {
  ethernet-interface-name {
    [interface-parameters];
  }
}

```

```
}
```

[edit services cos] Hierarchy Level

The following CoS statements can be configured at the **[edit services cos]** hierarchy level. This is not a comprehensive list of statements available at the **[edit services cos]** hierarchy level. Only the statements documented in this manual are listed here. For more information about services configuration, see the Junos Services Interfaces Configuration Release 11.2.

```
[edit services cos]
application-profile profile-name {
  ftp {
    data {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
  sip {
    video {
      dscp (alias | bits);
      forwarding-class class-name;
    }
    voice {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
}
rule rule-name {
  match-direction (input | output | input-output);
  term term-name {
    from {
      applications [ application-names ];
      application-sets [ set-names ];
      destination-address (CoS) address;
      source-address address;
    }
    then {
      application-profile profile-name;
      dscp (alias | bits);
      forwarding-class class-name;
      syslog;
      (reflexive | reverse) {
        application-profile profile-name;
        dscp (alias | bits);
        forwarding-class class-name;
        syslog;
      }
    }
  }
}
rule-set rule-set-name {
  [ rule rule-names ];
}
```


PART 2

CoS Configuration Components

- [Classifying Packets by Behavior Aggregate on page 41](#)
- [Defining Code-Point Aliases on page 69](#)
- [Classifying Packets Based on Various Packet Header Fields on page 75](#)
- [Configuring Tricolor Marking Policers on page 95](#)
- [Configuring Forwarding Classes on page 123](#)
- [Configuring Forwarding Policy Options on page 141](#)
- [Configuring Fragmentation by Forwarding Class on page 151](#)
- [Configuring Schedulers on page 157](#)
- [Configuring Hierarchical Schedulers on page 223](#)
- [Configuring Queue-Level Bandwidth Sharing on page 245](#)
- [Configuring RED Drop Profiles on page 253](#)
- [Rewriting Packet Header Information on page 261](#)

CHAPTER 3

Classifying Packets by Behavior Aggregate

This topic discusses the following:

- [BA Classifier Overview on page 41](#)
- [BA Classifier Configuration Hierarchy on page 43](#)
- [Overview of BA Classifier Types on page 44](#)
- [Default Behavior Aggregate Classification Overview on page 44](#)
- [BA Classifier Default Values on page 45](#)
- [Defining Classifiers on page 50](#)
- [Applying Classifiers to Logical Interfaces on page 52](#)
- [DSCP Classifier Configuration Examples on page 55](#)
- [Configuring BA Classifiers for Bridged Ethernet on page 57](#)
- [Tunneling and BA Classifiers on page 58](#)
- [Applying DSCP IPv6 Classifiers on page 59](#)
- [Applying MPLS EXP Classifiers to Routing Instances on page 59](#)
- [Applying MPLS EXP Classifiers for Explicit-Null Labels on page 63](#)
- [Setting Packet Loss Priority on page 64](#)
- [Configuring and Applying IEEE 802.1ad Classifiers on page 65](#)
- [Understanding DSCP Classification for VPLS on page 66](#)
- [Example: Configuring DSCP Classification for VPLS on page 66](#)
- [BA Classifiers and ToS Translation Tables on page 68](#)

BA Classifier Overview

The behavior aggregate (BA) classifier maps a class-of-service (CoS) value to a forwarding class and loss priority. The forwarding class determines the output queue. The loss priority is used by schedulers in conjunction with the random early discard (RED) algorithm to control packet discard during periods of congestion.

The types of BA classifiers are based on which part of the incoming packet the classifier examines:

- Differentiated Services code point (DSCP) for IP DiffServ
- DSCP for IPv6 DiffServ
- IP precedence bits
- MPLS EXP bits
- IEEE 802.1p CoS bits
- IEEE 802.1ad drop eligible indicator (DEI) bit

Unlike multifield classifiers (which are discussed in [“Multifield Classifier Overview” on page 76](#)), BA classifiers are based on fixed-length fields, which makes them computationally more efficient than multifield classifiers. For this reason, core devices are normally configured to perform BA classification, because of the higher traffic volumes they handle.

In most cases, you need to rewrite a given marker (IP precedence, DSCP, IEEE 802.1p, IEEE 802.1ad, or MPLS EXP settings) at the ingress node to accommodate BA classification by core and egress devices. For more information about rewrite markers, see [“Rewriting Packet Header Information Overview” on page 262](#).

For Juniper Networks M Series Multiservice Edge Routers, four classes can forward traffic independently. For M320 Multiservice Edge Routers and Juniper Networks T Series Core Routers, eight classes can forward traffic independently. Therefore, you must configure additional classes to be aggregated into one of these classes. You use the BA classifier to configure class aggregation.

For Juniper Networks MX Series 3D Universal Edge Routers and Intelligent Queuing 2 (IQ2) PICs, the following restrictions apply:

- You cannot use BA classifiers for IPv4 DSCP bits for Layer 2 VPNs.
- You cannot use BA classifiers for IPv6 DSCP bits for VPLS.
- You cannot use BA classifiers for IPv6 DSCP bits for Layer 2 VPNs.

For the 10-port 10-Gigabit Oversubscribed Ethernet (OSE) PICs, the following restrictions on BA classifiers apply:

- Multiple classifiers can be configured to a single logical interface. However, there are some restrictions on which the classifiers can coexist.

For example, the DSCP and IP precedence classifiers cannot be configured on the same logical interface. The DSCP and IP precedence classifiers can coexist with the DSCP IPv6 classifier on the same logical interface. An IEEE 802.1 classifier can coexist with other classifiers and is applicable only if a packet does not match any of the configured classifiers. For information about the supported combinations, see [“Applying Classifiers to Logical Interfaces” on page 52](#).

- If the classifiers are not defined explicitly, then the default classifiers are applied as follows:
 - All MPLS packets are classified using the MPLS (EXP) classifier. If there is no explicit MPLS (EXP) classifier, then the default MPLS (EXP) classifier is applied.
 - All IPv4 packets are classified using the IP precedence and DSCP classifiers. If there is no explicit IP precedence or DSCP classifier, then the default IP precedence classifier is applied.
 - All IPv6 packets are classified using a DSCP IPv6 classifier. If there is no explicit DSCP IPv6 classifier, then the default DSCP IPv6 classifier is applied.
- If the IEEE 802.1p classifier is configured and a packet does not match any explicitly configured classifier, then the IEEE 802.1p classifier is applied.



NOTE: For a specified interface, you can configure both a multifield classifier and a BA classifier without conflicts. Because the classifiers are always applied in sequential order, the BA classifier followed by the multifield classifier, any BA classification result is overridden by a multifield classifier if they conflict. For more information about multifield classifiers, see [“Multifield Classifier Overview” on page 76](#).

BA Classifier Configuration Hierarchy

To configure BA classifiers, include the following statements at the `[edit class-of-service]` hierarchy level:

```
[edit class-of-service]
classifiers {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | ieee-802.1ad | inet-precedence) classifier-name {
    import (classifier-name | default);
    forwarding-class class-name {
      loss-priority level code-points [ aliases ] [ bit-patterns ];
    }
  }
}
interfaces {
  interface-name {
    unit logical-unit-number {
      classifiers {
        (dscp | dscp-ipv6 | exp | ieee-802.1 | ieee-802.1ad | inet-precedence)
        (classifier-name | default);
      }
    }
  }
}
routing-instances routing-instance-name {
  classifiers {
    exp (classifier-name | default);
  }
}
```

Overview of BA Classifier Types

The idea behind class of service (CoS) is that packets are not treated identically by the routers on the network. In order to selectively apply service classes to specific packets, the packets of interest must be classified in some fashion.

The simplest way to classify a packet is to use behavior aggregate classification. The DSCP, DSCP IPv6, or IP precedence bits of the IP header convey the behavior aggregate class information. The information might also be found in the MPLS EXP bits, IEEE 802.1ad, or IEEE 802.1p CoS bits.

You can configure the following classifier types:

- DSCP, DSCP IPv6, or IP precedence—IP packet classification (Layer 3 headers)
- MPLS EXP—MPLS packet classification (Layer 2 headers)
- IEEE 802.1p—Packet classification (Layer 2 headers)
- IEEE 802.1ad—Packet classification for IEEE 802.1ad formats (including DEI bit)

If you apply an IEEE 802.1 classifier to a logical interface, this classifier takes precedence and is not compatible with any other classifier type. On Juniper Networks MX Series Ethernet Services Routers using IEEE 802.1ad frame formats, you can apply classification on the basis of the IEEE 802.1p bits (three bits in either the inner virtual LAN (VLAN) tag or the outer VLAN tag) and the drop eligible indicator (DEI) bit. On routers with IQ2 PICs using IEEE 802.1ad frame format, you can apply classification based on the IEEE 802.1p bits and the DEI bit. Classifiers for IP (DSCP or IP precedence) and MPLS (EXP) can coexist on a logical interface if the hardware requirements are met. (See [“Applying Classifiers to Logical Interfaces” on page 52.](#))

The Enhanced Queuing DPC (EQ DPC) does not support BA classification for packets received from a Layer 3 routing interface or a virtual routing and forwarding (VRF) interface and routed to an integrated routing and bridging interface (IRB) to reach the remote end of a pseudowire connection. The EQ DPC also does not support BA classification for Layer 2 frames received from a Virtual Private LAN Service (VPLS) pseudowire connection from a remote site and routed to a Layer 3 routing interface through an IRB interface.

Default Behavior Aggregate Classification Overview

The software automatically assigns an implicit default IP precedence classifier to all logical interfaces.



NOTE: Only the IEEE 802.1p classifier is supported in Layer 2 interfaces. You must explicitly apply this classifier to the interface as shown in [“Default IEEE 802.1p Classifier” on page 48.](#)

If you enable the MPLS protocol family on a logical interface, a default MPLS EXP classifier is automatically applied to that logical interface.

Other default classifiers (such as those for IEEE 802.1p bits and DSCP) require that you explicitly associate a default classification table with a logical interface. When you explicitly associate a default classifier with a logical interface, you are in effect overriding the implicit default classifier with an explicit default classifier.



NOTE: Although several code points map to the expedited-forwarding (ef) and assured-forwarding (af) classes, by default no resources are assigned to these forwarding classes. All af classes other than af1x are mapped to best-effort, because RFC 2597, *Assured Forwarding PHB Group*, prohibits a node from aggregating classes.

You can apply IEEE 802.1p classifiers to interfaces that are part of VPLS routing instances.

Related Documentation

- [Default IP Precedence Classifier \(ipprec-compatibility\) on page 45](#)
- [Default MPLS EXP Classifier on page 46](#)
- [Default DSCP and DSCP IPv6 Classifier on page 46](#)
- [Default IEEE 802.1p Classifier on page 48](#)
- [Default IEEE 802.1ad Classifier on page 48](#)
- [Default IP Precedence Classifier \(ipprec-default\) on page 49](#)

BA Classifier Default Values

Here are the values for these default BA classifiers:

- [Default IP Precedence Classifier \(ipprec-compatibility\) on page 45](#)
- [Default MPLS EXP Classifier on page 46](#)
- [Default DSCP and DSCP IPv6 Classifier on page 46](#)
- [Default IEEE 802.1p Classifier on page 48](#)
- [Default IEEE 802.1ad Classifier on page 48](#)
- [Default IP Precedence Classifier \(ipprec-default\) on page 49](#)

Default IP Precedence Classifier (ipprec-compatibility)

By default, all logical interfaces are automatically assigned an implicit IP precedence classifier called **ipprec-compatibility**. The **ipprec-compatibility** IP precedence classifier maps IP precedence bits to forwarding classes and loss priorities, as shown in [Table 4 on page 45](#).

Table 4: Default IP Precedence Classifier

IP Precedence CoS Values	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high

Table 4: Default IP Precedence Classifier (*continued*)

IP Precedence CoS Values	Forwarding Class	Loss Priority
010	best-effort	low
011	best-effort	high
100	best-effort	low
101	best-effort	high
110	network-control	low
111	network-control	high

Default MPLS EXP Classifier

For all PICs except PICs mounted on Juniper Networks M Series Multiservice Edge Router standard (nonenhanced) FPCs, if you enable the MPLS protocol family on a logical interface, the default MPLS EXP classifier is automatically applied to that logical interface. The default MPLS classifier maps EXP bits to forwarding classes and loss priorities, as shown in [Table 5 on page 46](#).

Table 5: Default MPLS Classifier

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

Default DSCP and DSCP IPv6 Classifier

[Table 6 on page 47](#) shows the forwarding class and packet loss priority (PLP) that are assigned to each well-known DSCP when you apply the explicit default DSCP or DSCP IPv6 classifier. To do this, include the **default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers (dscp | dscp-ipv6)]** hierarchy level:


```
[edit class-of-service interfaces interface-name unit logical-unit-number classifiers (dscp
| dscp-ipv6)]
default;
```



NOTE: If you deactivate or delete dscp-ipv6 statement from the configuration, the default IPv6 classifier is not activated on the on the M5, M10, M7i, M10i, M20, M40, M40e, and M160 routing platforms. As a workaround, explicitly specify the default option to the dscp-ipv6 statement.

Table 6: Default DSCP Classifier

DSCP and DSCP IPv6	Forwarding Class	PLP
ef	expedited-forwarding	low
af11	assured-forwarding	low
af12	assured-forwarding	high
af13	assured-forwarding	high
af21	best-effort	low
af22	best-effort	low
af23	best-effort	low
af31	best-effort	low
af32	best-effort	low
af33	best-effort	low
af41	best-effort	low
af42	best-effort	low
af43	best-effort	low
be	best-effort	low
cs1	best-effort	low
cs2	best-effort	low
cs3	best-effort	low
cs4	best-effort	low
cs5	best-effort	low

Table 6: Default DSCP Classifier (*continued*)

DSCP and DSCP IPv6	Forwarding Class	PLP
nc1/cs6	network-control	low
nc2/cs7	network-control	low
other	best-effort	low

Default IEEE 802.1p Classifier

Table 7 on page 48 shows the forwarding class and PLP that are assigned to the IEEE 802.1p CoS bits when you apply the explicit default IEEE 802.1p classifier. To do this, include the **default** statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers *ieee-802.1*] hierarchy level:



NOTE: Only the IEEE 802.1p classifier is supported in Layer 2 interfaces. You must explicitly apply this classifier as shown.

```
[edit class-of-service interfaces interface-name unit logical-unit-number classifiers
  ieee-802.1]
  default;
```

Table 7: Default IEEE 802.1p Classifier

Code Point	Forwarding Class	PLP
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

Default IEEE 802.1ad Classifier

Table 8 on page 49 shows the code point, forwarding class alias, and PLP that are assigned to the IEEE 802.1ad bits when you apply the explicit default IEEE 802.1ad classifier. The table is very similar to the IEEE 802.1p default table, but the loss priority is determined by the DEI bit. To apply the default table, include the **default** statement at the [edit

class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers ieee-802.1]
hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number classifiers
  ieee-802.1ad]
default;
```

Table 8: Default IEEE 802.1ad Classifier

IEEE 802.1ad Code Point	Forwarding Class Alias	PLP
0000	be	low
0010	be1	low
0100	ef	low
0110	ef1	low
1000	af11	low
1010	af12	low
1100	nc1	low
1110	nc2	low
0001	be-dei	high
0011	be1-dei	high
0101	ef-dei	high
0111	ef1-dei	high
1001	af11-dei	high
1011	af12-dei	high
1101	nc1-dei	high
1111	nc2-dei	high

Default IP Precedence Classifier (ipprec-default)

There are two separate tables for default IP precedence classification. All logical interfaces are implicitly assigned the **ipprec-compatibility** classifier by default, as described in [Table 4 on page 45](#).

The other default IP precedence classifier (called **ipprec-default**) overrides the **ipprec-compatibility** classifier when you explicitly associate it with a logical interface. To

do this, include the **default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers inet-precedence]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number classifiers
  inet-precedence]
  default;
```

[Table 9 on page 50](#) shows the forwarding class and PLP that are assigned to the IP precedence CoS bits when you apply the default IP precedence classifier.

Table 9: Default IP Precedence (ipprec-default) Classifier

Code Point	Forwarding Class	PLP
000	best-effort	low
001	assured-forwarding	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	expedited-forwarding	low
110	network-control	low
111	network-control	high

Defining Classifiers

You can override the default IP precedence classifier by defining a classifier and applying it to a logical interface. To define new classifiers for all code point types, include the **classifiers** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
  classifiers {
    (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) classifier-name {
      import [classifier-name | default];
      forwarding-class class-name {
        loss-priority level code-points [ aliases ] [ bit-patterns ];
      }
    }
  }
```

The map sets the forwarding class and PLP for a specific set of code-point aliases and bit patterns. The inputs of the map are code-point aliases and bit patterns. The outputs of the map are the forwarding class and the PLP. For more information about how CoS maps work, see [“CoS Inputs and Outputs Overview” on page 9](#).

The classifiers work as follows:

- **dscp**—Handles incoming IPv4 packets.
- **dscp-ipv6**—Handles incoming IPv6 packets. For more information, see [“Applying DSCP IPv6 Classifiers” on page 59](#).
- **exp**—Handles MPLS packets using Layer 2 headers.
- **ieee-802.1**—Handles Layer 2 CoS.
- **inet-precedence**—Handles incoming IPv4 packets. IP precedence mapping requires only the upper three bits of the DSCP field.

A classifier takes a specified bit pattern as either the literal pattern or as a defined alias and attempts to match it to the type of packet arriving on the interface. If the information in the packet’s header matches the specified pattern, the packet is sent to the appropriate queue, defined by the forwarding class associated with the classifier.

The code-point aliases and bit patterns are the input for the map. The loss priority and forwarding class are outputs of the map. In other words, the map sets the PLP and forwarding class for a given set of code-point aliases and bit patterns.



NOTE: On M Series, MX Series, and T Series routers that do not have tricolor marking enabled, the loss priority can be configured only by setting the PLP within a multifield classifier. This setting can then be used by the appropriate drop profile map and rewrite rule. For more information, see [“Setting Packet Loss Priority” on page 64](#).

Importing a Classifier

You can use any table, including the default, in the definition of a new classifier by including the **import** statement. The imported classifier is used as a template and is not modified. Whenever you commit a configuration that assigns a new **class-name** and **loss-priority** value to a code-point alias or set of bits, it replaces that entry in the imported classifier template. As a result, you must explicitly specify every CoS value in every designation that requires modification.

To do this, include the **import default** statement at the **[edit class-of-service classifiers type classifier-name]** hierarchy level:

```
[edit class-of-service classifiers type classifier-name]
import default;
```

For instance, to import the default DSCP classifier, include the **dscp default** statement at the **[edit class-of-service classifiers dscp classifier-name]** hierarchy level:

```
[edit class-of-service classifiers dscp classifier-name]
import default;
```

Applying Classifiers to Logical Interfaces

To apply the classification map to a logical interface:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
user@host#set classifiers (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence)
(classifier-name | default);
```

You can use interface wildcards for *interface-name* and *logical-unit-number*.

For most PICs, if you apply an IEEE 802.1p classifier to a logical interface, you cannot apply non-IEEE classifiers to other logical interfaces on the same physical interface. This restriction does not apply to Gigabit Ethernet IQ2 PICs.

There are some restrictions on applying multiple BA classifiers to a single logical interface. [Table 10 on page 52](#) shows the supported combinations. In this table, the OSE PICs refer to the 10-port 10-Gigabit OSE PICs.

Table 10: Logical Interface Classifier Combinations

Classifier Combinations	Gigabit Ethernet IQ2 PICs	OSE PICs	Other PICs on M320, MX Series, and T Series	Other M Series with Regular FPCs	Other M Series with Enhanced FPCs
dscp and inet-precedence	No	No	No	No	No
dscp-ipv6 and (dscp inet-precedence)	Yes	Yes	Yes	No	No
exp and ieee 802.1	Yes	Yes	No	No	No
ieee 802.1 and (dscp dscp-ipv6 exp inet-precedence)	Yes	Yes	No	No	Yes
exp and (dscp dscp-ipv6 inet-precedence)	Yes	Yes	Yes	No	Yes

For Gigabit Ethernet IQ2 and 10-port 10-Gigabit Oversubscribed Ethernet (OSE) interfaces, family-specific classifiers take precedence over IEEE 802.1p BA classifiers. For example, if you configure a logical interface to use both an MPLS EXP and an IEEE 802.1p classifier, the EXP classifier takes precedence. MPLS-labeled packets are evaluated by the EXP classifier, and all other packets are evaluated by the IEEE 802.1p classifier. The same is true about other classifiers when combined with IEEE 802.1p classifiers on the same logical interface.

In Junos OS Releases 9.6 and later, the DSCP and IPv6 DSCP classifiers are not compatible with older formats. You cannot directly replace the old classifier with the new one. You must first delete the old classifier and then apply the new one, although both steps can be done in one configuration session. Otherwise, the commit will fail.



NOTE: If an interface is mounted on an M Series router FPC, you can apply only the default exp classifier. If an interface is mounted on an enhanced FPC, you can create a new exp classifier and apply it to an interface.

On MX960, MX480, MX240, MX80, M120, and M320 routers with Enhanced Type III FPCs only, you can configure user-defined DSCP-based BA classification for MPLS interfaces (this feature is not available for IQE PICs or on MX Series routers when ingress queuing is used) or VPLS/L3VPN routing instances (LSI interfaces). The DSCP-based classification for MPLS packets for Layer 2 VPNs is not supported. To classify MPLS packets on the routing instance at the egress PE, include the **dscp** or **dscp-ipv6** statements at the **[edit class-of-service routing-instances routing-instance-name classifiers]** hierarchy level. To classify MPLS packets at the core-facing interface, apply the classifier at the **[edit class-of-service interface interface-name unit unit-name classifiers (dscp | dscp-ipv6) classifier-name family mpls]** hierarchy level.



NOTE: If you do not apply a DSCP classifier, the default EXP classifier is applied to MPLS traffic.

You can apply DSCP classification for MPLS traffic in the following usage scenarios:

- In a Layer 3 VPN (L3VPN) using an LSI routing instance.
 - Supported on the M120, M320, MX960, MX480, MX240, and MX80 routers.
 - DSCP classifier configured under **[edit class-of-service routing-instances]** on the egress PE router.
- In VPLS using an LSI routing instance.
 - Supported on the M120, M320, MX960, MX480, MX240, and MX80 routers.
 - DSCP classifier configured under **[edit class-of-service routing-instances]** on the egress PE router.
- In a Layer 3 VPN (L3VPN) using a VT routing instance.
 - Supported on the M120, M320, MX960, MX480, MX240, and MX80 routers.
 - DSCP classifier configured under **[edit class-of-service interfaces]** on the core-facing interface on the egress PE router.
- In VPLS using the VT routing instance.
- MPLS forwarding.
 - Supported on the M120, M320, MX960, MX480, MX240, and MX80 routers (not supported on IQE and MX when ingress queuing is enabled).
 - DSCP classifier configured under **[edit class-of-service interfaces]** on the ingress core-facing interface on the P or egress PE router.

MPLS forwarding when the label stacking is greater than 2 is not supported:

The following example configures a DSCP classifier for IPv4 named **dscp-ipv4-classifier** for the **fc-af11-class** forwarding class and a corresponding IPv6 DSCP classifier:

```
class-of-service {
  routing-instances routing-instance-one {
    classifiers {
      dscp dscp-ipv4-classifier {
        loss-priority low code-points 000100;
      }
      dscp dscp-ipv6-classifier {
        forwarding-class fc-af11-class {
          loss-priority low {
            code-points af11;
          }
        }
      }
    }
  }
}
```



NOTE: This is not a complete configuration.

This example applies the IPv4 classifier to MPLS traffic and the IPv6 classifier to Internet traffic on interface **ge-2/0/3.0**:

```
class-of-service {
  interfaces ge-2/0/3 {
    unit 0 {
      classifiers {
        dscp dscp-ipv4-classifier {
          family mpls;
        }
        dscp-ipv6 dscp-ipv6-classifier {
          family inet; # This is the default if not present.
        }
      }
    }
  }
}
```



NOTE: This is not a complete configuration.

This example applies the same classifier to both MPLS and IP traffic on interface **ge-2/2/0**.

```
[edit class-of-services interface ge-2/2/0]
unit 0 {
  classifiers {
    dscp dscp-mpls {
      family [ mpls inet ];
    }
  }
}
```




NOTE: This is not a complete configuration.



NOTE: You can apply DSCP and DSCP IPv6 classifiers to explicit null MPLS packets. The `family mpls` statement works the same on both explicit null and non-null MPLS labels.

Related Documentation

- [DSCP Classifier Configuration Examples on page 55](#)

DSCP Classifier Configuration Examples

On MX960, MX480, MX240, MX80, M120, and M320 routers with Enhanced Type III FPCs only, you can configure user-defined DSCP-based BA classification for MPLS interfaces (this feature is not available for IQE PICs or on MX Series routers when ingress queuing is used) or VPLS/L3VPN routing instances (LSI interfaces). The following examples show how you can apply DSCP classifiers for MPLS traffic in these cases.

Applying a DSCP Classifier to MPLS Packets on the Core-facing Interface

Configure the core-facing interface and associated logical interfaces:

```
interfaces ge-5/3/1 {
  unit 0 {
    family inet {
      address 1.1.1.1/24;
    }
    family iso;
    family inet6 {
      address 2000::1/64;
    }
    family mpls
  }
}
```

Configure the DSCP classifier.

```
class-of-service {
  classifiers {
    dscp dscp11 {
      forwarding-class expedited-forwarding {
        loss-priority low code-points [ ef cs5 ];
      }
      forwarding-class assured-forwarding {
        loss-priority low code-points [ af21 af31 af41 cs4 ];
        loss-priority high code-points [ af23 af33 af43 cs2 af22 af32 af42 cs3 ];
      }
      forwarding-class best-effort {
        loss-priority low code-points [ af11 cs1 af12 ];
        loss-priority high code-points af13;
      }
      forwarding-class network-control {
        loss-priority low code-points [ cs6 cs7 ];
      }
    }
  }
}
```

```

    }
  }
}

```

Attach the classifier to the logical interface for the mpls family. You cannot configure more than one classifier per family.

```

class-of-service {
  interfaces {
    ge-5/3/1 {
      unit 0 {
        classifiers {
          dscp dscp11 {
            family mpls;
          }
        }
      }
    }
  }
}

```

The above classifiers are applicable on egress PE routers for VPLS and L3VPN cases. For plain interfaces (not VPLS/L3VPN (LSI) interfaces), these classifiers are applicable on P and egress PE routers on core facing interfaces.

Applying a DSCP Classifier to MPLS Traffic for L3VPN/VPLS

Configure routing instances of type either vrf or vpls.

```

routing-instances {
  vpls1 {
    instance-type vpls;
    interface ge-2/2/2.0; #customer facing interface for VPLS
    route-distinguisher 10.255.245.51:1;
    vrf-target target:1234:1;
    protocols {
      vpls {
        site-range 10;
        no-tunnel-services;
        site vpls-1-site-1 {
          site-identifier 1;
        }
      }
    }
  }
}

```

Configure the DSCP classifier.

```

class-of-service {
  classifiers {
    dscp dscp11 {
      forwarding-class expedited-forwarding {
        loss-priority low code-points [ ef cs5 ];
      }
      forwarding-class assured-forwarding {
        loss-priority low code-points [ af21 af31 af41 cs4 ];
        loss-priority high code-points [ af23 af33 af43 cs2 af22 af32 af42 cs3 ];
      }
    }
  }
}

```

```

        forwarding-class best-effort {
            loss-priority low code-points [ af11 cs1 af12 ];
            loss-priority high code-points af13;
        }
        forwarding-class network-control {
            loss-priority low code-points [ cs6 cs7 ];
        }
    }
}

```

Attach the classifier to a routing instance. You cannot configure more than one classifier per routing instance.

```

class-of-service {
    routing-instances {
        vpls1 {
            classifiers {
                dscp dscp11;
            }
        }
    }
}

```

Related Documentation

- [Applying Classifiers to Logical Interfaces on page 52](#)

Configuring BA Classifiers for Bridged Ethernet

On M120 and M320 routers equipped with IQ2 PICs, you can configure BA classification based on the IEEE 802.1 bits for bridged Ethernet over Asynchronous Transfer Mode (ATM), Point-to-Point Protocol (PPP), and frame relay for VPLS applications. The BA classification is applied to the first (outer) tag when tagged frames are received. Untagged frames are bypassed and a value of 000 for the classification IEEE 802.1p bits is assumed. There is no support for circuit cross-connect (CCC), and only port-mode VPLS is supported (in port-mode VPLS, only VLANs on a single physical port are included in the VPLS instance). There is no support for multilink PPP bonding with VPLS. For bridging over frame relay, only frames that do not preserve the frame check sequence (FCS) field are supported. Frames that preserve the FCS field are silently discarded.

The bridging over PPP function is restricted:

- There is no support for “tinygram” compression and expansion.
- Frames received with preserved FCS bits are silently discarded.
- Bridge control frames are also classified based on header bit values.
- Both tagged and untagged frames are classified and forwarded. The peer must discard frame types that are not supported.

This example applies an IEEE 802.1p classifier named **ppp-ether-vpls-classifier** to an interface (**so-1/2/3**) with Ethernet VPLS over PPP encapsulation. Note that the interface and CoS configuration must be consistent to support the feature. You must also configure the classifier and other CoS parameters such as forwarding classes.

```
[edit class-of-service]
interfaces {
  so-1/2/3 {
    unit 0 {
      classifiers {
        ieee-802.1 ppp-ether-vpls-classifier;
      }
    }
  }
}

[edit interfaces]
so-1/2/3 {
  encapsulation ether-vpls-over-ppp;
  unit 0 {
    family vpls;
  }
}
```

On routers with IQ2 or IQ2E PICs, you can perform BA classification based on the value of the inner VLAN tag in an Ethernet frame. To configure BA classification based on the inner VLAN tag value, include the **inner** option at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers ieee-802.1 *classifier-name* vlan-tag]** hierarchy level. You must configure the inner VLAN tag for the logical interface with the **inner** option at the **[edit interfaces *interface-name* unit *logical-interface-name* vlan-tag]** hierarchy level.

```
[edit class-of-service interfaces ge-2/2/2 unit 0]
classifiers ieee-802.1 inner-vlan-tag-ba-classifier {
  vlan-tag inner;
}
```

Tunneling and BA Classifiers

BA classifiers can be used with GRE and IP-IP tunnels on the following routers:

- M7i and M10i routers
- M Series routers with E-FPC or EP-FPC
- M120 routers
- M320 routers
- T Series routers

When a GRE or IP-IP tunnel is configured on an incoming (core-facing) interface, the queue number and PLP information are carried through the tunnel. At the egress (customer-facing) interface, the packet is queued and the CoS bits rewritten based on the information carried through the tunnel.

If no BA classifier is configured in the incoming interface, the default classifier is applied.
If no rewrite rule is configured, the default rewrite rule is applied.

Applying DSCP IPv6 Classifiers

For M320 and T Series routers, you can apply separate classifiers for IPv4 and IPv6 packets per logical interface by including the **classifiers** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level and specifying the **dscp** and **dscp-ipv6** classifier types:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
classifiers dscp (classifier-name | default) family (mpls | inet);
classifiers dscp-ipv6 (classifier-name | default) family (mpls | inet);
```

For M Series router enhanced FPCs, you cannot apply separate classifiers for IPv4 and IPv6 packets on a single logical interface. Instead, classifier assignment works as follows:

- If you assign a DSCP classifier only, IPv4 and IPv6 packets are classified using the DSCP classifier.
- If you assign an IP precedence classifier only, IPv4 and IPv6 packets are classified using the IP precedence classifier. In this case, the lower three bits of the DSCP field are ignored because IP precedence mapping requires the upper three bits only.
- If you assign either the DSCP or the IP precedence classifier in conjunction with the DSCP IPv6 classifier, the commit fails.
- If you assign a DSCP IPv6 classifier only, IPv4 and IPv6 packets are classified using the DSCP IPv6 classifier, but the commit displays a warning message.

For more information, see “[Applying Classifiers to Logical Interfaces](#)” on page 52. For a complex configuration example, see the Junos OS Feature Guides.

Applying MPLS EXP Classifiers to Routing Instances

When you enable VRF table labels and you do not explicitly apply a classifier configuration to the routing instance, the default MPLS EXP classifier is applied to the routing instance. For detailed information about VRF table labels, see the Junos OS VPNs Configuration Guide.

The default MPLS EXP classification table contents are shown in [Table 11 on page 59](#).

Table 11: Default MPLS EXP Classification Table

Forwarding Class	Loss Priority	CoS Value
best-effort	low	000
best-effort	high	001
expedited-forwarding	low	010
expedited-forwarding	high	011

Table 11: Default MPLS EXP Classification Table (*continued*)

Forwarding Class	Loss Priority	CoS Value
assured-forwarding	low	100
assured-forwarding	high	101
network-control	low	110
network-control	high	111

For PICs that are installed on enhanced FPCs, you can override the default MPLS EXP classifier and apply a custom classifier to the routing instance. To do this, perform the following configuration tasks:

1. Filter traffic based on the IP header by including the **vrf-table-label** statement at the **[edit routing-instances *routing-instance-name*]** hierarchy level:

```
[edit routing-instances routing-instance-name]
vrf-table-label;
```

2. Configure a custom MPLS EXP classifier by including the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
classifiers {
  exp classifier-name {
    import (classifier-name | default);
    forwarding-class class-name {
      loss-priority level code-points [ aliases ] [ bit-patterns ];
    }
  }
}
forwarding-classes {
  queue queue-number class-name priority (high | low);
}
```

3. Configure the routing instance to use the custom MPLS EXP classifier by including the **exp** statement at the **[edit class-of-service routing-instances *routing-instance-name* classifiers]** hierarchy level:

```
[edit class-of-service routing-instances routing-instance-name classifiers]
exp classifier-name;
```

To display the MPLS EXP classifiers associated with all routing instances, issue the **show class-of-service routing-instances** command.



NOTE: The following caveats apply to custom MPLS EXP classifiers for routing instances:

- An enhanced FPC is required.
- Logical systems are not supported.

For more details, see the following sections:

- [Configuring Global Classifiers and Wildcard Routing Instances on page 61](#)
- [Examples: Applying MPLS EXP Classifiers to Routing Instances on page 61](#)

Configuring Global Classifiers and Wildcard Routing Instances

To configure a global routing instance classifier, include the **all** statement at the **[edit class-of-service routing-instances]** hierarchy level:

```
[edit class-of-service routing-instances]
all {
  classifiers {
    exp classifier-name;
  }
}
```

For routing instances associated with specific classifiers, the global configuration is ignored.

To use a wildcard in the routing instance classifier configuration, include an asterisk (*) in the name of the routing instance:

```
[edit class-of-service routing-instances]
routing-instance-name* {
  classifiers {
    exp classifier-name;
  }
}
```

The wildcard configuration follows the longest match. If there is a specific configuration, it is given precedence over the wildcard configuration.



NOTE: Wildcards and the **all** keyword are supported at the **[edit class-of-service routing-instances]** hierarchy level but not at the **[edit routing-instances]** hierarchy level.

If you configure a routing instance at the **[edit routing-instances]** hierarchy level with, for example, the name **vpn***, the Junos OS treats **vpn*** as a valid and distinct routing instance name. If you then try to apply a classifier to the **vpn*** routing instance at the **[edit class-of-service routing-instances]** hierarchy level, the Junos OS treats the **vpn*** routing instance name as a wildcard, and all the routing instances that start with **vpn** and do not have a specific classifier applied receive the classifier associated with **vpn***. This same behavior applies with the **all** keyword.

Examples: Applying MPLS EXP Classifiers to Routing Instances

Configure a global classifier for all routing instances and override the global classifier for a specific routing instance. In this example, there are three routing instances: **vpn1**, **vpn2**, and **vpn3**, each with VRF table label enabled. The classifier **exp-classifier-global** is applied

to **vpn1** and **vpn2** (that is, all but **vpn3**, which is listed separately). The classifier **exp-classifier-3** is applied to **vpn3**.

Configuring a Global Classifier

```
[edit routing-instances]
vpn1 {
  vrf-table-label;
}
vpn2 {
  vrf-table-label;
}
vpn3 {
  vrf-table-label;
}

[edit class-of-service routing-instances]
all {
  classifiers {
    exp exp-classifier-global;
  }
}
vpn3 {
  classifiers {
    exp exp-classifier-3;
  }
}
```

Configure a wildcard routing instance and override the wildcard with a specific routing instance. In this example, there are three routing instances: **vpn-red**, **vpn-yellow**, and **vpn-green**, each with VRF table label enabled. The classifier **exp-class-wildcard** is applied to **vpn-yellow** and **vpn-green**. The classifier **exp-class-red** is applied to **vpn-red**.

Configuring a Wildcard Routing Instance

```
[edit routing-instances]
vpn-red {
  vrf-table-label;
}
vpn-yellow {
  vrf-table-label;
}
vpn-green {
  vrf-table-label;
}

[edit class-of-service routing-instances]
vpn* {
  classifiers {
    exp exp-class-wildcard;
  }
}
vpn-red {
  classifiers {
    exp exp-class-red;
  }
}
```

Display the MPLS EXP classifiers associated with two routing instances:

Monitoring a Configuration

```
[edit class-of-service routing-instances]
vpn1 {
  classifiers {
    exp default;
  }
}
vpn2 {
  classifiers {
    exp class2;
  }
}
```

```
user@host> show class-of-service routing-instances
```

Routing Instance : vpn1			
Object	Name	Type	Index
Classifier	exp-default	exp	8
Routing Instance : vpn2			
Object	Name	Type	Index
Classifier	class2	exp	57507

Applying MPLS EXP Classifiers for Explicit-Null Labels

When you configure MPLS explicit-null labels, label 0 is advertised to the egress router of an LSP. When label 0 is advertised, the egress router (instead of the penultimate router) removes the label. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label. For more information about explicit-null labels and ultimate-hop popping, see the Junos OS MPLS Applications Configuration Guide.

On M320 and T Series routers, when you configure MPLS explicit-null labels with an MPLS EXP classifier, the MPLS EXP classifier can be different from an IPv4 or IPv6 classifier configured on the same logical interface. In other words, you can apply separate classifiers for MPLS EXP, IPv4, and IPv6 packets per logical interface. To combine an EXP classifier with a distinct IPv6 classifier, the PIC must be mounted on an Enhanced FPC.



NOTE: For J Series routers and other M Series routers, MPLS explicit-null labels with MPLS EXP classification are supported if you set the same classifier for EXP and IPv4 traffic, or EXP and IPv6 traffic.

For more information about how IPv4 and IPv6 packet classification is handled, see [“Applying DSCP IPv6 Classifiers” on page 59](#).

To configure an MPLS EXP classifiers for explicit-null labels, include the **exp** statement at the **[edit class-of-service classifiers]** and **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers]** hierarchy levels:

```
[edit class-of-service classifiers]
exp classifier-name {
  import (classifier-name | default);
  forwarding-class class-name {
```

```

    loss-priority level code-points [ aliases ] [ bit-patterns ];
  }
}
[edit class-of-service interfaces interface-name unit logical-unit-number classifiers]
exp (classifier-name | default);

```

Setting Packet Loss Priority

By default, the least significant bit of the CoS value sets the packet loss priority (PLP) value. For example, CoS value 000 is associated with PLP **low**, and CoS value 001 is associated with PLP **high**. In general, you can change the PLP by configuring a behavior aggregate (BA) or multifield classifier, as discussed in [“Overview of BA Classifier Types” on page 44](#) and [“Multifield Classifier Overview” on page 76](#).

However, on Juniper Networks M320 Multiservice Edge Routers, MX Series 3D Universal Edge Routers, and T Series Core Routers that do not have tricolor marking enabled, the loss priority can be configured by setting the PLP within a multifield classifier or by behavior aggregate (BA) classifier. This setting can then be used by the appropriate drop profile map and rewrite rule.

On M320 routers and T Series routers with Enhanced II Flexible PIC Concentrators (FPCs) and tricolor marking enabled, you can set the PLP with a BA or multifield classifier, as described in [“Using BA Classifiers to Set PLP” on page 113](#) and [“Using Multifield Classifiers to Set PLP” on page 113](#).

On T Series routers with different Packet Forwarding Engines (non-Enhanced Scaling and Enhanced Scaling FPCs), you can configure PLP bit copying for ingress and egress unicast and multicast traffic. To configure, include the **copy-plp-all** statement at the **[edit class-of-service]** hierarchy level.

Example: Overriding the Default PLP on M320 Routers

The following example shows a two-step procedure to override the default PLP settings on M320 routers:

1. The following example specifies that while the DSCP code points are 110, the loss priority is set to **high**; however, on M320 routers, overriding the default PLP this way has no effect.

```

class-of-service {
  classifiers {
    dscp ba-classifier {
      forwarding-class expedited-forwarding {
        loss-priority high code-points 110;
      }
    }
  }
}

```

2. For M320 routers, this multifield classifier sets the PLP.

```

firewall {
  filter ef-filter {
    term ef-multifield {

```

```

        from {
            precedence 6;
        }
        then {
            loss-priority high;
            forwarding-class expedited-forwarding;
        }
    }
}

```

Configuring and Applying IEEE 802.1ad Classifiers

For Juniper Network MX Series 3D Universal Edge Router interfaces or IQ2 PICs with IEEE 802.1ad frame formats, you can set the forwarding class and loss priority for traffic on the basis of the three IEEE 802.1p bits and the DEI bit. You can apply the default map or customize one or more of the default values.

You then apply the classifier to the interface on which you configure IEEE 802.1ad frame formats.

Defining Custom IEEE 802.1ad Maps

You can customize the default IEEE 802.1ad map by defining values for IEEE 802.1ad code points.

```

class-of-service {
  classifiers {
    ieee-802.1ad dot1p_dei_class {
      forwarding-class best-effort {
        loss-priority low code-points [ 0000 1101 ];
      }
    }
  }
}

```

Applying Custom IEEE 802.1ad Maps

You then apply the classifier map to the logical interface:

```

interfaces {
  ge-2/0/0 {
    unit 0 {
      classifiers {
        ieee-802.1ad dot1p_dei_class;
      }
    }
  }
}

```

Verifying Custom IEEE 802.1ad Map Configuration

To verify your configuration, you can issue the following operational mode commands:

- **show class-of-service forwarding-table loss-priority-map**
- **show class-of-service forwarding-table loss-priority-map mapping**
- **show chassis forwarding**
- **show pfe fwdd**

Understanding DSCP Classification for VPLS

You can perform Differentiated Services Code Point (DSCP) classification for IPv4 packets on Ethernet interfaces that are part of a virtual private LAN service (VPLS) routing instance on the ingress provider edge (PE) router. This is supported on the M320 router with Enhanced type III FPC and the M120 router. On the ATM II IQ PIC, the **ether-vpls-over-atm-llc** encapsulation statement is required. On the Intelligent Queuing 2 (IQ2) or Intelligent Queuing 2 Enhanced (IQ2E) PICs, the **vlan-vpls** encapsulation statement is required. DSCP for IPv6 and Internet precedence for IPv6 are not supported.

In order to perform DSCP classification for IPv4 packets on Ethernet interfaces that are part of a VPLS routing instance on the ingress PE router, you must make sure of the following:

- The correct encapsulation statement based on PIC type is configured for the interface.
- The DSCP classifier is defined (default is allowed) at the **[edit class-of-service classifiers]** hierarchy level.
- The defined DSCP classifier is applied to the interface.
- The interface is included in the VPLS routing instance on the ingress of the PE router.

Related Documentation

- [BA Classifier Overview on page 41](#)

Example: Configuring DSCP Classification for VPLS

The following example configures DSCP classifier **dscp_vpls** on ATM interface **at-4/1/1** with **ether-vpls-over-atm-llc** encapsulation. The classifier **dscp_vpls** is applied to the interface and the interface is listed in the VPLS routing instance **vpls1** on the ingress PE router.

1. Configure the ATM interface **at-4/1/1.0** and the encapsulation as **ether-vpls-over-atm-llc**:

```
[edit]
interfaces {
  at-4/1/1 {
    mtu 9192;
    atm-options {
```

```

        vpi 10;
    }
    unit 0 {
        encapsulation ether-vpls-over-atm-llc;
        vci 10.128;
        family vpls;
    }
}

```

2. Configure the DSCP classifier **dscp_vpls**:

```

[edit]
class-of-service {
    classifiers {
        dscp dscp_vpls {
            forwarding-class expedited-forwarding {
                loss-priority low code-points 000010;
            }
        }
    }
}

```

3. Apply the classifier **dscp_vpls** to the ATM interface **at-4/1/1.0**:

```

[edit]
interfaces {
    at-4/1/1 {
        unit 0 {
            classifiers {
                dscp dscp_vpls;
            }
        }
    }
}

```

4. Include the ATM interface virtual circuit **at-4/1/1.0** as part of the routing instance **vpls1** configuration:

```

[edit]
routing-instances {
    vpls1 {
        instance-type vpls;
        interface at-4/1/1.0;
        route-distinguisher 10.255.245.51:1;
        vrf-target target:1234:1;
        protocols {
            vpls {
                site-range 10;
                no-tunnel-services;
                site vpls-1-site-1 {
                    site-identifier 1;
                }
            }
        }
    }
}

```

Related Documentation

- [Understanding DSCP Classification for VPLS on page 66](#)

BA Classifiers and ToS Translation Tables

On some PICs, the behavior aggregate (BA) translation tables are included for every logical interface (unit) protocol family configured on the logical interface. The proper default translation table is active even if you do not include any explicit translation tables. You can display the current translation table values with the **show class-of-service classifiers** command.

On Juniper Networks M40e, M120, M320 Multiservice Edge Routers, and T Series Core Routers with Enhanced IQ (IQE) PICs, or on any router with IQ2 or Enhanced IQ2 (IQ2E) PICs, you can replace the type-of-service (ToS) bit value on the incoming packet header on a logical interface with a user-defined value. The new ToS value is used for all class-of-service processing and is applied before any other class-of-service or firewall treatment of the packet. The PIC uses the **translation-table** statement to determine the new ToS bit values.

You can configure a physical interface (port) or logical interface (unit) with up to three translation tables. For example, you can configure a port or unit with BA classification for IPv4 DSCP, IPv6 DSCP, and MPLS EXP. The number of frame relay data-link connection identifiers (DLCIs) (units) that you can configure on each PIC varies based on the number and type of BA classification tables configured on the interfaces.

For more information on configuring ToS translation tables, along with examples, see [“Configuring ToS Translation Tables” on page 328](#).

CHAPTER 4

Defining Code-Point Aliases

This topic discusses the following:

- [Default Code-Point Alias Overview on page 69](#)
- [Default CoS Values on page 70](#)
- [Defining Code Point Aliases for Bit Patterns on page 72](#)

Default Code-Point Alias Overview

Behavior aggregate (BA) classifiers use class-of-service (CoS) values such as Differentiated Services code points (DSCPs), DSCP IPv6, IP precedence, IEEE 802.1 and MPLS experimental (EXP) bits to associate incoming packets with a particular CoS servicing level. On a Services Router, you can assign a meaningful name or alias to the CoS values and use this alias instead of bits when configuring CoS components. These aliases are not part of the specifications but are well known through usage. For example, the alias for DSCP 101110 is widely accepted as **ef** (expedited forwarding).



NOTE: The code point aliases must begin with a letter and can be up to 64 characters long.

When you configure classes and define classifiers, you can refer to the markers by alias names. You can configure user-defined classifiers in terms of alias names. If the value of an alias changes, it alters the behavior of any classifier that references it.

To configure class-of-service (CoS) code point aliases, include the **code-point-aliases** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
code-point-aliases {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) {
    alias-name bits;
  }
}
```

Related
Documentation

- [code-point-aliases on page 572](#)

Default CoS Values

Table 12 on page 70 shows the default mappings between the bit values and standard aliases. For example, it is widely accepted that the alias for DSCP 101110 is **ef** (expedited forwarding).

Table 12: Default CoS Values

CoS Value Types	Mapping
DSCP and DSCP IPv6 CoS Values	
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000
cs4	100000
cs5	101000

Table 12: Default CoS Values (*continued*)

CoS Value Types	Mapping
nc1/cs6	110000
nc2/cs7	111000
MPLS EXP CoS Values	
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101
nc1/cs6	110
nc2/cs7	111
IEEE 802.1 CoS Values	
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101
nc1/cs6	110
nc2/cs7	111
Legacy IP Precedence CoS Values	
be	000
be1	001
ef	010
ef1	011

Table 12: Default CoS Values (*continued*)

CoS Value Types	Mapping
af11	100
af12	101
nc1/cs6	110
nc2/cs7	111

Defining Code Point Aliases for Bit Patterns

To define a code-point alias, include the **code-point-aliases** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
code-point-aliases {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) {
    alias-name bit-pattern;
  }
}
```

The CoS marker types are as follows:

- **dscp**—Handles incoming IPv4 packets.
- **dscp-ipv6**—Handles incoming IPv6 packets.
- **exp**—Handles MPLS packets using Layer 2 headers.
- **ieee-802.1**—Handles Layer 2 CoS.
- **inet-precedence**—Handles incoming IPv4 packets. IP precedence mapping requires only the upper three bits of the DSCP field.

For example, you might configure the following aliases:

```
[edit class-of-service]
code-point-aliases {
  dscp {
    my1 110001;
    my2 101110;
    be 000001;
    cs7 110000;
  }
}
```

This configuration produces the following mapping:

```
user@host> show class-of-service code-point-aliases dscp
Code point type: dscp

Alias           Bit pattern
ef/my2          101110
```

af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000001
cs1	001000
cs2	010000
cs3	011000
cs4	100000
cs5	101000
nc1/cs6/cs7	110000
nc2	111000
my1	110001

The following notes explain certain results in the mapping:

- **my1 110001:**
 - 110001 was not mapped to anything before, and **my1** is a new alias.
 - Nothing in the default mapping table is changed by this statement.
- **my2 101110:**
 - 101110 is now mapped to **my2** as well as **ef**.
- **be 000001:**
 - **be** is now mapped to 000001.
 - The old value of **be**, 000000, is not associated with any alias. Packets with this DSCP value are now mapped to the default forwarding class.
- **cs7 110000:**
 - **cs7** is now mapped to 110000, as well as **nc1** and **cs6**.
 - The old value of **cs7**, 111000, is still mapped to **nc2**.

- Related Documentation**
- [Applying DSCP IPv6 Classifiers on page 59](#)

CHAPTER 5

Classifying Packets Based on Various Packet Header Fields

This topic discusses the following:

- [Multifield Classifier Overview on page 76](#)
- [Configuring Multifield Classifiers on page 76](#)
- [Example: Classifying Packets Based on Their Destination Address on page 78](#)
- [Example: Configuring and Verifying a Complex Multifield Filter on page 78](#)
- [Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets on page 81](#)
- [Overview of Simple Filters on page 84](#)
- [Example: Configuring a Simple Filter on page 85](#)
- [Configuring Logical Bandwidth Policers on page 86](#)
- [Example: Configuring a Logical Bandwidth Policer on page 86](#)
- [Two-Color Policers and Shaping Rate Changes on page 87](#)
- [Example: Two-Color Policers and Shaping Rate Changes on page 88](#)
- [Understanding IEEE 802.1p Inheritance push and swap from a Transparent Tag on page 88](#)
- [Configuring IEEE 802.1p Inheritance push and swap from the Transparent Tag on page 89](#)
- [Classifiers and Rewrite Rules at the Global and Physical Interface Levels Overview on page 91](#)
- [Configuring Classifiers and Rewrite Rules at the Global and Physical Interface Levels on page 92](#)

Multifield Classifier Overview

A multifield classifier is a method of classifying traffic flows. Devices that sit at the edge of a network usually classify packets according to codings that are located in multiple packet header fields. Multifield classification is normally performed at the network edge because of the general lack of DiffServ code point (DSCP) or IP precedence support in end-user applications.

In an edge router, a multifield classifier provides the filtering functionality that scans through a variety of packet fields to determine the forwarding class for a packet. Typically, a classifier performs matching operations on the selected fields against a configured value.

Unlike a behavior aggregate (BA), which classifies packets based on class-of-service (CoS) bits in the packet header, a multifield classifier can examine multiple fields in the packet header—for example, the source and destination address of the packet, and the source and destination port numbers of the packet. A multifield classifier typically matches one or more of the six packet header fields: destination address, source address, IP protocol, source port, destination port, and DSCP. Multifield classifiers are used when a simple BA classifier is insufficient to classify a packet.

In the Juniper Networks® Junos® operating system (Junos OS), you configure a multifield classifier with a firewall filter and its associated match conditions. This enables you to use any filter match criteria to locate packets that require classification. From a CoS perspective, multifield classifiers (or firewall filter rules) provide the following services:

- Classify packets to a forwarding class and loss priority. The forwarding class determines the output queue. The loss priority is used by schedulers in conjunction with the random early discard (RED) algorithm to control packet discard during periods of congestion.
- Police traffic to a specific bandwidth and burst size. Packets exceeding the policer limits can be discarded, or can be assigned to a different forwarding class, to a different loss priority, or to both.



NOTE: You *police* traffic on input to conform to established CoS parameters, setting loss handling and forwarding class assignments as needed. You *shape* traffic on output to make sure that router resources, especially bandwidth, are distributed fairly. However, input policing and output shaping are two different CoS processes, each with their own configuration statements.

Configuring Multifield Classifiers

If you configure both a behavior aggregate (BA) classifier and a multifield classifier, BA classification is performed first; then multifield classification is performed. If they conflict, any BA classification result is overridden by the multifield classifier.



NOTE: For a specified interface, you can configure both a multifield classifier and a BA classifier without conflicts. Because the classifiers are always applied in sequential order, the BA classifier followed by the multifield classifier, any BA classification result is overridden by a multifield classifier if they conflict.

To activate a multifield classifier, you must configure it on a logical interface. There is no restriction on the number of multifield classifiers you can configure.



NOTE: For MX Series routers, if you configure a firewall filter with a DSCP action or traffic-class action on a DPC, the commit does not fail, but a warning displays and an entry is made in the syslog.

For an L2TP LNS on MX Series routers, you can attach firewall for static LNS sessions by configuring these at logical interfaces directly on the inline services device (si-fpc/pic/port). RADIUS-configured firewall attachments are not supported.

To configure multifield classifiers, include the following statements at the **[edit firewall]** hierarchy level:

```
[edit firewall]
family family-name {
  filter filter-name {
    term term-name {
      from {
        match-conditions;
      }
      then {
        dscp 0;
        forwarding-class class-name;
        loss-priority (high | low);
      }
    }
  }
}
simple-filter filter-name {
  term term-name {
    from {
      match-conditions;
    }
    then {
      forwarding-class class-name;
      loss-priority (high | low | medium);
    }
  }
}
}
```

Example: Classifying Packets Based on Their Destination Address

Configure a multifold classifier that ensures that all IPv4 packets destined for the **10.10.10.0/24** network are placed into the **platinum** forwarding class. This assignment occurs regardless of the received CoS bit values in the packet. Apply this filter to the inbound interface **so-1/2/2.0**.

To verify that your configuration is attached to the correct interface, issue the **show interfaces filters** command.

```
[edit]
firewall {
  family inet {
    filter set-FC-to-platinum {
      term match-a-single-route {
        from {
          destination-address {
            10.10.10.0/24;
          }
        }
        then {
          forwarding-class platinum;
          accept;
        }
      }
      term accept-all {
        then accept;
      }
    }
  }
}
interfaces {
  so-1/2/2 {
    unit 0 {
      family inet {
        filter {
          input set-FC-to-platinum;
        }
      }
    }
  }
}
```

Example: Configuring and Verifying a Complex Multifold Filter

In this example, SIP signaling (VoIP) messages use TCP/UDP, port 5060, and RTP media channels use UDP with port assignments from 16,384 through 32,767. See the following sections:

- [Configuring a Complex Multifold Filter on page 79](#)
- [Verifying a Complex Multifold Filter on page 80](#)

Configuring a Complex Multifield Filter

To configure the multifield filter, perform the following actions:

- Classify SIP signaling messages (VoIP network control traffic) as NC with a firewall filter.
- Classify VoIP traffic as EF with the same firewall filter.
- Police all remaining traffic with IP precedence 0 and make it BE.
- Police BE traffic to 1 Mbps with excess data marked with PLP high.
- Apply the firewall filter with policer to the interface.

The firewall filter called **classify** matches on the transport protocol and ports identified in the incoming packets and classifies packets into the forwarding classes specified by your criteria.

The first term, **sip**, classifies SIP signaling messages as network control messages. The **port** statement matches any source port or destination port (or both) that is coded to 5060.

Classifying SIP Signaling Messages

```

firewall {
  family inet {
    filter classify {
      interface-specific;
      term sip {
        from {
          protocol [ udp tcp ];
          port 5060;
        }
        then {
          forwarding-class network-control;
          accept;
        }
      }
    }
  }
}

```

The second term, **rtp**, classifies VoIP media channels that use UDP-based transport.

Classifying VoIP Channels That Use UDP

```

term rtp {
  from {
    protocol udp;
    port 16384-32767;
  }
  then {
    forwarding-class expedited-forwarding;
    accept;
  }
}

```

```
}
```

The policer's burst tolerance is set to the recommended value for a low-speed interface, which is ten times the interface MTU. For a high-speed interface, the recommended burst size is the transmit rate of the interface times 3 to 5 milliseconds.

Configuring the Policer

```
policer be-policer {  
  if-exceeding {  
    bandwidth-limit 1m;  
    burst-size-limit 15k;  
  }  
  then loss-priority high;  
}
```

The third term, **be**, ensures that all remaining traffic is policed according to a bandwidth restriction.

Policing All Remaining Traffic

```
term be {  
  then policer be-policer;  
}
```

The **be** term does not include a **forwarding-class** action modifier. Furthermore, there is no explicit treatment of network control (NC) traffic provided in the **classify** filter. You can configure explicit classification of NC traffic and all remaining IP traffic, but you do not need to, because the default IP precedence classifier correctly classifies the remaining traffic.

Apply the **classify** classifier to the **fe-0/0/2** interface:

Applying the Classifier

```
interfaces {  
  fe-0/0/2 {  
    unit 0 {  
      family inet {  
        filter {  
          input classify;  
        }  
        address 10.12.0.13/30;  
      }  
    }  
  }  
}
```

Verifying a Complex Multifield Filter

Before the configuration is committed, display the default classifiers in effect on the interface using the **show class-of-service interface *interface-name*** command. The display confirms that the **ipprec-compatibility** classifier is in effect by default.

Verifying Default Classification

```
user@host> show class-of-service fe-0/0/2
```

```
Physical interface: fe-0/0/2, Index: 135
Queues supported: 8, Queues in use: 4
Scheduler map: <default>, Index: 2032638653
```

```
Logical interface: fe-0/0/2.0, Index: 68
Shaping rate: 32000
```

Object	Name	Type	Index
Scheduler-map	<default>		27
Rewrite	exp-default	exp	21
Classifier	exp-default	exp	5
Classifier	ipprec-compatibility	ip	8

To view the default classifier mappings, use the **show class-of-service classifier name name** command. The highlighted output confirms that traffic with IP precedence setting of 0 is correctly classified as BE, and NC traffic, with precedence values of 6 or 7, is properly classified as NC.

Displaying Default Classifier Mappings

```
user@host> show class-of-service classifier name ipprec-compatibility
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 12
```

Code point	Forwarding class	Loss priority
000	best-effort	low
001	best-effort	high
010	best-effort	low
011	best-effort	high
100	best-effort	low
101	best-effort	high
110	network-control	low
111	network-control	high

After your configuration is committed, verify that your multifield classifier is working correctly. You can monitor the queue counters for the router's **egress** interface used when forwarding traffic received from the peer. Displaying the queue counters for the ingress interface (**fe-0/0/2**) does not allow you to check your ingress classification, because queuing generally occurs only at egress in the Junos OS. (Ingress queuing is supported on Gigabit Ethernet IQ2 PICs and Enhanced IQ2 PICs only.)

To verify the operation of the multifield filter:

1. To determine which egress interface is used for the traffic, use the **traceroute** command.
2. After you identify the egress interface, clear its associated queue counters by issuing the **clear interfaces statistics interface-name** command.
3. Confirm the default forwarding class-to-queue number assignment. This allows you to predict which queues are used by the VoIP, NC, and other traffic. To do this, issue the **show class-of-service forwarding-class** command.
4. Display the queue counts on the interface by issuing the **show interfaces queue** command.

Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets

On Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers, you can selectively set the DSCP field of MPLS-tagged IPv4 and IPv6 packets to **000000**. In the same packets, you can set the MPLS EXP field according to a configured rewrite

table, which is based on the forwarding classes that you set in incoming packets using a BA or multifield classifier.

Queue selection is based on the forwarding classes you assign in scheduler maps. This means that you can direct traffic to a single output queue, regardless of whether the DSCP field is unchanged or rewritten to **000000**. To do this, you must configure a multifield classifier that matches selected packets and modifies them with the **dscp 0** action.

Selective marking of DSCP fields to **0**, without affecting output queue assignment, can be useful. For example, suppose you need to use the MPLS EXP value to configure CoS applications for core provider routers. At the penultimate egress provider edge (PE) router where the MPLS labels are removed, the CoS bits need to be provided by another value, such as DSCP code points. This case illustrates why it is useful to mark both the DSCP and MPLS EXP fields in the packet. Furthermore, it is useful to be able to mark the two fields differently, because the CoS rules of the core provider router might differ from the CoS rules of the egress penultimate router. At egress, as always, you can use a rewrite table to rewrite the MPLS EXP values corresponding to the forwarding classes that you need to set.



NOTE: When both customer-facing and core-facing interfaces exist, you can derive the EXP value in the following precedence order, while adding the MPLS label:

1. EXP value provided by the CoS rewrite action.
2. EXP value derived from the top label of the stack (MPLS label stacking).
3. IPv4 or IPv6 precedence (Layer 3 VPN, Layer 2 VPN, and VPLS scenarios).

For IPv4 traffic, the **dscp 0** action modifier at the **[edit firewall family inet filter *filter-name* term *term-name* then]** hierarchy level is valid. However, for IPv6 traffic, you configure this feature by including the **traffic-class 0** action modifier at the **[edit firewall family inet6 filter *filter-name* term *term-name* then]** hierarchy level.

In the following IPv4 example, term 1 of the multifield classifier matches packets with DSCP **001100** code points coming from a certain VRF, rewrites the bits to DSCP **000000**, and sets the forwarding class to **best-effort**. In term 2, the classifier matches packets with DSCP **010110** code points and sets the forwarding class to **best-effort**. Because term 2 does not include the **dscp 0** action modifier, the DSCP **010110** bits remain unchanged. Because the classifier sets the forwarding class for both code points to **best-effort**, both traffic types are directed to the same output queue.



NOTE: If you configure a bit string in a DSCP match condition in a firewall filter, then you must include the letter “b” in front of the string, or the match rule creation fails on commit.

[edit]

```

firewall {
  family inet {
    filter vrf-rewrite {
      term 1 {
        from {
          dscp b001100;
        }
        then {
          dscp 0;
          forwarding-class best-effort;
        }
      }
      term 2 {
        from {
          dscp b010110;
        }
        then {
          forwarding-class best-effort;
        }
      }
    }
  }
}

```

Applying the Multifield Classifier

Apply the filter to an input interface corresponding to the VRF:

```

[edit]
interfaces {
  so-0/1/0 {
    unit 0 {
      family inet {
        filter input vrf-rewrite;
      }
    }
  }
}

```



.....

NOTE: The `dscp 0` action is supported in both input and output filters. You can use this action for non-MPLS packets as well as for IPv4 and IPv6 packets entering an MPLS network. All IPv4 and IPv6 firewall filter match conditions are supported with the `dscp 0` action.

The following limitations apply:

- You can use a multifield classifier to rewrite DSCP fields to value 0 only. Other values are not supported.
 - If a packet matches a filter that has the `dscp 0` action, then the outgoing DSCP value of the packet is 0, even if the packet matches a rewrite rule, and the rewrite rule is configured to mark the packet to a non-zero value. The `dscp 0` action overrides any other rewrite rule actions configured on the router.
 - Although you can use the `dscp 0` action on an input filter, the output filter and other classifiers do not see the packet as being marked `dscp 0`. Instead, they classify the packet based on its original incoming DSCP value. The DSCP value of the packet is set to 0 after all other classification actions have completed on the packet.
-

Overview of Simple Filters

Simple filters are recommended for metropolitan Ethernet applications. They are supported on Gigabit Ethernet intelligent queuing 2 (IQ2) and Enhanced Queuing Dense Port Concentrator (DPC) interfaces only.

Unlike normal filters, simple filters are for IPv4 traffic only and have the following restrictions:

- The **next term** action is not supported.
- Qualifiers, such as the **except** and **protocol-except** statements, are not supported.
- Noncontiguous masks are not supported.
- Multiple source addresses and destination addresses in a single term are not supported. If you configure multiple addresses, only the last one is used.
- Ranges are only valid as source or destination ports. For example, **source-port 400-500** or **destination-port 600-700**.
- Output filters are not supported. You can apply a simple filter to ingress traffic only.
- Simple filters are not supported for interfaces in an aggregated-Ethernet bundle.
- Explicitly configurable terminating actions, such as **accept**, **reject**, and **discard**, are not supported. Simple filters always accept packets.



NOTE: On the MX Series routers with the Enhanced Queuing DPC, the forwarding class is not supported as a from match condition.

Example: Configuring a Simple Filter

This simple filter sets the loss priority to low for TCP traffic with source address 1.1.1.1, sets the loss priority to high for HTTP (web) traffic with source addresses in the 4.0.0.0/8 range, and sets the loss priority to low for all traffic with destination address 6.6.6.6. The simple filter is applied as an input filter (arriving packets are checking for destination address 6.6.6.6, not queued output packets) on interface **ge-0/0/1.0**.

```
[edit]
firewall {
  family inet {
    simple-filter filter1 {
      term 1 {
        from {
          source-address {
            1.1.1.1/32;
          }
          protocol {
            tcp;
          }
        }
        then loss-priority low;
      }
      term 2 {
        from {
          source-address {
            4.0.0.0/8;
          }
          source-port {
            http;
          }
        }
        then loss-priority high;
      }
      term 3 {
        from {
          destination-address {
            6.6.6.6/32;
          }
        }
        then {
          loss-priority low;
          forwarding-class best-effort;
        }
      }
    }
  }
}
```

```
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        simple-filter {
          input filter1;
        }
        address 10.1.2.3/30;
      }
    }
  }
}
```

Configuring Logical Bandwidth Policers

When you configure a policer as a percentage (using the **bandwidth-percent** statement), the bandwidth is calculated as a percentage of either the physical interface media rate or the logical interface shaping rate. To specify that the bandwidth be calculated based on the logical interface shaping rate and not the physical interface media rate, include the **logical-bandwidth-policer** statement. If a shaping rate is not configured for the logical interface, the physical interface media rate is used, even if you include the **logical-bandwidth-policer**. You can configure the shaping rate on the logical interface using class-of-service statements.

```
[edit firewall policer policer-name]
logical-bandwidth-policer;
```

Example: Configuring a Logical Bandwidth Policer

This example applies a logical bandwidth policer rate to two logical interfaces on interface **ge-0/2/7**. The policed rate on **unit 0** is 2 Mbps (50 percent of 4 Mbps) and the policed rate on **unit 1** is 1 Mbps (50 percent of 2 Mbps).

```
[edit firewall]
policer Logical_Policer {
  logical-bandwidth-policer; # This applies the policer to logical interfaces
  if-exceeding {
    bandwidth-percent 50; # This applies 50 percent to the shaping-rate
    burst-size-limit 125k;
  }
  then discard;
}

[edit class-of-service]
interfaces {
  ge-0/2/7 {
    unit 0 {
      shaping-rate 4m # This establishes the rate to be policed on unit 0
    }
    unit 1 {
      shaping-rate 2m # This establishes the rate to be policed on unit 1
    }
  }
}
```



```
[edit interfaces ge-0/2/7]
per-unit-scheduler;
vlan-tagging;
unit 0 {
  vlan-id 100;
  family inet {
    policer {
      input Logical_Policer;
      output Logical_Policer;
    }
    address 172.1.1.1/30;
  }
}
unit 1 {
  vlan-id 200;
  family inet {
    policer {
      input Logical_Policer;
      output Logical_Policer;
    }
    address 172.2.1.1/30;
  }
}
```

Two-Color Policers and Shaping Rate Changes

When you configure a change in shaping rate, it is important to consider the effect on the bandwidth limit. Whenever the shaping rate changes, the bandwidth limit is adjusted based on whether a logical interface (unit) or bandwidth percentage policer is configured.

When a logical interface bandwidth policer is configured, the order of priority for the shaping rate (if configured at that level) is:

- The shaping rate applied to the logical interface (unit).
- The shaping rate applied to the physical interface (port).
- The physical interface speed.

When a bandwidth percentage policer is configured, the order of priority for the shaping rate (if configured at that level) is:

- The shaping rate applied to the physical interface (port).
- The physical interface speed.

These guidelines must be kept in mind when calculating the logical link speed and link speed from the configured shaping rate, which determines the rate-limited bandwidth after the policer is applied.

Related Documentation

- [Example: Two-Color Policers and Shaping Rate Changes on page 88](#)

Example: Two-Color Policers and Shaping Rate Changes

In this example, the shaping rate has been configured for the logical interface, but a bandwidth percentage policer is also configured. Therefore policing is based on the physical interface speed of 1 Gbps.

If both a shaping rate and a bandwidth percentage policer is configured on the same logical interface, the policing is based on the physical interface speed. Here is the example configuration:

```
[edit interfaces]
ge-0/1/0 {
  per-unit-scheduler;
  vlan-tagging;
  unit 0 {
    vlan-id 1;
    family inet {
      policer {
        output policer_test;
      }
      address 10.0.7.1/24;
    }
  }
}

[edit firewall]
policer policer_test {
  if-exceeding {
    bandwidth-percent 75;
    burst-size-limit 256k;
  }
  then discard;
}

[edit]
class-of-service {
  interfaces {
    ge-0/1/0 {
      unit 0 {
        shaping-rate 15m;
      }
    }
  }
}
```

Understanding IEEE 802.1p Inheritance push and swap from a Transparent Tag

MX Series routers with Modular Port Concentrators (MPCs) and Modular Interface Cards (MICs) and M320 routers support configurable IEEE 802.1p inheritance of push and swap bits from the transparent tag of each incoming packet which allows you to classify incoming packets based on the IEEE 802.1p bits from the transparent tag.

During a tagging operation, Junos OS by default inherits the IEEE 802.1p bits from incoming tags in swap and push operations from the known tags configured on the interface.

It can be useful to override the default behavior by configuring Junos OS to inherit the IEEE 802.1p bits from a transparent tag, and to classify incoming packets based on the IEEE 802.1p bits of the incoming transparent tag. The configuration statements **swap-by-poppush** and **transparent** enable Junos OS to do this.

By default, during a swap operation, the IEEE 802.1p bits of the VLAN tag remain unchanged. When the **swap-by-poppush** operation is enabled on a logical interface, the swap operation is treated as a **pop** operation followed by **push** operation. The **pop** operation removes the existing tag and the associated IEEE 802.1p bits and the push operation copies the inner VLAN IEEE 802.1p bits to the IEEE bits of the VLAN or VLANs being pushed. As a result, the IEEE 802.1p bits are inherited from the incoming transparent tag.

To classify incoming packets based on the IEEE 802.1p bits from the transparent tag, include the **transparent** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers ieee-802.1 vlan-tag]** hierarchy level.

To configure Junos OS to inherit the IEEE 802.1p bits from the transparent tag, include the **swap-by-poppush** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



NOTE: IEEE 802.1p Inheritance push and swap is only supported on untagged and single-tagged logical interfaces, and is not supported on dual-tagged logical interfaces.

Related Documentation

- [swap-by-poppush](#)
- [transparent on page 735](#)
- [Understanding swap-by-poppush](#)
- [Configuring IEEE 802.1p Inheritance push and swap from the Transparent Tag on page 89](#)
- [Understanding Transparent Tag Operations and IEEE 802.1p Inheritance](#)

Configuring IEEE 802.1p Inheritance push and swap from the Transparent Tag

To classify incoming packets based on the IEEE 802.1p bits from the transparent tag, include the **transparent** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* classifiers ieee-802.1 vlan-tag]** hierarchy level.

Tagged Interface Example

The following example configuration specifies the classification based on the transparent VLAN tag.

```
edit
class-of-service {
  interfaces {
```

```

ge-3/0/1 {
  unit 0 {
    classifiers {
      ieee-802.1 default vlan-tag transparent;
    }
  }
}

```

To configure Junos OS to inherit the IEEE 802.1p bits from the transparent tag, include the **swap-by-poppush** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

The following is a configuration to swap and push VLAN tags and allow inheritance of the IEEE 802.1p value from the transparent VLAN tag in incoming packets.

```

edit
ge-3/0/0 {
  vlan-tagging;
  encapsulation vlan-ccc;
  unit 0 {
    encapsulation vlan-ccc;
    vlan-id 100;
    swap-by-poppush;
    input-vlan-map {
      swap-push;
      tag-protocol-id 0x9100;
      inner-tag-protocol-id 0x9100;
      vlan-id 500;
      inner-vlan-id 400;
    }
    output-vlan-map {
      pop-swap;
      inner-vlan-id 100;
      inner-tag-protocol-id 0x88a8;
    }
  }
}

```

The **swap-by-poppush** statement causes a swap operation to be done as a pop followed by a push operation. So for the outer tag, the incoming S-Tag is popped and a new tag is pushed. As a result, the S-Tag inherits the IEEE 802.1p bits from the transparent tag. The inner tag is then pushed, which results in the inner tag inheriting the IEEE 802.1p bits from the transparent tag.

Untagged Interface Example

The following is a configuration to push two VLAN tags and allow inheritance of the IEEE 802.1p value from the transparent VLAN tag in the incoming packet.

```

[edit]
ge-3/0/1 {
  encapsulation ccc;
  unit 0 {
    input-vlan-map {
      push-push;
      tag-protocol-id 0x9100;
    }
  }
}

```

```

        inner-tag-protocol-id 0x9100;
        vlan-id 500;
        inner-vlan-id 400;
    }
    output-vlan-map{
        pop-pop;
    }
}

```

No additional configuration is required to inherit the IEEE 802.1p value, as the **push** operation inherits the IEEE 802.1p values by default.

The following configuration specifies the classification based on the transparent VLAN tag.

```

[edit]
class-of-service {
  interfaces {
    ge-3/0/1 {
      unit 0 {
        classifiers {
          ieee-802.1 default vlan-tag transparent;
        }
      }
    }
  }
}

```

Related Documentation

- [transparent on page 735](#)
- swap-by-poppush
- [Understanding IEEE 802.1p Inheritance push and swap from a Transparent Tag on page 88](#)
- Understanding swap-by-poppush
- Understanding Transparent Tag Operations and IEEE 802.1p Inheritance

Classifiers and Rewrite Rules at the Global and Physical Interface Levels Overview

On ACX Series Universal Access Routers, CoS supports classification and rewrite at the global level and physical interface levels.

At a global level, you can define EXP classification.

At a physical interface level, you can define the following features:

- DSCP and inet-precedence classifiers
- DSCP and inet-precedence rewrites
- ieee-802.1 classifiers (inner and outer)
- ieee-802.1 rewrites (outer)

At a logical interface level, you can define the fixed classification and EXP rewrites.

To configure global EXP classifiers, include the **classifiers exp classifier-name** statement at the **[edit class-of-service] system-defaults** hierarchy level.

To configure classifiers or rewrite rules at the physical interface, include either the **classifiers** statement or the **rewrite-rules** statement at the **[edit class-of-service] interfaces interface-name** hierarchy level.

To display classifiers configured under **system-defaults**, enter the **show class-of-service system-defaults** command.

To display classifiers and rewrite rules bound to physical interfaces, enter the **show class-of-service interfaces interface-name** command.

Related Documentation

- [Configuring Classifiers and Rewrite Rules at the Global and Physical Interface Levels on page 92](#)

Configuring Classifiers and Rewrite Rules at the Global and Physical Interface Levels

On ACX Series Universal Access Routers, CoS supports classification and rewrite at the global and physical interface levels.

To configure the global EXP classifier, include the following statements at the **[edit class-of-service] system-defaults** hierarchy level.

```
[edit class-of-service]
{
  system-defaults
  {
    classifiers exp classifier-name
  }
}
```

CoS supports one global system default classifier of the EXP type, as shown in the following example:

```
[edit class-of-service]
{
  system-defaults {
    classifiers {
      exp exp-classf-core;
    }
  }
}
```

To configure classifiers and rewrite rules at the physical interface level, include the following statements at the **[edit class-of-service] interfaces** hierarchy level.

```
[edit class-of-service]
interfaces {
  interface-name
    classifiers dscp classifier-name
    classifiers inet-precedence classifier-name
}
```

```

classifiers ieee-802.1 [vlan-tag (outer | inner)] classifier-name
rewrite-rules dscp rewrite-name
rewrite-rules inet-prec rewrite-name
rewrite-rules ieee-802.1 rewrite-name
}

```

The following example shows classifiers and rewrite rules configured on physical interfaces:

```

ge-0/1/0 {
  unit 0 {
    rewrite-rules {
      exp custom-exp;
    }
  }
  classifiers {
    dscp d1;
    ieee-802.1 ci;
  }
  rewrite-rules {
    dscp default;
  }
}
ge-0/1/2 {
  classifiers {
    ieee-802.1 ci;
  }
  rewrite-rules {
    ieee-802.1 ri;
  }
}
ge-0/1/3 {
  unit 0 {
    rewrite-rules {
      exp custom-exp2;
    }
  }
}
ge-0/1/7 {
  classifiers {
    dscp d1;
  }
}
ge-0/1/8 {
  classifiers {
    dscp d1;
  }
}

```

Related Documentation • [Classifiers and Rewrite Rules at the Global and Physical Interface Levels Overview on page 91](#)

CHAPTER 6

Configuring Tricolor Marking Policers

This topic discusses the following:

- [Policer Overview on page 96](#)
- [Platform Support for Tricolor Marking on page 98](#)
- [Tricolor Marking Architecture on page 99](#)
- [Configuring Tricolor Marking on page 100](#)
- [Tricolor Marking Limitations on page 101](#)
- [Configuring Single-Rate Tricolor Marking on page 102](#)
- [Configuring Two-Rate Tricolor Marking on page 105](#)
- [Enabling Tricolor Marking on page 108](#)
- [Configuring Tricolor Marking Policers on page 108](#)
- [Applying Tricolor Marking Policers to Firewall Filters on page 110](#)
- [Applying Firewall Filter Tricolor Marking Policers to Interfaces on page 111](#)
- [Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112](#)
- [Using BA Classifiers to Set PLP on page 113](#)
- [Using Multifield Classifiers to Set PLP on page 113](#)
- [Configuring PLP for Drop-Profile Maps on page 115](#)
- [Configuring Rewrite Rules Based on PLP on page 115](#)
- [Example: Configuring and Verifying Two-Rate Tricolor Marking on page 116](#)
- [Policer Support for Aggregated Ethernet and SONET Bundles Overview on page 120](#)

Policer Overview

Policing, or rate limiting, enables you to limit the amount of traffic that passes into or out of an interface. It is an essential component of firewall filters that is designed to thwart denial-of-service (DoS) attacks. Networks police traffic by limiting the input or output transmission rate of a class of traffic on the basis of user-defined criteria. Policing traffic allows you to control the maximum rate of traffic sent or received on an interface and to partition a network into multiple priority levels or classes of service.

Policers require you to apply limits to the traffic flow and set a consequence for packets that exceed these limits—usually a higher loss priority—so that if packets encounter downstream congestion, they are discarded first.

Policing uses the *token-bucket algorithm*, which enforces a limit on average bandwidth while allowing bursts up to a specified maximum value. It offers more flexibility than the *leaky bucket algorithm* (see the Junos OS Class of Service Configuration Guide) in allowing a certain amount of bursty traffic before it starts discarding packets.

You can define specific classes of traffic on an interface and apply a set of rate limits to each. You can use a policer in one of two ways: as part of a filter configuration or as part of a logical interface (where the policer is applied to all traffic on that interface).

After you have defined and named a policer, it is stored as a template. You can later use the same policer name to provide the same policer configuration each time you wish to use it. This eliminates the need to define the same policer values more than once.

Juniper Networks routing platform architectures can support three types of policer:

- **Single-rate two-color**—A two-color policer (or “policer” when used without qualification) meters the traffic stream and classifies packets into two categories of packet loss priority (PLP) according to a configured bandwidth and burst-size limit. You can mark packets that exceed the bandwidth and burst-size limit in some way, or simply discard them. A policer is most useful for metering traffic at the port (physical interface) level.
- **Single-rate three-color**—This type of policer is defined in RFC 2697, *A Single Rate Three Color Marker*, as part of an assured forwarding (AF) per-hop-behavior (PHB) classification system for a Differentiated Services (DiffServ) environment. This type of policer meters traffic based on the configured committed information rate (CIR), committed burst size (CBS), and the excess burst size (EBS). Traffic is marked as belonging to one of three categories (green, yellow, or red) based on whether the packets arriving are below the CBS (green), exceed the CBS (yellow) but not the EBS, or exceed the EBS (red). A single-rate three-color policer is most useful when a service is structured according to packet length and not peak arrival rate.
- **Two-rate three-color**—This type of policer is defined in RFC 2698, *A Two Rate Three Color Marker*, as part of an assured forwarding (AF) per-hop-behavior (PHB) classification system for a Differentiated Services (DiffServ) environment. This type of policer meters traffic based on the configured CIR and peak information rate (PIR), along with their associated burst sizes, the CBS and *peak burst size* (PBS). Traffic is marked as belonging to one of three categories (green, yellow, or red) based on whether the packets arriving are below the CIR (green), exceed the CIR (yellow) but not the

PIR, or exceed the PIR (red). A two-rate three-color policer is most useful when a service is structured according to arrival rates and not necessarily packet length.

Policer actions are implicit or explicit and vary by policer type. The term *Implicit* means that Junos assigns the loss-priority automatically. [Table 13 on page 97](#) describes the policer actions.

Table 13: Policer Actions

Policer	Marking	Implicit Action	Configurable Action
Single-rate two-color	Green (Conforming)	Assign low loss priority	None
	Red (Nonconforming)	None	Assign low or high loss priority, assign a forwarding class, or discard On some platforms, you can assign medium-low or medium-high loss priority
Single-rate three-color	Green (Conforming)	Assign low loss priority	None
	Yellow (Above the CIR and CBS)	Assign medium-high loss priority	None
	Red (Above the EBS)	Assign high loss priority	Discard
Two-rate three-color	Green (Conforming)	Assign low loss priority	None
	Yellow (Above the CIR and CBS)	Assign medium-high loss priority	None
	Red (Above the PIR and PBS)	Assign high loss priority	Discard

You can configure policers at the queue, logical interface, or Layer 2 (MAC) level. Only a single policer is applied to a packet at the egress queue, and the search for policers occurs in this order:

- Queue level
- Logical interface level
- Layer 2 (MAC) level

Three-color policers are not bound by a green-yellow-red coloring convention. Packets are marked with low, medium-high, or high PLP bit configurations based on color, so both three-color policer schemes extend the functionality of class-of-service (CoS) traffic

policing by providing three levels of drop precedence (loss priority) instead of the two normally available in port-level policers. Both single-rate and two-rate three-color policer schemes can operate in two modes:

- **Color-blind**—In color-blind mode, the three-color policer assumes that all packets examined have not been previously marked or metered. In other words, the three-color policer is “blind” to any previous coloring a packet might have had.
- **Color-aware**—In color-aware mode, the three-color policer assumes that all packets examined have been previously marked or metered. In other words, the three-color policer is “aware” of the previous coloring a packet might have had. In color-aware mode, the three-color policer can increase the PLP of a packet, but never decrease it. For example, if a color-aware three-color policer meters a packet with a medium PLP marking, it can raise the PLP level to high, but cannot reduce the PLP level to low.



NOTE: We recommend you use the naming convention ***policertypeTCM#-color type*** when configuring three-color policers and ***policer#*** when configuring two-color policers. TCM stands for three-color marker. Because policers can be numerous and must be applied correctly to work, a simple naming convention makes it easier to apply the policers properly.

For example, the first single-rate, color-aware three-color policer configured would be named **srTCM1-ca**. The second two-rate, color-blind three-color configured would be named **trTCM2-cb**.

Platform Support for Tricolor Marking

Tricolor marking is supported on the following Juniper Networks routers:

- M120 Multiservice Edge Routers
- M320 Multiservice Edge Routers and T Series Core Routers with Enhanced II Flexible PIC Concentrators (FPCs)
- MX Series 3D Universal Edge Routers
- T640 Core Routers with Enhanced Scaling FPC4
- T640 and T1600 Core Routers with Enhanced Scaling FPC3
- T1600 Core Routers with T1600 Enhanced Scaling FPC4
- T4000 Core Routers



NOTE: On MX Series and M120 routers, you can apply three-color policers to aggregated interfaces.




NOTE: On T Series routers, three-color policers and hierarchical policers are supported on aggregated interfaces if all child links are hosted on Enhanced Scaling FPCs.

Tricolor Marking Architecture

Policers provide two functions: metering and marking.

The policer meters each packet and passes the packet and the metering result to the marker, as shown in [Figure 9 on page 99](#).

Figure 9: Flow of Tricolor Marking Policer Operation

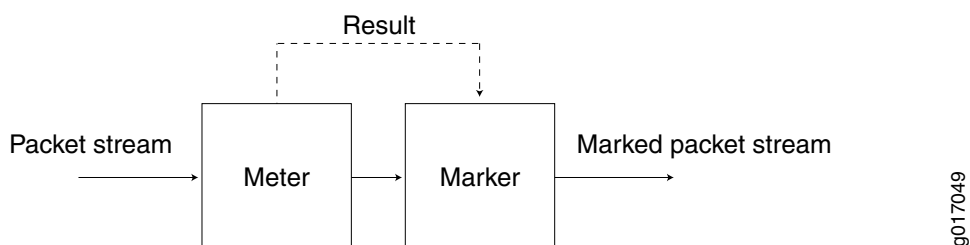

The meter operates in two modes. In the color-blind mode, the meter treats the packet stream as uncolored. Any preset loss priorities are ignored. In the color-aware mode, the meter inspects the packet loss priority (PLP) field, which has been set by an upstream device as PLP high, medium-high, medium-low, or low; in other words, the PLP field has already been set by a behavior aggregate (BA) or multifield classifier. The marker changes the PLP of each incoming IP packet according to the results of the meter. For more information, see [“Configuring Two-Rate Tricolor Marking” on page 105](#).

This chapter emphasizes configuration and use of TCM policers. For more information about configuring and using two-color policers (“policers”), see the Traffic Policers Configuration Guide.

Single-rate TCM is so called because traffic is policed according to one rate—the CBR—and two burst sizes: the CBS and EBS. The CBS specifies the usual burst size in bytes and the EBS specifies the maximum burst size in bytes for packets that are admitted to the network. The EBS is greater than or equal to the CBS, and neither can be 0. As each packet enters the network, its bytes are counted. Packets that do not exceed the CBS are marked low PLP. Packets that exceed the CBS but are below the EBS are marked medium-high PLP. Packets that exceed the EBS are marked high PLP.

Two-rate TCM is so called because traffic is policed according to two rates: the CIR and the PIR. The PIR is greater than or equal to the CIR. The CIR specifies the average rate at which bits are admitted to the network and the PIR specifies the maximum rate at which bits are admitted to the network. As each packet enters the network, its bits are counted. Bits in packets that do not exceed the CIR have their packets marked low PLP. Bits in packets that exceed the CIR but are below the PIR have their packets marked medium-high PLP. Bits in packets that exceed the PIR have their packets marked high PLP.

For information about how to use marking policers with BA and multifield classifiers, see “Using BA Classifiers to Set PLP” on page 113 and “Using Multifield Classifiers to Set PLP” on page 113.

Configuring Tricolor Marking

You configure marking policers by defining the policer and multiple levels of PLP for classifiers, rewrite rules, random early detection (RED) drop profiles, and firewall filters. To configure marking policers, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
tri-color;
classifiers {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) classifier-name {
    import classifier-name | default;
    forwarding-class class-name {
      loss-priority (low | medium-low | medium-high | high) code-points [ aliases ]
        [ bit-patterns ];
    }
  }
}
rewrite-rules {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority (low | medium-low | medium-high | high) code-point (aliases |
        bit-patterns;
    }
  }
}
schedulers {
  scheduler-name {
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
      any drop-profile profile-name;
  }
}

[edit firewall]
policer name {
  then loss-priority (low | medium-low | medium-high | high);
}
three-color-policer policer-name {
  action {
    loss-priority high then discard; # Only for IQ2 PICs
  }
  logical-interface-policer;
  single-rate {
    (color-aware | color-blind);
    committed-information-rate bps;
    committed-burst-size bytes;
    excess-burst-size bytes;
  }
  two-rate {
```

```

        (color-aware | color-blind);
        committed-information-rate bps;
        committed-burst-size bytes;
        peak-information-rate bps;
        peak-burst-size bytes;
    }
}
filter filter-name {
    <family family> {
        term rule-name {
            then {
                three-color-policer (single-rate | two-rate) policer-name;
            }
        }
    }
}

```

Tricolor Marking Limitations

Tricolor Marking (TCM) has some limitations that must be kept in mind during configuration and operation.

The following limitations apply to TCM:

- When you enable TCM on a 10-port Gigabit Ethernet PIC or a 10-Gigabit Ethernet PIC, for queues 6 and 7 only, the output of the **show interfaces queue *interface-name*** command does not display the number of queued bytes and packets, or the number of bytes and packets dropped due to RED. If you do not configure tricolor marking on the interface, these statistics are available for all queues.
- When you enable TCM, Transmission Control Protocol (TCP)-based configurations for drop profiles are rejected. In other words, you cannot include the **protocol** statement at the **[edit class-of-service schedulers *scheduler-name* drop-profile-map]** hierarchy level. The result is that drop profiles are applied to packets with the specified PLP and any protocol type.
- On Gigabit Ethernet IQ PICs, for IEEE 802.1 rewrite rules, only two loss priorities are supported. Exiting packets with medium-high loss priority are treated as high, and packets with medium-low loss priority are treated as low. In other words rewrite rules corresponding to high and low apply instead of those corresponding to medium-high and medium-low. For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.
- When some PICs with Frame Relay encapsulation mark a packet with high loss priority, the packet is treated as having medium-high loss priority on M320 Multiservice Edge Routers and T Series Core Routers with Enhanced II FPCs and T640 Core Routers with Enhanced Scaling FPC4.
- TCM is not supported on aggregated Ethernet and aggregated SONET/SDH interfaces.
- In a single firewall filter term, you cannot configure both the **loss-priority** action modifier and the **three-color-policer** action modifier. These statements are mutually exclusive.

Configuring Single-Rate Tricolor Marking

With TCM, you can configure traffic policing according to two separate modes—color-blind and color-aware. In color-blind mode, the current PLP value is ignored. In color-aware mode, the current PLP values are considered by the policer and can only be increased.

- [Configuring Color-Blind Mode for Single-Rate Tricolor Marking on page 102](#)
- [Configuring Color-Aware Mode for Single-Rate Tricolor Marking on page 103](#)

Configuring Color-Blind Mode for Single-Rate Tricolor Marking

All packets are evaluated by the CBS. If a packet exceeds the CBS, it is evaluated by the EBS. In color-blind mode, the policer supports three loss priorities only: low, medium-high, and high.

In color-blind mode, packets that exceed the CBS but are below the EBS are marked yellow (medium-high). Packets that exceed the EBS are marked red (high), as shown in [Table 14 on page 102](#).

Table 14: Color-Blind Mode TCM Color-to-PLP Mapping

Color	PLP	Meaning
Green	low	Packet does not exceed the CBS.
Yellow	medium-high	Packet exceeds the CBS but does not exceed the EBS.
Red	high	Packet exceeds the EBS.

If you are using color-blind mode and you wish to configure an output policer that marks packets to have medium-low loss priority, you must configure a policer at the **[edit firewall policer *policer-name*]** hierarchy level. For example:

```
firewall {
  policer 4PLP {
    if-exceeding {
      bandwidth-limit 40k;
      burst-size-limit 4k;
    }
    then loss-priority medium-low;
  }
}
```

Apply this policer at one or both of the following hierarchy levels:

- **[edit firewall family *family* filter *filter-name* term *rule-name* then policer *policer-name*]**
- **[edit interfaces *interface-name* unit *logical-unit-number* family *family* filter *filter-name*]**

Configuring Color-Aware Mode for Single-Rate Tricolor Marking

In color-aware mode, the metering treatment the packet receives depends on its classification. Metering can increase a packet's preassigned PLP, but cannot decrease it, as shown in [Table 15 on page 103](#).

Table 15: Color-Aware Mode TCM PLP Mapping

Incoming PLP	Packet Metered Against	Possible Cases	Outgoing PLP
low	CBS and EBS	Packet does not exceed the CBS.	low
		Packet exceeds the CBS but not the EBS.	medium-high
		Packet exceeds the EBS.	high
medium-low	EBS only	Packet does not exceed the CBS.	medium-low
		Packet does not exceed the EBS.	medium-low
		Packet exceeds the EBS.	high
medium-high	EBS only	Packet does not exceed the CBS.	medium-high
		Packet does not exceed the EBS.	medium-high
		Packet exceeds the EBS.	high
high	Not metered by the policer.	All cases.	high

The following sections describe single-rate color-aware PLP mapping in more detail.

Effect on Low PLP of Single-Rate Policer

Packets belonging to the green class have already been marked by a classifier with low PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to medium-high or high. Therefore, these packets are metered against both the CBS and the EBS.

For example, if a BA or multifield classifier marks a packet with low PLP according to the type-of-service (ToS) bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CBS, packets remain marked as low PLP.
- If the rate of traffic flow is greater than the CBS but less than the EBS, some of the packets are marked as medium-high PLP, and some of the packets remain marked as low PLP.
- If the rate of traffic flow is greater than the EBS, some of the packets are marked as high PLP, and some of the packets remain marked as low PLP.

Effect on Medium-Low PLP of Single-Rate Policer

Packets belonging to the yellow class have already been marked by a classifier with medium-low or medium-high PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to high. Therefore, these packets are metered against the EBS only.

For example, if a BA or multifield classifier marks a packet with medium-low PLP according to the ToS bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CBS, packets remain marked as medium-low PLP.
- If the rate of traffic flow is greater than the CBS but less than the EBS, packets remain marked as medium-low PLP.
- If the rate of traffic flow is greater than the EBS, some of the packets are marked as high PLP, and some of the packets remain marked as medium-low PLP.

Effect on Medium-High PLP of Single-Rate Policer

Packets belonging to the yellow class have already been marked by a classifier with medium-low or medium-high PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to high. Therefore, these packets are metered against the EBS only.

For example, if a BA or multifield classifier marks a packet with medium-high PLP according to the ToS bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CBS, packets remain marked as medium-high PLP.
- If the rate of traffic flow is greater than the CBS but less than the EBS, packets remain marked as medium-high PLP.
- If the rate of traffic flow is greater than the EBS, some of the packets are marked as high PLP, and some of the packets remain marked as medium-high PLP.

Effect on High PLP of Single-Rate Policer

Packets belonging to the red class have already been marked by a classifier with high PLP. The marking policer can only leave the packet's PLP unchanged. Therefore, these packets are not metered against the CBS or the EBS and all the packets remain marked as high PLP.

Configuring Two-Rate Tricolor Marking

With TCM, you can configure traffic policing according to two separate modes—color-blind and color-aware. In color-blind mode, the current PLP value is ignored. In color-aware mode, the current PLP values are considered by the policer and can only be increased.

- [Configuring Color-Blind Mode for Two-Rate Tricolor Marking on page 105](#)
- [Configuring Color-Aware Mode for Two-Rate Tricolor Marking on page 106](#)

Configuring Color-Blind Mode for Two-Rate Tricolor Marking

All packets are evaluated by the CIR. If a packet exceeds the CIR, it is evaluated by the PIR. In color-blind mode, the policer supports three loss priorities only: low, medium-high, and high.

In color-blind mode, packets that exceed the CIR but are below the PIR are marked yellow (medium-high). Packets that exceed the PIR are marked red (high), as shown in [Table 16 on page 105](#).

Table 16: Color-Blind Mode TCM Color-to-PLP Mapping

Color	PLP	Meaning
Green	low	Packet does not exceed the CIR.
Yellow	medium-high	Packet exceeds the CIR but does not exceed the PIR.
Red	high	Packet exceeds the PIR.

If you are using color-blind mode and you wish to configure an output policer that marks packets to have medium-low loss priority, you must configure a policer at the **[edit firewall policer *policer-name*]** hierarchy level. For example:

```
firewall {
  policer 4PLP {
    if-exceeding {
      bandwidth-limit 40k;
      burst-size-limit 4k;
    }
    then loss-priority medium-low;
  }
}
```

Apply this policer at one or both of the following hierarchy levels:

- [edit firewall family *family* filter *filter-name* term *rule-name* then policer *policer-name*]
- [edit interfaces *interface-name* unit *logical-unit-number* family *family* filter *filter-name*]

Configuring Color-Aware Mode for Two-Rate Tricolor Marking

In color-aware mode, the metering treatment the packet receives depends on its classification. Metering can increase a packet's preassigned PLP, but cannot decrease it, as shown in [Table 17 on page 106](#).

Table 17: Color-Aware Mode TCM Mapping

Incoming PLP	Packet Metered Against	Possible Cases	Outgoing PLP
low	CIR and PIR	Packet does not exceed the CIR.	low
		Packet exceeds the CIR but not the PIR.	medium-high
		Packet exceeds the PIR.	high
medium-low	PIR only	Packet does not exceed the CIR.	medium-low
		Packet does not exceed the PIR.	medium-low
		Packet exceeds the PIR.	high
medium-high	PIR only	Packet does not exceed the CIR.	medium-high
		Packet does not exceed the PIR.	medium-high
		Packet exceeds the PIR.	high
high	Not metered by the policer.	All cases.	high

The following sections describe color-aware two-rate PLP mapping in more detail.

Effect on Low PLP of Two-Rate Policer

Packets belonging to the green class have already been marked by a classifier with low PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to medium-high or high. Therefore, these packets are metered against both the CIR and the PIR.

For example, if a BA or multifield classifier marks a packet with low PLP according to the ToS bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CIR, packets remain marked as low PLP.

- If the rate of traffic flow is greater than the CIR but less than the PIR, some of the packets are marked as medium-high PLP, and some of the packets remain marked as low PLP.
- If the rate of traffic flow is greater than the PIR, some of the packets are marked as high PLP, and some of the packets remain marked as low PLP.

Effect on Medium-Low PLP of Two-Rate Policer

Packets belonging to the yellow class have already been marked by a classifier with medium-low or medium-high PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to high. Therefore, these packets are metered against the PIR only.

For example, if a BA or multifield classifier marks a packet with medium-low PLP according to the ToS bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CIR, packets remain marked as medium-low PLP.
- If the rate of traffic flow is greater than the CIR/CBS but less than the PIR, packets remain marked as medium-low PLP.
- If the rate of traffic flow is greater than the PIR, some of the packets are marked as high PLP, and some of the packets remain marked as medium-low PLP.

Effect on Medium-High PLP of Two-Rate Policer

Packets belonging to the yellow class have already been marked by a classifier with medium-low or medium-high PLP. The marking policer can leave the packet's PLP unchanged or increase the PLP to high. Therefore, these packets are metered against the PIR only.

For example, if a BA or multifield classifier marks a packet with medium-high PLP according to the ToS bits in the IP header, and the two-rate TCM policer is in color-aware mode, the output loss priority is as follows:

- If the rate of traffic flow is less than the CIR, packets remain marked as medium-high PLP.
- If the rate of traffic flow is greater than the CIR but less than the PIR, packets remain marked as medium-high PLP.
- If the rate of traffic flow is greater than the PIR, some of the packets are marked as high PLP, and some of the packets remain marked as medium-high PLP.

Effect on High PLP of Two-Rate Policer

Packets belonging to the red class have already been marked by a classifier with high PLP. The marking policer can only leave the packet's PLP unchanged. Therefore, these packets are not metered against the CIR or the PIR and all the packets remain marked as high PLP.

Enabling Tricolor Marking

By default, TCM is enabled on M120, MX Series, and T4000 routers. To enable TCM on other routers, include the **tri-color** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
tri-color;
```

This statement is necessary on the following routers:

- M320 and T Series routers with Enhanced II FPCs
- T640 routers with Enhanced Scaling FPC4s

If you do not include this statement in the configuration on platforms that require it, you cannot configure medium-low or medium-high PLP for classifiers, rewrite rules, drop profiles, or firewall filters.

Configuring Tricolor Marking Policers

A tricolor marking policer polices traffic on the basis of metering rates, including the CIR, the PIR, their associated burst sizes, and any policing actions configured for the traffic. To configure a tricolor marking policer, include the following statements at the **[edit firewall]** hierarchy level:

```
[edit firewall]
three-color-policer name {
  action {
    loss-priority high then discard; # Only for IQ2 PICs
  }
  logical-interface-policer;
  single-rate {
    (color-aware | color-blind);
    committed-information-rate bps;
    committed-burst-size bytes;
    excess-burst-size bytes;
  }
  two-rate {
    (color-aware | color-blind);
    committed-information-rate bps;
    committed-burst-size bytes;
    peak-information-rate bps;
    peak-burst-size bytes;
  }
}
```

You can configure a tricolor policer to discard high loss priority traffic on a logical interface in the ingress or egress direction. To configure a policer on a logical interface using tricolor marking policing to discard high loss priority traffic, include the **logical-interface-policer** statement and **action** statement.

In all cases, the range of allowable bits-per-second or byte values is 1500 to 100,000,000,000. You can specify the values for bps and bytes either as complete

decimal numbers or as decimal numbers followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

The color-aware policer implicitly marks packets into four loss priority categories:

- Low
- Medium-low
- Medium-high
- High

The color-blind policer implicitly marks packets into three loss priority categories:

- Low
- Medium-high
- High

[Table 18 on page 109](#) describes all the configurable TCM statements.

Table 18: Tricolor Marking Policer Statements

Statement	Meaning	Configurable Values
single-rate	Marking is based on the CIR, CBS, and EBS.	—
two-rate	Marking is based on the CIR, PIR, and rated burst sizes.	—
color-aware	Metering depends on the packet's preclassification. Metering can increase a packet's assigned PLP, but cannot decrease it.	—
color-blind	All packets are evaluated by the CIR or CBS. If a packet exceeds the CIR or CBS, it is evaluated by the PIR or EBS.	—
committed-information-rate	Guaranteed bandwidth under normal line conditions and the average rate up to which packets are marked green.	1500 through 100,000,000,000 bps
committed-burst-size	Maximum number of bytes allowed for incoming packets to burst above the CIR, but still be marked green.	1500 through 100,000,000,000 bytes
excess-burst-size	Maximum number of bytes allowed for incoming packets to burst above the CIR, but still be marked yellow.	1500 through 100,000,000,000 bytes
peak-information-rate	Maximum achievable rate. Packets that exceed the CIR but are below the PIR are marked yellow. Packets that exceed the PIR are marked red.	1500 through 100,000,000,000 bps
peak-burst-size	Maximum number of bytes allowed for incoming packets to burst above the PIR, but still be marked yellow.	1500 through 100,000,000,000 bytes

Applying Tricolor Marking Policers to Firewall Filters

To rate-limit traffic by applying a tricolor marking policer to a firewall filter, include the **three-color-policer** statement:

```
three-color-policer {
  (single-rate | two-rate) policer-name;
}
```

You can include this statement at the following hierarchy levels:

- **[edit firewall family *family* filter *filter-name* term *rule-name* then]**
- **[edit firewall filter *filter-name* term *rule-name* then]**

In the **family** statement, the protocol family can be **any**, **ccc**, **inet**, **inet6**, **mpls**, or **vpls**.

You must identify the referenced policer as a **single-rate** or **two-rate** policer, and this statement must match the configured TCM policer. Otherwise, an error message appears in the configuration listing.

For example, if you configure **srTCM** as a single-rate TCM policer and try to apply it as a two-rate policer, the following message appears:

```
[edit firewall]
user@host# show three-color-policer srTCM
single-rate {
  color-aware;
  ...
}
user@host# show filter TESTER
term A {
  then {
    three-color-policer {
      ##
      ## Warning: Referenced two-rate policer does not exist
      ##
      two-rate srTCM;
    }
  }
}
```

Example: Applying a Two-Rate Tricolor Marking Policer to a Firewall Filter

Apply the **trtcm1-cb** policer to a firewall filter:

```
firewall {
  three-color-policer trtcm1-cb { # Configure the trtcm1-cb policer.
    two-rate {
      color-blind;
      committed-information-rate 1048576;
      committed-burst-size 65536;
      peak-information-rate 10485760;
      peak-burst-size 131072;
    }
  }
}
```



```

}
filter fil { # Configure the fil firewall filter, applying the trtcm1-cb policer.
term default {
  then {
    three-color-policer {
      two-rate trtcm1-cb;
    }
  }
}
}

```

Related Documentation

- [Firewall Filters Configuration Guide](#)

Applying Firewall Filter Tricolor Marking Policers to Interfaces

To apply a tricolor marking policer to an interface, you must reference the filter name in the interface configuration. To do this, include the **filter** statement:

```

filter {
  input filter-name;
  output filter-name;
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

The filter name that you reference should have an attached tricolor marking policer, as shown in “[Applying Tricolor Marking Policers to Firewall Filters](#)” on page 110.

Example: Applying a Single-Rate Tricolor Marking Policer to an Interface

Apply the **trtcm1-cb** policer to an interface:

```

firewall {
  three-color-policer srtcm1 { # Configure the srtcm1-cb policer.
    single-rate {
      color-blind;
      committed-information-rate 1048576;
      committed-burst-size 65536;
      excess-burst-size 131072;
    }
  }
}
filter fil { # Configure the fil firewall filter, applying the srtcm1-cb policer.
term default {
  then {
    three-color-policer {
      single-rate srtcm1-cb; # The TCM policer must be single-rate.
    }
  }
}
}
interfaces { # Configure the interface, which attaches the fil firewall filter.
  so-1/0/0 {

```

```

unit 0 {
  family inet {
    filter {
      input fil;
    }
  }
}

```

Applying Layer 2 Policers to Gigabit Ethernet Interfaces

To rate-limit traffic by applying a policer to a Gigabit Ethernet interface (or a 10-Gigabit Ethernet interface [*xe-fpc/pic/port*]), include the **layer2-policer** statement with the direction, type, and name of the policer:

```

[edit interfaces ge-fpc/pic/port unit 0]
layer2-policer {
  input-policer policer-name;
  input-three-color policer-name;
  output-policer policer-name;
  output-three-color policer-name;
}

```

The direction (input or output) and type (policer or three-color) are combined into one statement and the policer named must be properly configured.

One input or output policer of either type can be configured on the interface.

Examples: Applying Layer 2 Policers to a Gigabit Ethernet Interface

Apply color-blind and color-aware two-rate TCM policers as input and output policers to a Gigabit Ethernet interface:

```

ge-1/0/0 {
  unit 0
  layer2-policer {
    input-three-color trTCM1-cb; # Apply the trTCM1-color-blind policer.
    output-three-color trTCM1-ca; # Apply the trTCM1-color-aware policer.
  }
}

```

Apply two-level and color-blind single-rate TCM policers as input and output policers to a Gigabit Ethernet interface:

```

ge-1/0/0 {
  unit 1
  layer2-policer {
    input-policer two-color-policer; # Apply a two-color policer.
    output-three-color srTCM2-cb; # Apply the srTCM1-color-blind policer.
  }
}

```

Apply a color-aware single-rate TCM policer as output policer on a Gigabit Ethernet interface:

```

ge-1/0/0 {

```

```

unit 2
layer2-policer {
    output-three-color srTCM3-ca { # Apply the srTCM3-color-aware policer.
    }
}

```

Using BA Classifiers to Set PLP

Behavior aggregate (BA) classifiers take action on incoming packets. When TCM is enabled, Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers support four classifier PLP designations: **low**, **medium-low**, **medium-high**, and **high**. To configure the PLP for a classifier, include the following statements at the **[edit class-of-service]** hierarchy level:

```

[edit class-of-service]
classifiers {
    (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) classifier-name {
        import (classifier-name | default);
        forwarding-class class-name {
            loss-priority (low | medium-low | medium-high | high) code-points [ aliases ]
            [ bit-patterns ];
        }
    }
}

```

The inputs for a classifier are the CoS values. The outputs for a classifier are the forwarding class and the loss priority (PLP). A classifier sets the forwarding class and the PLP for each packet entering the interface with a specific set of CoS values.

For example, in the following configuration, the **assured-forwarding** forwarding class and **medium-low** PLP are assigned to all packets entering the interface with the **101110** CoS values:

```

class-of-service {
    classifiers {
        dscp dscp-cl {
            forwarding-class assured-forwarding {
                loss-priority medium-low {
                    code-points 101110;
                }
            }
        }
    }
}

```

To use this classifier, you must configure the settings for the **assured-forwarding** forwarding class at the **[edit class-of-service forwarding-classes queue queue-number assured-forwarding]** hierarchy level. For more information, see [“Overview of Forwarding Classes” on page 123](#).

Using Multifield Classifiers to Set PLP

Multifield classifiers take action on incoming or outgoing packets, depending whether the firewall rule is applied as an input filter or an output filter. When TCM is enabled,

Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers support four multifield classifier PLP designations: **low**, **medium-low**, **medium-high**, and **high**.

To configure the PLP for a multifield classifier, include the **loss-priority** statement in a policer or firewall filter that you configure at the **[edit firewall]** hierarchy level:

```
[edit firewall]
family family-name {
  filter filter-name {
    term term-name {
      from {
        match-conditions;
      }
      then {
        loss-priority (low | medium-low | medium-high | high);
        forwarding-class class-name;
      }
    }
  }
}
```

The inputs (match conditions) for a multifield classifier are one or more of the six packet header fields: destination address, source address, IP protocol, source port, destination port, and DSCP. The outputs for a multifield classifier are the forwarding class and the loss priority (PLP). In other words, a multifield classifier sets the forwarding class and the PLP for each packet entering or exiting the interface with a specific destination address, source address, IP protocol, source port, destination port, or DSCP.

For example, in the following configuration, the forwarding class **expedited-forwarding** and PLP **medium-high** are assigned to all IPv4 packets with the **10.1.1.0/24** or **10.1.2.0/24** source address:

```
firewall {
  family inet {
    filter classify-customers {
      term isp1-customers {
        from {
          source-address 10.1.1.0/24;
          source-address 10.1.2.0/24;
        }
        then {
          loss-priority medium-high;
          forwarding-class expedited-forwarding;
        }
      }
    }
  }
}
```

To use this classifier, you must configure the settings for the **expedited-forwarding** forwarding class at the **[edit class-of-service forwarding-classes queue queue-number expedited-forwarding]** hierarchy level. For more information, see [“Overview of Forwarding Classes” on page 123](#).

Configuring PLP for Drop-Profile Maps

RED drop profiles take action on outgoing packets. When TCM is enabled, M320 and T Series routers support four drop-profile map PLP designations: **low**, **medium-low**, **medium-high**, and **high**.

To configure the PLP for the drop-profile map, include the **schedulers** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
schedulers {
  scheduler-name {
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
    any drop-profile profile-name;
  }
}
```

When you configure TCM, the drop-profile map's protocol type must be **any**.

The inputs for a drop-profile map are the loss priority and the protocol type. The output for a drop-profile map is the drop profile name. In other words, the map sets the drop profile for each packet with a specific PLP and protocol type exiting the interface.

For example, in the following configuration, the **dp** drop profile is assigned to all packets exiting the interface with a medium-low PLP and belonging to any protocol:

```
class-of-service {
  schedulers {
    af {
      drop-profile-map loss-priority medium-low protocol any drop-profile dp;
    }
  }
}
```

To use this drop-profile map, you must configure the settings for the **dp** drop profile at the **[edit class-of-service drop-profiles dp]** hierarchy level. For more information, see [“RED Drop Profiles Overview” on page 253](#).

Configuring Rewrite Rules Based on PLP

Rewrite rules take action on outgoing packets. When TCM is enabled, M320 and T Series routers support four rewrite PLP designations: **low**, **medium-low**, **medium-high**, and **high**. To configure the PLP for a rewrite rule, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
rewrite-rules {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority (low | medium-low | medium-high | high) code-point (alias | bits);
    }
  }
}
```

```
}
```

The inputs for a rewrite rule are the forwarding class and the loss priority (PLP). The output for a rewrite rule are the CoS values. In other words, a rewrite rule sets the CoS values for each packet exiting the interface with a specific forwarding class and PLP.

For example, if you configure the following, the **000000** CoS values are assigned to all packets exiting the interface with the **assured-forwarding** forwarding class and **medium-high** PLP:

```
class-of-service {
  rewrite-rules {
    dscp dscp-rw {
      forwarding-class assured-forwarding {
        loss-priority medium-high code-point 000000;
      }
    }
  }
}
```

To use this classifier, you must configure the settings for the **assured-forwarding** forwarding class at the **[edit class-of-service forwarding-classes queue *queue-number* assured-forwarding]** hierarchy level. For more information, see [“Overview of Forwarding Classes” on page 123](#).


Example: Configuring and Verifying Two-Rate Tricolor Marking

This example configures a two-rate tricolor marking policer on an input Gigabit Ethernet interface and shows commands to verify its operation.

Traffic enters the Gigabit Ethernet interface and exits a SONET/SDH OC12 interface. Oversubscription occurs when you send line-rate traffic from the Gigabit Ethernet interface out the OC12 interface.

[Figure 10 on page 116](#) shows the sample topology.

Figure 10: Tricolor Marking Sample Topology

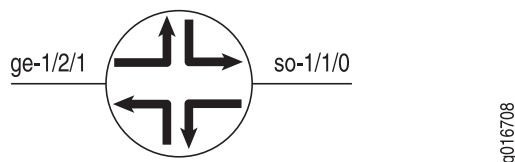

- [Applying a Policer to the Input Interface on page 116](#)
- [Applying Profiles to the Output Interface on page 117](#)
- [Marking Packets with Medium-Low Loss Priority on page 118](#)
- [Verifying Two-Rate Tricolor Marking Operation on page 119](#)

Applying a Policer to the Input Interface

The tricolor marking and policer are applied on the ingress Gigabit Ethernet interface. Incoming packets are metered. Packets that do not exceed the CIR are marked with low

loss priority. Packets that exceed the CIR but do not exceed the PIR are marked with medium-high loss priority. Packets that exceed the PIR are marked with high loss priority.

```
[edit]
interfaces {
  ge-1/2/1 {
    unit 0 {
      family inet {
        filter {
          input trtcm-filter;
        }
      }
    }
  }
}
firewall {
  three-color-policer trtcm1 {
    two-rate {
      color-aware;
      committed-information-rate 100m;
      committed-burst-size 65536;
      peak-information-rate 200m;
      peak-burst-size 131072;
    }
  }
  filter trtcm-filter {
    term one {
      then {
        three-color-policer {
          two-rate trtcm1;
        }
      }
    }
  }
}
```

Applying Profiles to the Output Interface

Transmission scheduling and weighted random early detection (WRED) profiles are applied on the output OC12 interface. The software drops traffic in the low, medium-high, and high drop priorities proportionally to the configured drop profiles.

```
[edit]
class-of-service {
  drop-profiles {
    low-tcm {
      fill-level 80 drop-probability 100;
    }
    med-tcm {
      fill-level 40 drop-probability 100;
    }
    high-tcm {
      fill-level 10 drop-probability 100;
    }
  }
  tri-color;
}
```

```
interfaces {
  so-1/1/0 {
    scheduler-map tcm-sched;
  }
}
scheduler-maps {
  tcm-sched {
    forwarding-class queue-0 scheduler q0-sched;
    forwarding-class queue-3 scheduler q3-sched;
  }
}
schedulers {
  q0-sched {
    transmit-rate percent 50;
    buffer-size percent 50;
    drop-profile-map loss-priority low protocol any drop-profile low-tcm;
    drop-profile-map loss-priority medium-high protocol any drop-profile med-tcm;
    drop-profile-map loss-priority high protocol any drop-profile high-tcm;
  }
  q3-sched {
    transmit-rate percent 50;
    buffer-size percent 50;
  }
}
}
```

Marking Packets with Medium-Low Loss Priority

In another example, the 4PLP filter and policer causes certain packets to be marked with medium-low loss priority.

```
interfaces {
  ge-7/2/0 {
    unit 0 {
      family inet {
        filter {
          input 4PLP;
        }
        policer {
          input 4PLP;
        }
        address 10.45.10.2/30;
      }
    }
  }
}

firewall {
  three-color-policer trTCM {
    two-rate {
      color-blind;
      committed-information-rate 400m;
      committed-burst-size 100m;
      peak-information-rate 1g;
      peak-burst-size 500m;
    }
  }
}
```



```

}
policer 4PLP {
  if-exceeding {
    bandwidth-limit 40k;
    burst-size-limit 4k;
  }
  then loss-priority medium-low;
}
family inet {
  filter 4PLP {
    term 0 {
      from {
        precedence 1;
      }
      then loss-priority medium-low;
    }
  }
  filter filter_trTCM {
    term default {
      then {
        three-color-policer {
          two-rate trTCM;
        }
      }
    }
  }
}
}
}

```

Verifying Two-Rate Tricolor Marking Operation

The following operational mode commands are useful for checking the results of your configuration:

- **show class-of-service forwarding-table classifiers**
- **show interfaces *interface-name* extensive**
- **show interfaces queue *interface-name***

For information about these commands, see the Junos OS Operational Mode Commands and Junos OS Operational Mode Commands.

Policer Support for Aggregated Ethernet and SONET Bundles Overview

Aggregated interfaces support single-rate policers, three-color marking policers, two-rate three-color marking policers, hierarchical policers, and percentage-based policers. By default, policer bandwidth and burst-size applied on aggregated bundles is not matched to the user-configured bandwidth and burst-size.

You can configure interface-specific policers applied on an aggregated Ethernet bundle or an aggregated SONET bundle to match the effective bandwidth and burst-size to user-configured values. The **shared-bandwidth-policer** statement is required to achieve this match behavior.

This capability applies to all interface-specific policers of the following types: single-rate policers, single-rate three-color marking policers, two-rate three-color marking policers, and hierarchical policers. Percentage-based policers match the bandwidth to the user-configured values by default, and do not require shared-bandwidth-policer configuration. The **shared-bandwidth-policer** statement causes a split in burst-size for percentage-based policers.



NOTE: This feature is supported on the following platforms: T Series routers, M120, M10i, M7i (CFEB-E only), M320 (SFPC only), MX240, MX480, and MX960 (DPC only).

The following usage scenarios are supported:

- Interface policers used by the following configuration:

```
[edit] interfaces (aeX | asX) unit unit-num family family policer [input | output | arp]
```
- Policers and three-color policers (both single-rate three-color marking and two-rate three-color marking) used inside interface-specific filters; that is, filters that have an interface-specific keyword and are used by the following configuration:

```
[edit] interfaces (aeX | asX) unit unit-num family family filter [input | output]
```
- Common-edge service filters, which are derived from CLI-configured filters and thus inherit interface-specific properties. All policers and three-color policers used by these filters are also affected.

The following usage scenarios are not supported:

- Policers and three-color policers used inside filters that are not interface specific; such a filter is meant to be shared across multiple interfaces.
- Any implicit policers or policers that are part of implicit filters; for example, the default ARP policer applied to an aggregate Ethernet interface. Such a policer is meant to be shared across multiple interfaces.
- Prefix-specific action policers.

To configure this feature, include the **shared-bandwidth-policer** statement at the following hierarchy levels: `[edit firewall policer policer-name]`, `[edit firewall three-color-policer policer-name]`, or `[edit firewall hierarchical-policer policer-name]`.

Related Documentation

- [shared-bandwidth-policer on page 716](#)

CHAPTER 7

Configuring Forwarding Classes

This topic discusses the following:

- [Overview of Forwarding Classes on page 123](#)
- [Default Forwarding Classes on page 126](#)
- [Configuring Forwarding Classes on page 128](#)
- [Applying Forwarding Classes to Interfaces on page 129](#)
- [Classifying Packets by Egress Interface on page 129](#)
- [Example: DSCP IPv6 Rewrites and Forwarding Class Maps on page 131](#)
- [Assigning Forwarding Class and DSCP Value for Routing Engine–Generated Traffic on page 132](#)
- [Overriding Fabric Priority Queuing on page 133](#)
- [Configuring Up to 16 Forwarding Classes on page 134](#)

Overview of Forwarding Classes

This topic covers the following information:

- [Output Queue Assignments Based on Forwarding Class on page 123](#)
- [Devices That Support Up to Four Forwarding Classes on page 124](#)
- [Devices That Support Up to 16 Forwarding Classes on page 124](#)
- [Default and Configurable Packet Loss Priority Values on page 125](#)
- [Configuration Statements Used to Configure and Apply Forwarding Classes on page 125](#)

Output Queue Assignments Based on Forwarding Class

It is helpful to think of forwarding classes as output queues. In effect, the end result of classification is the identification of an output queue for a particular packet.

CoS packet classification assigns an incoming packet to an output queue based on the packet's forwarding class. Each packet is associated with one of the following default forwarding classes:

- Expedited forwarding (EF)—Provides a low-loss, low-latency, low-jitter, assured bandwidth, end-to-end service.
- Assured forwarding (AF)—Provides a group of values you can define and includes four subclasses: AF1, AF2, AF3, and AF4, each with three drop probabilities: low, medium, and high.
- Best effort (BE)—Provides no service profile. For the best effort forwarding class, loss priority is typically not carried in a class-of-service (CoS) value and random early detection (RED) drop profiles are more aggressive.
- Network control (NC)—This class is typically high priority because it supports protocol control.

Devices That Support Up to Four Forwarding Classes

Some of the Juniper Networks routing platforms support up to four forwarding classes for classifying customer traffic. On these platforms, you can configure one of each type of default forwarding class. The following Juniper Networks routing platforms support up to four forwarding classes:

- M7i Multiservice Edge Routers with Compact Forwarding Engine Boards (CFEBs)
- M10i Multiservice Edge Routers with CFEBs



.....

NOTE: This list does not reference any Juniper Networks device that has reached its End of Life (EOL) period and its End of Support (EOS) milestone date.

.....

Devices That Support Up to 16 Forwarding Classes

Other Juniper Networks routing platforms support up to 16 forwarding classes, which enables you to classify packets more granularly. For example, you can configure multiple classes of EF traffic: EF, EF1, and EF2. On these platforms, the Junos OS software supports up to eight output queues; therefore, if you configure more than eight forwarding classes, you must map multiple forwarding classes to single output queues. The following Juniper Networks routing platforms support up to 16 forwarding classes and up to 8 output queues:

- M7i Multiservices Edge Routers with Enhanced Compact Forwarding Engine Boards (CFEB-Es)
- M10i Multiservices Edge Routers with CFEB-Es
- M120 Multiservices Edge Routers
- M320 Multiservices Edge Routers
- MX Series 3D Universal Edge Routers

- T Series Core Routers
- PTX Packet Transport Switches

Default and Configurable Packet Loss Priority Values

By default, the loss priority is low. On most devices, you can configure high or low loss priority. On the following devices, you can configure high, low, medium-high, or medium-low loss priority:

- J Series Services Router interfaces
- M320 routers and T Series routers with Enhanced II Flexible PIC Concentrators (FPCs)
- T640 routers with Enhanced Scaling FPC4s
- PTX Series Packet Transport Switches

Configuration Statements Used to Configure and Apply Forwarding Classes

To configure CoS forwarding classes, include the **forwarding-classes** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
forwarding-classes {
  class class-name queue-num queue-number priority (high | low);
  queue queue-number class-name priority (high | low);
}
forwarding-classes-interface-specific forwarding-class-map-name {
  class class-name queue-num queue-number [ restricted-queue queue-number ];
}
interfaces {
  interface-name {
    unit logical-unit-number {
      forwarding-class class-name;
      forwarding-classes-interface-specific forwarding-class-map-name;
    }
  }
}
restricted-queues {
  forwarding-class class-name queue queue-number;
}
```

Related Documentation

- [Default Forwarding Classes on page 126](#)
- [Configuring Forwarding Classes on page 128](#)
- [Applying Forwarding Classes to Interfaces on page 129](#)
- [Configuring Up to 16 Forwarding Classes on page 134](#)
- [Policer Overview on page 96](#)

Default Forwarding Classes

By default, four queues are assigned to four forwarding classes, each with a queue number, name, and abbreviation.

These default mappings apply to all routers. The four forwarding classes defined by default are shown in [Table 19 on page 126](#).

If desired, you can rename the forwarding classes associated with the queues supported on your hardware. Assigning a new class name to an output queue does not alter the default classification or scheduling that is applicable to that queue. CoS configurations can be quite complicated, so unless it is required by your scenario, we recommend that you not alter the default class names or queue number associations.

Some routers support eight queues. Queues 4 through 7 have no default mappings to forwarding classes. To use queues 4 through 7, you must create custom forwarding class names and map them to the queues. For more information, see the Juniper Networks J Series Services Router documentation.

Table 19: Default Forwarding Classes

Queue	Forwarding Class Name	Comments
Queue 0	best-effort (be)	The software does not apply any special CoS handling to packets with 000000 in the DiffServ field, a backward compatibility feature. These packets are usually dropped under congested network conditions.
Queue 1	expedited-forwarding (ef)	<p>The software delivers assured bandwidth, low loss, low delay, and low delay variation (jitter) end-to-end for packets in this service class.</p> <p>Routers accept excess traffic in this class, but in contrast to assured forwarding, out-of-profile expedited-forwarding packets can be forwarded out of sequence or dropped.</p>
Queue 2	assured-forwarding (af)	<p>The software offers a high level of assurance that the packets are delivered as long as the packet flow from the customer stays within a certain service profile that you define.</p> <p>The software accepts excess traffic, but applies a RED drop profile to determine if the excess packets are dropped and not forwarded.</p> <p>Depending on router type, up to four drop probabilities (low, medium-low, medium-high, and high) are defined for this service class.</p>
Queue 3	network-control (nc)	<p>The software delivers packets in this service class with a low priority. (These packets are not delay sensitive.)</p> <p>Typically, these packets represent routing protocol hello or keepalive messages. Because loss of these packets jeopardizes proper network operation, delay is preferable to discard.</p>

The following rules govern queue assignment:

- If classifiers fail to classify a packet, the packet always receives the default classification to the class associated with queue 0.
- The number of queues is dependent on the hardware plugged into the chassis. CoS configurations are inherently contingent on the number of queues on the system. Only two classes, **best-effort** and **network-control**, are referenced in the default configuration. The default configuration works on all routers.
- CoS configurations that specify more queues than the router can support are not accepted. The commit fails with a detailed message that states the total number of queues available.
- All default CoS configuration is based on queue number. The name of the forwarding class that shows up when the default configuration is displayed is the forwarding class currently associated with that queue.

This is the default configuration for the **forwarding-classes** statement:

```
[edit class-of-service]
forwarding-classes {
  queue 0 best-effort;
  queue 1 expedited-forwarding;
  queue 2 assured-forwarding;
  queue 3 network-control;
}
```

If you reassign the forwarding-class names, the **best-effort** forwarding-class name appears in the locations in the configuration previously occupied by **network-control** as follows:

```
[edit class-of-service]
forwarding-classes {
  queue 0 network-control;
  queue 1 assured-forwarding;
  queue 2 expedited-forwarding;
  queue 3 best-effort;
}
```

All the default rules of classification and scheduling that applied to Queue 3 still apply. Queue 3 is simply now renamed **best-effort**.

On Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers, you can assign multiple forwarding classes to a single queue. If you do so, the first forwarding class that you assign to queue 0 acquires the default BE classification and scheduling. The first forwarding class that you assign to queue 1 acquires the default EF classification and scheduling. The first forwarding class that you assign to queue 2 acquires the default AF classification and scheduling. The first forwarding class that you assign to queue 3 acquires the default NC classification and scheduling. For more information, see [“Configuring Up to 16 Forwarding Classes” on page 134](#).

- In the current default configuration:
 - Only IP precedence classifiers are associated with interfaces.
 - The only classes designated are **best-effort** and **network-control**.

- Schedulers are not defined for the **expedited-forwarding** or **assured-forwarding** forwarding classes.
- You must explicitly classify packets to the **expedited-forwarding** or **assured-forwarding** forwarding class and define schedulers for these classes.
- For Asynchronous Transfer Mode (ATM) interfaces on Juniper Networks M Series Multiservice Edge Routers, when you use fixed classification with multiple logical interfaces classifying to separate queues, a logical interface without a classifier attached inherits the most recent classifier applied on a different logical interface. For example, suppose you configure traffic through logical unit 0 to be classified into queue 1, and you configure traffic through logical unit 1 to be classified into queue 3. You want traffic through logical unit 2 to be classified into the default classifier, which is queue 0. In this case, traffic through logical unit 2 is classified into queue 3, because the configuration of logical unit 1 was committed last.

For more information, see [“Hardware Capabilities and Limitations”](#) on page 289.

Configuring Forwarding Classes

You assign each forwarding class to an internal queue number by including the **forwarding-classes** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
forwarding-classes {
  class queue-num queue-number priority (high | low);
  queue queue-number class-name priority (high | low) [ policing-priority (premium |
    normal) ];
}
```

You cannot commit a configuration that assigns the same forwarding class to two different queues.



CAUTION: We do not recommend classifying packets into a forwarding class that has no associated scheduler on the egress interface. Such a configuration can cause unnecessary packet drops because an unconfigured scheduling class might lack adequate buffer space. For example, if you configure a custom scheduler map that does not define queue 0, and the default classifier assigns incoming packets to the best-effort class (queue 0), the unconfigured egress queue for the best-effort forwarding class might not have enough space to accommodate even short packet bursts.

A default congestion and transmission control mechanism is used when an output interface is not configured for a certain forwarding class, but receives packets destined for that unconfigured forwarding class. This default mechanism uses the delay buffer and weighted round robin (WRR) credit allocated to the designated forwarding class, with a default drop profile. Because the buffer and WRR credit allocation is minimal, packets might be lost if a larger number of packets are forwarded without configuring the forwarding class for the interface.

Applying Forwarding Classes to Interfaces

You can configure *fixed classification* on a logical interface by specifying a forwarding class to be applied to all packets received by the logical interface, regardless of the packet contents.



NOTE: On the T4000 router, BA classification and fixed classification are mutually exclusive. That is, only one of the classifications can be configured.

To apply a forwarding class configuration to the input logical interface, include the **forwarding-class** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
  forwarding-class class-name;
```

You can include interface wildcards for *interface-name* and *logical-unit-number*.

In the following example, all packets coming into the router from the **ge-3/0/0.0** interface are assigned to the **assured-forwarding** forwarding class:

```
[edit class-of-service]
interfaces {
  ge-3/0/0 {
    unit 0 {
      forwarding-class assured-forwarding;
    }
  }
}
```

Related Documentation • [forwarding-class on page 609](#)

Classifying Packets by Egress Interface

For Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers with the Intelligent Queuing (IQ), IQ2, Enhanced IQ (IQE), Multiservices link services intelligent queuing (LSQ) interfaces, or ATM2 PICs, you can classify unicast and multicast packets based on the egress interface. For unicast traffic, you can also use a multifield filter, but only egress interface classification applies to multicast traffic as well as unicast traffic. If you configure egress classification of an interface, you cannot perform Differentiated Services code point (DSCP) rewrites on the interface. By default, the system will not perform any classification based on the egress interface.

To enable packet classification by the egress interface, you first configure a forwarding class map and one or more queue numbers for the egress interface at the **[edit class-of-service forwarding-classes-interface-specific *forwarding-class-map-name*]** hierarchy level:

```
[edit class-of-service]
  forwarding-classes-interface-specific forwarding-class-map-name {
```

```

class class-name queue-num queue-number [ restricted-queue queue-number ];
}

```

For T Series routers that are restricted to only four queues, you can control the queue assignment with the **restricted-queue** option, or you can allow the system to automatically determine the queue in a modular fashion. For example, a map assigning packets to queue 6 would map to queue 2 on a four-queue system.



NOTE: If you configure an output forwarding class map associating a forwarding class with a queue number, this map is not supported on multiservices link services intelligent queuing (lsq-) interfaces.

Once the forwarding class map has been configured, you apply the map to the logical interface by using the **output-forwarding-class-map** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number]
output-forwarding-class-map forwarding-class-map-name;

```

All parameters relating to the queues and forwarding class must be configured as well. For more information about configuring forwarding classes and queues, see [“Configuring Forwarding Classes” on page 128](#).

This example shows how to configure an interface-specific forwarding-class map named **FCMAP1** that restricts queues 5 and 6 to different queues on four-queue systems and then applies **FCMAP1** to **unit 0** of interface **ge-6/0/0**:

```

[edit class-of-service]
forwarding-classes-interface-specific FCMAP1 {
  class FC1 queue-num 6 restricted-queue 3;
  class FC2 queue-num 5 restricted-queue 2;
  class FC3 queue-num 3;
  class FC4 queue-num 0;
  class FC3 queue-num 0;
  class FC4 queue-num 1;
}

[edit class-of-service]
interfaces {
  ge-6/0/0 unit 0 {
    output-forwarding-class-map FCMAP1;
  }
}

```

Note that without the **restricted-queue** option in **FCMAP1**, the example would assign **FC1** and **FC2** to queues 2 and 1, respectively, on a system restricted to four queues.

Use the **show class-of-service forwarding-class *forwarding-class-map-name*** command to display the forwarding-class map queue configuration:

```
user@host> show class-of-service forwarding-class FCMAP2
```

Forwarding class	ID	Queue	Restricted queue
FC1	0	6	3

FC2	1	5	2
FC3	2	3	3
FC4	3	0	0
FC5	4	0	0
FC6	5	1	1
FC7	6	6	2
FC8	7	7	3

Use the **show class-of-service interface *interface-name*** command to display the forwarding-class maps (and other information) assigned to a logical interface:

```
user@host> show class-of-service interface ge-6/0/0
```

Physical interface: ge-6/0/0, Index: 128

Queues supported: 8, Queues in use: 8

Scheduler map: <default>, Index: 2

Input scheduler map: <default>, Index: 3

Chassis scheduler map: <default-chassis>, Index: 4

Logical interface: ge-6/0/0.0, Index: 67

Object	Name	Type	Index
Scheduler-map	sch-map1	Output	6998
Scheduler-map	sch-map1	Input	6998
Classifier	dot1p	ieee8021p	4906
forwarding-class-map	FCMAP1	Output	1221

Logical interface: ge-6/0/0.1, Index 68

Object	Name	Type	Index
Scheduler-map	<default>	Output	2
Scheduler-map	<default>	Input	3

Logical interface: ge-6/0/0.32767, Index 69

Object	Name	Type	Index
Scheduler-map	<default>	Output	2
Scheduler-map	<default>	Input	3

Example: DSCP IPv6 Rewrites and Forwarding Class Maps

You cannot configure a DSCP IPv6 rewrite rule and output forwarding class map on the same logical interface (unit). These must be used on different logical interfaces. Although a warning is issued, there is nothing in the CLI that prevents this configuration. An error message appears when you attempt to commit the configuration.

This example shows the warning and error message that results when the default DSCP IPv6 rewrite rule is configured on logical interface **ge-1/0/4.0** with output forwarding class map **vg1**.

```
[edit class-of-service]
interfaces {
  ge-1/0/4 {
    unit 0 {
      ##
      ## Warning: DSCP-IPv6 rewrite and forwarding class map not allowed on same unit
      ##
      output-forwarding-class-map vg1;
      rewrite-rules {
        dscp-ipv6 default;
```

```
    }  
  }  
}  
}  
  
user@router# commit  
[edit class-of-service interfaces ge-1/0/4 unit 0 output-forwarding-class-map]  
'output-forwarding-class-map vgl'  
DSCP-IPv6 rewrite and forwarding class map not allowed on same unit  
error: commit failed: (statements constraint check failed)
```

Related Documentation

- [Applying Forwarding Classes to Interfaces on page 129](#)

Assigning Forwarding Class and DSCP Value for Routing Engine-Generated Traffic

You can set the forwarding class and differentiated service code point (DSCP) value for traffic originating in the Routing Engine. To configure forwarding class and DSCP values that apply to Routing Engine-generated traffic only, apply an output filter to the loopback (**lo.0**) interface and set the appropriate forwarding class and DSCP bit configuration for various protocols. For example, you can set the DSCP value on OSPF packets that originate in the Routing Engine to **10** and assign them to the AF (assured forwarding) forwarding class while the DSCP value on ping packets are set to **0** and use forwarding class BE (best effort).

This particular classification ability applies to packets generated by the Routing Engine only.

The following example assigns Routing Engine sourced ping packets (using ICMP) a DSCP value of **38** and a forwarding class of **af17**, OSPF packets a DSCP value of **12** and a forwarding class of **af11**, and BGP packets (using TCP) a DSCP value of **10** and a forwarding class of **af16**.

```
[edit class-of-service]  
forwarding-classes {  
  class af11 queue-num 7;  
  class af12 queue-num 1;  
  class af13 queue-num 2;  
  class af14 queue-num 4;  
  class af15 queue-num 5;  
  class af16 queue-num 4;  
  class af17 queue-num 6;  
  class af18 queue-num 7;  
}  
  
[edit firewall filter family inet]  
filter loopback-filter {  
  term t1 {  
    from {  
      protocol icmp; # For pings  
    }  
    then {  
      forwarding-class af17;  
      dscp 38;  
    }  
  }  
}
```

```

    }
  }
  term t2 {
    from {
      protocol ospf; # For OSPF
    }
    then {
      forwarding-class af11;
      dscp 12;
    }
  }
  term t3 {
    from {
      protocol tcp; # For BGP
    }
    then {
      forwarding-class af16;
      dscp 10;
    }
  }
  term t4 {
    then accept; # Do not forget!
  }
}

[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      filter {
        output loopback-filter;
      }
    }
  }
}

```



NOTE: This is not a complete router configuration. You still have to assign resources to the queues, configure the routing protocols, addresses, and so on.

Overriding Fabric Priority Queuing

On M320 and T Series routers, the default behavior is for fabric priority queuing on egress interfaces to match the scheduling priority you assign. High-priority egress traffic is automatically assigned to high-priority fabric queues. Likewise, low-priority egress traffic is automatically assigned to low-priority fabric queues.

You can override the default fabric priority queuing of egress traffic by including the **priority** statement at the **[edit class-of-service forwarding-classes queue *queue-number* *class-name*]** hierarchy level:

```
[edit class-of-service forwarding-classes queue queue-number class-name]
```

priority (high | low);

For information about associating a scheduler with a fabric priority, see [“Associating Schedulers with Fabric Priorities” on page 217](#).

Configuring Up to 16 Forwarding Classes

By default on all routers, four output queues are mapped to four forwarding classes, as shown in the topic [“Default Forwarding Classes” on page 126](#). On Juniper Networks J Series Services Routers, M120 and M320 Multiservice Edge Routers, and T Series Core Routers, you can configure more than four forwarding classes and queues. For information about configuring J Series routers, see the J Series router documentation.




NOTE: You cannot use CoS-based forwarding features if you configure more than eight forwarding classes on the device.

On M120, M320, MX Series, T Series routers, and PTX Series Packet Transport Switches, you can configure up to 16 forwarding classes and eight queues, with multiple forwarding classes assigned to single queues. The concept of assigning multiple forwarding classes to a queue is sometimes referred to as creating *forwarding-class aliases*. This section explains how to configure M320 and T Series routers.

Mapping multiple forwarding classes to single queues is useful. Suppose, for example, that forwarding classes are set based on multifield packet classification, and the multifield classifiers are different for core-facing interfaces and customer-facing interfaces. Suppose you need four queues for a core-facing interface and five queues for a customer-facing interface, where **fc0** through **fc4** correspond to the classifiers for the customer-facing interface, and **fc5** through **fc8** correspond to classifiers for the core-facing interface, as shown in [Figure 11 on page 134](#).

Figure 11: Customer-Facing and Core-Facing Forwarding Classes

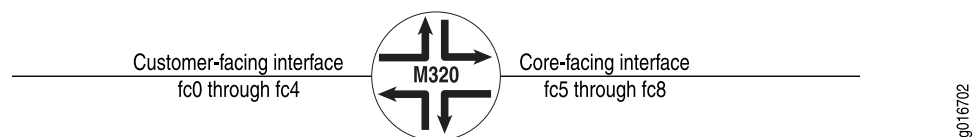

In this example, there are nine classifiers and, therefore, nine forwarding classes. The forwarding class-to-queue mapping is shown in [Table 20 on page 134](#).

Table 20: Sample Forwarding Class-to-Queue Mapping

Forwarding Class Names	Queue Number
fc0	0
fc5	
fc6	
fc1	1
fc6	

Table 20: Sample Forwarding Class-to-Queue Mapping (*continued*)

Forwarding Class Names	Queue Number
fc2	2
fc7	
fc3	3
fc8	
fc4	4

To configure up to 16 forwarding classes, include the **class** and **queue-num** statements at the **[edit class-of-service forwarding-classes]** hierarchy level:

```
[edit class-of-service forwarding-classes]
class class-name queue-num queue-number;
```

You can configure up to 16 different forwarding-class names. The corresponding output queue number can be from 0 through 7. Therefore, you can map multiple forwarding classes to a single queue. If you map multiple forwarding classes to a queue, the multiple forwarding classes must refer to the same scheduler (at the **[edit class-of-service scheduler-maps map-name forwarding-class class-name scheduler scheduler-name]** hierarchy level).

When you configure up to 16 forwarding classes, you can use them as you can any other forwarding class—in classifiers, schedulers, firewall filters (multifield classifiers), policers, and rewrite rules.

When you configure up to 16 forwarding classes, the following limitations apply:

- The **class** and **queue** statements at the **[edit class-of-service forwarding-classes]** hierarchy level are mutually exclusive. In other words, you can include one or the other of the following configurations, but not both:

```
[edit class-of-service forwarding-classes]
queue queue-number class-name;
```

```
[edit class-of-service forwarding-classes]
class class-name queue-num queue-number;
```

- On T Series routers only, when you configure IEEE 802.1p rewrite marking on Gigabit Ethernet IQ, Gigabit Ethernet IQ2, Gigabit Ethernet Enhanced IQ (IQE), and Gigabit Ethernet Enhanced IQ2 (IQ2E) PICs, you cannot configure more than eight forwarding classes. This limitation does not apply to M Series routers. On M Series routers, you can configure up to 16 forwarding classes when you configure IEEE 802.1p rewrite marking on any of these PICs.
- For GRE and IP-IP tunnels, IP precedence and DSCP rewrite marking of the inner header do not work with more than eight forwarding classes.
- When you use CoS-based forwarding features, you cannot configure more than eight forwarding classes with a forwarding policy. However, if you try to configure CoS-based

forwarding with more than eight forwarding classes configured, commit fails with a message. Therefore, you can configure CBF on a router with eight or less than eight forwarding classes only. Under this condition, the forwarding class to queue mapping can be either one-to-one or one-to-many.

- A scheduler map that maps eight different forwarding classes to eight different schedulers can only be applied to interfaces that support eight queues. If you apply this type of scheduler map to an interface that only supports four queues, then the commit will fail.
- We recommend that you configure the statements changing PICs to support eight queues and then applying an eight queue scheduler map in two separate steps. Otherwise, the commit might succeed but the PIC might not have eight queues when the scheduler map is applied, generating an error.

You can determine the ID number assigned to a forwarding class by issuing the **show class-of-service forwarding-class** command. You can determine whether the classification is fixed by issuing the **show class-of-service forwarding-table classifier mapping** command. In the command output, if the **Table Type** field appears as **Fixed**, the classification is fixed. For more information about fixed classification, see [“Applying Forwarding Classes to Interfaces” on page 129](#).

For information about configuring eight forwarding classes on ATM2 IQ interfaces, see [“Enabling Eight Queues on ATM Interfaces” on page 522](#).

This section discusses the following topics:

- [Enabling Eight Queues on Interfaces on page 136](#)
- [Multiple Forwarding Classes and Default Forwarding Classes on page 137](#)
- [PICs Restricted to Four Queues on page 138](#)
- [Examples: Configuring Up to 16 Forwarding Classes on page 139](#)

Enabling Eight Queues on Interfaces

By default, Intelligent Queuing (IQ), Intelligent Queuing 2 (IQ2), Intelligent Queuing Enhanced (IQE), and Intelligent Queuing 2 Enhanced (IQ2E) PICs on M320 and T Series routers are restricted to a maximum of four egress queues per interface. To configure a maximum of eight egress queues on these interfaces, include the **max-queues-per-interface** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]  
max-queues-per-interface (4 | 8);
```

On a TX Matrix or TX Matrix Plus router, include the **max-queues-per-interface** statement at the **[edit chassis lcc number fpc slot-number pic pic-number]** hierarchy level:

```
[edit chassis lcc number fpc slot-number pic pic-number]  
max-queues-per-interface (4 | 8);
```

The numerical value can be 4 or 8.

For Juniper Networks J Series routers, this statement is not supported. J Series routers always have eight queues available.



NOTE: In addition to configuring eight queues at the [edit chassis] hierarchy level, the configuration at the [edit class-of-service] hierarchy level must support eight queues per interface.

The maximum number of queues per IQ PIC can be 4 or 8. If you include the **max-queues-per-interface** statement, all ports on the IQ PIC use configured mode and all interfaces on the IQ PIC have the same maximum number of queues.

To determine how many queues an interface supports, you can check the **CoS queues** output field of the **show interfaces interface-name extensive** command:

```
user@host> show interfaces so-1/0/0 extensive
CoS queues: 8 supported
```

If you include the **max-queues-per-interface 4** statement, you can configure all four ports and configure up to four queues per port.

For 4-port OC3c/STM1 Type I and Type II PICs on M320 and T Series routers, when you include the **max-queues-per-interface 8** statement, you can configure up to eight queues on ports 0 and 2. After you commit the configuration, the PIC goes offline and comes back online with only ports 0 and 2 operational. No interfaces can be configured on ports 1 and 3.

For Quad T3 and Quad E3 PICs, when you include the **max-queues-per-interface 8** statement, you can configure up to eight queues on ports 0 and 2. After you commit the configuration, the PIC goes offline and comes back online with only ports 0 and 2 operational. No interfaces can be configured on ports 1 and 3.

When you include the **max-queues-per-interface** statement and commit the configuration, all physical interfaces on the IQ PIC are deleted and readded. Also, the PIC is taken offline and then brought back online immediately. You do not need to take the PIC offline and online manually. You should change modes between four queues and eight queues only when there is no active traffic going to the IQ PIC.

Multiple Forwarding Classes and Default Forwarding Classes

For queues 0 through 3, if you assign multiple forwarding classes to a single queue, default forwarding class assignment works as follows:

- The first forwarding class that you assign to queue 0 acquires the default BE classification and scheduling.
- The first forwarding class that you assign to queue 1 acquires the default EF classification and scheduling.

- The first forwarding class that you assign to queue 2 acquires the default AF classification and scheduling.
- The first forwarding class that you assign to queue 3 acquires the default NC classification and scheduling.

Of course you can override the default classification and scheduling by configuring custom classifiers and schedulers.

If you do not explicitly map forwarding classes to queues 0 through 3, then the respective default classes are automatically assigned to those queues. When you are counting the 16 forwarding classes, you must include in the total any default forwarding classes automatically assigned to queues 0 through 3. As a result, you can map up to 13 forwarding classes to a single queue when the single queue is queue 0, 1, 2, or 3. You can map up to 12 forwarding classes to a single queue when the single queue is queue 4, 5, 6, or 7. In summary, there must be at least one forwarding class each (default or otherwise) assigned to queue 0 through 3, and you can assign the remaining 12 forwarding classes (16–4) to any queue.

For example, suppose you assign two forwarding classes to queue 0 and you assign no forwarding classes to queues 1 through 3. The software automatically assigns one default forwarding class each to queues 1 through 3. This means 11 forwarding classes (16–5) are available for you to assign to queues 4 through 7.

For more information about forwarding class defaults, see [“Default Forwarding Classes” on page 126](#).

PICs Restricted to Four Queues

Some Juniper Networks T Series Core Router PICs support up to 16 forwarding classes and are restricted to 4 queues. Contact Juniper Networks customer support for a current list of T Series router PICs that are restricted to four queues. To determine how many queues an interface supports, you can check the **CoS queues** output field of the **show interfaces *interface-name* extensive** command:

```
user@host> show interfaces so-1/0/0 extensive
CoS queues: 8 supported
```

By default, for T Series router PICs that are restricted to four queues, the router overrides the global configuration based on the following formula:

$$Q_r = Q_d \bmod R_{max}$$

Q_r is the queue number assigned if the PIC is restricted to four queues.

Q_d is the queue number that would have been mapped if this PIC were not restricted.

R_{max} is the maximum number of restricted queues available. Currently, this is four.

For example, assume you map the forwarding class **ef** to queue 6. For a PIC restricted to four queues, the queue number for forwarding class **ef** is **$Q_r = 6 \bmod 4 = 2$** .

To determine which queue is assigned to a forwarding class, use the **show class-of-service forwarding-class** command from the top level of the CLI. The output shows queue assignments for both global queue mappings and restricted queue mappings:

```
user@host> show class-of-service forwarding-class
Forwarding class      Queue    Restricted Queue  Fabric priority
be                    0        2                low
ef                    1        2                low
assured-forwarding   2        2                low
network-control      3        3                low
```

For T Series router PICs restricted to four queues, you can override the formula-derived queue assignment by including the **restricted-queues** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
restricted-queues {
  forwarding-class class-name queue queue-number;
}
```

You can configure up to 16 forwarding classes. The output queue number can be from 0 through 3. Therefore, for PICs restricted to four queues, you can map multiple forwarding classes to single queues. If you map multiple forwarding classes to a queue, the multiple forwarding classes must refer to the same scheduler. This requirement applies to all PICs. The class name you configure at the **[edit class-of-service restricted-queues]** hierarchy level must be either a default forwarding class name or a forwarding class you configure at the **[edit class-of-service forwarding-classes]** hierarchy level.

Examples: Configuring Up to 16 Forwarding Classes

Configure 16 forwarding classes:

```
Configuring 16 Forwarding Classes [edit class-of-service]
forwarding-classes {
  class fc0 queue-num 0;
  class fc1 queue-num 0;
  class fc2 queue-num 1;
  class fc3 queue-num 1;
  class fc4 queue-num 2;
  class fc5 queue-num 2;
  class fc6 queue-num 3;
  class fc7 queue-num 3;
  class fc8 queue-num 4;
  class fc9 queue-num 4;
  class fc10 queue-num 5;
  class fc11 queue-num 5;
  class fc12 queue-num 6;
  class fc13 queue-num 6;
  class fc14 queue-num 7;
  class fc15 queue-num 7;
}
```

For PICs restricted to four queues, map four forwarding classes to each queue:

```
Restricted Queues: [edit class-of-service]
Mapping Two        restricted-queues {
                    forwarding-class fc0 queue 0;
```

Forwarding Classes to Each Queue

```
forwarding-class fc1 queue 0;
forwarding-class fc2 queue 0;
forwarding-class fc3 queue 0;
forwarding-class fc4 queue 1;
forwarding-class fc5 queue 1;
forwarding-class fc6 queue 1;
forwarding-class fc7 queue 1;
forwarding-class fc8 queue 2;
forwarding-class fc9 queue 2;
forwarding-class fc10 queue 2;
forwarding-class fc11 queue 2;
forwarding-class fc12 queue 3;
forwarding-class fc13 queue 3;
forwarding-class fc14 queue 3;
forwarding-class fc15 queue 3;
}
```

If you map multiple forwarding classes to a queue, the multiple forwarding classes must refer to the same scheduler:

Configuring a Scheduler Map Applicable to an Interface Restricted to Four Queues

```
[edit class-of-service]
scheduler-maps {
  interface-restricted {
    forwarding-class be scheduler Q0;
    forwarding-class ef scheduler Q1;
    forwarding-class ef1 scheduler Q1;
    forwarding-class ef2 scheduler Q1;
    forwarding-class af1 scheduler Q2;
    forwarding-class af scheduler Q2;
    forwarding-class nc scheduler Q3;
    forwarding-class nc1 scheduler Q3;
  }
}
[edit class-of-service]
restricted-queues {
  forwarding-class be queue 0;
  forwarding-class ef queue 1;
  forwarding-class ef1 queue 1;
  forwarding-class ef2 queue 1;
  forwarding-class af queue 2;
  forwarding-class af1 queue 2;
  forwarding-class nc queue 3;
  forwarding-class nc1 queue 3;
}
```

CHAPTER 8

Configuring Forwarding Policy Options

This topic discusses the following:

- [Forwarding Policy Options Overview on page 141](#)
- [Configuring CoS-Based Forwarding on page 142](#)
- [Overriding the Input Classification on page 144](#)
- [Example: Configuring CoS-Based Forwarding on page 145](#)
- [Example: Configuring CoS-Based Forwarding for Different Traffic Types on page 147](#)
- [Example: Configuring CoS-Based Forwarding for IPv6 on page 148](#)

Forwarding Policy Options Overview

Class-of-service (CoS)-based forwarding (CBF) enables you to control next-hop selection based on a packet's class of service and, in particular, the value of the IP packet's precedence bits.

For example, you might want to specify a particular interface or next hop to carry high-priority traffic while all best-effort traffic takes some other path. When a routing protocol discovers equal-cost paths, it can pick a path at random or load-balance across the paths through either hash selection or round robin. CBF allows path selection based on class.

To configure CBF properties, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
forwarding-policy {
  next-hop-map map-name {
    forwarding-class class-name {
      next-hop [ next-hop-name ];
      lsp-next-hop [ lsp-regular-expression ];
      non-lsp-next-hop;
      discard;
    }
  }
  class class-name {
    classification-override {
      forwarding-class class-name;
    }
  }
}
```

```
}
}
```

Configuring CoS-Based Forwarding

You can apply CoS-based forwarding (CBF) only to a defined set of routes. Therefore you must configure a policy statement as in the following example:

```
[edit policy-options]
policy-statement my-cos-forwarding {
  from {
    route-filter destination-prefix match-type;
  }
  then {
    cos-next-hop-map map-name;
  }
}
```

This configuration specifies that routes matching the route filter are subject to the CoS next-hop mapping specified by *map-name*. For more information about configuring policy statements, see the Routing Policy Configuration Guide.



NOTE: On M Series routers (except the M120 and M320 routers), forwarding-class-based matching and CBF do not work as expected if the forwarding class has been set with a multifield filter on an input interface.

You can configure CBF on a router with eight or less than eight forwarding classes only. Under this condition, the forwarding class to queue mapping can be either one-to-one or one-to-many. However, you cannot configure CBF when the number of forwarding classes configured exceeds eight. Similarly, with CBF configured, you cannot configure more than eight forwarding classes.

To specify a CoS next-hop map, include the **forwarding-policy** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
forwarding-policy {
  next-hop-map map-name {
    forwarding-class class-name {
      next-hop [ next-hop-name ];
      lsp-next-hop [ lsp-regular-expression ];
      discard;
    }
  }
}
```

When you configure CBF with OSPF as the interior gateway protocol (IGP), you must specify the next hop as an interface name or next-hop alias, not as an IP address. This is true because OSPF adds routes with the interface as the next hop for point-to-point interfaces; the next hop does not contain the IP address. For an example configuration, see [“Example: Configuring CoS-Based Forwarding” on page 145](#).

For Layer 3 VPNs, when you use class-based forwarding for the routes received from the far-end provider-edge (PE) router within a VRF instance, the software can match the routes based on the attributes that come with the received route only. In other words, the matching can be based on the route within RIB-in. In this case, the **route-filter** statement you include at the **[edit policy-options policy-statement my-cos-forwarding from]** hierarchy level has no effect because the policy checks the **bgp.l3vpn.0** table, not the **vrf.inet.0** table.

The Junos OS applies the CoS next-hop map to the set of next hops previously defined; the next hops themselves can be located across any outgoing interfaces on the router. For example, the following configuration associates a set of forwarding classes and next-hop identifiers:

```
[edit class-of-service forwarding-policy]
next-hop-map map1 {
  forwarding-class expedited-forwarding {
    next-hop next-hop1;
    next-hop next-hop2;
  }
  forwarding-class best-effort {
    next-hop next-hop3;
    lsp-next-hop lsp-next-hop4;
  }
}
```

In this example, **next-hop N** is either an IP address or an egress interface for some next hop, and **lsp-next-hop4** is a regular expression corresponding to any next hop with that label. Q1 through QN are a set of forwarding classes that map to the specific next hop. That is, when a packet is switched with Q1 through QN, it is forwarded out the interface associated with the associated next hop.

This configuration has the following implications:

- A single forwarding class can map to multiple standard next hops or LSP next hops. This implies that load sharing is done across standard next hops or LSP next hops servicing the same class value. To make this work properly, the Junos OS creates a list of the equal-cost next hops and forwards packets according to standard load-sharing rules for that forwarding class.
- If a forwarding class configuration includes LSP next hops and standard next hops, the LSP next hops are preferred over the standard next hops. In the preceding example, if both **next-hop3** and **lsp-next-hop4** are valid next hops for a route to which **map1** is applied, the forwarding table includes entry **lsp-next-hop4** only.
- If **next-hop-map** does not specify all possible forwarding classes, the default forwarding class is selected as the default. If the default forwarding class is not specified in the next-hop map, a default is designated randomly. The default forwarding class is the class associated with queue 0.
- For LSP next hops, the Junos OS uses UNIX **regex(3)**-style regular expressions. For example, if the following labels exist: **lsp**, **lsp1**, **lsp2**, **lsp3**, the statement **lsp-next-hop**

lsp matches **lsp**, **lsp1**, **lsp2**, and **lsp3**. If you do not desire this behavior, you must use the anchor characters **lsp-next-hop " ^lsp\$"**, which match **lsp** only.

- The route filter does not work because the policy checks against the **bgp.l3vpn.0** table instead of the **vrf.inet.0** table.

The final step is to apply the route filter to routes exported to the forwarding engine. This is shown in the following example:

```
routing-options {
  forwarding-table {
    export my-cos-forwarding;
  }
}
```

This configuration instructs the routing process to insert routes to the forwarding engine matching **my-cos-forwarding** with the associated next-hop CBF rules.

The following algorithm is used when you apply a configuration to a route:

- If the route is a single next-hop route, all traffic goes to that route; that is, no CBF takes effect.
- For each next hop, associate the proper forwarding class. If a next hop appears in the route but not in the **cos-next-hop** map, it does not appear in the forwarding table entry.
- The default forwarding class is used if all forwarding classes are not specified in the next-hop map. If the default is not specified, one is chosen randomly.

Overriding the Input Classification

For IPv4 or IPv6 packets, you can override the incoming classification, assigning them to the same forwarding class based on their input interface, input precedence bits, or destination address. You do so by defining a policy class when configuring CoS properties and referencing this class when configuring a routing policy.

When you override the classification of incoming packets, any mappings you configured for associated precedence bits or incoming interfaces to output transmission queues are ignored. Also, if the packet loss priority (PLP) bit was set in the packet by the incoming interface, the PLP bit is cleared.

To override the input packet classification, do the following:

1. Define the policy class by including the **class** statement at the **[edit class-of-service policy]** hierarchy level:

```
[edit class-of-service]
forwarding-policy {
  class class-name {
    classification-override {
      forwarding-class class-name;
    }
  }
}
```

class-name is a name that identifies the class.

- Associate the policy class with a routing policy by including it in a **policy-statement** statement at the **[edit policy-options]** hierarchy level. Specify the destination prefixes in the **route-filter** statement and the CoS policy class name in the **then** statement.

```
[edit policy-options]
policy-statement policy-name {
  term term-name {
    from {
      route-filter destination-prefix match-type <class class-name>
    }
    then class class-name;
  }
}
```

- Apply the policy by including the **export** statement at the **[edit routing-options]** hierarchy level:


```
[edit routing-options]
forwarding-table {
  export policy-name;
}
```

Example: Configuring CoS-Based Forwarding

Router A has two routes to destination 10.255.71.208 on Router D. One route goes through Router B, and the other goes through Router C, as shown in [Figure 12 on page 145](#).

Configure Router A with CBF to select Router B for queue 0 and queue 2, and Router C for queue 1 and queue 3.

Figure 12: Sample CoS-Based Forwarding

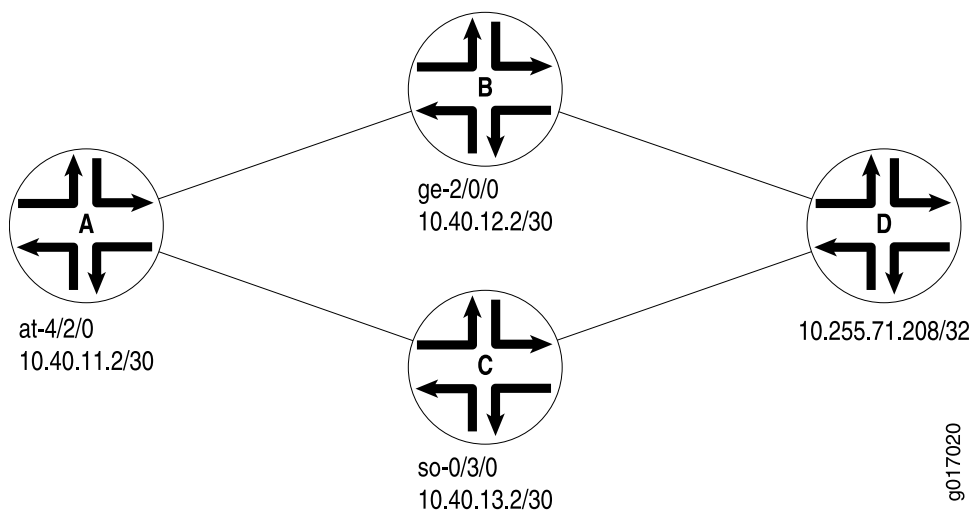

When you configure CBF with OSPF as the IGP, you must specify the next hop as an interface name, not as an IP address. The next hops in this example are specified as **ge-2/0/0.0** and **so-0/3/0.0**.

```
[edit class-of-service]
forwarding-policy {
  next-hop-map my_cbf {
    forwarding-class be {
      next-hop ge-2/0/0.0;
    }
    forwarding-class ef {
      next-hop so-0/3/0.0;
    }
    forwarding-class af {
      next-hop ge-2/0/0.0;
    }
    forwarding-class nc {
      next-hop so-0/3/0.0;
    }
  }
}
classifiers {
  inet-precedence inet {
    forwarding-class be {
      loss-priority low code-points [ 000 100 ];
    }
    forwarding-class ef {
      loss-priority low code-points [ 001 101 ];
    }
    forwarding-class af {
      loss-priority low code-points [ 010 110 ];
    }
    forwarding-class nc {
      loss-priority low code-points [ 011 111 ];
    }
  }
}
forwarding-classes {
  queue 0 be;
  queue 1 ef;
  queue 2 af;
  queue 3 nc;
}
interfaces {
  at-4/2/0 {
    unit 0 {
      classifiers {
        inet-precedence inet;
      }
    }
  }
}

[edit policy-options]
policy-statement cbf {
  from {
```

```

        route-filter 10.255.71.208/32 exact;
    }
    then cos-next-hop-map my_cbf;
}

[edit routing-options]
graceful-restart;
forwarding-table {
    export cbf;
}

[edit interfaces]
traceoptions {
    file trace-intf size 5m world-readable;
    flag all;
}
so-0/3/0 {
    unit 0 {
        family inet {
            address 10.40.13.1/30;
        }
        family iso;
        family mpls;
    }
}
ge-2/0/0 {
    unit 0 {
        family inet {
            address 10.40.12.1/30;
        }
        family iso;
        family mpls;
    }
}
at-4/2/0 {
    atm-options {
        vpi 1 {
            maximum-vcs 1200;
        }
    }
    unit 0 {
        vci 1.100;
        family inet {
            address 10.40.11.2/30;
        }
        family iso;
        family mpls;
    }
}
}

```

Example: Configuring CoS-Based Forwarding for Different Traffic Types

One common use for CoS-based forwarding and next-hop maps is to enforce different handling for different traffic types, such as voice and video. For example, an LSP-based

next hop can be used for voice and video, and a non-LSP next-hop can be used for best effort traffic.

Only the forwarding policy is shown in this example:

```
[edit class-of-service]
forwarding-policy {
  next-hop-map ldp-map {
    forwarding-class expedited-forwarding {
      lsp-next-hop voice;
      non-lsp-next-hop;
    }
    forwarding-class assured-forwarding {
      lsp-next-hop video;
      non-lsp-next-hop;
    }
    forwarding-class best-effort {
      non-lsp-next-hop;
      discard;
    }
  }
}
```

Example: Configuring CoS-Based Forwarding for IPv6

This example configures CoS-based forwarding (CBF) next-hop maps and CBF LSP next-hop maps for IPv6 addresses.

You can configure a next-hop map with both IPv4 and IPv6 addresses, or you can configure separate next-hop maps for IPv4 and IPv6 addresses and include the **from family (inet | inet6)** statements at the **[edit policy-options policy-options policy-statement *policy-name* term *term-name*]** hierarchy level to ensure that only next-hop maps of a specified protocol are applied to a specified route.

If you do not configure separate next-hop maps and include the **from family (inet | inet6)** statements in the configuration, when a route uses two next hops (whether IPv4, IPv6, interface, or LSP next hop) in at least two of the specified forwarding classes, CBF is used for the route; otherwise, the CBF policy is ignored.

1. Define the CBF next-hop map:

```
[edit class-of-service]
forwarding-policy {
  next-hop-map cbf-map {
    forwarding-class best-effort {
      next-hop [ ::192.168.139.38 192.168.139.38 ];
    }
    forwarding-class expedited-forwarding {
      next-hop [ ::192.168.140.5 192.168.140.5 ];
    }
    forwarding-class assured-forwarding {
      next-hop [ ::192.168.145.5 192.168.145.5 ];
    }
    forwarding-class network-control {
      next-hop [ ::192.168.141.2 192.168.141.2 ];
    }
  }
}
```

```
    }  
  }  
}
```

2. Define the CBF forwarding policy:

```
[edit policy-options]  
policy-statement ls {  
  then cos-next-hop-map cbf-map;  
}
```

3. Export the CBF forwarding policy:

```
[edit routing-options]  
forwarding-table {  
  export ls;  
}
```


CHAPTER 9

Configuring Fragmentation by Forwarding Class

This topic discusses the following:

- [Fragmentation by Forwarding Class Overview on page 151](#)
- [Configuring Fragmentation by Forwarding Class on page 152](#)
- [Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI on page 153](#)
- [Example: Configuring Fragmentation by Forwarding Class on page 153](#)
- [Example: Configuring Drop Timeout Interval by Forwarding Class on page 154](#)

Fragmentation by Forwarding Class Overview

For Adaptive Services (AS) Physical Interface Card (PIC) link services IQ (LSQ) and virtual LSQ redundancy (**rlsq-**) interfaces, you can specify fragmentation properties for specific forwarding classes. Traffic on each forwarding class can be either multilink fragmented or interleaved. By default, traffic in all forwarding classes is fragmented.

If you do not configure fragmentation properties for particular forwarding classes in multilink Point-to-Point Protocol (MLPPP) interfaces, the fragmentation threshold you set at the **[edit interfaces interface-name unit logical-unit-number fragment-threshold]** hierarchy level is used for all forwarding classes within the MLPPP interface. For multilink Frame Relay (MLFR) FRF.16 interfaces, the fragmentation threshold you set at the **[edit interfaces interface-name mlfr-uni-nni-bundle-options fragment-threshold]** hierarchy level is used for all forwarding classes within the MLFR FRF.16 interface. If you do not set a maximum fragment size anywhere in the configuration, packets are still fragmented if they exceed the smallest maximum transmission unit (MTU) of all the links in the bundle.

To configure fragmentation by forwarding class, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
fragmentation-maps {
  map-name {
    forwarding-class class-name {
      drop-timeout milliseconds;
      fragment-threshold bytes;
      multilink-class number;
```

```

        no-fragmentation;
    }
}
interfaces {
    interface-name {
        unit logical-unit-number {
            fragmentation-map map-name;
        }
    }
}

```

Related Documentation

- [Configuring Fragmentation by Forwarding Class on page 152](#)
- [Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI on page 153](#)
- [Example: Configuring Fragmentation by Forwarding Class on page 153](#)
- [Example: Configuring Drop Timeout Interval by Forwarding Class on page 154](#)
- [fragmentation-map on page 615](#)
- [fragmentation-maps on page 616](#)

Configuring Fragmentation by Forwarding Class

For AS PIC link services IQ (lsq-) interfaces only, you can configure fragmentation properties on a particular forwarding class. To do this, include the **fragmentation-maps** statement at the **[edit class-of-service]** hierarchy level:

```

[edit class-of-service]
fragmentation-maps {
    map-name {
        forwarding-class class-name {
            drop-timeout milliseconds;
            fragment-threshold bytes;
            multilink-class number;
            no-fragmentation;
        }
    }
}

```

To set a per-forwarding class fragmentation threshold, include the **fragment-threshold** statement in the fragmentation map. This statement sets the maximum size of each multilink fragment.

To set traffic on a particular forwarding class to be interleaved rather than fragmented, include the **no-fragmentation** statement in the fragmentation map. This statement specifies that an extra fragmentation header is not prepended to the packets received on this queue and that static link load balancing is used to ensure in-order packet delivery.

To change the resequencing interval for each fragmentation class, include the **drop-timeout** statement in the forwarding class. The interval is in milliseconds, and the default is 500 ms for link speeds of T1 or greater and 1500 ms for links slower than T1

speeds. You must also include a **multilink-class** value for resequencing fragments. If you include these statements, you cannot configure **no-fragmentation** for the forwarding class; they are mutually exclusive.

For a given forwarding class, include either the **fragment-threshold** or **no-fragmentation** statement; they are mutually exclusive.

Related Documentation

- [Fragmentation by Forwarding Class Overview on page 151](#)
- [Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI on page 153](#)
- [Example: Configuring Fragmentation by Forwarding Class on page 153](#)
- [Example: Configuring Drop Timeout Interval by Forwarding Class on page 154](#)
- [fragmentation-map on page 615](#)
- [fragmentation-maps on page 616](#)

Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI

To associate a fragmentation map with an MLPPP interface or MLFR FRF.16 DLCI, include the **fragmentation-map** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces]
lsq-fpc/pic/port {
  unit logical-unit-number { # Multilink PPP
    fragmentation-map map-name;
  }
lsq-fpc/pic/port:channel { # MLFR FRF.16
  unit logical-unit-number {
    fragmentation-map map-name;
  }
}
```

For configuration examples, see the Junos Services Interfaces Configuration Release 11.2.

Example: Configuring Fragmentation by Forwarding Class

Configure two logical units on an LSQ interface. The logical units use two different fragmentation maps.

```
class-of-service {
  interfaces {
    lsq-1/0/0 {
      unit 1 {
        fragmentation-map frag-map-A;
      }
      unit 2 {
        fragmentation-map frag-map-B;
      }
    }
  }
  fragmentation-maps {
```

```
frag-map-A {  
  forwarding-class {  
    AF {  
      no-fragmentation;  
    }  
    EF {  
      no-fragmentation;  
    }  
    BE {  
      fragment-threshold 100;  
    }  
  }  
}  
frag-map-B {  
  forwarding-class {  
    EF {  
      fragment-threshold 200;  
    }  
    BE {  
      fragment-threshold 200;  
    }  
    AF {  
      fragment-threshold 200;  
    }  
  }  
}  
}
```

Example: Configuring Drop Timeout Interval by Forwarding Class

For **LSQ** interfaces configured for multiclass MLPPP, you can change the drop timeout interval that the interface waits for fragment resequencing by forwarding class. This feature is mutually exclusive with the **no-fragmentation** statement configured for a forwarding class.

You can also disable the fragment resequencing function altogether by forwarding class. You do this by setting the **drop-timeout** interval to 0.

The **drop-timeout** interval can also be set at the bundle level. When the **drop-timeout** interval is set to 0 at the bundle level, *none* of the individual classes forward fragmented packets. Sequencing is ignored also, and packets are forwarded in the order in which they were received. The **drop-timeout** interval value configured at the bundle level overrides the values configured at the class level.

This example configures a logical unit on an LSQ interface with a fragmentation map setting different drop timeout values for each forwarding class:

- Best effort (BE)—The value of 0 means that no resequencing of fragments takes place for BE traffic.
- Expedited Forwarding (EF)—The value of 800 ms means that the multiclass MLPPP waits 800 ms for fragment to arrive on the link for EF traffic.

- Assured Forwarding (AF)—The absence of the timeout statements means that the default timeouts of 500 ms for links at T1 and higher speeds and 1500 ms for lower speeds are in effect for AF traffic.
- Network Control (NC)—The value of 100 ms means that the multiclass MLPPP waits 100 ms for fragment to arrive on the link for NC traffic.

```

class-of-service {
  interfaces {
    lsq-1/0/0 {
      unit 1 {
        fragmentation-map Timeout_Frag_Map;
      }
    }
  }
  fragmentation-maps {
    Timeout_Frag_Map {
      forwarding-class {
        BE {
          drop-timeout 0; # No resequencing of fragments for this class
          multilink-class 3;
          fragment-threshold 128;
        }
        EF {
          drop-timeout 800; # Timer set to 800 milliseconds for this class
          multilink-class 2;
        }
        AF {
          multilink-class 1;
          fragment-threshold 256; # Default timeout in effect for this class
        }
        NC {
          drop-timeout 100; # Timer set to 100 milliseconds for this class
          multilink-class 0;
          fragment-threshold 512;
        }
      }
    }
  }
}

```


CHAPTER 10

Configuring Schedulers

This topic discusses the following:

- [Schedulers Overview on page 158](#)
- [Default Schedulers Overview on page 159](#)
- [Configuring Schedulers on page 160](#)
- [Configuring the Scheduler Buffer Size on page 160](#)
- [Configuring Drop Profile Maps for Schedulers on page 171](#)
- [Configuring Scheduler Transmission Rate on page 172](#)
- [Priority Scheduling Overview on page 175](#)
- [Platform Support for Priority Scheduling on page 176](#)
- [Configuring Schedulers for Priority Scheduling on page 177](#)
- [Configuring Scheduler Maps on page 179](#)
- [Applying Scheduler Maps Overview on page 180](#)
- [Applying Scheduler Maps to Physical Interfaces on page 181](#)
- [Applying Scheduler Maps and Shaping Rate to Physical Interfaces on IQ PICs on page 181](#)
- [Example: Configuring VLAN Shaping on Aggregated Interfaces on page 187](#)
- [Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs on page 188](#)
- [Configuring Per-Unit Schedulers for Channelized Interfaces on page 195](#)
- [Applying a Shaping Rate to Physical Interfaces Overview on page 197](#)
- [Configuring the Shaping Rate for Physical Interfaces on page 198](#)
- [Oversubscribing Interface Bandwidth on page 199](#)
- [Providing a Guaranteed Minimum Rate on page 207](#)
- [Applying Scheduler Maps to Packet Forwarding Component Queues on page 211](#)
- [Default Fabric Priority Queuing on page 217](#)
- [Associating Schedulers with Fabric Priorities on page 217](#)
- [Configuring the Number of Schedulers for Ethernet IQ2 PICs on page 218](#)
- [Ethernet IQ2 PIC RTT Delay Buffer Values on page 220](#)
- [Configuring Rate Limiting and Sharing of Excess Bandwidth on Multiservices PICs on page 220](#)

Schedulers Overview

You use *schedulers* to define the properties of output queues. These properties include the amount of interface bandwidth assigned to the queue, the size of the memory buffer allocated for storing packets, the priority of the queue, and the random early detection (RED) drop profiles associated with the queue.

You associate the schedulers with forwarding classes by means of *scheduler maps*. You can then associate each scheduler map with an interface, thereby configuring the hardware queues, packet schedulers, and RED processes that operate according to this mapping.

To configure class-of-service (CoS) schedulers, include the following statements at the **[edit class-of-service]** hierarchy level:



NOTE: For PTX Series Packet Transport Switches:

- The **fabric** and **traffic-control-profiles** statements at the **[edit class-of-service]** hierarchy level are not supported.

```
[edit class-of-service]
interfaces {
  interface-name {
    scheduler-map map-name;
    scheduler-map-chassis map-name;
    shaping-rate rate;
    unit {
      output-traffic-control-profile profile-name;
      scheduler-map map-name;
      shaping-rate rate;
    }
  }
}
fabric {
  scheduler-map {
    priority (high | low) scheduler scheduler-name;
  }
}
scheduler-maps {
  map-name {
    forwarding-class class-name scheduler scheduler-name;
  }
}
schedulers {
  scheduler-name {
    buffer-size (percent percentage | remainder | temporal microseconds );
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
      (any | non-tcp | tcp) drop-profile profile-name;
    excess-priority (low | high);
    excess-rate (percent percentage | proportion value);
    priority priority-level;
```



```

    transmit-rate (rate | percent percentage remainder) <exact | rate-limit>;
  }
}
traffic-control-profiles profile-name {
  delay-buffer-rate (percent percentage | rate);
  excess-rate percent percentage;
  guaranteed-rate (percent percentage | rate);
  scheduler-map map-name;
  shaping-rate (percent percentage | rate);
}

```

You cannot configure both the **shaping-rate** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level and the **transmit-rate rate-limit** statement and option at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level. These statements are mutually exclusive. If you do configure both, you will not be able to commit the configuration:

```

[edit class-of-service]
'shaping-rate'
only one option (shaping-rate or transmit-rate rate-limit) can be configured at a time
error: commit failed (statements constraint check failed)

```

Default Schedulers Overview

Each forwarding class has an associated scheduler priority. Only two forwarding classes, best effort and network control (queue 0 and queue 3), are used in the Junos default scheduler configuration.

By default, the best effort forwarding class (queue 0) receives 95 percent of the bandwidth and buffer space for the output link, and the network control forwarding class (queue 3) receives 5 percent. The default drop profile causes the buffer to fill and then discard all packets until it has space.

The expedited-forwarding and assured-forwarding classes have no schedulers because, by default, no resources are assigned to queue 1 and queue 2. However, you can manually configure resources for the expedited-forwarding and assured-forwarding classes.

Also by default, each queue can exceed the assigned bandwidth if additional bandwidth is available from other queues. When a forwarding class does not fully use the allocated transmission bandwidth, the remaining bandwidth can be used by other forwarding classes if they receive a larger amount of the offered load than the bandwidth allocated. For more information, see [“Allocation of Leftover Bandwidth” on page 174](#).

The following default scheduler is provided when you install the Junos OS. These settings are not visible in the output of the **show class-of-service** command; rather, they are implicit.

```

[edit class-of-service]
schedulers {
  network-control {
    transmit-rate percent 5;
    buffer-size percent 5;
    priority low;
    drop-profile-map loss-priority any protocol any drop-profile terminal;
  }
}

```

```
    }
    best-effort {
        transmit-rate percent 95;
        buffer-size percent 95;
        priority low;
        drop-profile-map loss-priority any protocol any drop-profile terminal;
    }
}
drop-profiles {
    terminal {
        fill-level 100 drop-probability 100;
    }
}
```

Configuring Schedulers

You configure a scheduler by including the **scheduler** statement at the **[edit class-of-service]** hierarchy level:

```
schedulers {
    scheduler-name {
        buffer-size (percent percentage | remainder | temporal microseconds);
        drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
            (any | non-tcp | tcp) drop-profile profile-name;
        priority priority-level;
        transmit-rate (rate | percent percentage remainder) <exact | rate-limit>;
    }
}
```

For detailed information about scheduler configuration statements, see the indicated topics:

- [Configuring the Scheduler Buffer Size on page 160](#)
- [Configuring Drop Profile Maps for Schedulers on page 171](#)
- [Configuring Scheduler Transmission Rate on page 172](#)
- [Configuring Schedulers for Priority Scheduling on page 177](#)

Configuring the Scheduler Buffer Size

To control congestion at the output stage, you can configure the delay-buffer bandwidth. The delay-buffer bandwidth provides packet buffer space to absorb burst traffic up to the specified duration of delay. Once the specified delay buffer becomes full, packets with 100 percent drop probability are dropped from the head of the buffer.

The default scheduler transmission rate for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent of the total available bandwidth.

The default buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent of the total available buffer. The total available buffer per queue differs by PIC type, as shown in [Table 21 on page 161](#).

To configure the buffer size, include the **buffer-size** statement at the **[edit class-of-service schedulers**

scheduler-name] hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
  buffer-size (percent percentage | remainder | temporal microseconds);
```

For each scheduler, you can configure the buffer size as one of the following:

- A percentage of the total buffer. The total buffer per queue is based on microseconds and differs by router type, as shown in [Table 21 on page 161](#).
- The remaining buffer available. The remainder is the buffer percentage that is not assigned to other queues. For example, if you assign 40 percent of the delay buffer to queue 0, allow queue 3 to keep the default allotment of 5 percent, and assign the remainder to queue 7, then queue 7 uses approximately 55 percent of the delay buffer.
- A temporal value, in microseconds. For the temporal setting, the queuing algorithm starts dropping packets when it queues more than a computed number of bytes. This maximum is computed by multiplying the transmission rate of the queue by the configured temporal value. The buffer size temporal value per queue differs by router type, as shown in [Table 21 on page 161](#). The maximums apply to the logical interface, not each queue.

For information about configuring large buffer sizes on IQ PICs, see “[Configuring Large Delay Buffers for Slower Interfaces](#)” on page 162.

Table 21: Buffer Size Temporal Value Ranges by Router Type

Routers	Temporal Value Ranges
M320 and T Series router FPCs, Type 1 and Type 2	1 through 80,000 microseconds
M320 and T Series router FPCs, Type 3. All ES cards (Type 1, 2, 3, and 4).	1 through 50,000 microseconds
M120 router FEBs and MX Series router nonenhanced Queuing DPCs	1 through 100,000 microseconds
M5, M7i, M10, and M10i router FPCs	1 through 100,000 microseconds
Other M Series router FPCs	1 through 200,000 microseconds
PTX Series Packet Transport Switches	1 through 100,000 microseconds
IQ PICs on all routers	1 through 100,000 microseconds
With Large Buffer Sizes Enabled	
IQ PICs on all routers	1 through 500,000 microseconds

Table 21: Buffer Size Temporal Value Ranges by Router Type (*continued*)

Routers	Temporal Value Ranges
Gigabit Ethernet IQ VLANs	
With shaping rate up to 10 Mbps	1 through 400,000 microseconds
With shaping rate up to 20 Mbps	1 through 300,000 microseconds
With shaping rate up to 30 Mbps	1 through 200,000 microseconds
With shaping rate up to 40 Mbps	1 through 150,000 microseconds
With shaping rate above 40 Mbps	1 through 100,000 microseconds

For more information about configuring delay buffers, see the following subtopics:

- [Configuring Large Delay Buffers for Slower Interfaces on page 162](#)
- [Enabling and Disabling the Memory Allocation Dynamic per Queue on page 170](#)

Configuring Large Delay Buffers for Slower Interfaces

By default, T1, E1, and NxDS0 interfaces and DLCIs configured on channelized IQ PICs are limited to 100,000 microseconds of delay buffer. (The default average packet size on the IQ PIC is 40 bytes.) For these interfaces, it might be necessary to configure a larger buffer size to prevent congestion and packet dropping. You can do so on the following PICs:

- Channelized IQ
- 4-port E3 IQ
- Gigabit Ethernet IQ and IQ2

Congestion and packet dropping occur when large bursts of traffic are received by slower interfaces. This happens when faster interfaces pass traffic to slower interfaces, which is often the case when edge devices receive traffic from the core of the network. For example, a 100,000-microsecond T1 delay buffer can absorb only 20 percent of a 5000-microsecond burst of traffic from an upstream OC3 interface. In this case, 80 percent of the burst traffic is dropped.

[Table 22 on page 162](#) shows some recommended buffer sizes needed to absorb typical burst sizes from various upstream interface types.

Table 22: Recommended Delay Buffer Sizes

Length of Burst	Upstream Interface	Downstream Interface	Recommended Buffer on Downstream Interface
5000 microseconds	OC3	E1 or T1	500,000 microseconds
5000 microseconds	E1 or T1	E1 or T1	100,000 microseconds

Table 22: Recommended Delay Buffer Sizes (*continued*)

Length of Burst	Upstream Interface	Downstream Interface	Recommended Buffer on Downstream Interface
1000 microseconds	T3	E1 or T1	100,000 microseconds

To ensure that traffic is queued and transmitted properly on E1, T1, and NxDS0 interfaces and DLCIs, you can configure a buffer size larger than the default maximum. To enable larger buffer sizes to be configured, include the **q-pic-large-buffer (large-scale | small-scale)** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
q-pic-large-buffer large-scale;
```

If you specify the **large-scale** option, the feature supports a larger number of interfaces. If you specify **small-scale**, the default, then the feature supports a smaller number of interfaces.

When you include the **q-pic-large-buffer** statement in the configuration, the larger buffer is transparently available for allocation to scheduler queues. The larger buffer maximum varies by interface type, as shown in [Table 23 on page 163](#).

Table 23: Maximum Delay Buffer with q-pic-large-buffer Enabled by Interface

Platform, PIC, or Interface Type	Maximum Buffer Size
With Large Buffer Sizes Not Enabled	
M320 and T Series router FPCs, Type 1 and Type 2	80,000 microseconds
M320 and T Series router FPCs, Type 3	50,000 microseconds
Other M Series router FPCs	200,000 microseconds
IQ PICs on all routers	100,000 microseconds
With Large Buffer Sizes Enabled	
Channelized T3 and channelized OC3 DLCIs—Maximum sizes vary by shaping rate:	
With shaping rate from 64,000 through 255,999 bps	4,000,000 microseconds
With shaping rate from 256,000 through 511,999 bps	2,000,000 microseconds
With shaping rate from 512,000 through 1,023,999 bps	1,000,000 microseconds
With shaping rate from 1,024,000 through 2,048,000 bps	500,000 microseconds
With shaping rate from 2,048,001 bps through 10 Mbps	400,000 microseconds
With shaping rate from 10,000,001 bps through 20 Mbps	300,000 microseconds

Table 23: Maximum Delay Buffer with q-pic-large-buffer Enabled by Interface (*continued*)

Platform, PIC, or Interface Type	Maximum Buffer Size
With shaping rate from 20,000,001 bps through 30 Mbps	200,000 microseconds
With shaping rate from 30,000,001 bps through 40 Mbps	150,000 microseconds
With shaping rate up to 40,000,001 bps and above	100,000 microseconds
NxDSO IQ Interfaces—Maximum sizes vary by channel size:	
1xDSO through 3xDSO	4,000,000 microseconds
4xDSO through 7xDSO	2,000,000 microseconds
8xDSO through 15xDSO	1,000,000 microseconds
16xDSO through 32xDSO	500,000 microseconds
Other IQ interfaces	500,000 microseconds

If you configure a delay buffer larger than the new maximum, the candidate configuration can be committed successfully. However, the setting is rejected by the packet forwarding component and a system log warning message is generated.

For interfaces that support DLCI queuing, the large buffer is supported for DLCIs on which the configured shaping rate is less than or equal to the physical interface bandwidth. For instance, when you configure a Frame Relay DLCI on a Channelized T3 IQ PIC, and you configure the shaping rate to be 1.5 Mbps, the amount of delay buffer that can be allocated to the DLCI is 500,000 microseconds, which is equivalent to a T1 delay buffer. For more information about DLCI queuing, see [“Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs” on page 188](#).

For NxDSO interfaces, the larger buffer sizes can be up to 4,000,000 microseconds, depending on the number of DSO channels in the NxDSO interface. For slower NxDSO interfaces with fewer channels, the delay buffer can be relatively larger than for faster NxDSO interfaces with more channels. This is shown in [Table 25 on page 166](#). To calculate specific buffer sizes for various NxDSO interfaces, see [“Maximum Delay Buffer for NxDSO Interfaces” on page 165](#).

You can allocate the delay buffer as either a percentage or a temporal value. The resulting delay buffer is calculated differently depending how you configure the delay buffer, as shown in [Table 24 on page 165](#).

Table 24: Delay-Buffer Calculations

Delay Buffer Configuration	Formula	Example
Percentage	$\text{available interface bandwidth} * \text{configured percentage buffer-size} * \text{maximum buffer} = \text{queue buffer}$	<p>If you configure a queue on a T1 interface to use 30 percent of the available delay buffer, the queue receives 28,125 bytes of delay buffer:</p> <pre> sched-expedited { transmit-rate percent 30; buffer-size percent 30; } </pre> <p>1.5 Mbps * 0.3 * 500,000 microseconds = 225,000 bits = 28,125 bytes</p>
Temporal	$\text{available interface bandwidth} * \text{configured percentage transmit-rate} * \text{configured temporal buffer-size} = \text{queue buffer}$	<p>If you configure a queue on a T1 interface to use 500,000 microseconds of delay buffer and you configure the transmission rate to be 20 percent, the queue receives 18,750 bytes of delay buffer:</p> <pre> sched-best { transmit-rate percent 20; buffer-size temporal 500000; } </pre> <p>1.5 Mbps * 0.2 * 500,000 microseconds = 150,000 bits = 18,750 bytes</p>
Percentage, with buffer size larger than transmit rate		<p>In this example, the delay buffer is allocated twice the transmit rate. Maximum delay buffer latency can be up to twice the 500,000-microsecond delay buffer if the queue's transmit rate cannot exceed the allocated transmit rate.</p> <pre> sched-extra-buffer { transmit-rate percent 10; buffer-size percent 20; } </pre>
FRF.16 LSQ bundles	<p>For total bundle bandwidth < T1 bandwidth, the delay-buffer rate is 1 second.</p> <p>For total bundle bandwidth >= T1 bandwidth, the delay-buffer rate is 200 milliseconds (ms).</p>	

For more information, see the following sections:

- [Maximum Delay Buffer for NxDS0 Interfaces on page 165](#)
- [Example: Configuring Large Delay Buffers for Slower Interfaces on page 167](#)

Maximum Delay Buffer for NxDS0 Interfaces

Because NxDS0 interfaces carry less bandwidth than a T1 or E1 interface, the buffer size on an NxDS0 interface can be relatively larger, depending on the number of DS0 channels combined. The maximum delay buffer size is calculated with the following formula:

$$\text{Interface Speed} * \text{Maximum Delay Buffer Time} = \text{Delay Buffer Size}$$

For example, a 1xDS0 interface has a speed of 64 kilobits per second (Kbps). At this rate, the maximum delay buffer time is 4,000,000 microseconds. Therefore, the delay buffer size is 32 kilobytes (KB):

$$64 \text{ Kbps} * 4,000,000 \text{ microseconds} = 32 \text{ KB}$$

[Table 25 on page 166](#) shows the delay-buffer calculations for 1xDS0 through 32xDS0 interfaces.

Table 25: NxDS0 Transmission Rates and Delay Buffers

Interface Speed	Delay Buffer Size
1xDS0 Through 4xDS0: Maximum Delay Buffer Time Is 4,000,000 Microseconds	
1xDS0: 64 Kbps	32 KB
2xDS0: 128 Kbps	64 KB
3xDS0: 192 Kbps	96 KB
4xDS0 Through 7xDS0: Maximum Delay Buffer Time Is 2,000,000 Microseconds	
4xDS0: 256 Kbps	64 KB
5xDS0: 320 Kbps	80 KB
6xDS0: 384 Kbps	96 KB
7xDS0: 448 Kbps	112 KB
8xDS0 Through 15xDS0: Maximum Delay Buffer Time Is 1,000,000 Microseconds	
8xDS0: 512 Kbps	64 KB
9xDS0: 576 Kbps	72 KB
10xDS0: 640 Kbps	80 KB
11xDS0: 704 Kbps	88 KB
12xDS0: 768 Kbps	96 KB
13xDS0: 832 Kbps	104 KB
14xDS0: 896 Kbps	112 KB
15xDS0: 960 Kbps	120 KB
16xDS0 Through 32xDS0: Maximum Delay Buffer Time Is 500,000 Microseconds	
16xDS0: 1024 Kbps	64 KB

Table 25: NxDSO Transmission Rates and Delay Buffers (*continued*)

Interface Speed	Delay Buffer Size
17xDSO: 1088 Kbps	68 KB
18xDSO: 1152 Kbps	72 KB
19xDSO: 1216 Kbps	76 KB
20xDSO: 1280 Kbps	80 KB
21xDSO: 1344 Kbps	84 KB
22xDSO: 1408 Kbps	88 KB
23xDSO: 1472 Kbps	92 KB
24xDSO: 1536 Kbps	96 KB
25xDSO: 1600 Kbps	100 KB
26xDSO: 1664 Kbps	104 KB
27xDSO: 1728 Kbps	108 KB
28xDSO: 1792 Kbps	112 KB
29xDSO: 1856 Kbps	116 KB
30xDSO: 1920 Kbps	120 KB
31xDSO: 1984 Kbps	124 KB
32xDSO: 2048 Kbps	128 KB

Example: Configuring Large Delay Buffers for Slower Interfaces

Set large delay buffers on interfaces configured on a Channelized OC12 IQ PIC. The CoS configuration binds a scheduler map to the interface specified in the chassis configuration. For information about the delay-buffer calculations in this example, see [Table 24 on page 165](#).

```
chassis {
  fpc 0 {
    pic 0 {
      q-pic-large-buffer; # Enabling large delay buffer
      max-queues-per-interface 8; # Eight queues (M320, T Series, and TX Matrix routers)
    }
  }
}
```

Configuring the Delay Buffer Value for a Scheduler

You can assign to a physical or logical interface a scheduler map that is composed of different schedulers (or queues). The physical interface's large delay buffer can be distributed to the different schedulers (or queues) using the **transmit-rate** and **buffer-size** statements at the **[edit class-of-service schedulers scheduler-name]** hierarchy level.

The example shows two schedulers, **sched-best** and **sched-exped**, with the delay buffer size configured as a percentage (20 percent) and temporal value (300,000 microseconds), respectively. The **sched-best** scheduler has a transmit rate of 10 percent. The **sched-exped** scheduler has a transmit rate of 20 percent.

The **sched-best** scheduler's delay buffer is twice that of the specified transmit rate of 10 percent. Assuming that the **sched-best** scheduler is assigned to a T1 interface, this scheduler receives 20 percent of the total 500,000 microseconds of the T1 interface's delay buffer. Therefore, the scheduler receives 18,750 bytes of delay buffer:

$$\text{available interface bandwidth} * \text{configured percentage buffer-size} * \text{maximum buffer} = \text{queue buffer}$$

$$1.5 \text{ Mbps} * 0.2 * 500,000 \text{ microseconds} = 150,000 \text{ bits} = 18,750 \text{ bytes}$$

Assuming that the **sched-exped** scheduler is assigned to a T1 interface, this scheduler receives 300,000 microseconds of the T1 interface's 500,000-microsecond delay buffer with the traffic rate at 20 percent. Therefore, the scheduler receives 11,250 bytes of delay buffer:

$$\text{available interface bandwidth} * \text{configured percentage transmit-rate} * \text{configured temporal buffer-size} = \text{queue buffer}$$

$$1.5 \text{ Mbps} * 0.2 * 300,000 \text{ microseconds} = 90,000 \text{ bits} = 11,250 \text{ bytes}$$

```
[edit]
class-of-service {
  schedulers {
    sched-best {
      transmit-rate percent 10;
      buffer-size percent 20;
    }
    sched-exped {
      transmit-rate percent 20;
      buffer-size temporal 300000;
    }
  }
}
```

Configuring the Physical Interface Shaping Rate

In general, the physical interface speed is the basis for calculating the delay buffer size. However, when you include the **shaping-rate** statement, the shaping rate becomes the basis for calculating the delay buffer size. This example configures the shaping rate on a T1 interface to 200 Kbps, which means that the T1 interface bandwidth is set to 200 Kbps instead of 1.5 Mbps. Because 200 Kbps is less than 4xDS0, this interface receives 4 seconds of delay buffer, or 800 Kbps of traffic, which is 800 KB for a full second. For more information, see [Table 25 on page 166](#).

```
class-of-service {
  interfaces {
    t1-0/0/0:1 {
      shaping-rate 200k;
    }
  }
}
```

Complete Configuration This example shows a Channelized OC12 IQ PIC in FPC slot 0, PIC slot 0 and a channelized T1 interface with Frame Relay encapsulation. It also shows a scheduler map configuration on the physical interface.

```

    }
  }
}

chassis {
  fpc 0 {
    pic 0 {
      q-pic-large-buffer;
      max-queues-per-interface 8;
    }
  }
}

interfaces {
  coc12-0/0/0 {
    partition 1 oc-slice 1 interface-type coc1;
  }
  coc1-0/0/0:1 {
    partition 1 interface-type t1;
  }
  t1-0/0/0:1:1 {
    encapsulation frame-relay;
    unit 0 {
      family inet {
        address 1.1.1.1/24;
      }
      dlci 100;
    }
  }
}

class-of-service {
  interfaces {
    t1-0/0/0:1:1 {
      scheduler-map smap-1;
    }
  }
}

scheduler-maps {
  smap-1 {
    forwarding-class best-effort scheduler sched-best;
    forwarding-class expedited-forwarding scheduler sched-exped;
    forwarding-class assured-forwarding scheduler sched-assure;
    forwarding-class network-control scheduler sched-network;
  }
}

schedulers {
  sched-best {
    transmit-rate percent 40;
    buffer-size percent 40;
  }
  sched-exped {
    transmit-rate percent 30;
    buffer-size percent 30;
  }
  sched-assure {

```

```
        transmit-rate percent 20;
        buffer-size percent 20;
    }
    sched-network {
        transmit-rate percent 10;
        buffer-size percent 10;
    }
}
```

Enabling and Disabling the Memory Allocation Dynamic per Queue

In the Junos OS, the memory allocation dynamic (MAD) is a mechanism that dynamically provisions extra delay buffer when a queue is using more bandwidth than it is allocated in the transmit rate setting. With this extra buffer, queues absorb traffic bursts more easily, thus avoiding packet drops. The MAD mechanism can provision extra delay buffer only when extra transmission bandwidth is being used by a queue. This means that the queue might have packet drops if there is no surplus transmission bandwidth available.

For Juniper Networks M320 Multiservice Edge Routers, MX Services Ethernet Services Routers, and T Series Core Routers only, the MAD mechanism is enabled unless the delay buffer is configured with a temporal setting for a given queue. The MAD mechanism is particularly useful for forwarding classes carrying latency-immune traffic for which the primary requirement is maximum bandwidth utilization. In contrast, for latency-sensitive traffic, you might wish to disable the MAD mechanism because large delay buffers are not optimum.

MAD support is dependent on the FPC and Packet Forwarding Engine, not the PIC. All M320, MX Series, and T Series router FPCs and Packet Forwarding Engines support MAD. No Modular Port Concentrators (MPCs) and IQ, IQ2, IQ2E or IQE PICs support MAD.

To enable the MAD mechanism on supported hardware, include the **buffer-size percent** statement at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
buffer-size percent percentage;
```

If desired, you can configure a buffer size that is greater than the configured transmission rate. The buffer can accommodate packet bursts that exceed the configured transmission rate, if sufficient excess bandwidth is available:

```
class-of-service {
  schedulers {
    sched-best {
      transmit-rate percent 20;
      buffer-size percent 30;
    }
  }
}
```

As stated previously, you can use a temporal delay buffer configuration to disable the MAD mechanism on a queue, thus limiting the size of the delay buffer. However, the effective buffer latency for a temporal queue is bounded not only by the buffer size value but also by the associated drop profile. If a drop profile specifies a drop probability of

100 percent at a fill-level less than 100 percent, the effective maximum buffer latency is smaller than the buffer size setting. This is because the drop profile specifies that the queue drop packets before the queue's delay buffer is 100 percent full.

Such a configuration might look like the following example:

```
class-of-service {
  drop-profiles {
    plp-high {
      fill-level 70 drop-probability 100;
    }
    plp-low {
      fill-level 80 drop-probability 100;
    }
  }
  schedulers {
    sched {
      buffer-size temporal 500000;
      drop-profile-map loss-priority low protocol any drop-profile plp-low;
      drop-profile-map loss-priority high protocol any drop-profile plp-high;
      transmit-rate percent 20;
    }
  }
}
```

Configuring Drop Profile Maps for Schedulers

Drop-profile maps associate drop profiles with a scheduler. The map examines the current loss priority setting of the packet (high, low, or any) and assigns a drop profile according to these values. For example, you can specify that all TCP packets with low loss priority are assigned a drop profile that you name **low-drop**. You can associate multiple drop-profile maps with a single queue.

The scheduler drop profile defines the drop probabilities across the range of delay-buffer occupancy, thereby supporting the RED process. Depending on the drop probabilities, RED might drop packets aggressively long before the buffer becomes full, or it might drop only a few packets even if the buffer is almost full. For information on how to configure drop profiles, see [“RED Drop Profiles Overview” on page 253](#).

By default, the drop profile is mapped to packets with low PLP and any protocol type. To configure how packet types are mapped to a specified drop profile, include the **drop-profile-map** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name ]
drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
  (any | non-tcp | tcp) drop-profile profile-name;
```

The map sets the drop profile for a specific PLP and protocol type. The inputs for the map are the PLP and the protocol type. The output is the drop profile. For more information about how CoS maps work, see [“CoS Inputs and Outputs Overview” on page 9](#).



NOTE: On Juniper Network MX Series 3D Universal Edge Routers, T4000 Core Routers, and PTX Series Packet Transport Switches, you can configure only the **any** option for the **protocol** statement.

For each scheduler, you can configure separate drop profile maps for each loss priority.

You can configure a maximum of 32 different drop profiles.

Related Documentation

- [Configuring RED Drop Profiles on page 255](#)

Configuring Scheduler Transmission Rate

The transmission rate control determines the actual traffic bandwidth from each forwarding class you configure. The rate is specified in bits per second (bps). Each queue is allocated some portion of the bandwidth of the outgoing interface.

This bandwidth amount can be a fixed value, such as 1 megabit per second (Mbps), a percentage of the total available bandwidth, or the rest of the available bandwidth. You can limit the transmission bandwidth to the exact value you configure, or allow it to exceed the configured rate if additional bandwidth is available from other queues. This property allows you to ensure that each queue receives the amount of bandwidth appropriate to its level of service.

On M Series routers other than the M120 and M320 routers, you should not configure a **buffer-size** larger than the **transmit-rate** for a rate-limited queue in a scheduler. If you do, the Packet Forwarding Engine will reject the CoS configuration. However, you can achieve the same effect by removing the **exact** option from the transmit rate or specifying the buffer size using the **temporal** option.



NOTE: For 8-port, 12-port, and 48-port Fast Ethernet PICs, transmission scheduling is not supported.

On Juniper Networks J Series Services Routers, you can include the **transmit-rate** statement described in this section to assign the WRR weights within a given priority level and not between priorities. For more information, see [“Configuring Schedulers for Priority Scheduling” on page 177](#).

To configure transmission scheduling, include the **transmit-rate** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]  
  transmit-rate (rate | percent percentage | remainder) <exact | rate-limit>;
```

You can specify the transmit rate as follows:

- **rate**—Transmission rate, in bits per second. For all MX Series router interfaces, the rate can be from 65,535 through 160,000,000,000 bps. On all other platforms, the rate can be from 3200 through 160,000,000,000 bps.
- **percent *percentage***—Percentage of transmission capacity.
- **remainder**—Use remaining rate available. In the configuration, you cannot combine the **remainder** and **exact** options.
- **exact**—(Optional) Enforce the exact transmission rate or percentage you configure with the **transmit-rate *rate*** or **transmit-rate percent** statement. Under sustained congestion, a rate-controlled queue that goes into negative credit fills up and eventually drops packets. You specify the **exact** option as follows:

```
[edit class-of-service schedulers scheduler-name]  
transmit-rate rate exact;
```

```
[edit class-of-service schedulers scheduler-name]  
transmit-rate percent percentage exact;
```

In the configuration, you cannot combine the **remainder** and **exact** options.



NOTE:

- Including the **exact** option is not supported on Enhanced Queuing Dense Port Concentrators (DPCs) on Juniper Network MX Series 3D Universal Edge Routers.
- The configuration of the **transmit-rate percent 0 exact** statement at the [edit class-of-service schedulers *scheduler-name*] hierarchy is ineffective on T4000 routers with Type 5 FPCs.

- **rate-limit**—(Optional) Limit the transmission rate to the specified amount. You can configure this option for all 8 queues of a logical interface (unit) and apply it to shaped or unshaped logical interfaces. If you configure a zero rate-limited transmit rate, all packets belonging to that queue are dropped. On IQE PICs, the **rate-limit** option for the schedulers' transmit rate is implemented as a static policer. Therefore, these schedulers are not aware of congestion and the maximum rate possible on these schedulers is limited by the value specified in the **transmit-rate** statement. Even if there is no congestion, the queue cannot send traffic above the transmit rate due to the static policer.



NOTE: You can apply a transmit rate limit to logical interfaces on Multiservices 100, 400, or 500 PICs. Typically, rate limits are used to prevent a strict-high queue (such as voice) from starving lower priority queues. You can only rate-limit one queue per logical interface. To apply a rate-limit to a Multiservices PIC interface, configure the rate limit in a scheduler and apply the scheduler map to the Multiservices (lsq-) interface at the [edit class-of-service interfaces] hierarchy level. For information about configuring other scheduler components, see [“Configuring Schedulers” on page 160](#).

For more information about scheduler transmission rate, see the following sections:

- [Example: Configuring Scheduler Transmission Rate on page 174](#)
- [Allocation of Leftover Bandwidth on page 174](#)

Example: Configuring Scheduler Transmission Rate

Configure the **best-effort** scheduler to use the remainder of the bandwidth on any interface to which it is assigned:

```
class-of-service {
  schedulers {
    best-effort {
      transmit-rate remainder;
    }
  }
}
```

Allocation of Leftover Bandwidth

The allocation of leftover bandwidth is a complex topic. It is difficult to predict and to test, because the behavior of the software varies depending on the traffic mix.

If a queue receives offered loads in excess of the queue's bandwidth allocation, the queue has negative bandwidth credit, and receives a share of any available leftover bandwidth. Negative bandwidth credit means the queue has used up its allocated bandwidth. If a queue's bandwidth credit is positive, meaning it is not receiving offered loads in excess of its bandwidth configuration, then the queue does not receive a share of leftover bandwidth. If the credit is positive, then the queue does not need to use leftover bandwidth, because it can use its own allocation.

This use of leftover bandwidth is the default. If you do not want a queue to use any leftover bandwidth, you must configure it for strict allocation by including the **transmit-rate** statement with the **exact** option at the **[edit class-of-service schedulers scheduler-name]** hierarchy level. With rate control in place, the specified bandwidth is strictly observed. (On Juniper Networks J Series routers, the **exact** option is useful within a given priority, but not between the priorities. For more information, see [“Configuring Schedulers for Priority Scheduling” on page 177.](#))

On J Series routers, leftover bandwidth is allocated to queues with negative credit in proportion to the configured transmit rate of the queues within a given priority level.

Juniper Networks M Series Multiservice Edge Routers and T Series Core Routers do not distribute leftover bandwidth in proportion to the configured transmit rate of the queues. Instead, the scheduler distributes the leftover bandwidth equally in round-robin fashion to queues that have negative bandwidth credit. All negative-credit queues can take the leftover bandwidth in equal share. This description suggests a simple round-robin distribution process among the queues with negative credits. In actual operation, a queue might change its bandwidth credit status from positive to negative and from negative to positive instantly while the leftover bandwidth is being distributed. Lower-rate queues tend to be allocated a larger share of leftover bandwidth, because their bandwidth credit is more likely to be negative at any given time, if they are overdriven persistently. Also, if

there is a large packet size difference, (for example, queue 0 receives 64-byte packets, whereas queue 1 receives 1500-byte packets), then the actual leftover bandwidth distribution ratio can be skewed substantially, because each round-robin turn allows exactly one packet to be transmitted by a negative-credit queue, regardless of the packet size.

By default, on MX Series routers, the M320 Enhanced Type 4 FPCs, and T4000 routers with Type 5 FPCs, excess bandwidth is shared in the ratio of the transmit rates. You can adjust this distribution by configuring the **excess-rate** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level. You can specify the excess rate sharing by percentage or by proportion.

In summary, J Series routers distribute leftover bandwidth in proportion to the configured rates of the negative-credit queues within a given priority level. M Series and T Series routers distribute leftover bandwidth in equal shares for the queues with the same priority and same negative-credit status. MX Series routers and M320 Enhanced Type 4 FPCs, share excess bandwidth in the ratio of the transmit rates, but you can adjust this distribution.

**Related
Documentation**

- [Configuring Schedulers for Priority Scheduling on page 177](#)
- [Schedulers Overview on page 158](#)
- [Configuring a Scheduler](#)
- [excess-rate on page 593](#)
- [schedulers on page 703](#)

Priority Scheduling Overview

The Junos OS supports multiple levels of transmission priority, which in order of increasing priority are **low**, **medium-low**, **medium-high**, and **high**, and **strict-high**. This allows the software to service higher-priority queues before lower-priority queues.

Priority scheduling determines the order in which an output interface transmits traffic from the queues, thus ensuring that queues containing important traffic are provided better access to the outgoing interface. This is accomplished through a procedure in which the software examines the priority of the queue. In addition, the software determines if the individual queue is within its defined bandwidth profile. The bandwidth profile is discussed in “[Configuring Scheduler Transmission Rate](#)” on page 172. This binary decision, which is reevaluated on a regular time cycle, compares the amount of data transmitted by the queue against the amount of bandwidth allocated to it by the scheduler. When the transmitted amount is less than the allocated amount, the queue is considered to be in profile. A queue is out of profile when its transmitted amount is larger than its allocated amount.

The queues for a given output physical interface (or output logical interface if per-unit scheduling is enabled on that interface) are divided into sets based on their priority. Any such set contains queues of the same priority.

The software traverses the sets in descending order of priority. If at least one of the queues in the set has a packet to transmit, the software selects that set. A queue from the set is selected based on the weighted round robin (WRR) algorithm, which operates within the set.

The Junos OS performs priority queuing using the following steps:

1. The software locates all high-priority queues that are currently in profile. These queues are serviced first in a weighted round-robin fashion.
2. The software locates all medium-high priority queues that are currently in profile. These queues are serviced second in a weighted round-robin fashion.
3. The software locates all medium-low priority queues that are currently in profile. These queues are serviced third in a weighted round-robin fashion.
4. The software locates all low-priority queues that are currently in profile. These queues are serviced fourth in a weighted round-robin fashion.
5. The software locates all high-priority queues that are currently out of profile and are not rate limited. The weighted round-robin algorithm is applied to these queues for servicing.
6. The software locates all medium-high priority queues that are currently out of profile and are not rate limited. The weighted round-robin algorithm is applied to these queues for servicing.
7. The software locates all medium-low priority queues that are currently out of profile and are not rate limited. The weighted round-robin algorithm is applied to these queues for servicing.
8. The software locates all low-priority queues that are currently out of profile and are also not rate limited. These queues are serviced last in a weighted round-robin manner.

Platform Support for Priority Scheduling

Hardware platforms support queue priorities in different ways:

- On all platforms, you can configure one queue per interface to have strict-high priority. However, strict-high priority works differently on Juniper Networks J Series Services Routers than it does on M Series Multiservice Edge Routers and T Series Core Routers. For configuration instructions, see the J Series router documentation and ["Configuring Schedulers for Priority Scheduling" on page 177](#).
- Strict-high priority works differently on AS PIC link services IQ (**lsq-**) interfaces. For link services IQ interfaces, a queue with strict-high priority might starve all the other queues. For more information, see the Junos Services Interfaces Configuration Release 11.2.
- On Juniper Networks J Series Services Routers, **high** priority queues might starve **low** priority queues. For example:

Queue priority and transmission rate:
Queue 0: priority low, transmit-rate 50 percent
Queue 2: priority high, transmit-rate 30 percent

Traffic profile:

Queue 0: 100 percent of the interface speed

Queue 2: 100 percent of the interface speed

Results:

Queue 0: 0 percent of traffic is delivered.

Queue 2: 100 percent of traffic is delivered.

- On J Series routers, you can include the **transmit-rate** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level to assign the WRR weights within a given priority level and not between priorities.
- On J Series routers, adding the **exact** option with the **transmit-rate** statement is useful within a given priority and not between the priorities.
- The priority levels you configure map to hardware priority levels. These priority mappings depend on the FPC type in which the PIC is installed.

Table 26 on page 177 shows the priority mappings by FPC type. Note, for example, that on Juniper Networks M320 Multiservice Edge Routers FPCs, T Series Core Routers FPCs and T Series Enhanced FPCs, the software priorities **medium-low** and **medium-high** behave similarly because they map to the same hardware priority level.

Table 26: Scheduling Priority Mappings by FPC Type

Priority Levels	Mappings for FPCs	Mappings for M320 FPCs and T Series Enhanced FPCs	Mappings for M120 FEBs
low	0	0	0
medium-low	0	1	1
medium-high	1	1	2
high	1	2	3
strict-high (full interface bandwidth)	1	2	3

Related Documentation

- [Schedulers Overview on page 158](#)
- [Configuring Schedulers for Priority Scheduling on page 177](#)

Configuring Schedulers for Priority Scheduling

To configure priority scheduling, include the **priority** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
priority priority-level;
```

The priority level can be **low**, **medium-low**, **medium-high**, **high**, or **strict-high**. The priorities map to numeric priorities in the underlying hardware. In some cases, different priorities

behave similarly, because two software priorities behave differently only if they map to two distinct hardware priorities. For more information, see [“Platform Support for Priority Scheduling” on page 176](#).

Higher-priority queues transmit packets ahead of lower priority queues as long as the higher-priority forwarding classes retain enough bandwidth credit. When you configure a higher-priority queue with a significant fraction of the transmission bandwidth, the queue might lock out (or *starve*) lower priority traffic.

Strict-high priority queuing works differently on different platforms. For information about strict-high priority queuing on J Series Services Routers, see the J Series router documentation.

The following sections discuss priority scheduling:

- [Example: Configuring Priority Scheduling on page 178](#)
- [Configuring Strict-High Priority on M Series and T Series Routers on page 178](#)

Example: Configuring Priority Scheduling

Configure priority scheduling, as shown in the following example:

1. Configure a scheduler, **be-sched**, with **medium-low** priority.

```
[edit class-of-service]
schedulers {
  be-sched {
    priority medium-low;
  }
}
```

2. Configure a scheduler map, **be-map**, that associates **be-sched** with the **best-effort** forwarding class.

```
[edit class-of-service]
scheduler-maps {
  be-map {
    forwarding-class best-effort scheduler be-sched;
  }
}
```

3. Assign **be-map** to a Gigabit Ethernet interface, **ge-0/0/0**.

```
[edit class-of-service]
interfaces {
  ge-0/0/0 {
    scheduler-map be-map;
  }
}
```

Configuring Strict-High Priority on M Series and T Series Routers

On M Series Multiservice Edge Routers and T Series Core Routers, you can configure one queue per interface to have **strict-high** priority, which works the same as **high** priority, but provides unlimited transmission bandwidth. As long as the queue with **strict-high** priority

has traffic to send, it receives precedence over all other queues, except queues with **high** priority. Queues with **strict-high** and **high** priority take turns transmitting packets until the **strict-high** queue is empty, the **high** priority queues are empty, or the **high** priority queues run out of bandwidth credit. Only when these conditions are met can lower priority queues send traffic.

When you configure a queue to have **strict-high** priority, you do not need to include the **transmit-rate** statement in the queue configuration at the **[edit class-of-service schedulers scheduler-name]** hierarchy level because the transmission rate of a **strict-high** priority queue is not limited by the WRR configuration. If you do configure a transmission rate on a **strict-high** priority queue, it does not affect the WRR operation. The transmission rate only serves as a placeholder in the output of commands such as the **show interface queue** command.

strict-high priority queues might starve **low** priority queues. The **high** priority allows you to protect traffic classes from being starved by traffic in a **strict-high** queue. For example, a network-control queue might require a small bandwidth allocation (say, 5 percent). You can assign **high** priority to this queue to prevent it from being underserved.

A queue with **strict-high** priority supersedes bandwidth guarantees for queues with lower priority; therefore, we recommend that you use the **strict-high** priority to ensure proper ordering of special traffic, such as voice traffic. You can preserve bandwidth guarantees for queues with lower priority by allocating to the queue with **strict-high** priority only the amount of bandwidth that it generally requires. For example, consider the following allocation of transmission bandwidth:

- Q0 BE—20 percent, low priority
- Q1 EF—30 percent, strict-high priority
- Q2 AF—40 percent, low priority
- Q3 NC—10 percent, low priority

This bandwidth allocation assumes that, in general, the EF forwarding class requires only 30 percent of an interface's transmission bandwidth. However, if short bursts of traffic are received on the EF forwarding class, 100 percent of the bandwidth is given to the EF forwarding class because of the **strict-high** setting.

**Related
Documentation**

- [Schedulers Overview on page 158](#)
- [Platform Support for Priority Scheduling on page 176](#)

Configuring Scheduler Maps

After defining a scheduler, you can associate it with a specified forwarding class by including it in a *scheduler map*. To do this, include the **scheduler-maps** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
scheduler-maps {
  map-name {
```

```
        forwarding-class class-name scheduler scheduler-name;  
    }  
}
```

Applying Scheduler Maps Overview

Physical interfaces (for example, **t3-0/0/0**, **t3-0/0/0:0**, and **ge-0/0/0**) support scheduling with any encapsulation type pertinent to that physical interface. For a single port, you cannot apply scheduling to the physical interface if you have applied scheduling to one or more of the associated logical interfaces.

Logical interfaces (for example, **t3-0/0/0 unit 0** and **ge-0/0/0 unit 0**) support scheduling on data link connection identifiers (DLCIs) or VLANs only.

In the Junos OS implementation, the term *logical interfaces* generally refers to interfaces you configure by including the **unit** statement at the **[edit interfaces *interface-name*]** hierarchy level. Logical interfaces have the *.logical* descriptor at the end of the interface name, as in **ge-0/0/0.1** or **t1-0/0/0:0.1**, where the logical unit number is 1.

Although channelized interfaces are generally thought of as logical or virtual, the Junos OS sees T3, T1, and NxDS0 interfaces within a channelized IQ PIC as physical interfaces. For example, both **t3-0/0/0** and **t3-0/0/0:1** are treated as physical interfaces by the Junos OS. In contrast, **t3-0/0/0.2** and **t3-0/0/0:1.2** are considered logical interfaces because they have the *.2* at the end of the interface names.

Within the **[edit class-of-service]** hierarchy level, you cannot use the *.logical* descriptor when you assign properties to logical interfaces. Instead, you must include the **unit** statement in the configuration. For example:

```
[edit class-of-service]  
user@host# set interfaces t3-0/0/0 unit 0 scheduler-map map1
```

Related Documentation

To apply a scheduler map to network traffic, you associate the map with an interface. See the following topics:

- [Applying Scheduler Maps to Physical Interfaces on page 181](#)
- [Applying Scheduler Maps and Shaping Rate to Physical Interfaces on IQ PICs on page 181](#)
- [Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs on page 188](#)
- [Oversubscribing Interface Bandwidth on page 199](#)
- [Providing a Guaranteed Minimum Rate on page 207](#)
- [Applying Scheduler Maps to Packet Forwarding Component Queues on page 211](#)
- [Default Fabric Priority Queuing on page 217](#)
- [Associating Schedulers with Fabric Priorities on page 217](#)

Applying Scheduler Maps to Physical Interfaces

After you have defined a scheduler map, as described in “Configuring Scheduler Maps” on page 179, you can apply it to an output interface. Include the **scheduler-map** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level:

```
[edit class-of-service interfaces interface-name]
scheduler-map map-name;
```

Interface wildcards are supported. However, scheduler maps using wildcard interfaces are not checked against router interfaces at commit time and can result in a configuration that is incompatible with installed hardware. Fully specified interfaces, on the other hand, check the configuration against the hardware and report errors or warning if the hardware does not support the configuration.

Generally, you can associate schedulers with physical interfaces only. For some IQ interfaces, you can also associate schedulers with the logical interface. For more information, see “Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs” on page 188.



NOTE: For original Channelized OC12 PICs, limited CoS functionality is supported. For more information, contact Juniper Networks customer support.

When you apply a scheduler map to a physical interface, or when you modify the configuration of a scheduler map that is already applied to a physical interface, packets already in the output queues of the interface might get dropped. The amount of packet loss is not deterministic and depends on the offered traffic load at the time you apply or modify the scheduler map.

Applying Scheduler Maps and Shaping Rate to Physical Interfaces on IQ PICs

For IQ PICs, you can configure physical interfaces to shape traffic based on the rate-limited bandwidth of the total interface bandwidth. This allows you to shape the output of the physical interface, so that the interface transmits less traffic than it is physically capable of carrying.

If you do not configure a shaping rate on the physical interface, the default physical interface bandwidth is based on the channel bandwidth and the time slot allocation.



NOTE: The **shaping-rate** statement cannot be applied to a physical interface on J Series routers.

To configure shaping on the interface, include the **shaping-rate** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level:

```
[edit class-of-service interfaces interface-name]
shaping-rate rate;
```

You can specify a peak bandwidth rate in bps, either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). For physical interfaces, the range is from 1000 through 160,000,000,000 bps. For the IQ2 Gigabit Ethernet PIC, the minimum is 80,000 bps, and for the IQ2 10 Gigabit Ethernet PIC, the minimum is 160,000 bps. (For logical interfaces, the range is 1000 through 32,000,000,000 bps.) The sum of the bandwidths you allocate to all physical interfaces on a PIC must not exceed the bandwidth of the PIC.



NOTE: For MX Series routers, the shaping rate value for the physical interface at the `[edit class-of-service interfaces interface-name]` hierarchy level must be a minimum of 160 Kbps.

If you configure a shaping rate that exceeds the physical interface bandwidth, the new configuration is ignored, and the previous configuration remains in effect. For example, if you configure a shaping rate that is 80 percent of the physical interface bandwidth, then change the configuration to 120 percent of the physical interface bandwidth, the 80 percent setting remains in effect. This holds true unless the PIC is restarted, in which case the default bandwidth goes into effect. As stated previously, the default bandwidth is based on the channel bandwidth and the time slot allocation.

Optionally, you can instead configure scheduling and rate shaping on logical interfaces, as described in [“Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs” on page 188](#). In general, logical and physical interface traffic shaping is mutually exclusive. You can include the **shaping-rate** statement at the `[edit class-of-service interfaces interface-name]` hierarchy level or the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level, but not both. For Gigabit Ethernet IQ2 and IQ2E PICs, you can configure hierarchical traffic shaping, meaning the shaping is performed on both the physical interface and the logical interface. For more information, see [“Configuring Hierarchical Input Shapers” on page 379](#).

To view the results of your configuration, issue the following **show** commands:

- **show class-of-service interface *interface-name***
- **show interfaces *interface-name* extensive**
- **show interfaces queue**

For more information, see the following sections:

- [Shaping Rate Calculations on page 182](#)
- [Examples: Applying a Scheduler Map and Shaping Rate to Physical Interfaces on page 183](#)

Shaping Rate Calculations

For shaping rate and WRR, the information included in the calculations varies by PIC type, as shown in [Table 27 on page 183](#).



NOTE: The 10-port 10-Gigabit Oversubscribed Ethernet (OSE) PICs and Gigabit Ethernet IQ2 PICs are unique in supporting ingress scheduling and shaping. The calculations shown for 10-port 10-Gigabit OSE and Gigabit Ethernet IQ2 PICs apply to both ingress and egress scheduling and shaping. For other PICs, the calculations apply to egress scheduling and shaping only.

For more information, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).

Table 27: Shaping Rate and WRR Calculations by PIC Type

PIC Type	Platform	Shaping Rate and WRR Calculations Include
10-port 10-Gigabit OSE PIC	T Series Core Routers	For ingress and egress: L3 header + L2 header + frame check sequence (FCS) + interpacket gap (IPG) + preamble
Gigabit Ethernet IQ2 PIC	All	For ingress and egress: L3 header + L2 header + frame check sequence (FCS)
Gigabit Ethernet IQ PIC	All	L3 header + L2 header + FCS
Non-IQ PIC	M320 and T Series Enhanced FPCs	L3 header + L2 header + 4-byte FCS + interpacket gap (IPG) + start-of-frame delimiter (SFD)+ preamble
	T Series non-Enhanced FPCs	L3 header
	Other M Series FPCs	L3 header+ L2 header
IQ PIC with a SONET/SDH interface	All	L3 header+ L2 header + FCS
Non-IQ PIC with a SONET/SDH interface	M320 and T Series Enhanced FPCs	L3 header +L2 header + 4-byte FCS + IPG + SFD + Preamble
	T Series non-Enhanced FPCs	L3 header
	Other M Series FPCs	L3 header+L2 header

Examples: Applying a Scheduler Map and Shaping Rate to Physical Interfaces

Applying a Shaping Rate to a Clear-Channel T1 Interface on a Channelized T1 IQ PIC

```
[edit interfaces]
ct1-2/1/0 {
  no-partition interface-type t1;
}
t1-2/1/0 {
  unit 0 {
    family inet {
      address 10.40.1.1/30;
    }
  }
}
```

	<pre> } } }</pre> <pre>[edit class-of-service] interfaces { t1-2/1/0 { shaping-rate 3000; } }</pre>
Applying a Scheduler Map and Shaping Rate to a DSO Channel of a Channelized T1 Interface on a Channelized T1 IQ PIC	<pre>[edit interfaces] ct1-0/0/9 { partition 1 timeslots 1-2 interface-type ds; } ds-0/0/9:1 { no-keepalives; unit 0 { family inet { address 10.10.1.1/30; } } } [edit class-of-service] interfaces { ds-0/0/9:1 { scheduler-map sched_port_1; shaping-rate 2000; } }</pre>
Applying a Shaping Rate to a Clear-Channel E1 Interface on a Channelized E1 IQ PIC	<pre>[edit interfaces] ce1-2/1/0 { no-partition interface-type e1; } e1-2/1/0 { unit 0 { family inet { address 10.40.1.1/30; } } } [edit class-of-service] interfaces { e1-2/1/0 { shaping-rate 4000; } }</pre>
Applying a Scheduler Map and Shaping Rate to DSO Channels of a Channelized E1	<pre>[edit interfaces] ce1-1/3/1 { partition 1 timeslots 1-4 interface-type ds; partition 2 timeslots 5-6 interface-type ds;</pre>

Interface on a Channelized E1 IQ PIC	<pre> } ds-1/3/1:1 { no-keepalives; unit 0 { family inet { address 10.10.1.1/30; } } } ds-1/3/1:2 { no-keepalives; unit 0 { family inet { address 10.10.1.5/30; } } } [edit class-of-service] interfaces { ds-1/3/1:1 { scheduler-map sched_port_1; shaping-rate 1000; } ds-1/3/1:2 { scheduler-map sched_port_1; shaping-rate 1500; } } </pre>
Applying a Scheduler Map and Shaping Rate to a Clear-Channel T3 Interface on a Channelized DS3 IQ PIC	<pre> [edit interfaces] ct3-2/1/0 { no-partition; } t3-2/1/0 { unit 0 { family inet { address 10.40.1.1/30; } } } [edit class-of-service] interfaces { t3-2/1/0 { shaping-rate 2500; unit 0 { scheduler-map sched_port_1; } } } </pre>
Applying a Scheduler Map and Shaping Rate to Fractional T1	<pre> [edit interfaces] ct3-1/1/3 { partition 1-3 interface-type t1; } </pre>

Interfaces on a Channelized DS3 IQ PIC	<pre> } t1-1/1/3:1 { t1-options { timeslots 1-2; } unit 0 { family inet { address 10.10.1.1/30; } } } t1-1/1/3:2 { t1-options { timeslots 3-6; } unit 0 { family inet { address 10.10.1.5/30; } } } t1-1/1/3:3 { t1-options { timeslots 7-12; } unit 0 { family inet { address 10.10.1.9/30; } } } [edit class-of-service] interfaces { t1-1/1/3:1 { scheduler-map sched_port_1; shaping-rate 1200; } t1-1/1/3:2 { scheduler-map sched_port_1; shaping-rate 1300; } t1-1/1/3:3 { scheduler-map sched_port_1; shaping-rate 1400; } } </pre>
Applying a Scheduler Map and Shaping Rate to a DS0 Channel of a T1 Interface in a Channelized T3 Interface on a	<pre> [edit interfaces] ct3-2/1/3 { partition 1 interface-type ct1; } ct1-2/1/3:1 { partition 1 timeslots 1-4 interface-type ds; } </pre>

```

Channelized DS3 IQ    ds-2/1/3:1 {
PIC                   unit 0 {
                        family inet {
                            address 10.20.144.1/30;
                        }
                    }
                }

[edit class-of-service]
interfaces {
    ds-2/1/3:1 {
        scheduler-map sched_port_1;
        shaping-rate 1100;
    }
}


```

Example: Configuring VLAN Shaping on Aggregated Interfaces

Virtual LAN (VLAN) shaping (per-unit scheduling) is supported on aggregated Ethernet interfaces when link protection is enabled on the aggregated Ethernet interface. When VLAN shaping is configured on aggregate Ethernet interfaces with link protection enabled, the shaping is applied to the active child link. To configure link protection on aggregated Ethernet interfaces, include the **link-protection** statement at the **[edit interfaces aex aggregated-ether-options]** hierarchy level. Traffic passes only through the designated primary link. This includes transit traffic and locally generated traffic on the router. When the primary link fails, traffic is routed through the backup link. You also can reverse traffic, from the designated backup link to the designated primary link. To revert back to sending traffic to the primary designated link when traffic is passing through the designated backup link, use the **revert** command. For example, **request interfaces revert ae0**. To configure a primary and a backup link, include the **primary** and **backup** statements at the **[edit interfaces ge-fpc/pic/port gigether-options 802.3ad aex]** hierarchy level or the **[edit interfaces xe-fpc/pic/port fastether-options 802.3ad aex]** hierarchy level. To disable link protection, delete the **link-protection** statement at **[edit interfaces aex aggregated-ether-options link-protection]** hierarchy level. To display the active, primary, and backup link for an aggregated Ethernet interface, use the operational mode command **show interfaces redundancy aex**.

Figure 13 on page 188 shows how the flow of traffic changes from primary to backup when the primary link in an aggregate bundle fails.

Figure 13: Aggregated Ethernet Primary and Backup Links

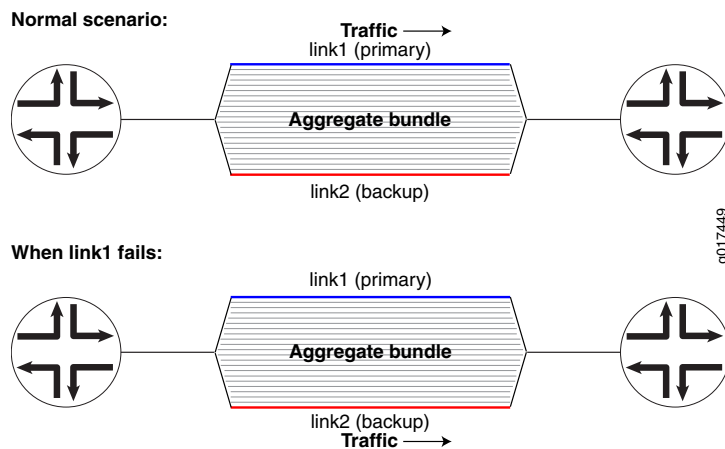

This example configures two Gigabit Ethernet interfaces (**primary** and **backup**) as an aggregated Ethernet bundle (**ae0**) and enables link protection so that a shaping rate can be applied.

```
[edit class-of-service]
interface ae0 {
  shaping-rate 300m;
}
[edit interfaces]
ge-1/0/0 {
  gigaether-options {
    802.3ad ae0 primary;
  }
}
ge-1/0/1 {
  gigaether-options {
    802.3ad ae0 backup;
  }
}
ae0 {
  aggregated-ether-options {
    lacp {
      periodic slow;
    }
    link-protection {
      enable;
    }
  }
}
```

Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs

By default, output scheduling is not enabled on logical interfaces. Logical interfaces without shaping configured share a default scheduler. This scheduler has a committed information rate (CIR) that equals 0. (The CIR is the guaranteed rate.) The default scheduler has a peak information rate (PIR) that equals the physical interface shaping rate.



NOTE: If you apply a shaping rate, you must keep in mind that the transit statistics for physical interfaces are obtained from the packet forwarding engine, but the traffic statistics are supplied by the PIC. Therefore, if shaping is applied to the PIC, the count of packets in the transit statistics fields do not always agree with the counts in the traffic statistics. For example, the IPv6 transit statistics will not necessarily match the traffic statistics on the interface. However, at the logical interface (DLCI) level, both transit and traffic statistics are obtained from the Packet Forwarding Engine and will not show any difference.

Logical interface scheduling (also called *per-unit scheduling*) allows you to enable multiple output queues on a logical interface and associate an output scheduler and shaping rate with the queues. You can configure logical interface scheduling on the following PICs:

- Adaptive Services PIC, on link services IQ (**lsq-**) interfaces
- Channelized E1 IQ PIC
- Channelized OC3 IQ PIC
- Channelized OC12 IQ PIC (Per-unit scheduling is not supported on T1 interfaces configured on this PIC.)
- Channelized STM1 IQ PIC
- Channelized T3 IQ PIC
- E3 IQ PIC
- Gigabit Ethernet IQ PIC
- Gigabit Ethernet IQ2 PIC
- IQE PICs
- Link services PIM (**ls-** interfaces) on J Series routers

For Juniper Networks J Series Services Routers only, you can configure per-unit scheduling for virtual channels. For more information, see the J Series router documentation.

For Channelized and Gigabit Ethernet IQ PICs only, you can configure a shaping rate for a VLAN or DLCI and oversubscribe the physical interface by including the **shaping-rate** statement at the **[edit class-of-service traffic-control-profiles]** hierarchy level. With this configuration approach, you can independently control the delay-buffer rate, as described in [“Oversubscribing Interface Bandwidth” on page 199](#).

Physical interfaces (for example, **t3-0/0/0**, **t3-0/0/0:0**, and **ge-0/0/0**) support scheduling with any encapsulation type pertinent to that physical interface. For a single port, you cannot apply scheduling to the physical interface if you apply scheduling to one or more of the associated logical interfaces.

For Gigabit Ethernet IQ2 PIC PICs only, you can configure hierarchical traffic shaping, meaning the shaping is performed on both the physical interface and the logical interface.

You can also configure input traffic scheduling and shared scheduling. For more information, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).

Logical interfaces (for example, `t3-0/0/0.0`, `ge-0/0/0.0`, and `t1-0/0/0.0.1`) support scheduling on DLCIs or VLANs only. Furthermore, logical interface scheduling is not supported on PICs that do not have IQ.



NOTE: In the Junos OS implementation, the term *logical interfaces* generally refers to interfaces you configure by including the unit statement at the `[edit interfaces interface-name]` hierarchy level. As such, logical interfaces have the *logical* descriptor at the end of the interface name, as in `ge-0/0/0.1` or `t1-0/0/0.0.1`, where the logical unit number is 1.

Although channelized interfaces are generally thought of as logical or virtual, the Junos OS sees T3, T1, and NxDS0 interfaces within a channelized IQ PIC as physical interfaces. For example, both `t3-0/0/0` and `t3-0/0/0.1` are treated as physical interfaces by the Junos OS. In contrast, `t3-0/0/0.2` and `t3-0/0/0.1.2` are considered logical interfaces because they have the .2 at the end of the interface names.

Within the `[edit class-of-service]` hierarchy level, you cannot use the *.logical* descriptor when you assign properties to logical interfaces. Instead, you must include the unit statement in the configuration. For example:

```
[edit class-of-service]
user@host# set interfaces t3-0/0/0 unit 0 scheduler-map map1
```

Table 28 on page 190 shows the interfaces that support transmission scheduling.

Table 28: Transmission Scheduling Support by Interfaces Type

Interface Type	PIC Type	Supported	Examples
IQ PICs			
Physical interfaces	ATM2 IQ	Yes	Example of supported configuration: [edit class-of-service interfaces at-0/0/0] scheduler-map map-1;
Channelized interfaces configured on IQ PICs	Channelized DS3 IQ	Yes	Example of supported configuration: [edit class-of-service interfaces t1-0/0/0.1] scheduler-map map-1;

Table 28: Transmission Scheduling Support by Interfaces Type (*continued*)

Interface Type	PIC Type	Supported	Examples
Logical interfaces (DLCIs and VLANs only) configured on IQ PICs	Gigabit Ethernet IQ with VLAN tagging enabled	Yes	Example of supported configuration: [edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
	E3 IQ with Frame Relay encapsulation	Yes	Example of supported configuration: [edit class-of-service interfaces e3-0/0/0 unit 1] scheduler-map map-1;
	Channelized OC3 IQ with Frame Relay encapsulation	Yes	Example of supported configuration: [edit class-of-service interfaces t1-1/0/0:1 unit 0] scheduler-map map-1;
	Channelized STM1 IQ with Frame Relay encapsulation	Yes	Example of supported configuration: [edit class-of-service interfaces e1-0/0/0:1 unit 1] scheduler-map map-1;
	Channelized T3 IQ with Frame Relay encapsulation	Yes	Example of supported configuration: [edit class-of-service interfaces t1-0/0/0 unit 1] scheduler-map map-1;
Logical interfaces configured on IQ PICs (interfaces that are not DLCIs or VLANs)	E3 IQ PIC with Cisco HDLC encapsulation	No	Example of unsupported configuration: [edit class-of-service interfaces e3-0/0/0 unit 1] scheduler-map map-1;
	ATM2 IQ PIC with LLC/SNAP encapsulation	No	Example of unsupported configuration: [edit class-of-service interfaces at-0/0/0 unit 1] scheduler-map map-1;
	Channelized OC12 IQ PIC with PPP encapsulation	No	Example of unsupported configuration: [edit class-of-service interfaces t1-0/0/0:1 unit 1] scheduler-map map-1;
Non-IQ PICs			
Physical interfaces	T3	Yes	Example of supported configuration: [edit class-of-service interfaces t3-0/0/0] scheduler-map map-1;
Channelized OC12 PIC	Channelized OC12	Yes	Example of supported configuration: [edit class-of-service interfaces t3-0/0/0:1] scheduler-map map-1;

Table 28: Transmission Scheduling Support by Interfaces Type (*continued*)

Interface Type	PIC Type	Supported	Examples
Channelized interfaces (except the Channelized OC12 PIC)	Channelized STM1	No	Example of unsupported configuration: [edit class-of-service interfaces e1-0/0/0:1] scheduler-map map-1;
Logical interfaces	Fast Ethernet	No	Example of unsupported configuration: [edit class-of-service interfaces fe-0/0/0 unit 1] scheduler-map map-1;
	Gigabit Ethernet	No	Example of unsupported configuration: [edit class-of-service interfaces ge-0/0/0 unit 0] scheduler-map map-1;
	ATM1	No	Example of unsupported configuration: [edit class-of-service interfaces at-0/0/0 unit 2] scheduler-map map-1;
	Channelized OC12	No	Example of unsupported configuration: [edit class-of-service interfaces t3-0/0/0:0 unit 2] scheduler-map map-1;

To configure transmission scheduling on logical interfaces, perform the following steps:

1. Enable scheduling on the interface by including the **per-unit-scheduler** statement at the [edit interfaces *interface-name*] hierarchy level:

```
[edit interfaces interface-name]  
per-unit-scheduler;
```

When you include this statement, the maximum number of VLANs supported is 768 on a single-port Gigabit Ethernet IQ PIC. On a dual-port Gigabit Ethernet IQ PIC, the maximum number is 384.

2. Associate a scheduler with the interface by including the **scheduler-map** statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number*] hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]  
scheduler-map map-name;
```

3. Configure shaping on the interface by including the **shaping-rate** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
  shaping-rate rate;
```

By default, the logical interface bandwidth is the average of unused bandwidth for the number of logical interfaces that require default bandwidth treatment. You can specify a peak bandwidth rate in bps, either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). The range is from 1000 through 32,000,000,000 bps. For the IQ2 Gigabit Ethernet PIC, the minimum is 80,000 bps, and for the IQ2 10 Gigabit Ethernet PIC, the minimum is 160,000 bps.

For FRF.16 bundles on link services interfaces, only shaping rates based on percentage are supported.



NOTE: If you apply a shaping rate, you must keep in mind that the transit statistics for physical interfaces are obtained from the packet forwarding engine, but the traffic statistics are supplied by the PIC. Therefore, if shaping is applied to the PIC, the count of packets in the transit statistics fields do not always agree with the counts in the traffic statistics. For example, the IPv6 transit statistics will not necessarily match the traffic statistics on the interface. However, at the logical interface (DLCI) level, both transit and traffic statistics are obtained from the Packet Forwarding Engine and will not show any difference.

Example: Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs

Associate the scheduler **sched-map-logical-0** with logical interface **unit 0** on physical interface **t3-1/0/0**, and allocate 10 Mbps of transmission bandwidth to the logical interface.

Associate the scheduler **sched-map-logical-1** with logical interface **unit 1** on physical interface **t3-1/0/0**, and allocate 20 Mbps of transmission bandwidth to the logical interface.

The allocated bandwidth is shared among the individual forwarding classes in the scheduler map. Although these schedulers are configured on a single physical interface, they are independent from each other. Traffic on one logical interface unit does not affect the transmission priority, bandwidth allocation, or drop behavior on the other logical interface unit.

For another example, see the Junos OS Feature Guides.

```
[edit interfaces]
t3-1/0/0:1 {
  encapsulation frame-relay;
  per-unit-scheduler;
}
```

```
[edit class-of-service]
interfaces {
  t3-1/0/0:1 {
    unit 0 {
      scheduler-map sched-map-logical-0;
      shaping-rate 10m;
    }
    unit 1 {
      scheduler-map sched-map-logical-1;
      shaping-rate 20m;
    }
  }
}
scheduler-maps {
  sched-map-logical-0 {
    forwarding-class best-effort scheduler sched-best-effort-0;
    forwarding-class assured-forwarding scheduler sched-bronze-0;
    forwarding-class expedited-forwarding scheduler sched-silver-0;
    forwarding-class network-control scheduler sched-gold-0;
  }
  sched-map-logical-1 {
    forwarding-class best-effort scheduler sched-best-effort-1;
    forwarding-class assured-forwarding scheduler sched-bronze-1;
    forwarding-class expedited-forwarding scheduler sched-silver-1;
    forwarding-class network-control scheduler sched-gold-1;
  }
}
schedulers {
  sched-best-effort-0 {
    transmit-rate 4m;
  }
  sched-bronze-0 {
    transmit-rate 3m;
  }
  sched-silver-0 {
    transmit-rate 2m;
  }
  sched-gold-0 {
    transmit-rate 1m;
  }
  sched-best-effort-1 {
    transmit-rate 8m;
  }
  sched-bronze-1 {
    transmit-rate 6m;
  }
  sched-silver-1 {
    transmit-rate 4m;
  }
  sched-gold-1 {
    transmit-rate 2m;
  }
}
```

Configuring Per-Unit Schedulers for Channelized Interfaces

You can configure per-unit scheduling on T1 and DS0 physical interfaces configured on channelized DS3 and STM1 IQ PICs. To enable per-unit scheduling, configure the **per-unit-scheduler** statements at the **[edit interfaces *interface-name*]** hierarchy level.

When per-unit scheduling is enabled on the channelized PICs, you can associate a scheduler map with the physical interface. For more information about configuring scheduler maps, see [“Configuring Scheduler Maps” on page 179](#).



NOTE: If you configure the **per-unit-scheduler** statement on the physical interface of a 4-port channelized OC-12 IQ PIC and configure 975 logical interfaces or data link connection identifiers (DLCIs), some of the logical interfaces or DLCIs will drop all packets intermittently.

The following example configures per-unit scheduling on a channelized DS3 PIC and an STM1 IQ PIC.

```
[edit interfaces]
ct3-5/3/1 {
  partition 1 interface-type t1;
}
t1-5/3/1:1 {
  per-unit-scheduler; # This enables per-unit scheduling
  encapsulation frame-relay;
  unit 0 {
    dlci 1;
    family inet {
      address 10.0.0.2/32;
    }
  }
}
ct3-5/3/0 {
  partition 1 interface-type ct1;
}
ct1-5/3/0:1 {
  partition 1 timeslots 1 interface-type ds;
}
ds-5/3/0:1:1 {
  per-unit-scheduler; # This enables per-unit scheduling
  encapsulation frame-relay;
  unit 0 {
    dlci 1;
    family inet {
      address 10.0.0.1/32;
    }
  }
}
cau4-3/0/0 {
  partition 1 interface-type ce1;
}
```

```

cstm1-3/0/0 {
  no-partition 1 interface-type cau4;
}
cel-3/0/0:1 {
  partition 1 timeslots 1 interface-type ds;
}
ds-3/0/0:1:1 {
  per-unit-scheduler; # This enables per-unit scheduling
  encapsulation frame-relay;
  unit 0 {
    dlc1 1;
    family inet {
      address 10.1.1.1/32;
    }
  }
}

```

```

[edit class-of-service]
classifiers {
  dscp all-traffic-dscp {
    forwarding-class assured-forwarding {
      loss-priority low code-points 001010;
    }
    forwarding-class expedited-forwarding {
      loss-priority low code-points 101110;
    }
    forwarding-class best-effort {
      loss-priority low code-points 101010;
    }
    forwarding-class network-control {
      loss-priority low code-points 000110;
    }
  }
}
forwarding-classes {
  queue 0 best-effort;
  queue 1 assured-forwarding;
  queue 2 expedited-forwarding;
  queue 3 network-control;
}
interfaces {
  ds-3/0/0:1:1 {
    unit 0 {
      scheduler-map schedule-mlppp;
    }
  }
  ds-5/3/0:1:1 {
    unit 0 {
      scheduler-map schedule-mlppp;
    }
  }
  t1-5/3/1:1 {
    unit 0 {
      scheduler-map schedule-mlppp;
    }
  }
}

```

```
    }  
  }  
  scheduler-maps {  
    schedule-mlppp {  
      forwarding-class expedited-forwarding scheduler expedited-forwarding;  
      forwarding-class assured-forwarding scheduler assured-forwarding;  
      forwarding-class best-effort scheduler best-effort;  
      forwarding-class network-control scheduler network-control;  
    }  
  }  
  schedulers {  
    best-effort {  
      transmit-rate percent 2;  
      buffer-size percent 5;  
      priority low;  
    }  
    assured-forwarding {  
      transmit-rate percent 7;  
      buffer-size percent 30;  
      priority low;  
    }  
    expedited-forwarding {  
      transmit-rate percent 90 exact;  
      buffer-size percent 60;  
      priority high;  
    }  
    network-control {  
      transmit-rate percent 1;  
      buffer-size percent 5;  
      priority strict-high;  
    }  
  }  
}
```

Applying a Shaping Rate to Physical Interfaces Overview

On T4000 routers with Type 5 FPCs, you can configure physical interfaces to shape traffic based on the rate-limited bandwidth of the total interface bandwidth. This allows you to shape the output of the physical interface, so that the interface transmits less traffic than it is physically capable of carrying.

If you do not configure a shaping rate on the physical interface, the default physical interface bandwidth is based on the channel bandwidth and the time slot allocation.

In general, the physical interface speed is the basis for calculating the various queue parameters for a physical interface such as delay buffer size, weighted round-robin (WRR) weight, drop profile, and so forth. However, when you apply a shaping rate by including the **shaping-rate** statement, the shaping rate on that physical interface becomes the basis for calculating all the queue parameters for that physical interface.

On T4000 routers with Type 5 FPCs, the shaping rate value for the physical interface must be a minimum of 292 Kbps. The maximum value of shaping rate is limited by the maximum transmission rate of the interface.

- Related Documentation**
- [Configuring the Shaping Rate for Physical Interfaces on page 198](#)
 - `show class-of-service interface`
 - `show interfaces extensive`

Configuring the Shaping Rate for Physical Interfaces

To configure the shaping rate on the physical interface, either include the **shaping-rate** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level or include the **output-traffic-control-profile** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level.

You can specify a peak bandwidth rate in bps, either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). For physical interfaces, the range is from 1000 through 160,000,000,000 bps.

For physical interfaces on T4000 routers with Type 5 FPCs, the shaping rate value for the physical interface must be a minimum of 292 Kbps. The maximum value of **shaping-rate** is limited by the maximum transmission rate of the interface.

The following are two example configurations for applying a shaping rate of 5 Gbps on a T4000 12x10 Gbps physical interface (xe-4/0/0):

Applying a shaping rate at the **[edit class-of-service interfaces *interface-name*] hierarchy:**

```
[edit class-of-service]
interfaces {
  xe-4/0/0 {
    shaping-rate 5g;
  }
}
```

Applying a shaping rate using traffic-control-profiles:

```
[edit class-of-service]
traffic-control-profiles {
  output {
    shaping-rate 5g;
  }
}
interfaces {
  xe-4/0/0 {
    output-traffic-control-profile output;
  }
}
```

To view the results of your configuration, issue the following **show** commands:

- `show class-of-service interface interface-name`
- `show interfaces interface-name extensive`

Related Documentation

- [Applying a Shaping Rate to Physical Interfaces Overview on page 197](#)

Oversubscribing Interface Bandwidth

The term *oversubscribing interface bandwidth* means configuring shaping rates (peak information rates [PIRs]) so that their sum exceeds the interface bandwidth.

On Channelized IQ PICs, Gigabit Ethernet IQ PICs, and FRF.15 and FRF.16 link services IQ (LSQ) interfaces on AS PICs, Multiservices PICs, and Multiservices DPCs, you can oversubscribe interface bandwidth. This means that the logical interfaces (and DLCIs within an FRF.15 or FRF.16 bundle) can be oversubscribed when there is leftover bandwidth. In the case of FRF.16 bundle interfaces, the physical interface can be oversubscribed. The oversubscription is capped to the configured PIR. Any unused bandwidth is distributed equally among oversubscribed logical interfaces or DLCIs, or physical interfaces.

For networks that are not likely to experience congestion, oversubscribing interface bandwidth improves network utilization, thereby allowing more customers to be provisioned on a single interface. If the actual data traffic does not exceed the interface bandwidth, oversubscription allows you to sell more bandwidth than the interface can support.

We recommend avoiding oversubscription in networks that are likely to experience congestion. Be cautious not to oversubscribe a service by too much, because this can cause degradation in the performance of the routing platform during congestion. When you configure oversubscription, starvation of some output queues can occur if the actual data traffic exceeds the physical interface bandwidth. You can prevent degradation by using statistical multiplexing to ensure that the actual data traffic does not exceed the interface bandwidth.



NOTE: You cannot oversubscribe interface bandwidth when you configure traffic shaping using the method described in [“Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs” on page 188](#).

When configuring oversubscription for FRF.16 bundle interfaces, you can assign traffic control profiles that apply on a physical interface basis. When you apply traffic control profiles to FRF.16 bundles at the *logical* interface level, member link interface bandwidth is underutilized when there is a small proportion of traffic or no traffic at all on an individual DLCI. Support for traffic control features on the FRF.16 bundle physical interface level addresses this limitation.

To configure oversubscription of the interface, perform the following steps:

1. Include the **shaping-rate** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  shaping-rate (percent percentage | rate);
```



NOTE: When configuring oversubscription for FRF.16 bundle interfaces on a physical interface basis, you *must* specify **shaping-rate** as a percentage.

On LSQ interfaces, you can configure the shaping rate as a percentage from 1 through 100.

On IQ and IQ2 interfaces, you can configure the shaping rate as an absolute rate from 1000 through 160,000,000,000 bps.

For all MX Series interfaces, the shaping rate can be from 65,535 through 160,000,000,000 bps.

Alternatively, you can configure a shaping rate for a logical interface and oversubscribe the physical interface by including the **shaping-rate** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number]** hierarchy level. However, with this configuration approach, you cannot independently control the delay-buffer rate, as described in Step 2.



NOTE: For channelized and Gigabit Ethernet IQ interfaces, the **shaping-rate** and **guaranteed-rate** statements are mutually exclusive. You cannot configure some logical interfaces to use a shaping rate and others to use a guaranteed rate. This means there are no service guarantees when you configure a PIR. For these interfaces, you can configure either a PIR or a committed information rate (CIR), but not both.

This restriction does not apply to Gigabit Ethernet IQ2 PICs or LSQ interfaces on AS PICs. For LSQ and Gigabit Ethernet IQ2 interfaces, you can configure both a PIR and a CIR on an interface. For more information about CIRs, see [“Providing a Guaranteed Minimum Rate” on page 207](#).

For more information about Gigabit Ethernet IQ2 PICs, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).

2. Optionally, you can base the delay-buffer calculation on a delay-buffer rate. To do this, include the **delay-buffer-rate** statement at the **[edit class-of-service traffic-control-profiles profile-name]** hierarchy level:



NOTE: When configuring oversubscription for FRF.16 bundle interfaces on a physical interface basis, you *must* specify **delay-buffer-rate** as a percentage.

```
[edit class-of-service traffic-control-profiles profile-name]
  delay-buffer-rate (percent percentage | rate);
```

The delay-buffer rate overrides the shaping rate as the basis for the delay-buffer calculation. In other words, the shaping rate or scaled shaping rate is used for delay-buffer calculations only when the delay-buffer rate is not configured.

For LSQ interfaces, if you do not configure a delay-buffer rate, the guaranteed rate (CIR) is used to assign buffers. If you do not configure a guaranteed rate, the shaping rate (PIR) is used in the undersubscribed case, and the scaled shaping rate is used in the oversubscribed case.

On LSQ interfaces, you can configure the delay-buffer rate as a percentage from 1 through 100.

On IQ and IQ2 interfaces, you can configure the delay-buffer rate as an absolute rate from 1000 through 160,000,000,000 bps.

The actual delay buffer is based on the calculations described in [“Configuring Large Delay Buffers for Slower Interfaces” on page 162](#) and [“Maximum Delay Buffer for NxDS0 Interfaces” on page 165](#). For an example showing how the delay-buffer rates are applied, see [“Examples: Oversubscribing Interface Bandwidth” on page 204](#).

Configuring large buffers on relatively slow-speed links can cause packet aging. To help prevent this problem, the software requires that the sum of the delay-buffer rates be less than or equal to the port speed.

This restriction does not eliminate the possibility of packet aging, so you should be cautious when using the **delay-buffer-rate** statement. Though some amount of extra buffering might be desirable for burst absorption, delay-buffer rates should not far exceed the service rate of the logical interface.

If you configure delay-buffer rates so that the sum exceeds the port speed, the configured delay-buffer rate is not implemented for the last logical interface that you configure. Instead, that logical interface receives a delay-buffer rate of zero, and a warning message is displayed in the CLI. If bandwidth becomes available (because another logical interface is deleted or deactivated, or the port speed is increased), the configured delay-buffer-rate is reevaluated and implemented if possible.

If you do not configure a delay-buffer rate or a guaranteed rate, the logical interface receives a delay-buffer rate in proportion to the shaping rate and the remaining delay-buffer rate available. In other words, the delay-buffer rate for each logical interface with no configured delay-buffer rate is equal to:

$$(\text{remaining delay-buffer rate} * \text{shaping rate}) / (\text{sum of shaping rates})$$

where the remaining delay-buffer rate is equal to:

$$(\text{interface speed}) - (\text{sum of configured delay-buffer rates})$$

3. To assign a scheduler map to the logical interface, include the **scheduler-map** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  scheduler-map map-name;
```

For information about configuring schedulers and scheduler maps, see [“Configuring Schedulers” on page 160](#) and [“Configuring Scheduler Maps” on page 179](#).

4. Optionally, you can enable large buffer sizes to be configured. To do this, include the **q-pic-large-buffer** statement at the **[edit chassis fpc *slot-number* pic *pic-number*]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
q-pic-large-buffer;
```

If you do not include this statement, the delay-buffer size is more restricted. We recommend restricted buffers for delay-sensitive traffic, such as voice traffic. For more information, see [“Configuring Large Delay Buffers for Slower Interfaces” on page 162](#).

- To enable scheduling on logical interfaces, include the **per-unit-scheduler** statement at the **[edit interfaces interface-name]** hierarchy level:

```
[edit interfaces interface-name]
per-unit-scheduler;
```

When you include this statement, the maximum number of VLANs supported is 768 on a single-port Gigabit Ethernet IQ PIC. On a dual-port Gigabit Ethernet IQ PIC, the maximum number is 384.

- To enable scheduling for FRF.16 bundles physical interfaces, include the **no-per-unit-scheduler** statement at the **[edit interfaces interface-name]** hierarchy level:

```
[edit interfaces interface-name]
no-per-unit-scheduler;
```

- To apply the traffic-scheduling profile, include the **output-traffic-control-profile** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
output-traffic-control-profile profile-name;
```

You cannot include the **output-traffic-control-profile** statement in the configuration if any of the following statements are included in the logical interface configuration: **scheduler-map**, **shaping-rate**, **adaptive-shaper**, or **virtual-channel-group** (the last two are valid on Juniper Networks J Series Services Routers only).

[Table 29 on page 202](#) shows how the bandwidth and delay buffer are allocated in various configurations.

Table 29: Bandwidth and Delay Buffer Allocations by Configuration Scenario

Configuration Scenario	Delay Buffer Allocation
You do not oversubscribe the interface. You do not configure a guaranteed rate. You do not configure a shaping rate. You do not configure a delay-buffer rate.	Logical interface receives the remaining bandwidth and receives a delay buffer in proportion to the remaining bandwidth.
You do not oversubscribe the interface. You do not configure a shaping rate at the [edit class-of-service interfaces interface-name unit logical-unit-number] hierarchy level.	<p>For backward compatibility, the shaped logical interface receives a delay buffer based on the shaping rate. The multiplicative factor depends on whether you include the q-pic-large-buffer statement. For more information, see “Configuring Large Delay Buffers for Slower Interfaces” on page 162.</p> <p>Unshaped logical interfaces receive the remaining bandwidth and a delay buffer in proportion to the remaining bandwidth.</p>

Table 29: Bandwidth and Delay Buffer Allocations by Configuration Scenario (*continued*)

Configuration Scenario	Delay Buffer Allocation
You oversubscribe the interface. You do not configure a guaranteed rate. You do not configure a shaping rate. You do not configure a delay-buffer rate.	Logical interface receives minimal bandwidth with no guarantees and receives a minimal delay buffer equal to four MTU-sized packets.
You oversubscribe the interface. You configure a shaping rate. You do not configure a guaranteed rate. You do not configure a delay-buffer rate.	<p>Logical interface receives a delay buffer based on the scaled shaping rate:</p> $\text{scaled shaping rate} = (\text{shaping-rate} * [\text{physical interface bandwidth}]) / \text{SUM}(\text{shaping-rates of all logical interfaces on the physical interface})$ <p>The logical interface receives variable bandwidth, depending on how much oversubscription and statistical multiplexing is present. If the amount of oversubscription is low enough that statistical multiplexing does not make all logical interfaces active at the same time and the physical interface bandwidth is not exceeded, the logical interface receives bandwidth equal to the shaping rate. Otherwise, the logical interface receives a smaller amount of bandwidth. In either case, the logical interface bandwidth does not exceed the shaping rate.</p>
You oversubscribe the interface. You configure a shaping rate. You configure a delay-buffer rate.	<p>Logical interface receives a delay buffer based on the delay-buffer rate. For example, on IQ and IQ2 interfaces:</p> <p>delay-buffer-rate <= 10 Mbps: 400-millisecond (ms) delay buffer delay-buffer-rate <= 20 Mbps: 300-ms delay buffer delay-buffer-rate <= 30 Mbps: 200-ms delay buffer delay-buffer-rate <= 40 Mbps: 150-ms delay buffer delay-buffer-rate > 40 Mbps: 100-ms delay buffer</p> <p>On LSQ DLCIs, if total bundle bandwidth < T1 bandwidth:</p> <p>delay-buffer-rate = 1 second</p> <p>On LSQ DLCIs, if total bundle bandwidth >= T1 bandwidth:</p> <p>delay-buffer-rate = 200 ms</p> <p>The multiplicative factor depends on whether you include the q-pic-large-buffer statement. For more information, see "Configuring Large Delay Buffers for Slower Interfaces" on page 162.</p> <p>The logical interface receives variable bandwidth, depending on how much oversubscription and statistical multiplexing is present. If the amount of oversubscription is low enough that statistical multiplexing does not make all logical interfaces active at the same time and the physical interface bandwidth is not exceeded, the logical interface receives bandwidth equal to the shaping rate. Otherwise, the logical interface receives a smaller amount of bandwidth. In either case, the logical interface bandwidth does not exceed the shaping rate.</p>
You oversubscribe the interface. You do not configure a shaping rate. You configure a guaranteed rate. You configure a delay-buffer rate.	Logical interface receives a delay buffer based on the delay-buffer rate.
You oversubscribe the interface. You do not configure a shaping rate. You do not configure a guaranteed rate. You configure a delay-buffer rate.	This scenario is not allowed. If you configure a delay-buffer rate, the traffic-control profile must also include either a shaping rate or a guaranteed rate.

Table 29: Bandwidth and Delay Buffer Allocations by Configuration Scenario (*continued*)

Configuration Scenario	Delay Buffer Allocation
You oversubscribe the interface. You configure a shaping rate. You configure a guaranteed rate. You do not configure a delay-buffer rate.	<p>Logical interface receives a delay buffer based on the guaranteed rate.</p> <p>This configuration is valid on LSQ interfaces and Gigabit Ethernet IQ2 interfaces only. On channelized interfaces, you cannot configure both a shaping rate (PIR) and a guaranteed rate (CIR).</p>

Verifying Configuration of Bandwidth Oversubscription

To verify your configuration, you can issue this following operational mode commands:

- **show class-of-service interfaces**
- **show class-of-service traffic-control-profile** *profile-name*

Examples: Oversubscribing Interface Bandwidth

This section provides two examples: oversubscription of a channelized interface and oversubscription of an LSQ interface.

Oversubscribing a Channelized Interface

Two logical interface units, 0 and 1, are shaped to rates 2 Mbps and 3 Mbps, respectively. The delay-buffer rates are 750 Kbps and 500 Kbps, respectively. The actual delay buffers allocated to each logical interface are 1 second of 750 Kbps and 2 seconds of 500 Kbps, respectively. The 1-second and 2-second values are based on the following calculations:

delay-buffer-rate < [16 x 64 Kbps]): 1 second of delay-buffer-rate
 delay-buffer-rate < [8 x 64 Kbps]): 2 seconds of delay-buffer-rate

For more information about these calculations, see [“Maximum Delay Buffer for NxDSO Interfaces” on page 165](#).

```
chassis {
  fpc 3 {
    pic 0 {
      q-pic-large-buffer;
    }
  }
}
interfaces {
  tl-3/0/0 {
    per-unit-scheduler;
  }
}
class-of-service {
  traffic-control-profiles {
    tc-profile1 {
      shaping-rate 2m;
      delay-buffer-rate 750k; # 750 Kbps is less than 16 x 64 Kbps
      scheduler-map sched-map1;
    }
    tc-profile2 {
      shaping-rate 3m;
    }
  }
}
```

```

        delay-buffer-rate 500k; # 500 Kbps is less than 8 x 64 Kbps
        scheduler-map sched-map2;
    }
}
interfaces {
  t1-3/0/0 {
    unit 0 {
      output-traffic-control-profile tc-profile1;
    }
    unit 1 {
      output-traffic-control-profile tc-profile2;
    }
  }
}
}

```

Oversubscribing an LSQ Interface with Scheduling Based on the Logical Interface

Apply a traffic-control profile to a logical interface representing a DLCI on an FRF.16 bundle:

```

interfaces {
  lsq-1/3/0:0 {
    per-unit-scheduler;
    unit 0 {
      dlci 100;
    }
    unit 1 {
      dlci 200;
    }
  }
}

class-of-service {
  traffic-control-profiles {
    tc_0 {
      shaping-rate percent 100;
      guaranteed-rate percent 60;
      delay-buffer-rate percent 80;
    }
    tc_1 {
      shaping-rate percent 80;
      guaranteed-rate percent 40;
    }
  }
  interfaces {
    lsq-1/3/0 {
      unit 0 {
        output-traffic-control-profile tc_0;
      }
      unit 1 {
        output-traffic-control-profile tc_1;
      }
    }
  }
}
}

```

Oversubscribing an LSQ Interface with Scheduling Based on the Physical Interface

Apply a traffic-control profile to the physical interface representing an FRF.16 bundle:

```

interfaces {
  lsq-0/2/0:0 {
    no-per-unit-scheduler;
    encapsulation multilink-frame-relay-uni-nni;
    unit 0 {
      dlci 100;
      family inet {
        address 18.18.18.2/24;
      }
    }
  }
}
class-of-service {
  traffic-control-profiles {
    rlsq_tc {
      scheduler-map rlsq;
      shaping-rate percent 60;
      delay-buffer-rate percent 10;
    }
  }
  interfaces {
    lsq-0/2/0:0 {
      output-traffic-control-profile rlsq_tc;
    }
  }
}
scheduler-maps {
  rlsq {
    forwarding-class best-effort scheduler rlsq_scheduler;
    forwarding-class expedited-forwarding scheduler rlsq_scheduler1;
  }
}
schedulers {
  rlsq_scheduler {
    transmit-rate percent 20;
    priority low;
  }
  rlsq_scheduler1 {
    transmit-rate percent 40;
    priority high;
  }
}

```


On an FRF.15 bundle, apply the following configuration:

```
class-of-service {
  traffic-control-profiles {
    rlsq {
      scheduler-map sched_0;
      shaping-rate percent 40;
      delay-buffer-rate percent 50;
    }
  }
  interfaces lsq-2/0/0 {
    unit 0 {
      output-traffic-control-profile rlsq;
    }
  }
}
interfaces lsq-2/0/0 {
  per-unit-scheduler;
  unit 0 {
    encapsulation multilink-frame-relay-end-to-end;
    family inet {
      address 10.1.1.2/32;
    }
  }
}
```

Providing a Guaranteed Minimum Rate

On Gigabit Ethernet IQ PICs, EQ DPCs, Trio MPC/MIC modules, Channelized IQ PICs, and FRF.16 LSQ interfaces on AS PICs, you can configure guaranteed bandwidth, also known as a committed information rate (CIR). This allows you to specify a guaranteed rate for each logical interface. The guaranteed rate is a minimum. If excess physical interface bandwidth is available for use, the logical interface receives more than the guaranteed rate provisioned for the interface.

You cannot provision the sum of the guaranteed rates to be more than the physical interface bandwidth, or the bundle bandwidth for LSQ interfaces. If the sum of the guaranteed rates exceeds the interface or bundle bandwidth, the commit operation does not fail, but the software automatically decreases the rates so that the sum of the guaranteed rates is equal to the available bundle bandwidth.

To configure a guaranteed minimum rate, perform the following steps:

1. Include the **guaranteed-rate** statement at the **[edit class-of-service traffic-control-profile *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]
  guaranteed-rate (percent percentage | rate) <burst-size bytes>;
```

On LSQ interfaces, you can configure the guaranteed rate as a percentage from 1 through 100.

On IQ and IQ2 interfaces, you can configure the guaranteed rate as an absolute rate from 1000 through 160,000,000,000 bps.



NOTE: For channelized and Gigabit Ethernet IQ interfaces, the **shaping-rate** and **guaranteed-rate** statements are mutually exclusive. You cannot configure some logical interfaces to use a shaping rate and others to use a guaranteed rate. This means there are no service guarantees when you configure a PIR. For these interfaces, you can configure either a PIR or a CIR, but not both.

This restriction does not apply to Gigabit Ethernet IQ2 PICs or LSQ interfaces on AS PICs. For LSQ and Gigabit Ethernet IQ2 interfaces, you can configure both a PIR and a CIR on an interface.

For more information about Gigabit Ethernet IQ2 PICs, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).

2. Optionally, you can base the delay-buffer calculation on a delay-buffer rate. To do this, include the **delay-buffer-rate** statement [**edit class-of-service traffic-control-profiles *profile-name***] hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]
  delay-buffer-rate (percent percentage | rate);
```

On LSQ interfaces, you can configure the delay-buffer rate as a percentage from 1 through 100.

On IQ and IQ2 interfaces, you can configure the delay-buffer rate as an absolute rate from 1000 through 160,000,000,000 bps.

The actual delay buffer is based on the calculations described in [“Configuring Large Delay Buffers for Slower Interfaces” on page 162](#) and [“Maximum Delay Buffer for NxDSO Interfaces” on page 165](#). For an example showing how the delay-buffer rates are applied, see [“Example: Providing a Guaranteed Minimum Rate” on page 210](#).

If you do not include the **delay-buffer-rate** statement, the delay-buffer calculation is based on the guaranteed rate, the shaping rate if no guaranteed rate is configured, or the scaled shaping rate if the interface is oversubscribed.

If you do not specify a shaping rate or a guaranteed rate, the logical interface receives a minimal delay-buffer rate and minimal bandwidth equal to four MTU-sized packets.

You can configure a rate for the delay buffer that is higher than the guaranteed rate. This can be useful when the traffic flow might not require much bandwidth in general, but in some cases traffic can be bursty and therefore needs a large buffer.

Configuring large buffers on relatively slow-speed links can cause packet aging. To help prevent this problem, the software requires that the sum of the delay-buffer rates be less than or equal to the port speed. This restriction does not eliminate the possibility of packet aging, so you should be cautious when using the **delay-buffer-rate** statement. Though some amount of extra buffering might be desirable for burst absorption, delay-buffer rates should not far exceed the service rate of the logical interface.

If you configure delay-buffer rates so that the sum exceeds the port speed, the configured delay-buffer rate is not implemented for the last logical interface that you

configure. Instead, that logical interface receives a delay-buffer rate of 0, and a warning message is displayed in the CLI. If bandwidth becomes available (because another logical interface is deleted or deactivated, or the port speed is increased), the configured delay-buffer-rate is reevaluated and implemented if possible.

If the guaranteed rate of a logical interface cannot be implemented, that logical interface receives a delay-buffer rate of 0, even if the configured delay-buffer rate is within the interface speed. If at a later time the guaranteed rate of the logical interface can be met, the configured delay-buffer rate is reevaluated and if the delay-buffer rate is within the remaining bandwidth, it is implemented.

If any logical interface has a configured guaranteed rate, all other logical interfaces on that port that do not have a guaranteed rate configured receive a delay-buffer rate of 0. This is because the absence of a guaranteed rate configuration corresponds to a guaranteed rate of 0 and, consequently, a delay-buffer rate of 0.

3. To assign a scheduler map to the logical interface, include the **scheduler-map** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]
  scheduler-map map-name;
```

For information about configuring schedulers and scheduler maps, see [“Configuring Schedulers” on page 160](#) and [“Configuring Scheduler Maps” on page 179](#).

4. To enable large buffer sizes to be configured, include the **q-pic-large-buffer** statement at the **[edit chassis fpc *slot-number* pic *pic-number*]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
  q-pic-large-buffer;
```

If you do not include this statement, the delay-buffer size is more restricted. For more information, see [“Configuring Large Delay Buffers for Slower Interfaces” on page 162](#).

5. To enable scheduling on logical interfaces, include the **per-unit-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
  per-unit-scheduler;
```

When you include this statement, the maximum number of VLANs supported is 768 on a single-port Gigabit Ethernet IQ PIC. On a dual-port Gigabit Ethernet IQ PIC, the maximum number is 384.

6. To apply the traffic-scheduling profile to the logical interface, include the **output-traffic-control-profile** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
  output-traffic-control-profile profile-name;
```

[Table 30 on page 210](#) shows how the bandwidth and delay buffer are allocated in various configurations.

Table 30: Bandwidth and Delay Buffer Allocations by Configuration Scenario

Configuration Scenario	Delay Buffer Allocation
You do not configure a guaranteed rate. You do not configure a delay-buffer rate.	Logical interface receives minimal bandwidth with no guarantees and receives a minimal delay buffer equal to 4 MTU-sized packets.
You configure a guaranteed rate. You do not configure a delay-buffer rate.	Logical interface receives bandwidth equal to the guaranteed rate and a delay buffer based on the guaranteed rate. The multiplicative factor depends on whether you include the q-pic-large-buffer statement. For more information, see “Configuring Large Delay Buffers for Slower Interfaces” on page 162 .
You configure a guaranteed rate. You configure a delay-buffer rate.	Logical interface receives bandwidth equal to the guaranteed rate and a delay buffer based on the delay-buffer rate. The multiplicative factor depends on whether you include the q-pic-large-buffer statement. For more information, see “Configuring Large Delay Buffers for Slower Interfaces” on page 162 .

Verifying Configuration of Guaranteed Minimum Rate

To verify your configuration, you can issue this following operational mode commands:

- **show class-of-service interfaces**
- **show class-of-service traffic-control-profile *profile-name***

Example: Providing a Guaranteed Minimum Rate

Two logical interface units, **0** and **1**, are provisioned with a guaranteed minimum of 750 Kbps and 500 Kbps, respectively. For logical unit **1**, the delay buffer is based on the guaranteed rate setting. For logical unit **0**, a delay-buffer rate of 500 Kbps is specified. The actual delay buffers allocated to each logical interface are 2 seconds of 500 Kbps. The 2-second value is based on the following calculation:

$$\text{delay-buffer-rate} < [8 \times 64 \text{ Kbps}]: 2 \text{ seconds of delay-buffer-rate}$$

For more information about this calculation, see [“Maximum Delay Buffer for NxDS0 Interfaces” on page 165](#).

```
chassis {
  fpc 3 {
    pic 0 {
      q-pic-large-buffer;
    }
  }
}
interfaces {
  t1-3/0/1 {
    per-unit-scheduler;
  }
}
class-of-service {
  traffic-control-profiles {
    tc-profile3 {
      guaranteed-rate 750k;
      scheduler-map sched-map3;
    }
  }
}
```

```

        delay-buffer-rate 500k; # 500 Kbps is less than 8 x 64 Kbps
    }
    tc-profile4 {
        guaranteed-rate 500k; # 500 Kbps is less than 8 x 64 Kbps
        scheduler-map sched-map4;
    }
}
interfaces {
    t1-3/0/1 {
        unit 0 {
            output-traffic-control-profile tc-profile3;
        }
        unit 1 {
            output-traffic-control-profile tc-profile4;
        }
    }
}
}

```

Applying Scheduler Maps to Packet Forwarding Component Queues

On Intelligent Queuing (IQ) and Intelligent Queuing 2 (IQ2) interfaces, the traffic that is fed from the packet forwarding components into the PIC uses low packet loss priority (PLP) by default and is distributed evenly across the four chassis queues (not PIC queues), regardless of the scheduling configuration for each logical interface. This default behavior can cause traffic congestion.

The default chassis scheduler allocates resources for queue 0 through queue 3, with 25 percent of the bandwidth allocated to each queue. When you configure the chassis to use more than four queues, you must configure and apply a custom chassis scheduler to override the default. To apply a custom chassis scheduler, include the **scheduler-map-chassis** statement at the [edit class-of-service interfaces at *fpc/pic/**] hierarchy level.

To control the aggregated traffic transmitted from the chassis queues into the PIC, you can configure the chassis queues to derive their scheduling configuration from the associated logical interface's. Include the **scheduler-map-chassis derived** statement at the [edit class-of-service interfaces *type-fpc/pic/**] hierarchy level:

```

[edit class-of-service interfaces type-fpc/pic/*]
scheduler-map-chassis derived;

```



CAUTION: If you include the **scheduler-map-chassis derived** statement in the configuration, packet loss might occur when you subsequently add or remove logical interfaces at the [edit interfaces *interface-name*] hierarchy level.

When fragmentation occurs on the egress interface, the first set of packet counters displayed in the output of the **show interfaces queue** command show the post-fragmentation values. The second set of packet counters (under the Packet Forwarding Engine Chassis Queues field) show the pre-fragmentation values. For more information about the **show interfaces queue** command, see the Junos OS Operational Mode Commands.

You can include both the **scheduler-map** and the **scheduler-map-chassis derived** statements in the same interface configuration. The **scheduler-map** statement controls the scheduler inside the PIC, while the **scheduler-map-chassis derived** statement controls the aggregated traffic transmitted into the entire PIC. For the Gigabit Ethernet IQ PIC, include both statements.

For more information about the **scheduler-map** statement, see [“Applying Scheduler Maps to Physical Interfaces” on page 181](#). For information about logical interface scheduling configuration, see [“Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs” on page 188](#).

Generally, when you include the **scheduler-map-chassis** statement in the configuration, you must use an interface wildcard for the interface name, as in **type-fpc/pic/***. The wildcard must use this format—for example, **so-1/2/***, which means all interfaces on FPC slot 1, PIC slot 2. There is one exception—you can apply the chassis scheduler map to a specific interface on the Gigabit Ethernet IQ PIC only.

According to Junos OS wildcard rules, specific interface configurations override wildcard configurations. For chassis scheduler map configuration, this rule does not apply; instead, specific interface CoS configurations are added to the chassis scheduler map configuration. For more information about how wildcards work with chassis scheduler maps, see [“Examples: Scheduling Packet Forwarding Component Queues” on page 213](#). For general information about wildcards, see the Junos OS System Basics Configuration Guide.



NOTE: The interface applies wildcard configuration only if you do not add any specific configuration. If you add the specific interface configuration, then the interface deletes the applied wildcard configuration and applies the specified configuration.

For more information, see the following sections:

- [Applying Custom Schedulers to Packet Forwarding Component Queues on page 212](#)
- [Examples: Scheduling Packet Forwarding Component Queues on page 213](#)

Applying Custom Schedulers to Packet Forwarding Component Queues

Optionally, you can apply a custom scheduler to the chassis queues instead of configuring the chassis queues to automatically derive their scheduling configuration from the logical interfaces on the PIC.

To assign a custom scheduler to the packet forwarding component queues, include the **scheduler-map-chassis** statement at the **[edit class-of-service interfaces type-fpc/pic]** hierarchy level:

```
[edit class-of-service interfaces type-fpc/pic/*]  
  scheduler-map-chassis map-name;
```

When you apply a custom scheduler map to packet forwarding component queues, or when you modify the configuration of a custom scheduler map that is already applied

to packet forwarding component queues, packets already in the chassis queues might be dropped. The amount of packet loss is not deterministic and depends on the offered traffic load at the time you apply or modify the custom scheduler map.

For information about defining the scheduler map referenced by *map-name*, see [“Configuring Scheduler Maps” on page 179](#).

Examples: Scheduling Packet Forwarding Component Queues

Applying a Chassis Scheduler Map to a 2-Port IQ PIC

Apply a chassis scheduler map to interfaces **so-0/1/0** and **so-0/1/1**.

According to customary wildcard rules, the **so-0/1/0** configuration overrides the **so-0/1/*** configuration, implying that the chassis scheduler map **MAP1** is not applied to **so-0/1/0**. However, the wildcard rule is not obeyed in this case; the chassis scheduler map applies to both interfaces **so-0/1/0** and **so-0/1/1**.

```
[edit]
class-of-service {
  interfaces {
    so-0/1/0 {
      unit 0 {
        classifiers {
          inet-precedence default;
        }
      }
    }
    so-0/1/* {
      scheduler-map-chassis derived;
    }
  }
}
```

Not Recommended: Using a Wildcard for Gigabit Ethernet IQ Interfaces When Applying a Chassis Scheduler Map

On a Gigabit Ethernet IQ PIC, you can apply the chassis scheduler map at both the specific interface level and the wildcard level. We do not recommend this because the wildcard chassis scheduler map takes precedence, which might not be the desired effect. For example, if you want to apply the chassis scheduler map **MAP1** to port 0 and **MAP2** to port 1, we do not recommend the following:

```
[edit class-of-service]
interfaces {
  ge-0/1/0 {
    scheduler-map-chassis MAP1;
  }
  ge-0/1/* {
    scheduler-map-chassis MAP2;
  }
}
```

Recommended: Identifying Gigabit Ethernet IQ Interfaces Individually When Applying a Chassis Scheduler Map

Instead, we recommend this configuration:

```
[edit class-of-service]
interfaces {
  ge-0/1/0 {
    scheduler-map-chassis MAP1;
  }
  ge-0/1/1 {
```

```

        scheduler-map-chassis MAP2;
    }
}

```

Configuring ATM CoS with a Normal Scheduler and a Chassis Scheduler

For ATM2 IQ interfaces, the CoS configuration differs significantly from that of other interface types. For more information about ATM CoS, see [“CoS on ATM Interfaces Overview” on page 515](#).

```

[edit class-of-service]
interfaces {
    at-1/2/* {
        scheduler-map-chassis derived;
    }
}

[edit interfaces]
at-1/2/0 {
    atm-options {
        vpi 0;
        linear-red-profiles red-profile-1 {
            queue-depth 35000 high-plp-threshold 75 low-plp-threshold 25;
        }
        scheduler-maps map-1 {
            vc-cos-mode strict;
            forwarding-class best-effort {
                priority low;
                transmit-weight percent 25;
                linear-red-profile red-profile-1;
            }
        }
    }
    unit 0 {
        vci 0.128;
        shaping {
            vbr peak 20m sustained 10m burst 20;
        }
        atm-scheduler-map map-1;
        family inet {
            address 192.168.0.100/32 {
                destination 192.168.0.101;
            }
        }
    }
}

```

Configuring Two T3 Interfaces on a Channelized DS3 IQ PIC

```

[edit interfaces]
ct3-3/0/0 {
    no-partition interface-type t3; # use entire port 0 as T3
}
ct3-3/0/1 {
    no-partition interface-type t3; # use entire port 1 as T3
}
t3-3/0/0 {
    unit 0 {
        family inet {
            address 10.0.100.1/30;
        }
    }
}

```



```

    }
  }
}
t3-3/0/1 {
  unit 0 {
    family inet {
      address 10.0.101.1/30;
    }
  }
}
}

```

Applying Normal Schedulers to Two T3 Interfaces

Configure a scheduler for the aggregated traffic transmitted into both T3 interfaces.

```

[edit class-of-service]
interfaces {
  t3-3/0/0 {
    scheduler-map sched-qct3-0;
  }
  t3-3/0/1 {
    scheduler-map sched-qct3-1;
  }
}
scheduler-maps {
  sched-qct3-0 {
    forwarding-class best-effort scheduler be-qct3-0;
    forwarding-class expedited-forwarding scheduler ef-qct3-0;
    forwarding-class assured-forwarding scheduler as-qct3-0;
    forwarding-class network-control scheduler nc-qct3-0;
  }
  sched-qct3-1 {
    forwarding-class best-effort scheduler be-qct3-1;
    forwarding-class expedited-forwarding scheduler ef-qct3-1;
    forwarding-class assured-forwarding scheduler as-qct3-1;
    forwarding-class network-control scheduler nc-qct3-1;
  }
  sched-chassis-to-q {
    forwarding-class best-effort scheduler be-chassis;
    forwarding-class expedited-forwarding scheduler ef-chassis;
    forwarding-class assured-forwarding scheduler as-chassis;
    forwarding-class network-control scheduler nc-chassis;
  }
}
schedulers {
  be-qct3-0 {
    transmit-rate percent 40;
  }
  ef-qct3-0 {
    transmit-rate percent 30;
  }
  as-qct3-0 {
    transmit-rate percent 20;
  }
  nc-qct3-0 {
    transmit-rate percent 10;
  }
  ...
}

```

```
}
```

Applying a Chassis Scheduler to Two T3 Interfaces

Bind a scheduler to the aggregated traffic transmitted into the entire PIC. The chassis scheduler controls the traffic from the packet forwarding components feeding the interface **t3-3/0/***.

```
[edit class-of-service]
interfaces {
  t3-3/0/* {
    scheduler-map-chassis derived;
  }
}
```

Not Recommended: Using a Wildcard for Logical Interfaces When Applying a Scheduler

Do not apply a scheduler to a logical interface using a wildcard. For example, if you configure a logical interface (unit) with one parameter, and apply a scheduler map to the interface using a wildcard, the logical interface will not apply the scheduler. The following configuration will commit correctly but will not apply the scheduler map to interface **so-3/0/0.0**:

```
[edit class-of-service]
interfaces {
  so-3/0/* {
    unit 0 {
      scheduler-map MY_SCHED_MAP;
    }
  }
  so-3/0/0 {
    unit 0 {
      shaping-rate 100m;
    }
  }
}
```

Recommended: Identifying Logical Interfaces Individually When Applying a Scheduler

Always apply the scheduler to a logical interface without the wildcard:

```
[edit class-of-service]
interfaces {
  so-3/0/0 {
    unit 0 {
      scheduler-map MY_SCHED_MAP;
      shaping-rate 100m;
    }
  }
}
```



NOTE: This same wildcard behavior applies to classifiers and rewrites as well as schedulers.

Default Fabric Priority Queuing

On Juniper Networks M320 Multiservice Edge Routers and Juniper Networks T Series Core Routers, the default behavior is for fabric priority queuing on egress interfaces to match the scheduling priority you assign. High-priority egress traffic is automatically assigned to high-priority fabric queues. Likewise, low-priority egress traffic is automatically assigned to low-priority fabric queues.

For information about overriding automatic fabric priority queuing, see [“Overriding Fabric Priority Queuing” on page 133](#) and [“Associating Schedulers with Fabric Priorities” on page 217](#).

Associating Schedulers with Fabric Priorities

On Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers only, you can associate a scheduler with a class of traffic that has a specific priority while transiting the fabric. Traffic transiting the fabric can have two priority values: **low** or **high**. To associate a scheduler with a fabric priority, include the **priority** and **scheduler** statements at the **[edit class-of-service fabric scheduler-map]** hierarchy level:

```
[edit class-of-service fabric scheduler-map]
priority (high | low) scheduler scheduler-name;
```



NOTE: For a scheduler that you associate with a fabric priority, include only the **drop-profile-map** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level. You cannot include the **buffer-size**, **transmit-rate**, and **priority** statements at that hierarchy level.

For information about associating a forwarding class with a fabric priority, see [“Overriding Fabric Priority Queuing” on page 133](#).

Example: Associating a Scheduler with a Fabric Priority

Associate a scheduler with a class of traffic that has a specific priority while transiting the fabric:

```
[edit class-of-service]
schedulers {
  fab-be-scheduler {
    drop-profile-map loss-priority low protocol any drop-profile fab-profile-1;
    drop-profile-map loss-priority high protocol any drop-profile fab-profile-2;
  }
  fab-ef-scheduler {
    drop-profile-map loss-priority low protocol any drop-profile fab-profile-3;
    drop-profile-map loss-priority high protocol any drop-profile fab-profile-4;
  }
}
drop-profiles {
  fab-profile-1 {
    fill-level 100 drop-probability 100;
```

```

        fill-level 85 drop-probability 50;
    }
    fab-profile-2 {
        fill-level 100 drop-probability 100;
        fill-level 95 drop-probability 50;
    }
    fab-profile-3 {
        fill-level 75 drop-probability 100;
        fill-level 95 drop-probability 50;
    }
    fab-profile-4 {
        fill-level 100 drop-probability 100;
        fill-level 80 drop-probability 50;
    }
}
fabric {
    scheduler-map {
        priority low scheduler fab-be-scheduler;
        priority high scheduler fab-ef-scheduler;
    }
}

```

Configuring the Number of Schedulers for Ethernet IQ2 PICs

You can oversubscribe the Ethernet IQ2 family of PICs. Because of the bursty nature of Ethernet use, traffic received by the PIC can be several orders of magnitude greater than the maximum bandwidth leaving the PIC and entering the router. Several configuration statements apply only to Ethernet IQ2 PICs and allow the PIC to intelligently handle the oversubscribed traffic.



NOTE: The total of the input guaranteed rates for oversubscribed IQ2 PICs is limited to the FPC or PIC bandwidth.

This section discusses the following topics:

- [Ethernet IQ2 PIC Schedulers on page 218](#)
- [Example: Configuring a Scheduler Number for an Ethernet IQ2 PIC Port on page 219](#)

Ethernet IQ2 PIC Schedulers

By default, each Ethernet IQ2 PIC is allocated a fixed number of the 1024 available schedulers for each port during PIC initialization. For example, the 8-port Gigabit Ethernet IQ2 PIC is allocated 128 schedulers for each port. This number cannot be changed after the PIC is operational and can limit the utilization of shapers among the ports. Each of the 1024 schedulers is mapped at the logical interface (unit) level, and each scheduler map can support up to eight forwarding classes.

Schedulers are allocated in multiples of four. Three schedulers are reserved on each port. One is for control traffic, one is for port-level shaping, and the last is for unshaped logical interface traffic. These are allocated internally and automatically. The fourth scheduler is added when VLANs are configured.

When you configure schedulers for a port on an Ethernet IQ2 PIC:

- The three reserved schedulers are added to the configured value, which yields four schedulers per port.
- The configured value is adjusted upward to the nearest multiple of 4 (schedulers are allocated in multiples of 4).
- After all configured schedulers are allocated, any remaining unallocated schedulers are partitioned equally across the other ports.
- Any remaining schedulers that cannot be allocated meaningfully across the ports are allocated to the last port.

If the configured scheduler number is changed, the Ethernet IQ2 PIC is restarted when the configuration is committed.



NOTE: If you deactivate and reactivate a port configured with a non-default number of schedulers then the whole Ethernet IQ2 PIC restarts.

To configure the number of schedulers assigned to a port on an Ethernet IQ2 PIC, include the **schedulers** statement for the Ethernet IQ2 PIC interface at the **[edit interfaces ge-fpc/pic/port]** hierarchy level:

```
[edit interfaces ge-fpc/pic/port]
schedulers number;
```

You can configure between 1 and 1024 schedulers on a port.

Example: Configuring a Scheduler Number for an Ethernet IQ2 PIC Port

This example allocates 100 schedulers to port 1 on an 8-port Gigabit Ethernet IQ2 PIC. The example shows the final scheduler allocation numbers for each port on the PIC. By default, each port would have been allocated $1024 / 8 = 128$ schedulers.

```
[edit interfaces]
ge-1/2/1 {
  schedulers 100;
}
```

This configuration results in the port and scheduler configuration shown in [Table 31 on page 219](#).

Table 31: Scheduler Allocation for an Ethernet IQ2 PIC

Ethernet IQ2 PIC Port	Number of Allocated Schedulers
0	128
1	104 (100 configured, plus 3 reserved, rounded up to multiple of 4: $100 + 3 + 1 = 104$)
2	128

Table 31: Scheduler Allocation for an Ethernet IQ2 PIC (*continued*)

Ethernet IQ2 PIC Port	Number of Allocated Schedulers
3	128
4	128
5	128
6	128
7	152 (128 plus the 24 remaining that cannot be meaningfully allocated to other ports)

Ethernet IQ2 PIC RTT Delay Buffer Values

The following table shows the round-trip time (RTT) delay buffer values for IQ2 PICs, which are nonstandard and vary by PIC type and direction. The values are rounded up slightly to account for oversubscription.

Table 32: RTT Delay Buffers for IQ2 PICs

IQ2 PIC Type	Ingress Buffer (ms)	Egress Buffer (ms)
4-port Gigabit Ethernet (Type 1)	200	300
8-port Gigabit Ethernet (Type 2)	175	200
8-port Gigabit Ethernet (Type 3)	35	225
1-port 10-Gigabit Ethernet (Type 3)	25	190

Configuring Rate Limiting and Sharing of Excess Bandwidth on Multiservices PICs

On Multiservices PICs, you can limit the transmit rate of a logical interface (**lsq-**) in the same way as other types of queuing PICs. You can also assign a percentage of the excess bandwidth to the logical interfaces. As with other types of PICs, the strict-high queue (voice) can “starve” low and medium priority queues. To prevent the strict-high queue from starving other queues, rate-limit the queue.

To rate-limit logical interfaces on a Multiservices PIC, include the **transmit-rate** statement with the **rate-limit** option at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
transmit-rate (rate | percent percentage | remainder) rate-limit;
```

You can also make the excess strict-high bandwidth available for other queues. You can split the excess bandwidth among multiple queues, but the total excess bandwidth assigned to these queues can only add up to 100 percent. The excess-bandwidth **priority**

statement option is not supported on the Multiservices PIC. For more information about excess bandwidth sharing, see [“Configuring Excess Bandwidth Sharing on IQE PICs” on page 332](#).

To share excess bandwidth among Multiservices PICs, include the **excess-rate** statement at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level.

```
[edit class-of-service schedulers scheduler-name]  
  excess-rate percent percentage;
```

Both of these rate-limiting and excess bandwidth sharing features apply to egress traffic only, and only for per-unit schedulers. Hierarchical schedulers and shared schedulers are not supported.

You must still complete the configuration by configuring the scheduler map and applying it to the Multiservices PIC interface.

This example configures a rate limit and excess bandwidth sharing for a Multiservices PIC interface.

```
[edit class-of-service schedulers]  
scheduler0 {  
  transmit-rate percent 10 rate-limit;  
  priority strict-high;  
  excess-rate percent 30;  
}  
scheduler1 {  
  transmit-rate percent 1m rate-limit;  
  priority high;  
  excess-rate percent 70;  
}  
  
[edit class-of-service scheduler-maps]  
scheduler0 {  
  forwarding-class ef scheduler scheduler0;  
  forwarding-class af scheduler scheduler1;  
}  
  
[edit class-of-service interfaces lsq-1/3/0]  
unit 0 {  
  scheduler-map scheduler0;  
}  
unit 1 {  
  scheduler-map scheduler1;  
}
```


Configuring Hierarchical Schedulers

This topic discusses the following:

- [Hierarchical Schedulers Terminology on page 223](#)
- [Configuring Hierarchical Schedulers for CoS on page 225](#)
- [Configuring Interface Sets on page 226](#)
- [Applying Interface Sets on page 228](#)
- [Interface Set Caveats on page 228](#)
- [Hierarchical Schedulers and Traffic Control Profiles on page 230](#)
- [Example: Four-Level Hierarchy of Schedulers on page 231](#)
- [Hierarchical Schedulers on Aggregated Ethernet Interfaces Overview on page 236](#)
- [Configuring Hierarchical Schedulers on Aggregated Ethernet Interfaces on page 237](#)
- [Controlling Remaining Traffic on page 237](#)
- [Configuring Internal Scheduler Nodes on page 240](#)
- [PIR-Only and CIR Mode on page 241](#)
- [Priority Propagation on page 242](#)

Hierarchical Schedulers Terminology

Hierarchical schedulers introduce some new terms into a discussion of CoS capabilities. They also use some familiar terms in different contexts. This section presents a complete overview of the terms used with hierarchical schedulers.

The following terms are important for hierarchical schedulers:

- **Customer VLAN (C-VLAN)**—A C-VLAN, defined by IEEE 802.1ad. A stacked VLAN contains an outer tag corresponding to the S-VLAN, and an inner tag corresponding to the C-VLAN. A C-VLAN often corresponds to CPE. Scheduling and shaping is often used on a C-VLAN to establish minimum and maximum bandwidth limits for a customer. See also *S-VLAN*.
- **Interface set**—A logical group of interfaces that describe the characteristics of set of service VLANs, logical interfaces, customer VLANs, or aggregated Ethernet interfaces. Interface sets establish the set and name the traffic control profiles. See also *Service VLAN*.

- **Scheduler**—A scheduler defines the scheduling and queuing characteristics of a queue. Transmit rate, scheduler priority, and buffer size can be specified. In addition, a drop profile may be referenced to describe WRED congestion control aspects of the queue. See also *Scheduler map*.
- **Scheduler map**—A scheduler map is referenced by traffic control profiles to define queues. The scheduler map establishes the queues that comprise a scheduler node and associates a forwarding class with a scheduler. See also *Scheduler*.
- **Stacked VLAN**—An encapsulation on an S-VLAN with an outer tag corresponding to the S-VLAN, and an inner tag corresponding to the C-VLAN. See also *Service VLAN* and *Customer VLAN*.
- **Service VLAN (S-VLAN)**—An S-VLAN, defined by IEEE 802.1ad, often corresponds to a network aggregation device such as a DSLAM. Scheduling and shaping is often established for an S-VLAN to provide CoS for downstream devices with little buffering and simple schedulers. See also *Customer VLAN*.
- **Traffic control profile**—Defines the characteristics of a scheduler node. Traffic control profiles are used at several levels of the CLI, including the physical interface, interface set, and logical interface levels. Scheduling and queuing characteristics can be defined for the scheduler node using the **shaping-rate**, **guaranteed-rate**, and **delay-buffer-rate** statements. Queues over these scheduler nodes are defined by referencing a scheduler map. See also *Scheduler* and *Scheduler map*.
- **VLAN**—Virtual LAN, defined on an Ethernet logical interface.

These terms are especially important when applied to a scheduler hierarchy. Scheduler hierarchies are composed of nodes and queues. Queues terminate the CLI hierarchy. Nodes can be either root nodes, leaf nodes, or internal (non-leaf) nodes. Internal nodes are nodes that have other nodes as “children” in the hierarchy. For example, if an **interface-set** statement is configured with a logical interface (such as **unit 0**) and queue, then the **interface-set** is an internal node at Level 2 of the hierarchy. However, if there are no traffic control profiles configured on logical interfaces, then the interface set is at Level 3 of the hierarchy.

[Table 33 on page 224](#) shows how the configuration of an interface set or logical interface affects the terminology of hierarchical scheduler nodes.

Table 33: Hierarchical Scheduler Nodes

Root Node (Level 1)	Level 2	Level 3	Queue (Level 4)
Physical interface	Interface set	Logical interfaces	One or more queues
Physical interface		Interface set	One or more queues
Physical interface		Logical interfaces	One or more queues

Scheduler hierarchies consist of levels, starting with Level 1 at the physical port. This chapter establishes a four-level scheduler hierarchy which, when fully configured, consists

of the physical interface (Level 1), the interface set (Level 2), one or more logical interfaces (Level 3), and one or more queues (Level 4).

Configuring Hierarchical Schedulers for CoS

In metro Ethernet environments, a virtual LAN (VLAN) typically corresponds to a customer premises equipment (CPE) device and the VLANs are identified by an inner VLAN tag on Ethernet frames (called the customer VLAN, or C-VLAN, tag). A set of VLANs can be grouped at the DSL access multiplexer (DSLAM) and identified by using the same outer VLAN tag (called the service VLAN, or S-VLAN, tag). The service VLANs are typically gathered at the Broadband Remote Access Server (B-RAS) level. Hierarchical schedulers let you provide shaping and scheduling at the service VLAN level as well as other levels, such as the physical interface. In other words, you can group a set of logical interfaces and then apply scheduling and shaping parameters to the logical interface set as well as to other levels.

On Juniper Networks MX Series Ethernet Services Routers and systems with Enhanced IQ2 (IQ2E) PICs, you can apply CoS shaping and scheduling at one of four different levels, including the VLAN set level. You can only use this configuration on MX Series routers or IQ2E PICs. For more information about configuring CoS on IQ2E PICs, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).

The supported scheduler hierarchy is as follows:

- The physical interface (level 1)
- The service VLAN (level 2 is unique to MX Series routers)
- The logical interface or customer VLAN (level 3)
- The queue (level 4)

Users can specify a traffic control profile (**output-traffic-control-profile** that can specify a shaping rate, a guaranteed rate, and a scheduler map with transmit rate and buffer delay. The scheduler map contains the mapping of queues (forwarding classes) to their respective schedulers (schedulers define the properties for the queue). Queue properties can specify a transmit rate and buffer management parameters such as buffer size and drop profile.

To configure CoS hierarchical schedulers, include the following statements at the **[edit class-of-service interfaces]** and **[edit interfaces]** hierarchy levels:

```
[edit class-of-service interfaces]
interface-set interface-set-name {
  excess-bandwidth-share (proportional value | equal);
  internal-node;
  output-traffic-control-profile profile-name;
  output-traffic-control-profile-remaining profile-name;
}

[edit interfaces]
hierarchical-scheduler;
interface-set interface-set-name {
  ethernet-interface-name {
```

```

        (interface-parameters);
    }
}

```

Configuring Interface Sets

To configure an interface set, include the **interface-set** statement at the **[edit class-of-service interfaces]** hierarchy level:

```

[edit class-of-service interfaces]
interface-set interface-set-name {
    ...interface-cos-configuration-statements ...
}

```

To apply the interface set to interfaces, include the **interface-set** statement at the **[edit interfaces]** hierarchy level:

```

[edit interfaces]
interface-set interface-set-name {
    interface ethernet-interface-name {
        ...interface-cos-configuration-statements ...
    }
}

```

Interface sets can be defined in two major ways:

- As a list of logical interfaces or aggregated Ethernet interfaces (**unit 100**, **unit 200**, and so on)
- At the stacked VLAN level using a list of outer VLAN IDs (**vlan-tags-outer 210**, **vlan-tags-outer 220**, and so on).

The **svlan number** listing option with a single outer VLAN tag is a convenient way to specify a set of VLAN members having the same outer VLAN tags. Service providers can use these statements to group interfaces to apply scheduling parameters such as guaranteed rate and shaping rate to the traffic in the groups.

Whether using the logical interface listing option for a group of customer VLANs, aggregated Ethernet interfaces, or the S-VLAN set listing option for a group of VLAN outer tags, all traffic heading downstream must be gathered into an interface set with the **interface-set** statement at the **[edit class-of-service interfaces]** hierarchy level.

Regardless of listing convention, you can only use one of the types in an interface set. Examples of this limitation appear later in this section.



NOTE: Interface sets are currently used only by CoS, but they are applied at the **[edit interfaces]** hierarchy level to make them available to other services that might use them in future.

```

[edit interfaces]
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit logical-unit-number | vlan-tags-outer vlan-tag) {

```

```

    ...
  }
}

```

The logical interface naming option lists Ethernet interfaces:

```

[edit interfaces]
interface-set unit1-set-ge-0 {
  interface ge-0/0/0 {
    unit 0;
    unit 1;
    ...
  }
}

```

The interface naming option lists aggregated Ethernet interfaces:

```

[edit interfaces]
interface-set demuxset1 {
  interface demux0 {
    unit 1;
    ..
  }
}
demux0 {
  unit 1 {
    demux-options {
      underlying-interface ae0.1;
    }
    family inet {
      demux-source {
        100.1.1.1/24;
      }
      address 100.1.1.1/24;
    }
  }
}
..
ae0 {
  unit 1 {
  }
}
..
}
class-of-service {
  interface-set demuxset1 {
    output-traffic-control-profile tcp2;
  }
}
}

```

The S-VLAN option lists only one S-VLAN (outer) tag value:

```

[edit interfaces]
interface-set svlan-set {
  interface ge-1/0/0 {
    vlan-tags-outer 2000;
  }
}

```

```
}
```

The S-VLAN naming option lists S-VLAN (outer) tag values:

```
[edit interfaces]
interface-set svlan-set-tags {
  interface ge-2/0/0 {
    vlan-tags-outer 2000;
    vlan-tags-outer 2001;
    vlan-tags-outer 2002;
    ...
  }
}
```



NOTE: Ranges are not supported: you must list each VLAN or logical interface separately.

Related Documentation

- [Interface Set Caveats on page 228](#)

Applying Interface Sets

Although the interface set is applied at the **[edit interfaces]** hierarchy level, the CoS parameters for the interface set are defined at the **[edit class-of-service interfaces]** hierarchy level, usually with the **output-traffic-control-profile *profile-name*** statement.

This example applies a traffic control profile called **tcp-set1** to an interface set called **set-ge-0**:

```
[edit class-of-service interfaces]
interface-set set-ge-0 {
  output-traffic-control-profile tcp-set1;
}
```

Related Documentation

- [output-traffic-control-profile on page 669](#)

Interface Set Caveats

When configuring interface sets, consider the following guidelines:

- Interface sets can be defined in two major ways: as a list of logical interfaces or groups of aggregated Ethernet logical interfaces (**unit 100**, **unit 200**, and so on), or at the stacked VLAN level using a list of outer VLAN IDs (**vlan-tags-outer 210**, **vlan-tags-outer 220**, and so on). You can configure sets of aggregated Ethernet interfaces on MPC/MIC interfaces only.
- You cannot specify an interface set mixing the logical interface, aggregated Ethernet, S-VLAN, or VLAN outer tag list forms of the **interface-set** statement.

- Keep the following guidelines in mind when configuring interface sets of logical interfaces over aggregated Ethernet:
 - Sets of aggregated Ethernet interfaces are supported on MPC/MIC interfaces on MX Series routers only.
 - The supported interface stacks for aggregated Ethernet in an interface set include VLAN demux interfaces, IP demux interfaces, and PPPoE logical interfaces over VLAN demux interfaces.
 - The link membership list and scheduler mode of the interface set are inherited from the underlying aggregated Ethernet interface over which the interface set is configured.
 - When an aggregated Ethernet interface operates in link protection mode, or if the scheduler mode is configured to replicate member links, the scheduling parameters of the interface set are copied to each of the member links.
 - If the scheduler mode of the aggregated Ethernet interface is set to scale member links, the scheduling parameters are scaled based on the number of active member links and applied to each of the aggregated interface member links.
- A logical interface can only belong to one interface set. If you try to add the same logical interface to different interface sets, the commit operation fails.

This example generates a commit error:

```
[edit interfaces]
interface-set set-one {
  interface ge-2/0/0 {
    unit 0;
    unit 2;
  }
}
interface-set set-two {
  interface ge-2/0/0 {
    unit 1;
    unit 3;
    unit 0; # COMMIT ERROR! Unit 0 already belongs to set-one.
  }
}
```

- Members of an interface set cannot span multiple physical interfaces. Only one physical interface is allowed to appear in an interface set.

This configuration is not supported:

```
[edit interfaces]
interface-set set-group {
  interface ge-0/0/1 {
    unit 0;
    unit 1;
  }
  interface ge-0/0/2 { # This is NOT supported in the same interface set!
    unit 0;
    unit 1;
  }
}
```

```
}
```

Related Documentation

- [Configuring Interface Sets on page 226](#)

Hierarchical Schedulers and Traffic Control Profiles

When used, the interface set level of the hierarchy falls between the physical interface level (Level 1) and the logical interface (Level 3). Queues are always Level 4 of the hierarchy.

Hierarchical schedulers add CoS parameters to the new interface-set level of the configuration. They use traffic control profiles to set values for parameters such as shaping rate (the peak information rate [PIR]), guaranteed rate (the committed information rate [CIR] on these interfaces), scheduler maps (assigning queues and resources to traffic), and so on.

The following CoS configuration places the following parameters in traffic control profiles at various levels:

- Traffic control profile at the port level (**tcp-port-level1**):
 - A shaping rate (PIR) of 100 Mbps
 - A delay buffer rate of 100 Mbps
- Traffic control profile at the interface set level (**tcp-interface-level2**):
 - A shaping rate (PIR) of 60 Mbps
 - A guaranteed rate (CIR) of 40 Mbps
- Traffic control profile at the logical interface level (**tcp-unit-level3**):
 - A shaping rate (PIR) of 50 Mbps
 - A guaranteed rate (CIR) of 30 Mbps
 - A scheduler map called **smap1** to hold various queue properties (level 4)
 - A delay buffer rate of 40 Mbps

For more information on traffic control profiles see [“Oversubscribing Interface Bandwidth” on page 199](#) and [“Providing a Guaranteed Minimum Rate” on page 207](#). For more information on scheduler maps, see [“Configuring Scheduler Maps” on page 179](#).

In this case, the traffic control profiles look like this:

```
[edit class-of-service traffic-control-profiles]
tcp-port-level1 { # This is the physical port level
  shaping-rate 100m;
  delay-buffer-rate 100m;
}
tcp-interface-level2 { # This is the interface set level
  shaping-rate 60m;
  guaranteed-rate 40m;
```



```

}
tcp-unit-level3 { # This is the logical interface level
  shaping-rate 50m;
  guaranteed-rate 30m;
  scheduler-map smap1;
  delay-buffer-rate 40m;
}

```

Once configured, the traffic control profiles must be applied to the proper places in the CoS interfaces hierarchy.

```

[edit class-of-service interfaces]
interface-set level-2 {
  output-traffic-control-profile tcp-interface-level-2;
}
ge-0/1/0 {
  output-traffic-control-profile tcp-port-level-1;
  unit 0 {
    output-traffic-control-profile tcp-unit-level-3;
  }
}


```

In all cases, the properties for level 4 of the hierarchical schedulers are determined by the scheduler map.

Example: Four-Level Hierarchy of Schedulers

This section provides a more complete example of building a 4-level hierarchy of schedulers. The configuration parameters are shown in [Figure 14 on page 231](#). The queues are shown at the top of the figure with the other three levels of the hierarchy below.

Figure 14: Building a Scheduler Hierarchy

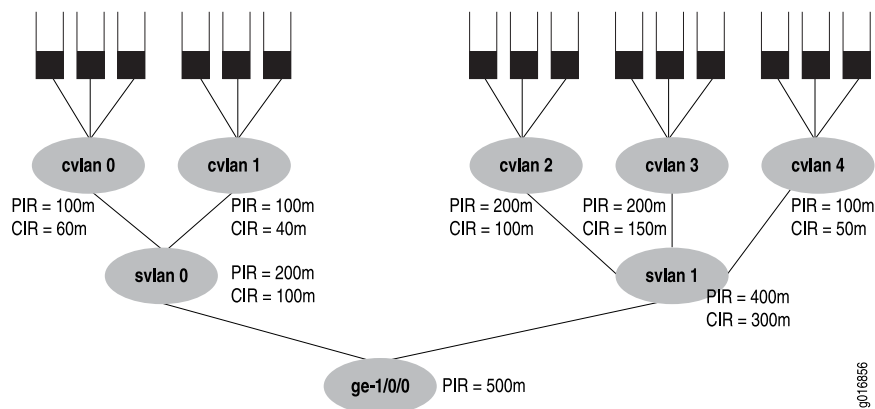

The figure's PIR values are configured as the shaping rates and the CIRs are configured as the guaranteed rate on the Ethernet interface **ge-1/0/0**. The PIR can be oversubscribed (that is, the sum of the children PIRs can exceed the parent's, as in **svlan 1**, where 200 + 200 + 100 exceeds the parent rate of 400). However, the sum of the children node level's CIRs must never exceed the parent node's CIR, as shown in all the service VLANs (otherwise, the guaranteed rate could never be provided in all cases).

This configuration example presents all details of the CoS configuration for the interface in the figure (**ge-1/0/0**), including:

- [Configuring the Interface Sets on page 232](#)
- [Configuring the Interfaces on page 232](#)
- [Configuring the Traffic Control Profiles on page 233](#)
- [Configuring the Schedulers on page 233](#)
- [Configuring the Drop Profiles on page 234](#)
- [Configuring the Scheduler Maps on page 234](#)
- [Applying the Traffic Control Profiles on page 235](#)

Configuring the Interface Sets

```
[edit interfaces]
interface-set svlan-0 {
  interface ge-1/0/0 {
    unit 0;
    unit 1;
  }
}
interface-set svlan-1 {
  interface ge-1/0/0 {
    unit 2;
    unit 3;
    unit 4;
  }
}
```

Configuring the Interfaces

The keyword to configure hierarchical schedulers is at the physical interface level, as is VLAN tagging and the VLAN IDs. In this example, the interface sets are defined by logical interfaces (units) and not outer VLAN tags. All VLAN tags in this example are customer VLAN tags.

```
[edit interface ge-1/0/0]
hierarchical-scheduler;
vlan-tagging;
unit 0 {
  vlan-id 100;
}
unit 1 {
  vlan-id 101;
}
unit 2 {
  vlan-id 102;
}
unit 3 {
  vlan-id 103;
}
unit 4 {
  vlan-id 104;
}
```

Configuring the Traffic Control Profiles

The traffic control profiles hold parameters for levels above the queue level of the scheduler hierarchy. This section defines traffic control profiles for both the service VLAN level (logical interfaces) and the customer VLAN (VLAN tag) level.

```
[edit class-of-service traffic-control-profiles]
tcp-500m-shaping-rate {
    shaping-rate 500m;
}
tcp-svlan0 {
    shaping-rate 200m;
    guaranteed-rate 100m;
    delay-buffer-rate 300m; # This parameter is not shown in the figure.
}
tcp-svlan1 {
    shaping-rate 400m;
    guaranteed-rate 300m;
    delay-buffer-rate 100m; # This parameter is not shown in the figure.
}
tcp-cvlan0 {
    shaping-rate 100m;
    guaranteed-rate 60m;
    scheduler-map tcp-map-cvlan0; # Applies scheduler maps to customer VLANs.
}
tcp-cvlan1 {
    shaping-rate 100m;
    guaranteed-rate 40m;
    scheduler-map tcp-map-cvlan1; # Applies scheduler maps to customer VLANs.
}
tcp-cvlan2 {
    shaping-rate 200m;
    guaranteed-rate 100m;
    scheduler-map tcp-map-cvlanx; # Applies scheduler maps to customer VLANs.
}
tcp-cvlan3 {
    shaping-rate 200m;
    guaranteed-rate 150m;
    scheduler-map tcp-map-cvlanx; # Applies scheduler maps to customer VLANs
}
tcp-cvlan4 {
    shaping-rate 100m;
    guaranteed-rate 50m;
    scheduler-map tcp-map-cvlanx; # Applies scheduler maps to customer VLANs
}
}
```

Configuring the Schedulers

The schedulers hold the information about the queues, the last level of the hierarchy. Note the consistent naming schemes applied to repetitive elements in all parts of this example.

```
[edit class-of-service schedulers]
sched-cvlan0-qx {
    priority low;
    transmit-rate 20m;
```

```
    buffer-size temporal 100ms;
    drop-profile loss-priority low dp-low;
    drop-profile loss-priority high dp-high;
}
sched-cvlan1-q0 {
    priority high;
    transmit-rate 20m;
    buffer-size percent 40;
    drop-profile loss-priority low dp-low;
    drop-profile loss-priority high dp-high;
}
sched-cvlanx-qx {
    transmit-rate percent 30;
    buffer-size percent 30;
    drop-profile loss-priority low dp-low;
    drop-profile loss-priority high dp-high;
}
sched-cvlan1-qx {
    transmit-rate 10m;
    buffer-size temporal 100ms;
    drop-profile loss-priority low dp-low;
    drop-profile loss-priority high dp-high;
}
```

Configuring the Drop Profiles

This section configures the drop profiles for the example. For more information about interpolated drop profiles, see [“RED Drop Profiles Overview” on page 253](#).

```
[edit class-of-service drop-profiles]
dp-low {
    interpolate fill-level 80 drop-probability 80;
    interpolate fill-level 100 drop-probability 100;
}
dp-high {
    interpolate fill-level 60 drop-probability 80;
    interpolate fill-level 80 drop-probability 100;
}
```

Configuring the Scheduler Maps

This section configures the scheduler maps for the example. Each one references a scheduler configured in [“Configuring the Schedulers” on page 233](#).

```
[edit class-of-service scheduler-maps]
tcp-map-cvlan0 {
    forwarding-class voice scheduler sched-cvlan0-qx;
    forwarding-class video scheduler sched-cvlan0-qx;
    forwarding-class data scheduler sched-cvlan0-qx;
}
tcp-map-cvlan1 {
    forwarding-class voice scheduler sched-cvlan1-q0;
    forwarding-class video scheduler sched-cvlan1-qx;
    forwarding-class data scheduler sched-cvlan1-qx;
}
tcp-map-cvlanx {
    forwarding-class voice scheduler sched-cvlanx-qx;
```

```

forwarding-class video scheduler sched-cvlanx-qx;
forwarding-class data scheduler sched-cvlanx-qx;
}

```

Applying the Traffic Control Profiles

This section applies the traffic control profiles to the proper levels of the hierarchy.



NOTE: Although a shaping rate can be applied directly to the physical interface, hierarchical schedulers must use a traffic control profile to hold this parameter.

```

[edit class-of-service interfaces]
ge-1/0/0 {
  output-traffic-control-profile tcp-500m-shaping-rate;
  unit 0 {
    output-traffic-control-profile tcp-cvlan0;
  }
  unit 1 {
    output-traffic-control-profile tcp-cvlan1;
  }
  unit 2 {
    output-traffic-control-profile tcp-cvlan2;
  }
  unit 3 {
    output-traffic-control-profile tcp-cvlan3;
  }
  unit 4 {
    output-traffic-control-profile tcp-cvlan4;
  }
}
interface-set svlan0 {
  output-traffic-control-profile tcp-svlan0;
}
interface-set svlan1 {
  output-traffic-control-profile tcp-svlan1;
}

```



NOTE: You should be careful when using a `show interfaces queue` command that references nonexistent class-of-service logical interfaces. When multiple logical interfaces (units) but are not configured under the same interface set or physical interface, but are referenced by a command such as `show interfaces queue ge-10/0/1.12 forwarding-class be` or `show interfaces queue ge-10/0/1.13 forwarding-class be` (where logical units 12 and 13 are not configured as a class-of-service interfaces), these interfaces display the same traffic statistics for each logical interface. In other words, even if there is no traffic passing through a particular unconfigured logical interface, as long as one or more of the other unconfigured logical interfaces under the same interface set or physical interface is passing traffic, this particular logical interface displays statistics counters showing the total amount of traffic passed through all other unconfigured logical interfaces together.

Hierarchical Schedulers on Aggregated Ethernet Interfaces Overview

On MX series routers, you can apply hierarchical schedulers on aggregated ethernet bundles using interface sets. This feature enables you to configure a group of virtual LANs (VLANs) and control their bandwidth. This feature is supported at egress only.

You can configure interface sets for aggregated Ethernet (AE) interfaces created under static configurations. You can configure class-of-service parameters on AE interfaces, in either link-protect or non-link-protect mode. You can configure these parameters at the AE physical interface level. The CoS configuration is fully replicated for all AE member links in link-protect mode. You can control the way these parameters are applied to member links in non-link-protect mode by configuring the AE interface to operate in scaled mode or replicate mode.

The link membership list and scheduler mode of the interface set is inherited from the underlying aggregated Ethernet interface over which the interface set is configured. When an aggregated Ethernet interface operates in link protection mode, or if scheduler mode is configured to replicate member links, the scheduling parameters of the interface set are copied to each of the member links.

If the scheduler mode of the aggregated Ethernet interface is set to scale member links, the scheduling parameters are scaled based on the number of active member links (scaling factor is $1/A$ where A is the number of active links in the bundle) and applied to each of the AE interface member links.

To configure an interface set, include the **interface-set** statement at the **[edit class-of-service interfaces]** hierarchy level.

To apply scheduling and queuing parameters to the interface set, include the **output-traffic-control-profile** *profile-name* statement at the **[edit class-of-service interfaces interface-name interface-set interface-set-name]** hierarchy level.

To apply an output traffic scheduling and shaping profile for the remaining traffic to the logical interface or interface set, include the **output-traffic-control-profile-remaining** *profile-name* statement at the **[edit class-of-service interfaces interface-name]** hierarchy level or the **[edit class-of-service interfaces interface-name interface-set interface-set-name]** hierarchy level.

Related Documentation

- [Configuring Hierarchical Schedulers on Aggregated Ethernet Interfaces on page 237](#)
- [output-traffic-control-profile-remaining on page 670](#)
- [Controlling Remaining Traffic on page 237](#)

Configuring Hierarchical Schedulers on Aggregated Ethernet Interfaces

The following example shows the creation of an interface set for aggregated Ethernet interfaces in a static Ethernet configuration.

To configure interface sets for aggregated Ethernet (AE) interfaces created under static configurations:

1. Create the AE interfaces.

```
[edit]
user@host# show chassis | display set
set chassis aggregated-devices ethernet device-count 10
```

2. Configure the AE physical interfaces and member links.

```
user@host# show interfaces | display set

set interfaces ge-5/2/0 gigether-options 802.3ad ae0
set interfaces ge-5/2/1 gigether-options 802.3ad ae0
set interfaces ae0 hierarchical-scheduler maximum-hierarchy-levels 2
set interfaces ae0 flexible-vlan-tagging
set interfaces ae0 unit 0 vlan-id 100
set interfaces ae0 unit 1 vlan-id 101
set interfaces ae0 unit 2 vlan-id 102
set interfaces ae0 unit 3 vlan-id 103
set interfaces ae0 unit 4 vlan-id 104
```

3. Configure the interface set.

```
set interfaces interface-set ifset1-ae0 interface ae0 unit 0
set interfaces interface-set ifset1-ae0 interface ae0 unit 1
```

4. Configure class-of-service parameters for the interface sets.

```
set class-of-service interfaces interface-set ifset1-ae0 output-traffic-control-profile
tcp
```

5. Configure scheduler mode.

```
set class-of-service interfaces ae0 member-link-scheduler scale
```

Related Documentation • [Hierarchical Schedulers on Aggregated Ethernet Interfaces Overview on page 236](#)


Controlling Remaining Traffic

You can configure many logical interfaces under an interface. However, only a subset of them might have a traffic control profile attached. For example, you can configure three logical interfaces (units) over the same service VLAN, but apply a traffic control profile specifying best-effort and voice queues to only one of the logical interface units. Traffic from the two remaining logical interfaces is considered *remaining traffic*. To configure transmit rate guarantees for the remaining traffic, you configure the **output-traffic-control-profile-remaining** statement specifying a guaranteed rate for the remaining traffic. Without this statement, the remaining traffic gets a default, minimal

bandwidth. In the same way, the **shaping-rate** and **delay-buffer-rate** statements can be specified in the traffic control profile referenced with the **output-traffic-control-profile-remaining** statement in order to shape and provide buffering for remaining traffic.

Consider the interface shown in [Figure 15 on page 238](#). Customer VLANs 3 and 4 have no explicit traffic control profile. However, the service provider might want to establish a shaping and guaranteed transmit rate for aggregate traffic heading for those customer VLANs. The solution is to configure and apply a traffic control profile for all remaining traffic on the interface.

Figure 15: Handling Remaining Traffic

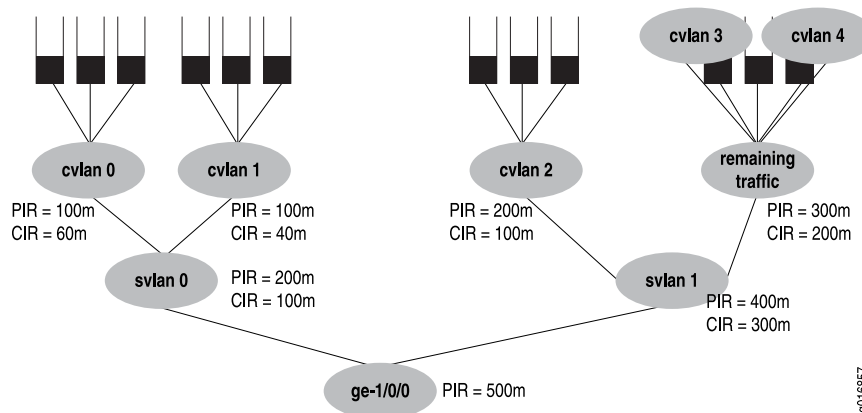


This example considers the case where customer VLANs 3 and 4 have no explicit traffic control profile, yet need to establish a shaping and guaranteed transmit rate for traffic heading for those customer VLANs. The solution is to add a traffic control profile to the **svlan1** interface set. This example builds on the earlier example and so does not repeat all configuration details, only those at the service VLAN level.

```
[edit class-of-service interfaces]
interface-set svlan0 {
  output-traffic-control-profile tcp-svlan0;
}
interface-set svlan1 {
  output-traffic-control-profile tcp-svlan1; # For explicitly shaped traffic.
  output-traffic-control-profile-remaining tcp-svlan1-remaining; # For all remaining traffic.
}

[edit class-of-service traffic-control-profiles]
tcp-svlan1 {
  shaping-rate 400m;
  guaranteed-rate 300m;
}
tcp-svlan1-remaining {
  shaping-rate 300m;
  guaranteed-rate 200m;
  scheduler-map smap-remainder; # this smap is not shown in detail
}
```

Next, consider the example shown in [Figure 16 on page 239](#).

Figure 16: Another Example of Handling Remaining Traffic

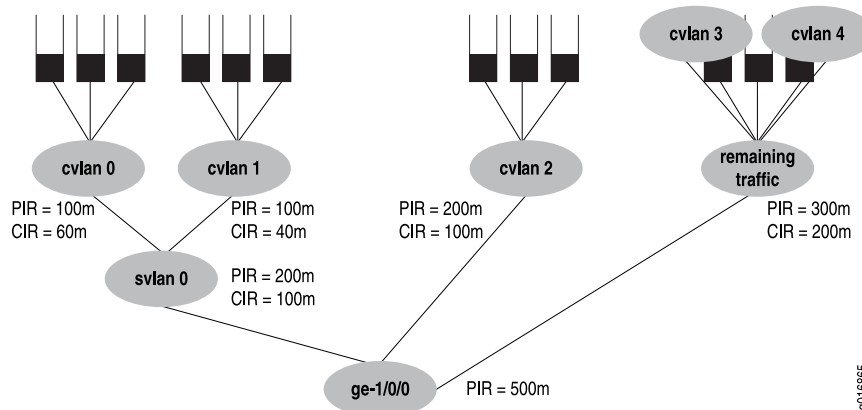

In this example, **ge-1/0/0** has three logical interfaces (unit 1, unit 2, and unit 3), and SVLAN 2000, which are covered by the interface set:

- Scheduling for the interface set **svlan0** is specified by referencing an **output-traffic-control-profile** statement which specifies the **guaranteed-rate**, **shaping-rate**, and **delay-buffer-rate** statement values for the interface set. In this example, the output traffic control profile called **tcp-svlan0** guarantees 100 Mbps and shapes the interface set **svlan0** to 200 Mbps.
- Scheduling and queuing for remaining traffic of **svlan0** is specified by referencing an **output-traffic-control-profile-remaining** statement which references a **scheduler-map** statement that establishes queues for the remaining traffic. The specified traffic control profile can also configure guaranteed, shaping, and delay-buffer rates for the remaining traffic. In this example, **output-traffic-control-profile-remaining tcp-svlan0-rem** references **scheduler-map smap-svlan0-rem**, which calls for a best-effort queue for remaining traffic (that is, traffic on unit 3 and unit 4, which is not classified by the **svlan0** interface set). The example also specifies a **guaranteed-rate** of 200 Mbps and a **shaping-rate** of 300 Mbps for all remaining traffic.
- Scheduling and queuing for logical interface **ge-1/0/0 unit 1** is configured “traditionally” and uses an **output-traffic-control-profile** specified for that unit. In this example, **output-traffic-control-profile tcp-1f1** specifies scheduling and queuing for **ge-1/0/0 unit 1**.

This example does not include the **[edit interfaces]** configuration.

```
[edit class-of-service interfaces]
interface-set {
  svlan0 {
    output-traffic-control-profile tcp-svlan0; # Guarantee & shaper for svlan0.
  }
}
ge-1/0/0 {
  output-traffic-control-profile-remaining tcp-svlan0-rem;
  # Unit 3 and 4 are not explicitly configured, but captured by “remaining”
  unit 1 {
    output-traffic-control-profile tcp-1f1; # Unit 1 be & ef queues.
  }
}
```

Here is how the traffic control profiles for this example are configured:

```
[edit class-of-service traffic-control-profiles]
tcp-svlan0 {
  shaping-rate 200m;
  guaranteed-rate 100m;
}
tcp-svlan0-rem {
  shaping-rate 300m;
  guaranteed-rate 200m;
  scheduler-map smap-svlan0-rem; # This specifies queues for remaining traffic
}
tcp-ift1 {
  scheduler-map smap-ift1;
}
```

Finally, here are the scheduler maps and queues for the example:

```
[edit class-of-service scheduler-maps]
smap-svlan0-rem {
  forwarding-class best-effort scheduler sched-foo;
}
smap-ift1 {
  forwarding-class best-effort scheduler sched-bar;
  forwarding-class assured-forwarding scheduler sched-baz;
}
```

The configuration for the referenced schedulers are not given for this example.

Configuring Internal Scheduler Nodes

A node in the hierarchy is considered internal if either of the following conditions apply:

- Any one of its children nodes has a traffic control profile configured and applied.
- You include the **internal-node** statement at the **[edit class-of-service interfaces interface-set set-name]** hierarchy level.

Why would it be important to make a certain node internal? Generally, there are more resources available at the logical interface (unit) level than at the interface set level. Also, it might be desirable to configure all resources at a single level, rather than spread over several levels. The **internal-node** statement provides this flexibility. This can be a helpful configuration device when interface-set queuing without logical interfaces is used exclusively on the interface.

The **internal-node** statement can be used to raise the interface set without children to the same level as the other configured interface sets with children, allowing them to compete for the same set of resources.

In summary, using the **internal-node** statement allows statements to all be scheduled at the same level with or without children.

The following example makes the interfaces sets **if-set-1** and **if-set-2** internal:

```
[edit class-of-service interfaces]
```

```
interface-set {  
  if-set-1 {  
    internal-node;  
    output-traffic-control-profile tcp-200m-no-smap;  
  }  
  if-set-2 {  
    internal-node;  
    output-traffic-control-profile tcp-100m-no-smap;  
  }  
}
```

If an interface set has logical interfaces configured with a traffic control profile, then the use of the **internal-node** statement has no effect.

Internal nodes can specify a **traffic-control-profile-remaining** statement.

PIR-Only and CIR Mode

The actual behavior of many CoS parameters, especially the shaping rate and guaranteed rate, depend on whether the physical interface is operating in PIR-only or CIR mode.

In PIR-only mode, one or more nodes perform shaping. The physical interface is in the PIR-only mode if no child (or grandchild) node under the port has a guaranteed rate configured.

The mode of the port is important because in PIR-only mode, the scheduling across the child nodes is in proportion to their shaping rates (PIRs) and not the guaranteed rates (CIRs). This can be important if the observed behavior is not what is anticipated.

In CIR mode, one or more nodes applies a guaranteed rate and might perform shaping. A physical interface is in CIR mode if at least one child (or grandchild) node has a guaranteed rate configured.

In CIR mode, one or more nodes applies the guaranteed rates. In addition, any child or grandchild node under the physical interface can have a shaping rate configured. Only the guaranteed rate matters. In CIR mode, nodes that do not have a guaranteed rate configured are assumed to have a very small guaranteed rate (queuing weight).

Priority Propagation

Priority propagation is performed for MX Series router output Interfaces hosted on MICs and MPCs or on Enhanced Queuing DPCs only and on M Series and T Series router output interfaces hosted on IQ2E PICs only. Priority propagation is useful for mixed traffic environments when, for example, you want to make sure that the voice traffic of one customer does not suffer due to the data traffic of another customer. Nodes and queues are serviced in the order of their priority. The default priority of a queue is low, and can explicitly configure a queue priority by including the **priority** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level.

You cannot directly configure the priorities of all hierarchical scheduling elements. The priorities of internal nodes, for example, are determined as follows:

- The highest priority of an active child (interface sets only take the highest priority of their active children).
- Whether the node is above its configured guaranteed rate (CIR) or not (this is only relevant if the physical interface is in CIR mode).

Each queue has a configured priority and a hardware priority. The usual mapping between the configured priority and the hardware priority is shown in [Table 34 on page 242](#).

Table 34: Queue Priority

Configured Priority	Hardware Priority
Strict-high	0
High	0
Medium-high	1
Medium-low	1
Low	2

In CIR mode, the priority for each internal node depends on whether the highest active child node is above or below the guaranteed rate. The mapping between the highest active child's priority and the hardware priority below and above the guaranteed rate is shown in [Table 35 on page 242](#).

Table 35: Internal Node Queue Priority for CIR Mode

Configured Priority of Highest Active Child Node	Hardware Priority Below Guaranteed Rate	Hardware Priority Above Guaranteed Rate
Strict-high	0	0
High	0	3

Table 35: Internal Node Queue Priority for CIR Mode (*continued*)

Configured Priority of Highest Active Child Node	Hardware Priority Below Guaranteed Rate	Hardware Priority Above Guaranteed Rate
Medium-high	1	3
Medium-low	1	3
Low	2	3


In PIR-only mode, nodes cannot send if they are above the configured shaping rate. The mapping between the configured priority and the hardware priority is for PIR-only mode is shown in [Table 36 on page 243](#).

Table 36: Internal Node Queue Priority for PIR-Only Mode

Configured Priority	Hardware Priority
Strict-high	0
High	0
Medium-high	1
Medium-low	1
Low	2

A physical interface with hierarchical schedulers configured is shown in [Figure 17 on page 243](#). The configured priorities are shown for each queue at the top of the figure. The hardware priorities for each node are shown in parentheses. Each node also shows any configured shaping rate (PIR) or guaranteed rate (CIR) and whether or not the queues is above or below the CIR. The nodes are shown in one of three states: above the CIR (clear), below the CIR (dark), or in a condition where the CIR does not matter (gray).

Figure 17: Hierarchical Schedulers and Priorities

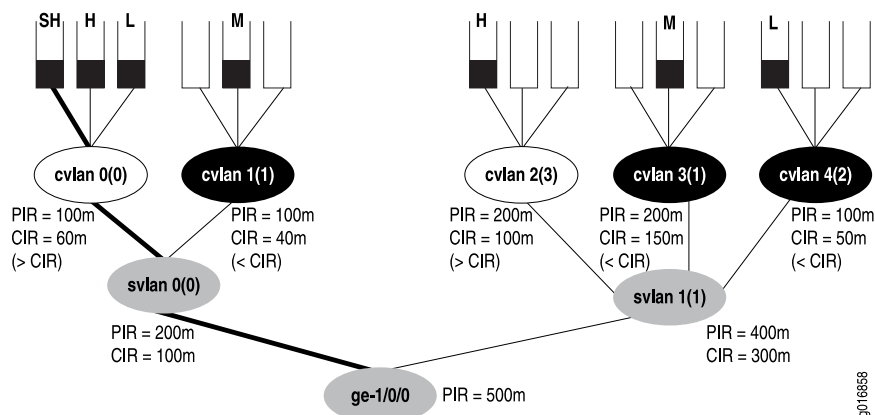

In the figure, the strict-high queue for customer VLAN 0 (cvlan 0) receives service first, even though the customer VLAN is above the configured CIR (see [Table 35 on page 242](#) for the reason: strict-high always has hardware priority 0 regardless of CIR state). Once that queue has been drained, and the priority of the node has become 3 instead of 0 (due to the lack of strict-high traffic), the system moves on to the medium queues next (cvlan 1 and cvlan 3), draining them in a round robin fashion (empty queue lose their hardware priority). The low queue on cvlan 4 (priority 2) is sent next, because that mode is below the CIR. Then the high queues on cvlan 0 and cvlan2 (both now with priority 3) are drained in a round robin fashion, and finally the low queue on cvlan 0 is drained (thanks to svlan 0 having a priority of 3).

**Related
Documentation**

- [CoS on Enhanced IQ2 PICs Overview on page 363](#)
- [Enhanced Queuing DPC Hardware Properties on page 431](#)
- [CoS on MIC and MPC Features Overview on page 450](#)
- [Scheduler Node Scaling on MIC and MPC Interfaces Overview on page 454](#)
- [priority \(Schedulers\) on page 682](#)
- [schedulers \(Class of Service\) on page 703](#)

CHAPTER 12

Configuring Queue-Level Bandwidth Sharing

This topic includes the following:

- [Bandwidth Sharing on Nonqueuing Packet Forwarding Engines Overview on page 245](#)
- [Configuring Rate Limits on Nonqueuing Packet Forwarding Engines on page 246](#)
- [Excess Rate and Excess Priority Configuration Examples on page 247](#)

Bandwidth Sharing on Nonqueuing Packet Forwarding Engines Overview

You can configure bandwidth sharing rate limits, excess rate, and excess priority at the queue level on the following Juniper Networks routers:

- M120 Multiservice Edge Router (rate limit and excess priority only; excess rate is not configured by the user)
- M320 router with Enhanced FPCs (rate limit, excess rate, and excess priority)
- MX Series 3D Universal Edge Router with nonqueuing DPCs (rate limit, excess rate, and excess priority)

You configure rate limits when you have a concern that low-latency packets (such as high or strict-high priority packets for voice) might starve low-priority and medium-priority packets. In Junos OS, the low latency queue is implemented by rate-limiting packets to the transmit bandwidth. The rate-limiting is performed immediately before queuing the packet for transmission. All packets that exceed the rate limit are not queued, but dropped.

By default, if the excess priority is not configured for a queue, the excess priority will be the same as the normal queue priority. If none of the queues have an excess rate configured, then the excess rate will be the same as the transmit rate percentage. If at least one of the queues has an excess rate configured, then the excess rate for the queues that do not have an excess rate configured will be set to zero.

When the physical interface is on queuing hardware such as the IQ, IQ2, or IQE PICs, or MX Series routers queuing DPCs, these features are dependent on the PIC (or queuing DPC in the case of the MX Series router) configuration.

You cannot configure both rate limits and buffer sizes on these Packet Forwarding Engines.

Four levels of excess priorities are supported: low, medium-low, medium-high, and high.



NOTE: Rate limiting is implemented differently on Enhanced Queuing DPCs and non-queuing Packet Forwarding Engines. On Enhanced Queuing DPCs, rate-limiting is implemented using a single rate two color policer. On non-queuing Packet Forwarding Engines, rate-limiting is achieved by shaping the queue to the transmit rate and keeping the queue delay buffers small to prevent too many packets from being queued once the shaping rate is reached.

Configuring Rate Limits on Nonqueuing Packet Forwarding Engines

To configure rate limits for nonqueuing Packet Forwarding Engines, include the **transmit-rate** statement at the `[edit class-of-service schedulers scheduler-name]` hierarchy level.



NOTE: Rate limiting is implemented differently on Enhanced Queuing DPCs and non-queuing Packet Forwarding Engines. On Enhanced Queuing DPCs, rate-limiting is implemented using a single rate two color policer. On non-queuing Packet Forwarding Engines, rate-limiting is achieved by shaping the queue to the transmit rate and keeping the queue delay buffers small to prevent too many packets from being queued once the shaping rate is reached.

Configuring the Schedulers

The following example configures schedulers, forwarding classes, and a scheduler map for a rate-limited interface.

```
[edit class-of-service schedulers]
scheduler-1 {
  transmit-rate percent 20 rate-limit;
  priority high;
}
scheduler-2 {
  transmit-rate percent 10 rate-limit;
  priority strict-high;
}
scheduler-3 {
  transmit-rate percent 40;
  priority medium-high;
}
scheduler-4 {
  transmit-rate percent 30;
  priority medium-high;
}
```

Configuring the Forwarding Classes

```
[edit class-of-service]
forwarding-classes {
  class cp_000 queue-num 0;
  class cp_001 queue-num 1;
```


	<pre> class cp_010 queue-num 2; class cp_011 queue-num 3; class cp_100 queue-num 4; class cp_101 queue-num 5; class cp_110 queue-num 6; class cp_111 queue-num 7; } </pre>
Configuring the Scheduler Map	<pre> [edit class-of-service scheduler-maps] scheduler-map-1 { forwarding-class cp_000 scheduler scheduler-1; forwarding-class cp_001 scheduler scheduler-2; forwarding-class cp_010 scheduler scheduler-3; forwarding-class cp_011 scheduler scheduler-4; } </pre>
Applying the Scheduler Map to the Interface	<pre> [edit interfaces] ge-1/0/0 { scheduler-map scheduler-map-1; unit 0 { family inet { address 192.168.1.1/32; } } } </pre>

Excess Rate and Excess Priority Configuration Examples

To configure the excess rate for nonqueueing Packet Forwarding Engines, include the **excess-rate** statement at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level.

To configure the excess priority for nonqueueing Packet Forwarding Engines, include the **excess-priority** statement at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level.

The relationship between the configured guaranteed rate, excess rate, guaranteed priority, excess priority, and offered load is not always obvious. The following tables show the expected throughput of a Gigabit Ethernet port with various bandwidth-sharing parameters configured on the queues.

The default behavior of a nonqueueing Gigabit Ethernet interface with multiple priority levels is shown in [Table 37 on page 247](#). All queues in the table get their guaranteed rate. The excess bandwidth is first offered to the excess high-priority queues. Because these use all available bandwidth, there is no remaining excess bandwidth for the low-priority queues.

Table 37: Current Behavior with Multiple Priority Levels

Queue	Guaranteed (Transmit) Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	high	high	600 Mbps	200 + 366.67 = 566.67 Mbps

Table 37: Current Behavior with Multiple Priority Levels (*continued*)

Queue	Guaranteed (Transmit) Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q1	10%	high	high	500 Mbps	$100 + 183.33 = 283.33$ Mbps
Q2	10%	low	low	500 Mbps	$100 + 0 = 100$ Mbps
Q3	5%	low	low	500 Mbps	$50 + 0 = 50$ Mbps

The default behavior of a nonqueuing Gigabit Ethernet interface with the same priority levels is shown in [Table 38 on page 248](#). All queues in the table get their guaranteed rate. Because all queues have the same excess priority, they share the excess bandwidth and each queue gets excess bandwidth in proportion to the transmit rate.

Table 38: Current Behavior with Same Priority Levels

Queue	Guaranteed (Transmit) Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	high	high	500 Mbps	$200 + 244.44 = 444.44$ Mbps
Q1	10%	high	high	500 Mbps	$100 + 122.22 = 222.22$ Mbps
Q2	10%	high	high	500 Mbps	$100 + 122.22 = 222.22$ Mbps
Q3	5%	high	high	500 Mbps	$50 + 61.11 = 111.11$ Mbps

The default behavior of a nonqueuing Gigabit Ethernet interface with the at least one strict-high priority level is shown in [Table 39 on page 248](#). First the high priority and strict-high are serviced in a weighted round-robin fashion. The high priority queue gets its guaranteed bandwidth and the strict-high queue gets what remains. The high excess priority queue gets all the excess bandwidth.

Table 39: Current Behavior with Strict-High Priority

Queue	Guaranteed (Transmit) Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	strict-high	X	500 Mbps	500 Mbps
Q1	10%	high	high	500 Mbps	$100 + 250 = 350$ Mbps
Q2	10%	low	low	500 Mbps	$100 + 0 = 100$ Mbps
Q3	5%	low	low	500 Mbps	$50 + 0 = 50$ Mbps

The default behavior of a nonqueuing Gigabit Ethernet interface with the at least one strict-high priority level and a higher offered load on Q0 is shown in [Table 40 on page 249](#). First the high priority and strict-high are serviced in a weighted round-robin fashion. The

high priority queue gets its guaranteed bandwidth and the strict-high queue gets what remains. There is no excess bandwidth.

Table 40: Strict-High Priority with Higher Load

Queue	Guaranteed (Transmit) Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	strict-high	X	1 Gbps	900 Mbps
Q1	10%	high	high	500 Mbps	$100 + 0 = 100$ Mbps
Q2	10%	low	low	500 Mbps	$0 + 0 = 0$ Mbps
Q3	5%	low	low	500 Mbps	$0 + 0 = 0$ Mbps

Now consider the behavior of the queues with configured excess rates and excess priorities.

The behavior with multiple priority levels is shown in [Table 41 on page 249](#). All queues get the guaranteed rate. The excess bandwidth is first offered to the excess high priority queues and these consume all the bandwidth. There is no remaining excess bandwidth for low priority queues.

Table 41: Sharing with Multiple Priority Levels

Queue	Guaranteed (Transmit) Rate	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	10%	high	high	500 Mbps	$200 + 275 = 475$ Mbps
Q1	10%	20%	high	low	500 Mbps	$100 + 0 = 100$ Mbps
Q2	10%	10%	low	high	500 Mbps	$100 + 275 = 275$ Mbps
Q3	5%	20%	low	low	500 Mbps	$50 + 0 = 50$ Mbps

The behavior with the same (high) priority levels is shown in [Table 42 on page 249](#). All queues get the guaranteed rate. Because all queues have the same excess priority, they share the excess bandwidth in proportion to their transmit rate.

Table 42: Sharing with the Same Priority Levels

Queue	Guaranteed (Transmit) Rate	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	10%	high	high	500 Mbps	$200 + 91.67 = 291.67$ Mbps
Q1	10%	20%	high	high	500 Mbps	$100 + 183.33 = 283.33$ Mbps

Table 42: Sharing with the Same Priority Levels (*continued*)

Queue	Guaranteed (Transmit) Rate	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q2	10%	10%	high	high	500 Mbps	$100 + 91.67 = 191.67$ Mbps
Q3	5%	20%	high	high	500 Mbps	$50 + 183.33 = 233.33$ Mbps

The behavior with at least one strict-high priority level is shown in [Table 43 on page 250](#). The high priority and strict-high queues are serviced in a weighted round-robin fashion. The high priority queue gets its guaranteed rate and the strict-high queue gets the rest. The excess high-priority queue get all the excess bandwidth.

Table 43: Sharing with at Least One Strict-High Priority

Queue	Guaranteed (Transmit) Rate	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	X	strict-high	X	500 Mbps	500 Mbps
Q1	10%	20%	high	low	500 Mbps	$100 + 0 = 100$ Mbps
Q2	10%	10%	low	high	500 Mbps	$100 + 250 = 350$ Mbps
Q3	5%	20%	low	low	500 Mbps	$50 + 0 = 50$ Mbps

The behavior with at least one strict-high priority level and a higher offered load is shown in [Table 44 on page 250](#). The high priority and strict-high queues are serviced in a weighted round-robin fashion. The high priority queue gets its guaranteed rate and the strict-high queue gets the rest. There is no excess bandwidth.

Table 44: Sharing with at Least One Strict-High Priority and Higher Load

Queue	Guaranteed (Transmit) Rate	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	X	strict-high	X	900 Mbps	900 Mbps
Q1	10%	20%	high	low	500 Mbps	$100 + 0 = 100$ Mbps
Q2	10%	10%	low	high	500 Mbps	$0 + 0 = 0$ Mbps
Q3	5%	20%	low	low	500 Mbps	$0 + 0 = 0$ Mbps

The behavior with at least one strict-high priority level and a rate limit is shown in [Table 45 on page 251](#). Queue 0 and Queue 2 are rate limited, so the maximum bandwidth they are offered is the transmit bandwidth and they will not be offered any excess bandwidth.

All other queues are offered the guaranteed bandwidth and the excess is shared by the non-rate-limited queues.

Table 45: Sharing with at Least One Strict-High Priority and Rate Limit

Queue	Guaranteed (Transmit) Rate	Rate Limit	Excess Rate	Guaranteed Priority	Excess Priority	Offered Load	Expected Throughput
Q0	20%	Yes	X	strict-high	X	500 Mbps	200 + 0 = 200 Mbps
Q1	10%	No	20%	high	low	500 Mbps	100 + 275 = 375 Mbps
Q2	10%	Yes	10%	low	high	500 Mbps	100 + 0 = 100 Mbps
Q3	5%	No	20%	low	low	500 Mbps	50 + 275 = 325 Mbps

Configuring the Schedulers

The following example configures schedulers, forwarding classes, and a scheduler map for an interface with excess rates and excess priorities.

```
[edit class-of-service schedulers]
scheduler-1 {
  transmit-rate percent 20;
  priority high;
  excess-rate percent 10;
  excess-priority low;
}
scheduler-2 {
  transmit-rate percent 10;
  priority strict-high;
}
scheduler-3 {
  transmit-rate percent 10;
  priority medium-high;
  excess-rate percent 20;
  excess-priority high;
}
scheduler-4 {
  transmit-rate percent 5;
  priority medium-high;
  excess-rate percent 30;
  excess-priority low;
}
```

Configuring the Forwarding Classes

```
[edit class-of-service]
forwarding-classes {
  class cp_000 queue-num 0;
  class cp_001 queue-num 1;
  class cp_010 queue-num 2;
  class cp_011 queue-num 3;
  class cp_100 queue-num 4;
```

```
class cp_101 queue-num 5;
class cp_110 queue-num 6;
class cp_111 queue-num 7;
}
```

Configuring the Scheduler Map

```
[edit class-of-service scheduler-maps]
scheduler-map-1 {
  forwarding-class cp_000 scheduler scheduler-1;
  forwarding-class cp_001 scheduler scheduler-2;
  forwarding-class cp_010 scheduler scheduler-3;
  forwarding-class cp_011 scheduler scheduler-4;
}
```

Applying the Scheduler Map to the Interface

```
[edit interfaces]
ge-1/1/0 {
  scheduler-map scheduler-map-1;
  unit 0 {
    family inet {
      address 192.168.1.2/32;
    }
  }
}
```

Configuring RED Drop Profiles

This topic discusses the following:

- [RED Drop Profiles Overview on page 253](#)
- [Default Drop Profile on page 255](#)
- [Configuring RED Drop Profiles on page 255](#)
- [Packet Loss Priority Configuration Overview on page 256](#)
- [Example: Configuring RED Drop Profiles on page 257](#)
- [Configuring Weighted RED Buffer Occupancy on page 258](#)
- [Example: Configuring Weighted RED Buffer Occupancy on page 259](#)

RED Drop Profiles Overview

You can configure two parameters to control congestion at the output stage. The first parameter defines the delay-buffer bandwidth, which provides packet buffer space to absorb burst traffic up to the specified duration of delay. Once the specified delay buffer becomes full, packets with 100 percent drop probability are dropped from the head of the buffer. For more information, see [“Configuring the Scheduler Buffer Size” on page 160](#).

The second parameter defines the drop probabilities across the range of delay-buffer occupancy, supporting the random early detection (RED) process. When the number of packets queued is greater than the ability of the router to empty a queue, the queue requires a method for determining which packets to drop from the network. To address this, the Junos OS provides the option of enabling RED on individual queues.

Depending on the drop probabilities, RED might drop many packets long before the buffer becomes full, or it might drop only a few packets even if the buffer is almost full.

A *drop profile* is a mechanism of RED that defines parameters that allow packets to be dropped from the network. Drop profiles define the meanings of the loss priorities.


When you configure drop profiles, there are two important values: the queue fullness and the drop probability. The *queue fullness* represents a percentage of the memory used to store packets in relation to the total amount that has been allocated for that specific queue. Similarly, the *drop probability* is a percentage value that correlates to the likelihood that an individual packet is dropped from the network. These two variables are combined in a graph-like format, as shown in [Figure 18 on page 254](#).



NOTE: You can only specify two fill levels for interpolated drop profiles on the Enhanced Queuing DPC for Juniper Network MX Series Ethernet Services Routers. For more information about interpolated drop profiles on the Enhanced Queuing DPC for MX Series routers, see [“Configuring WRED on Enhanced Queuing DPCs” on page 437](#).

Figure 18 on page 254 shows both a segmented and an interpolated graph. Although the formation of these graph lines is different, the application of the profile is the same. When a packet reaches the head of the queue, a random number between 0 and 100 is calculated by the router. This random number is plotted against the drop profile using the current queue fullness of that particular queue. When the random number falls above the graph line, the packet is transmitted onto the physical media. When the number falls below graph the line, the packet is dropped from the network.

Figure 18: Segmented and Interpolated Drop Profiles

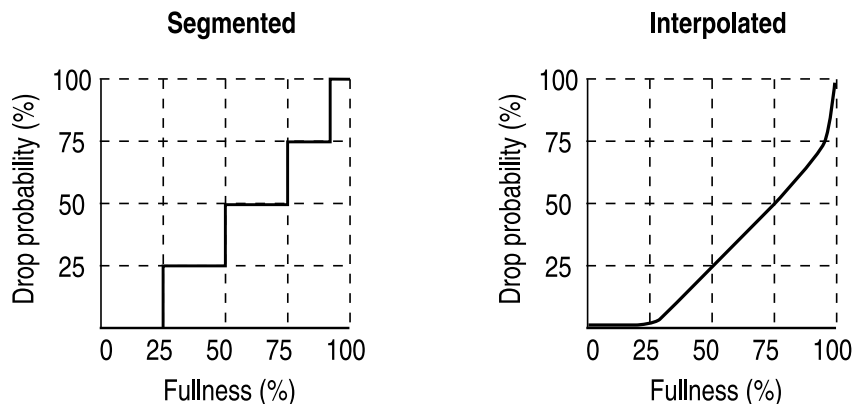

By defining multiple fill levels and drop probabilities, you create a segmented drop profile. The line segments are defined in terms of the following graphical model: in the first quadrant, the x axis represents the fill level, and the y axis represents the drop probability. The initial line segment spans from the origin (0,0) to the point ($\langle l1 \rangle$, $\langle p1 \rangle$); a second line runs from ($\langle l1 \rangle$, $\langle p1 \rangle$) to ($\langle l2 \rangle$, $\langle p2 \rangle$) and so forth, until a final line segment connects (100, 100). The software automatically constructs a drop profile containing 64 fill levels at drop probabilities that approximate the calculated line segments.



NOTE: If you configure the `interpolate` statement, you can specify more than 64 pairs, but the system generates only 64 discrete entries.

You specify drop probabilities in the drop profile section of the class-of-service (CoS) configuration hierarchy and reference them in each scheduler configuration. For each scheduler, you can configure multiple separate drop profiles, one for each combination of loss priority (low, medium-low, medium-high, or high) and protocol.

You can configure a maximum of 32 different drop profiles.

To configure RED drop profiles, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
drop-profiles {
  profile-name {
    fill-level percentage drop-probability percentage;
    interpolate {
      drop-probability [ values ];
      fill-level [ values ];
    }
  }
}
```

Default Drop Profile

By default, if you configure no drop profiles, RED is still in effect and functions as the primary mechanism for managing congestion. In the default RED drop profile, when the fill-level is 0 percent, the drop probability is 0 percent. When the fill-level is 100 percent, the drop probability is 100 percent.

As a backup method for managing congestion, tail dropping takes effect when congestion of small packets occurs. On Juniper Networks M320 Multiservice Edge Routers and T Series Core Routers, the software supports *tail-RED*, which means that when tail dropping occurs, the software uses RED to execute intelligent tail drops. On other routers, the software executes tail drops unconditionally.

Configuring RED Drop Profiles

You enable RED by applying a drop profile to a scheduler. When RED is operational on an interface, the queue no longer drops packets from the tail of the queue. Rather, packets are dropped after they reach the head of the queue.

To configure a drop profile, include the **drop-profiles** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
drop-profiles {
  profile-name {
    fill-level percentage drop-probability percentage;
    interpolate {
      drop-probability [ values ];
      fill-level [ values ];
    }
  }
}
```

In this configuration, include either the **interpolate** statement and its options, or the fill-level and drop-probability **percentage** values. These two alternatives enable you to configure either each drop probability at up to 64 fill-level/drop-probability paired values, or a profile represented as a series of line segments, as discussed in [“RED Drop Profiles Overview” on page 253](#).

After you configure a drop profile, you must assign the drop profile to a drop-profile map, and assign the drop-profile map to a scheduler, as discussed in [“Configuring Drop Profile Maps for Schedulers” on page 171](#).

Packet Loss Priority Configuration Overview

Loss priority settings help determine which packets are dropped from the network during periods of congestion. The software supports multiple packet loss priority (PLP) designations: **low** and **high**. (In addition, **medium-low** and **medium-high** PLPs are supported when you configure tricolor marking, as discussed in [“Configuring Tricolor Marking” on page 100](#).) You can set PLP by configuring a behavior aggregate or multifield classifier, as discussed in [“Setting Packet Loss Priority” on page 64](#) and [“Configuring Multifield Classifiers” on page 76](#).



NOTE: On T Series routers with different Packet Forwarding Engines (non-Enhanced Scaling and Enhanced Scaling FPCs), you can configure PLP bit copying for ingress and egress unicast and multicast traffic. To configure, include the **copy-plp-all** statement at the [edit class-of-service] hierarchy level.

A drop-profile map examines the loss priority setting of an outgoing packet: **high**, **medium-high**, **medium-low**, **low**, or any.

Obviously, *low*, *medium-low*, *medium-high*, and *high* are relative terms, which by themselves have no meaning. Drop profiles define the meanings of the loss priorities. In the following example, the **low-drop** drop profile defines the meaning of **low** PLP as a 10 percent drop probability when the fill level is 75 percent and a 40 percent drop probability when the fill level is 95 percent. The **high-drop** drop profile defines the meaning of **high** PLP as a 50 percent drop probability when the fill level is 25 percent and a 90 percent drop probability when the fill level is 50 percent.

In this example, the scheduler includes two drop-profile maps, which specify that packets are evaluated by the **low-drop** drop profile if they have a **low** loss priority and are from any protocol. Packets are evaluated by the **high-drop** drop profile if they have a **high** loss priority and are from any protocol.

```
[edit class-of-service]
drop-profiles {
  low-drop {
    interpolate {
      drop-probability [ 10 40];
      fill-level [ 75 95];
    }
  }
  high-drop {
    interpolate {
      drop-probability [ 50 90];
      fill-level [ 25 50];
    }
  }
}
```


```
}
schedulers {
  best-effort {
    drop-profile-map loss-priority low protocol any drop-profile low-drop;
    drop-profile-map loss-priority high protocol any drop-profile high-drop;
  }
}
```

- Related Documentation
- [Configuring Schedulers on page 160](#)
 - [Setting Packet Loss Priority on page 64](#)
 - [copy-plp-all on page 573](#)
 - [Configuring Multifield Classifiers on page 76](#)

Example: Configuring RED Drop Profiles

Create a segmented configuration and an interpolated configuration that correspond to the graphs in [Figure 19 on page 257](#). The values defined in the configuration are matched to represent the data points in the graph line. In this example, the drop probability is 25 percent when the queue is 50 percent full. The drop probability increases to 50 percent when the queue is 75 percent full.

Figure 19: Segmented and Interpolated Drop Profiles

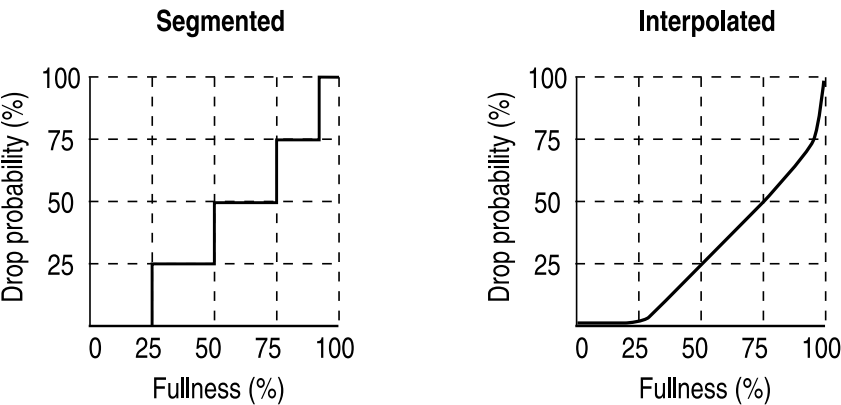

Creating a Segmented Configuration

```
class-of-service {
  drop-profiles {
    segmented-style-profile {
      fill-level 25 drop-probability 25;
      fill-level 50 drop-probability 50;
      fill-level 75 drop-probability 75;
      fill-level 95 drop-probability 100;
    }
  }
}
```

To create the profile's graph line, the software begins at the bottom-left corner, representing a 0 percent fill level and a 0 percent drop probability. This configuration draws a line directly to the right until it reaches the first defined fill level, 25 percent for this configuration. The software then continues the line vertically until the first drop

probability is reached. This process is repeated for all of the defined levels and probabilities until the top-right corner of the graph is reached.

Create a smoother graph line by configuring the profile with the **interpolate** statement. This allows the software to automatically generate 64 data points on the graph beginning at (0, 0) and ending at (100, 100). Along the way, the graph line intersects specific data points, which you define as follows:

Creating an Interpolated Configuration	<pre>class-of-service { drop-profiles { interpolated-style-profile { interpolate { fill-level [50 75]; drop-probability [25 50]; } } } }</pre>
---	--

Configuring Weighted RED Buffer Occupancy

By default, RED is performed based on instantaneous buffer occupancy information. However, IQ-PICs can be configured to use *weighted average* buffer occupancy information. This option is configured on a per-PIC basis and applies to the following IQ-PICs:

- Channelized T1/T3
- Channelized E1/E3
- Channelized OC3/STM1
- Channelized OC12

If you configure this feature on an unsupported PIC, you see an error message.

If you configure this feature on a channelized OC12 intelligent queuing (IQ) interface, the PIC reboots.

When weighted average buffer occupancy is configured, you configure a weight value for averaged buffer occupancy calculations. This weight value is expressed as a negative exponential value of 2 in a fractional expression. For example, a configured weight value of 2 would be expressed as $1/(2^2) = 1/4$. If a configured weight value was configured as 1 (the default), the value would be expressed as $1/(2^1) = 1/2$.

This calculated weight value is applied to the instantaneous buffer occupancy value to determine the new value of the weighted average buffer occupancy. The formula to derive the new weighted average buffer occupancy is:

new average buffer occupancy = weight value * instantaneous buffer occupancy + (1 – weight value) * current average buffer occupancy

For example, if the weight exponent value is configured as 3 (giving a weight value of $1/2^3 = 1/8$), the formula used to determine the new average buffer occupancy based on the instant buffer usage is:

new average buffer occupancy = $1/8 * \text{instantaneous buffer occupancy} + (7/8) * \text{current average buffer occupancy}$

The valid operational range for the weight value on IQ-PICs is 0 through 31. A value of 0 results in the average buffer occupancy being the same as the instantaneous buffer occupancy calculations. Values higher than 31 can be configured, but in these cases the current maximum *operational* value of 31 is used for buffer occupancy calculations.



NOTE: The `show interfaces` command with the `extensive` option displays the *configured* value for the RED buffer occupancy weight exponent. However, in all such cases, the current *operational* maximum value of 31 is used internally.

To configure a Q-PIC for RED weighted average buffer occupancy calculations, include the `red-buffer-occupancy` statement with the `weighted-averaged` option at the `[edit chassis fpc slot-number pic pic-number]` hierarchy level:

```
[edit chassis]
fpc slot-number {
  pic pic-number {
    red-buffer-occupancy {
      weighted-averaged [ instant-usage-weight-exponent exponent-number ];
    }
  }
}
```

Related Documentation

- [Example: Configuring Weighted RED Buffer Occupancy on page 259](#)
- [red-buffer-occupancy on page 688](#)

Example: Configuring Weighted RED Buffer Occupancy

Configure the Q-PIC to use a weight value of 1/2 in average buffer occupancy calculations.

```
[edit chassis]
fpc 0 {
  pic 1 {
    red-buffer-occupancy {
      weighted-averaged instant-usage-weight-exponent 1;
    }
  }
}
```

or

```
[edit chassis]
fpc 0 {
  pic 1 {
    red-buffer-occupancy {
```

```
        weighted-averaged; # the default value is 1 if not specified
    }
}
```

Configure the Q-PIC to use a weight value of 1/4 in average buffer occupancy calculations.

```
[edit chassis]
fpc 0 {
  pic 1 {
    red-buffer-occupancy {
      weighted-averaged instant-usage-weight-exponent 2;
    }
  }
}
```

- Related Documentation**
- [Configuring Weighted RED Buffer Occupancy on page 258](#)
 - [red-buffer-occupancy on page 688](#)

Rewriting Packet Header Information

This topic discusses the following:

- [Rewriting Packet Header Information Overview on page 262](#)
- [Applying Default Rewrite Rules on page 263](#)
- [Configuring Rewrite Rules on page 264](#)
- [Header Bits Preserved, Cleared, and Rewritten on page 265](#)
- [Applying Rewrite Rules to Output Logical Interfaces on page 266](#)
- [Setting IPv6 DSCP and MPLS EXP Values Independently on page 268](#)
- [Configuring DSCP Values for IPv6 Packets Entering the MPLS Tunnel on page 268](#)
- [Assigning the Default Frame Relay DE Loss Priority Map to an Interface on page 270](#)
- [Defining a Custom Frame Relay Loss Priority Map on page 271](#)
- [Applying IEEE 802.1p Rewrite Rules to Dual VLAN Tags on page 271](#)
- [Applying IEEE 802.1ad Rewrite Rules to Dual VLAN Tags on page 273](#)
- [Example: Per-Node Rewriting of EXP Bits on page 274](#)
- [Rewriting MPLS and IPv4 Packet Headers on page 275](#)
- [Rewriting the EXP Bits of All Three Labels of an Outgoing Packet on page 278](#)
- [Rewriting IEEE 802.1p Packet Headers with an MPLS EXP Value on page 280](#)
- [Configuring the IEEE 802.1p Field for CoS Host Outbound Traffic on page 282](#)
- [Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic on page 282](#)
- [Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface on page 283](#)
- [Setting Ingress DSCP Bits for Multicast Traffic over Layer 3 VPNs on page 284](#)

Rewriting Packet Header Information Overview

As packets enter or exit a network, edge routers might be required to alter the class-of-service (CoS) settings of the packets. Rewrite rules set the value of the CoS bits within the packet's header. Each rewrite rule reads the current forwarding class and loss priority information associated with the packet, locates the chosen CoS value from a table, and writes this CoS value into the packet header.


In effect, the rewrite rule performs the opposite function of the behavior aggregate (BA) classifier used when the packet enters the router. As the packet leaves the routing platform, the final CoS action is generally the application of a rewrite rule.

You configure rewrite rules to alter CoS values in outgoing packets on the outbound interfaces of an edge router to meet the policies of a targeted peer. This allows the downstream router in a neighboring network to classify each packet into the appropriate service group.

In addition, you often need to rewrite a given marker (IP precedence, Differentiated Services code point [DSCP], IEEE 802.1p, or MPLS EXP settings) at the inbound interfaces of an edge router to accommodate BA classification by core devices.

Figure 20 on page 262 shows a flow of packets through four routers. Router A rewrites the CoS bits in incoming packet to accommodate the BA classification performed by Routers B and C. Router D alters the CoS bits of the packets before transmitting them to the neighboring network.

Figure 20: Packet Flow Across the Network

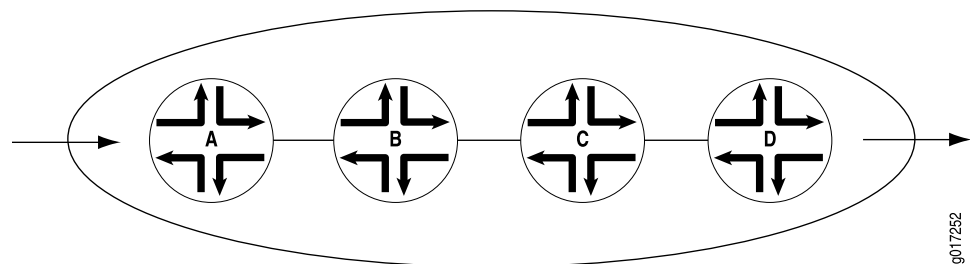

To configure CoS rewrite rules, you define the rewrite rule and apply it to an interface. Include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
interfaces {
  interface-name {
    unit logical-unit-number {
      rewrite-rules {
        dscp (rewrite-name | default) protocol protocol-types;
        dscp-ipv6 (rewrite-name | default);
        exp (rewrite-name | default) protocol protocol-types;
        exp-push-push-push default;
        exp-swap-push-push default;
        ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
        ieee-802.1ad (rewrite-name | default) vlan-tag (outer | outer-and-inner);
        inet-precedence (rewrite-name | default) protocol protocol-types;
```



```

    }
  }
}
rewrite-rules {
  (dscp | dscp-ipv6 | exp | frame-relay-de | ieee-802.1 | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point (alias | bits);
    }
  }
}

```

Applying Default Rewrite Rules

By default, rewrite rules are not usually applied to interfaces. The exceptions are MPLS interfaces: all MPLS-enabled interfaces use the default EXP rewrite rule, even if not configured. Except for MPLS interfaces, if you want to apply a rewrite rule, you can either design your own rule and apply it to an interface, or you can apply a default rewrite rule. To apply default rewrite rules, include one or more of the following statements at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
dscp default;
dscp-ipv6 default;
exp default;
ieee-802.1 default vlan-tag (outer | outer-and-inner);
inet-precedence default;

```

Table 46 on page 263 shows the default rewrite rule mappings. These are based on the default bit definitions of DSCP, DSCP IPv6, EXP, IEEE, and IP CoS values, as shown in “Default CoS Values” on page 70, and the default forwarding classes shown in “Default Forwarding Classes” on page 126.

When the software detects packets whose CoS values match the forwarding class and PLP values in the first two columns in Table 46 on page 263, the software maps the header bits of those packets to the code-point aliases in the last column in Table 46 on page 263. The code-point aliases in the last column map to the CoS bits shown in “Default CoS Values” on page 70.

Table 46: Default Packet Header Rewrite Mappings

Map from Forwarding Class	PLP Value	Map to DSCP/DSCP IPv6/ EXP/IEEE/IP
expedited-forwarding	low	ef
expedited-forwarding	high	ef
assured-forwarding	low	af11
assured-forwarding	high	af12 (DSCP/DSCP IPv6/EXP)

Table 46: Default Packet Header Rewrite Mappings (*continued*)

Map from Forwarding Class	PLP Value	Map to DSCP/DSCP IPv6/ EXP/IEEE/IP
best-effort	low	be
best-effort	high	be
network-control	low	nc1/cs6
network-control	high	nc2/cs7

In the following example, the **so-1/2/3.0** interface is assigned the default DSCP rewrite rule. One result of this configuration is that each packet exiting the interface with the **expedited-forwarding** forwarding class and the **high** or **low** loss priority has its DSCP bits rewritten to the DSCP **ef** code-point alias. “[Default CoS Values](#)” on [page 70](#) shows that this code-point alias maps to the **101110** bits.

Another result of this configuration is that all packets exiting the interface with the **best-effort** forwarding class and the **high** or **low** loss priority have their EXP bits rewritten to the EXP **be** code-point alias. “[Default CoS Values](#)” on [page 70](#) shows that this code-point alias maps to the **000** bits.

To evaluate all the implications of this example, see “[Default CoS Values](#)” on [page 70](#) and [Table 46](#) on [page 263](#).

```

class-of-service {
  interfaces {
    so-1/2/3 {
      unit 0 {
        rewrite-rules {
          dscp default;
        }
      }
    }
  }
}

```

Configuring Rewrite Rules

You define markers in the rewrite rules section of the CoS configuration hierarchy and reference them in the logical interface configuration. This model supports marking on the DSCP, DSCP IPv6, IP precedence, IEEE 802.1, and MPLS EXP CoS values.

To configure a rewrite-rules mapping and associate it with the appropriate forwarding class and code-point alias or bit set, include the **rewrite-rules** statement at the **[edit class-of-service]** hierarchy level:

```

[edit class-of-service]
rewrite-rules {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | ieee-802.1ad | inet-precedence) rewrite-name {

```

```

import (rewrite-name | default);
forwarding-class class-name {
    loss-priority level code-point (alias | bits);
}
}
}

```



NOTE: The `inet-precedence` statement is not supported on PTX Series Packet Transport Switches.

The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and PLP. The inputs for the map are the forwarding class and the PLP. The output of the map is the code-point alias or bit pattern. For more information about how CoS maps work, see “[CoS Inputs and Outputs Overview](#)” on page 9.

By default, IP precedence rewrite rules alter the first three bits on the type-of-service (ToS) byte while leaving the last three bits unchanged. This default behavior is not configurable. The default behavior applies to rules you configure by including the `inet-precedence` statement at the `[edit class-of-service rewrite-rules]` hierarchy level. The default behavior also applies to rewrite rules you configure for MPLS packets with IPv4 payloads. You configure these types of rewrite rules by including the `mpls-inet-both` or `mpls-inet-both-non-vpn` option at the `[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp rewrite-rule-name protocol]` hierarchy level.

On the M320, T1600, and MX960 routers, if you configure `vlan-vpls` encapsulation and add an IEEE 802.1 header on a Gigabit Ethernet or 10 Gigabit Ethernet interface to output traffic, but do not apply an IEEE 802.1 rewrite rule, then the default IEEE 802.1 rewrite rule is ignored and the IEEE 802.1p bits are set to match the forwarding class queue.



NOTE: The forwarding class is determined by ingress classification.

Related Documentation

- [Applying Rewrite Rules to Output Logical Interfaces on page 266](#)
- [Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface on page 283](#)

Header Bits Preserved, Cleared, and Rewritten

For every incoming packet, the ingress classifier decodes the ingress CoS bits into a forwarding class and packet loss priority (PLP) combination.

The egress CoS information depends on which type of rewrite marker is active, as follows:

- For Multiprotocol Label Switching (MPLS) EXP and IEEE 802.1 rewrite markers, values are derived from the forwarding class and PLP values in rewrite rules. MPLS EXP and IEEE 802.1 markers are not preserved because they are part of the Layer 2 encapsulation.

- For IP precedence and DiffServ code point (DSCP) rewrite markers, the marker alters the first three bits on the type-of-service (ToS) byte while leaving the last three bits unchanged.

Applying Rewrite Rules to Output Logical Interfaces

To assign the rewrite-rules configuration to the output logical interface, include the **rewrite-rules** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
rewrite-rules {
  dscp (rewrite-name | <default>) protocol protocol-types;
  dscp-ipv6 (rewrite-name | <default>) protocol protocol-types;
  exp (rewrite-name | <default>) protocol protocol-types;
  exp-push-push-push <default>;
  exp-swap-push-push <default>;
  ieee-802.1 (rewrite-name | <default>) inet-prec vlan-tag (outer | outer-and-inner);
  inet-precedence (rewrite-name | <default>) protocol protocol-types;
}
```

On M120, M320 with an Enhanced III FPC, MX Series routers and T 4000 routers with Type 5 FPCs, you can combine the **dscp** or **inet-prec** and **exp** options to set the DSCP or IP precedence bits and MPLS EXP bits independently on IP packets entering an MPLS tunnel.

For IQ PICs, you can configure only one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule. If you configure more than one IEEE 802.1 rewrite rule for the IQ PIC, the configuration check fails.

In the following example, the DSCP bits specified in **ss-dscp** are applied to packets entering the MPLS tunnel on **ge-2/1/1**, and the DSCP bits specified in **ss-v6dscp** are applied to IPv6 packets. The EXP bits are set to the bit configuration specified in **ss-exp**:

```
[edit class-of-service interfaces]
ge-2/1/1
  unit 10 {
    rewrite-rules {
      dscp ssf-dscp protocol mpls; # Applies to IPv4 packets entering MPLS tunnel
      dscp-ipv6 ss-v6dscp protocol mpls; # Applies to IPv6 packets entering MPLS tunnel
      exp ss-exp; # Sets label EXP bits independently
    }
  }
}
```

You can use interface wildcards for ***interface-name*** and ***logical-unit-number***. You can also include Layer 2 and Layer 3 rewrite information in the same configuration.



NOTE: On M Series routers only, if you include the `control-word` statement at the `[edit protocols l2circuit neighbor address interface interface-name]` hierarchy level, the software cannot rewrite MPLS EXP bits.

DSCP and DSCP IPv6 rewrite rules are supported on M Series and T Series routers when non-queuing PICs are installed, but are disabled when queuing PICs are installed with the following exceptions:

- On M320 routers, DSCP rewrite is supported on IQ, IQ2, IQE, and IQ2E PICs when used with the Enhanced III FPC.
- On M120 routers, DSCP rewrite is supported on IQ, IQ2, IQE, and IQ2E PICs.

DSCP and DCSP IPv6 rewrite rules are supported on MX Series routers with MPC/MIC interfaces.

DSCP rewrite rules are not supported on T Series routers when IQ, IQ2, IQE, IQ2E, SONET/SDH OC48/STM16 IQE, or PD-5-10XGE-SFPP PICs are installed.

For IQ PICs, you can configure only one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.

On M320 and T Series routers (except for T4000 routers with Type 5 FPCs), for a single interface, you cannot enable a rewrite rule on a subset of forwarding classes. You must assign a rewrite rule to either none of the forwarding classes or all of the forwarding classes. When you assign a rewrite rule to a subset of forwarding classes, the commit does not fail, and the subset of forwarding classes works as expected. However, the forwarding classes to which the rewrite rule is not assigned are rewritten to all zeros.

For example, if you configure a Differentiated Services code point (DSCP) rewrite rule, the bits in the forwarding classes to which you do not assign the rewrite rule are rewritten to 000000; if you configure an IP precedence rewrite rule, the bits in the forwarding classes to which you do not assign the rewrite rule are rewritten to 000.

**Related
Documentation**

- [Setting IPv6 DSCP and MPLS EXP Values Independently on page 268](#)
- [Configuring DSCP Values for IPv6 Packets Entering the MPLS Tunnel on page 268](#)

Setting IPv6 DSCP and MPLS EXP Values Independently

On the M120, M320 with Enhanced III FPCs, and MX Series Ethernet Services routers, you can set the DSCP and MPLS EXP bits independently on IPv6 packets. To enable this feature, include the **protocol mpls** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules dscp-ipv6 rewrite-name]** hierarchy level.

You can set DSCP IPv6 values only at the ingress MPLS node.

The following limitations apply to this feature:

- This feature is supported only on M120, M320 with Enhanced III FPCs, and MX Series Ethernet Services routers.
- MPLS packets entering another MPLS tunnel at the ingress node may mark only the EXP value if EXP rewrite rules are configured, but not the DSCP value in the IPv6 header.
- This feature does not support MPLS packets generated by the Routing Engine.
- The IP precedence field is not applicable for IPv6, and is not supported.

Related Documentation

- [Configuring DSCP Values for IPv6 Packets Entering the MPLS Tunnel on page 268](#)

Configuring DSCP Values for IPv6 Packets Entering the MPLS Tunnel

The following configuration example explains in detail how to set the DSCP and MPLS EXP bits independently on IPv6 packets.

1. Configure the router (ingress PE router) to classify (behavior aggregate or multifield) the incoming packets to a particular forwarding class.

```
[edit firewall]
family inet6 {
  filter ss-v6filt {
    term ss-vpn {
      from {
        destination-address {
          ::ffff:192.0.2.128/120;
        }
      }
      then {
        loss-priority low;
        forwarding-class ss-fc;
      }
    }
  }
}
```

In the preceding example, the ingress FPC classifies (MF) incoming IPv6 packets destined for address “::ffff:192.0.2.128/120” to forwarding class “ss-fc” and loss priority “low.”

2. Attach the preceding firewall filter to an interface. Because you are matching on inbound traffic, this would be an input filter. This classifies all traffic on the interface “ge-2/1/0” that matches the filter “ss-v6.”

```
[edit interfaces]
ge-2/1/0 {
  hierarchical-scheduler;
  vlan-tagging;
  unit 300 {
    family inet6 {
      filter {
        input ss-v6filt;
      }
      address ::ffff:192.0.2.100/120;
    }
  }
}
```

3. Configure the DSCP–IPv6 rewrite rule for the forwarding class “ss-fc.” This causes the outgoing IPv6 packets belonging to the forwarding class “ss-fc” and loss priority “low” to have their DSCP value rewritten to 100000.

```
[edit class-of-service rewrite-rules]
dscp-ipv6 ss-v6dscp {
  forwarding-class ss-fc {
    loss-priority low code-point 100000;
  }
}
```

4. Configure the EXP rewrite values for the forwarding class “ss-fc.” This rewrite rule stamps an EXP value of 100 on all outgoing MPLS packets assigned to the forwarding class “ss-fc” and loss priority “low.”

```
[edit class-of-service rewrite-rules]
exp ss-exp {
  forwarding-class ss-fc {
    loss-priority low code-point 100;
  }
}
```

5. Apply the preceding rewrite rule to an egress interface. On the egress FPC, all IPv6 packets in the forwarding class “ss-fc” with loss priority “low” are marked with the DSCP value “100000” and an EXP value of “100” before they enter the MPLS tunnel.

```
[edit class-of-service interfaces]
ge-2/1/1 {
  unit 10 {
    rewrite-rules {
      dscp-ipv6 ss-v6dscp protocol mpls;
      exp ss-exp;
    }
  }
}
```

6. To support IPv4 DSCP and MPLS EXP independent rewrite at the same time, you can define and apply an IPv4 DSCP rewrite rule “ss-dscp” to the same interface.

```
[edit class-of-service interfaces]
ge-2/1/1 {
  unit 10 {
    rewrite-rules {
      dscp ss-dscp protocol mpls;
      dscp-ipv6 ss-v6dscp protocol mpls;
      exp ss-exp;
    }
  }
}
```

Related Documentation • [Setting IPv6 DSCP and MPLS EXP Values Independently on page 268](#)

Assigning the Default Frame Relay DE Loss Priority Map to an Interface

For interfaces with the Frame Relay encapsulation on M120 routers, M320 routers with Enhanced III FPC, M7i and M10i routers with Enhanced Compact Forwarding Engine Board, and MX Series routers, you can set the loss priority of Frame Relay traffic based on the discard eligibility (DE) bit. For each incoming frame with the DE bit containing the class-of-service (CoS) value 0 or 1, you can configure a Frame Relay loss priority value of low, medium-low, medium-high, or high.

The default Frame Relay loss priority map contains the following settings:

```
loss-priority low code-point 0;
loss-priority high code-point 1;
```

The default map sets the loss priority to low for each incoming frame with the DE bit containing the CoS value 0. The map sets the loss priority to high for each incoming frame with the DE bit containing the CoS value 1.

To assign the default Frame Relay DE loss priority map to an interface:

1. Include the **frame-relay-de default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* loss-priority-maps]** hierarchy level.

For example:

```
[edit class-of-service interfaces so-1/0/0 unit 0 loss-priority-maps]
user@host# set frame-relay-de default;
```

2. Verify the configuration in operational mode.

```
user@host> show class-of-service loss-priority-map
Loss-priority-map: frame-relay-de-default, Code point type: frame-relay-de,
Index: 38
  Code point      Loss Priority
  0               Low
  1               High
```


Defining a Custom Frame Relay Loss Priority Map

You can apply a classifier to the same interface on which you configure a Frame Relay loss priority value. The Frame Relay loss priority map is applied first, followed by the classifier. The classifier can change the loss priority to a higher value only (for example, from low to high). If the classifier specifies a loss priority with a lower value than the current loss priority of a particular packet, the classifier does not change the loss priority of that packet.

To define a custom Frame Relay loss priority map:

1. At the **[edit class-of-service loss-priority-maps]** hierarchy level in configuration mode, specify the loss priority map for the Frame Relay DE bit.

```
[edit class-of-service loss-priority-maps]
user@host# set frame-relay-de name loss-priority level code-points [ alias | bits ];
```

For example:

```
[edit class-of-service loss-priority-maps]
user@host# set frame-relay-de fr_rw loss-priority low code-points 0;
user@host# set frame-relay-de fr_rw loss-priority high code-points 0;
user@host# set frame-relay-de fr_rw loss-priority medium-low code-points 1;
user@host# set frame-relay-de fr_rw loss-priority medium-high code-points 1;
```



NOTE: The loss priority map does not take effect until you apply it to a logical interface.

2. Apply a rule to a logical interface.

```
[edit class-of-service interfaces interface-name unit logical-unit-number
  loss-priority-maps]
user@host# set frame-relay-de name;
```

For example:

```
[edit class-of-service interfaces so-1/0/0 unit 0 loss-priority-maps]
user@host# set frame-relay-de fr_rw;
```

3. Verify the configuration in operational mode.

```
user@host> show class-of-service loss-priority-map
Loss-priority-map: frame-relay-de-fr_rw, Code point type: frame-relay-de,
Index: 38
  Code point      Loss priority
  0               low
  0               high
  1               medium-low
  1               medium-high
```

Applying IEEE 802.1p Rewrite Rules to Dual VLAN Tags

By default, when you apply an IEEE 802.1p rewrite rule to an output logical interface, the software rewrites the IEEE bits in the outer VLAN tag only.

For Gigabit Ethernet IQ2 PICs, 10-port 10-Gigabit OSE PICs, and 10-Gigabit Ethernet IQ2 PICs only, you can rewrite the IEEE bits in both the outer and inner VLAN tags of the tagged Ethernet frames. When you enable class of service (CoS) rewrite for both tags, the same IEEE 802.1p rewrite table is used for the inner and outer VLAN tag.

For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.

To rewrite both the outer and inner VLAN tags, include the **vlan-tag outer-and-inner** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules ieee-802.1 (*rewrite-name* | default)]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules
  ieee-802.1 (rewrite-name | default)]
  vlan-tag outer-and-inner;
```

To explicitly specify the default behavior, include the **vlan-tag outer** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules ieee-802.1 (*rewrite-name* | default)]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules
  ieee-802.1 (rewrite-name | default)]
  vlan-tag outer;
```

For more information about VLAN tags, see the Junos® OS Network Interfaces.

On MX routers, you can perform IEEE 802.1p and DEI rewriting based on forwarding class and PLP at the VPLS ingress PE. You rewrite (mark) the IEEE 802.1p or DEI bits on frames at the VPLS ingress PE based on the value of the forwarding class and PLP established for the traffic. You can rewrite either the outer tag only or the outer and inner tag. When both tags are rewritten, both get the same value. To configure these rewrite rules, include the **ieee-802.1** statement at the **[edit class-of-services routing-instance *routing-instance-name* rewrite-rules]** hierarchy level.

On routers with IQ2 or IQ2-E PICs, you can perform IEEE 802.1p and DEI rewriting based on forwarding-class and packet loss priority (PLP) at the VPLS ingress provider edge (PE) router. You rewrite (mark) the IEEE 802.1p or DEI bits on frames at the VPLS ingress PE based on the value of the forwarding-class and PLP established for the traffic. You can rewrite either the outer tag only or both the outer and inner tags. When both tags are rewritten, both get the same value.



NOTE: The 10-port 10-Gigabit OSE PIC does not support DEI rewriting based on forwarding class and PLP at the VPLS ingress PE.

To configure these rewrite rules, include the **ieee-802.1** statement at the **[edit class-of-services routing-instance *routing-instance-name* rewrite-rules]** hierarchy level.

Example: Applying an IEEE 802.1p Rewrite Rule to Dual VLAN Tags

Apply the **ieee8021p-rwrule1** rewrite rule to both inner and outer VLAN tags of Ethernet-tagged frames exiting the **ge-0/0/0.0** interface:

```

class-of-service {
  interfaces {
    ge-0/0/0 {
      unit 0 {
        rewrite-rules {
          ieee-802.1d ieee8021p-rwrule1 vlan-tag outer-and-inner;
        }
      }
    }
  }
}

```

Applying IEEE 802.1ad Rewrite Rules to Dual VLAN Tags

By default, when you apply an IEEE 802.1ad rewrite rule to an output logical interface, the software rewrites the IEEE bits in the outer VLAN tag only.

For MX Series routers and IQ2 PICs, you can rewrite the IEEE 802.1ad bits in both the outer and inner VLAN tags of the tagged Ethernet frames. When you enable the CoS rewrite for both tags, the same IEEE 802.1ad rewrite table is used for the inner and outer VLAN tag.



NOTE: When you apply IEEE 802.1ad rewrite rules for inner and outer VLAN tags, you cannot rewrite the Canonical Format Identifier (CFI) bit for the inner VLAN tag.

To rewrite both the outer and inner VLAN tags, include the **vlan-tag outer-and-inner** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules ieee-802.1ad (*rewrite-name* | default)]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules
  ieee-802.1ad (rewrite-name | default)]
  vlan-tag outer-and-inner;

```

To explicitly specify the default behavior, include the **vlan-tag outer** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules ieee-802.1ad (*rewrite-name* | default)]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules
  ieee-802.1ad (rewrite-name | default)]
  vlan-tag outer;

```

For more information about VLAN tags, see the Junos® OS Network Interfaces.

Example: Applying an IEEE 802.1ad Rewrite Rule to Dual VLAN Tags

Apply the **dot1p_dei_rw** rewrite rule to both inner and outer VLAN tags of Ethernet-tagged frames exiting the **ge-2/0/0.0** interface:

```

class-of-service {
  interfaces {
    ge-2/0/0 {
      unit 0 {

```

```
        rewrite-rules {
            ieee-802.1ad dot1p_dei_rw vlan-tag outer-and-inner;
        }
    }
}
```

Example: Per-Node Rewriting of EXP Bits

To configure a custom table to rewrite the EXP bits, also known as CoS bits, on a particular node, the classifier table and the rewrite table must specify exactly the same CoS values.

In addition, the least significant bit of the CoS value itself must represent the PLP value. For example, CoS value **000** must be associated with PLP **low**, **001** must be associated with PLP **high**, and so forth.

This example configures a custom table to rewrite the EXP bits on a particular node:

```
[edit class-of-service]
classifiers {
    exp exp-class {
        forwarding-class be {
            loss-priority low code-points 000;
            loss-priority high code-points 001;
        }
        forwarding-class af {
            loss-priority low code-points 010;
            loss-priority high code-points 011;
        }
        forwarding-class ef {
            loss-priority low code-points 100;
            loss-priority high code-points 101;
        }
        forwarding-class nc {
            loss-priority low code-points 110;
            loss-priority high code-points 111;
        }
    }
}
rewrite-rules {
    exp exp-rw {
        forwarding-class be {
            loss-priority low code-point 000;
            loss-priority high code-point 001;
        }
        forwarding-class af {
            loss-priority low code-point 010;
            loss-priority high code-point 011;
        }
        forwarding-class ef {
            loss-priority low code-point 100;
            loss-priority high code-point 101;
        }
        forwarding-class nc {
```

```

        loss-priority low code-point 110;
        loss-priority high code-point 111;
    }
}

```

Rewriting MPLS and IPv4 Packet Headers

You can apply a rewrite rule to MPLS and IPv4 packet headers simultaneously. This allows you to initialize MPLS EXP and IP precedence bits at LSP ingress. You can configure different rewrite rules depending on whether the traffic is VPN or non-VPN.

The default MPLS EXP rewrite table contents are shown in [Table 47 on page 275](#).

Table 47: Default MPLS EXP Rewrite Table

Forwarding Class	Loss Priority	CoS Value
best-effort	low	000
best-effort	high	001
expedited-forwarding	low	010
expedited-forwarding	high	011
assured-forwarding	low	100
assured-forwarding	high	101
network-control	low	110
network-control	high	111

By default, IP precedence rewrite rules alter the first three bits on the type-of-service (ToS) byte while leaving the last three bits unchanged. This default behavior applies to rewrite rules you configure for MPLS packets with IPv4 payloads.

To override the default MPLS EXP rewrite table and rewrite MPLS and IPv4 packet headers simultaneously, include the **protocol** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp rewrite-rule-name]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp
rewrite-rule-name]
  protocol protocol-types;

```

The **protocol** statement defines the types of MPLS packets and packet headers to which the specified rewrite rule is applied. The MPLS packet can be a standard MPLS packet or an MPLS packet with an IPv4 payload. Specify the type of MPLS packet using the following options:

- **mpls**—Applies the rewrite rule to MPLS packets and writes the CoS value to MPLS headers.
- **mpls-inet-both**—Applies the rewrite rule to VPN MPLS packets with IPv4 payloads. On Juniper Networks M120 Multiservice Edge Routers, M320 Multiservice Edge Routers, and T Series Core Routers (except T4000 routers), writes the CoS value to the MPLS and IPv4 headers. On other M Series Multiservice Edge Router routers, causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with **000** code points for the MPLS EXP value, and the configured rewrite code point for IP precedence.
- **mpls-inet-both-non-vpn**—Applies the rewrite rule to non-VPN MPLS packets with IPv4 payloads. On Juniper Networks M120 Multiservice Edge Routers, M320 Multiservice Edge Routers, and T Series Core Routers, writes the CoS value to the MPLS and IPv4 headers. On other M Series Multiservice Edge Routers, causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with **000** code points for the MPLS EXP value, and the configured rewrite code point for IP precedence.

On M120 routers, M320 routers with Enhanced-III FPCs, and MX Series routers, you can perform simultaneous DSCP and EXP rewrite by attaching independent DSCP or IPv4 precedence rewrite rules and EXP rewrite rules to the same core interface. Thus, you can rewrite both code points (DSCP and EXP) when the packet is received by the ingress provider edge (PE) router on the MPLS core.

An alternative to overwriting the default with a rewrite-rules mapping is to configure the default packet header rewrite mappings, as discussed in [“Applying Default Rewrite Rules” on page 263](#).

By default, IP precedence rewrite rules alter the first three bits on the ToS byte while leaving the last three bits unchanged. This default behavior is not configurable. The default behavior applies to rules you configure by including the **inet-precedence** statement at the **[edit class-of-service rewrite-rules]** hierarchy level. The default behavior also applies to rewrite rules you configure for MPLS packets with IPv4 payloads. You configure these types of rewrite rules by including the **mpls-inet-both** or **mpls-inet-both-non-vpn** option at the **[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp rewrite-rule-name protocol]** hierarchy level.

Example: Rewriting MPLS and IPv4 Packet Headers

On M320 and T Series routers, configure rewrite tables and apply them in various ways to achieve the following results:

- For interface **so-3/1/0**, the three EXP rewrite tables are applied to packets, depending on the protocol of the payload:
 - IPv4 packets (VPN) that enter the LSPs on interface **so-3/1/0** are initialized with values from rewrite table **exp-inet-table**. An identical 3-bit value is written into the IP precedence and MPLS EXP bit fields.
 - IPv4 packets (non-VPN) that enter the LSPs on interface **so-3/1/0** are initialized with values from rewrite table **rule-non-vpn**. An identical 3-bit value is written into the IP precedence and MPLS EXP bit fields.

- Non-IPv4 packets that enter the LSPs on interface **so-3/1/0** are initialized with values from rewrite table **rule1**, and written into the MPLS EXP header field only. The statement **exp rule1** has the same result as **exp rule1 protocol mpls**.
- For interface **so-3/1/0**, IPv4 packets transmitted over a non-LSP layer are initialized with values from IP precedence rewrite table **rule2**.
- For interface **so-3/1/1**, IPv4 packets that enter the LSPs are initialized with values from EXP rewrite table **exp-inet-table**. An identical 3-bit value is written into the IP precedence and MPLS EXP bit fields.
- For interface **so-3/1/1**, MPLS packets other than IPv4 Layer 3 types are also initialized with values from table **exp-inet-table**. For VPN MPLS packets with IPv4 payloads, the CoS value is written to MPLS and IPv4 headers. For VPN MPLS packets without IPv4 payloads, the CoS value is written to MPLS headers only.

```
[edit class-of-service]
rewrite-rules {
  exp exp-inet-table {
    forwarding-class best-effort {
      loss-priority low code-point 000;
      loss-priority high code-point 001;
    }
    forwarding-class assured-forwarding {
      loss-priority low code-point 010;
      loss-priority high code-point 011;
    }
    forwarding-class expedited-forwarding {
      loss-priority low code-point 111;
      loss-priority high code-point 110;
    }
    forwarding-class network-control {
      loss-priority low code-point 100;
      loss-priority high code-point 101;
    }
  }
  exp rule1 {
    ...
  }
  inet-precedence rule2 {
    ...
  }
}
exp rule_non_vpn {
  ...
}

interfaces {
  so-3/1/0 {
    unit 0 {
      rewrite-rules {
        exp rule1;
        inet-precedence rule2;
        exp exp-inet-table protocol mpls-inet-both; # For all VPN traffic.
        exp rule_non_vpn protocol mpls-inet-both-non-vpn; # For all non-VPN
```

```

        # traffic.
    }
}
so-3/1/1 {
    unit 0 {
        rewrite-rules {
            exp exp-inet-table protocol [mpls mpls-inet-both];
        }
    }
}
}

```

Example: Simultaneous DSCP and EXP Rewrite

On M120 routers, M320 routers with Enhanced-III FPCs, and MX Series routers, configure the simultaneous DSCP and EXP rewrite rules as shown below:

1. Configure CoS.

```

[edit]
user@host# edit class-of-service

```

2. Configure the EXP rewrite rule on the interface.

```

[edit class-of-service]
user@host# set interfaces ge-2/0/3 unit 0 rewrite-rule exp rule1

```

3. Configure the IPv4 rewrite rule on the interface.

```

[edit class-of-service]
user@host# set interfaces ge-2/0/3 unit 0 rewrite-rule inet-precedence rule2

```

4. Configure the IPv4 rewrite rule on the interface and apply it to packets entering the MPLS tunnel.

```

[edit class-of-service]
user@host# set interfaces ge-2/0/3 unit 0 rewrite-rule inet-precedence rule3 protocol
mpls

```

5. Verify the configuration by using the **show interfaces** command.

```

[edit class-of-service]
user@host# show interfaces ge-2/0/3 unit 0
rewrite-rules {
    exp rule1;
    inet-precedence rule2;
    inet-precedence rule3 protocol mpls;
}

```

In the example above, there are two different IPv4 precedence rewrite rules: **rule2** and **rule3**. **rule2** affects the IPv4 to IPv4 traffic and **rule3** affects the IPv4 to MPLS traffic.

Rewriting the EXP Bits of All Three Labels of an Outgoing Packet

In interprovider, carrier-of-carrier, and complex traffic engineering scenarios, it is sometimes necessary to push three labels on the next hop, using a swap-push-push or triple-push operation.

By default, on M Series routers, the top MPLS EXP label of an outgoing packet is not rewritten when you configure swap-push-push and triple-push operations. On M Series routers, you can rewrite the EXP bits of all three labels of an outgoing packet, thereby maintaining the CoS of an incoming MPLS or non-MPLS packet.

When the software performs a swap-push-push operation and no rewriting is configured, the EXP fields of all three labels are the same as in the old label. If there is EXP rewriting configured, the EXP bits of the bottom two labels are overwritten with the table entry. The EXP setting of the top label is retained even with rewriting.

To push three labels on all incoming MPLS packets, include the **exp-swap-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
  exp-swap-push-push default;
```

When the software performs a push-push-push operation and if no rewriting is configured, the EXP fields of the bottom two labels are zero. If EXP rewriting is configured, the EXP fields of the bottom two labels are rewritten with the table entry's rewrite value. The EXP field of the top label is inserted with the Qn+PLP value. This Qn reflects the final classification by a multifield classifier if one exists, regardless of whether rewriting is configured.



NOTE: The exp-push-push-push and exp-swap-push-push configuration on the egress interface does not rewrite the top label's EXP field with the Qn+PLP value on an IQ or IQ2 PIC.

To push three labels on incoming non-MPLS packets, include the **exp-push-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
  exp-push-push-push default;
```

These configurations apply the default MPLS EXP rewrite table, as described in “[Rewriting MPLS and IPv4 Packet Headers](#)” on page 275. You can configure these operations and override the default MPLS EXP rewrite table with a custom table. For more information about writing and applying a custom rewrite table, see “[Configuring Rewrite Rules](#)” on page 264 and “[Applying Rewrite Rules to Output Logical Interfaces](#)” on page 266.



NOTE: With a three-label stack, if you do not include the exp-swap-push-push default or exp-push-push-push default statement in the configuration, the top label's EXP bits are set to zero.

Example: Rewriting the EXP Bits of All Three Labels of an Outgoing Packet

Configure a swap-push-push operation, and override the default rewrite table with a custom table:

```
[edit class-of-service]
forwarding-classes {
  queue 0 be;
  queue 1 ef;
  queue 2 af;
  queue 3 nc;
}
interfaces {
  so-1/1/3 {
    unit 0 {
      rewrite-rules {
        exp exp_rew; # Apply custom rewrite table
        exp-swap-push-push default;
      }
    }
  }
}
rewrite-rules {
  exp exp_rew {
    forwarding-class be {
      loss-priority low code-point 000;
      loss-priority high code-point 100;
    }
    forwarding-class ef {
      loss-priority low code-point 001;
      loss-priority high code-point 101;
    }
    forwarding-class af {
      loss-priority low code-point 010;
      loss-priority high code-point 110;
    }
    forwarding-class nc {
      loss-priority low code-point 011;
      loss-priority high code-point 111;
    }
  }
}
```

Rewriting IEEE 802.1p Packet Headers with an MPLS EXP Value

For Ethernet interfaces on Juniper Networks M320 Multiservice Edge Routers, MX Series Ethernet Service Routers, and T Series Core Routers that have a peer connection to an M Series Multiservice Edge Router, MX Series, or T Series router, you can rewrite both MPLS EXP and IEEE 802.1p bits to a configured value. This enables you to pass the configured value to the Layer 2 VLAN path. For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.

To rewrite both the MPLS EXP and IEEE 802.1p bits, you must include EXP and IEEE 802.1p rewrite rules in the interface configuration. To configure EXP and IEEE 802.1p rewrite rules, include the **rewrite-rules** statement at the **[edit class-of-service interfaces interface-name unit logical-unit-number]** hierarchy level, specifying the **exp** and **ieee-802.1** options:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
rewrite-rules {
  exp rewrite-rule-name;
  ieee-802.1p default;
}
```

When you combine these two rewrite rules, only the EXP rewrite table is used for rewriting packet headers. If you do not configure a VLAN on the interface, only the EXP rewriting is in effect. If you do not configure an LSP on the interface or if the MPLS EXP rewrite rule mapping is removed, the IEEE 802.1p default rewrite rules mapping takes effect.



NOTE: You can also combine other rewrite rules. IP, DSCP, DSCP IPv6, and MPLS EXP are associated with Layer 3 packet headers, and IEEE 802.1p is associated with Layer 2 packet headers.

For IQ PICs, you can only configure one IEEE 802.1p rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1p rewrite rule.

If you combine IEEE 802.1p with IP rewrite rules, the Layer 3 packets and Layer 2 headers are rewritten with the IP rewrite rule.

If you combine IEEE 802.1p with DSCP or DSCP IPv6 rewrite rules, three bits of the Layer 2 header and six bits of the Layer 3 packet header are rewritten with the DSCP or DSCP IPv6 rewrite rule.

The following example shows how to configure an EXP rewrite rule and apply it to both MPLS EXP and IEEE 802.1p bits:

```
[edit class-of-service]
rewrite-rules {
  exp exp-ieee-table {
    forwarding-class best-effort {
      loss-priority low code-point 000;
      loss-priority high code-point 001;
    }
    forwarding-class assured-forwarding {
      loss-priority low code-point 010;
      loss-priority high code-point 011;
    }
    forwarding-class expedited-forwarding {
      loss-priority low code-point 111;
      loss-priority high code-point 110;
    }
    forwarding-class network-control {
      loss-priority low code-point 100;
      loss-priority high code-point 101;
    }
  }
}
interfaces {
  so-3/1/0 {
    unit 0 {
```

```
rewrite-rules {  
    exp exp-ieee-table;  
    ieee-802.1 default;  
}  
}  
}
```

Configuring the IEEE 802.1p Field for CoS Host Outbound Traffic

This topic provides a summary of the configuration for setting the IEEE 802.1p field in the Ethernet frame header for host outbound traffic (control plane traffic). You can set a global value for the priority code point that applies to all host outbound traffic. Additionally, or alternatively, you can specify that rewrite rules are applied to all host outbound traffic on egress logical interfaces. These are rules that have been previously configured to set the IEEE 802.1p field for data traffic on those interfaces.

Configuration of 802.1p bits is supported only on the following hardware and software components:

- MX Series 3D Universal Edge Routers
- Enhanced Queuing DPCs
- MPCs
- Junos OS Release 12.3 or later

To configure the IEEE 802.1p field settings:

1. (Optional) Specify a global default value for the IEEE 802.1p field for all host outbound traffic.

See [“Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic” on page 282](#).

2. (Optional) Specify that the IEEE 802.1p rewrite rules for the egress logical interfaces are applied to all host outbound traffic on those interfaces.

See [“Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface” on page 283](#).

Related Documentation

- [Rewriting Packet Header Information Overview on page 262](#)

Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic

This topic describes how to configure a global default value for the IEEE 802.1p field for all host outbound traffic on MX Series routers.

To configure a global default value for the IEEE 802.1p field:

- Specify the value.

[edit class-of-service host-outbound-traffic [ieee-802.1](#)]

```
user@host# set default value
```

For example, specify that a value of 010 is applied to all host outbound traffic:

```
[edit class-of-service host-outbound-traffic ieee-802.1]
user@host# set default 010
```

Related Documentation

- [Configuring the IEEE 802.1p Field for CoS Host Outbound Traffic on page 282](#)
- [Rewriting Packet Header Information Overview on page 262](#)

Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface

This topic describes how to apply rewrite rules for egress logical interfaces to the IEEE 802.1p field for all host outbound traffic on those interfaces on MX Series routers.

This task requires separately configured rewrite rules that map packet loss priority information to the code point value in the 802.1p field for data traffic on egress logical interfaces. See *Rewriting Packet Header Information Overview* in the *Junos OS Class of Service Configuration Guide*.

To configure the rewrite rules:

1. Configure the CoS rewrite rules to map the forwarding class to the desired value for the 802.1p field.

See [“Configuring Rewrite Rules” on page 264](#).

2. Associate the rewrite rules to the desired egress logical interfaces.

See [“Applying Rewrite Rules to Output Logical Interfaces” on page 266](#).

3. (Optional) Configure the forwarding class for host outbound traffic. Do not configure this forwarding class if you want to use the default forwarding class assignment (input classification).

See [“Overriding the Input Classification” on page 144](#).

To configure the rewrite rules to apply to the host outbound traffic IEEE 802.1p field:

- Configure the rewrite rules.

```
[edit class-of-service host-outbound-traffic ieee-802.1]
user@host# set rewrite-rules
```

```
[edit class-of-service]
rewrite-rules {
  ieee-802.1 rewrite_foo {
    forwarding-class network-control {
      loss-priority low code-point 101;
    }
  }
}
interfaces {
  ge-1/0/0 {
```

```
    unit 100 {
      rewrite-rules {
        ieee-802.1 rewrite_foo vlan-tag outer-and-inner;
      }
    }
  }
}
host-outbound-traffic {
  forwarding-class network-control;
}
host-outbound-traffic {
  ieee-802.1 {
    rewrite-rules;
  }
}
```

- Related Documentation**
- [Configuring the IEEE 802.1p Field for CoS Host Outbound Traffic on page 282](#)
 - [Rewriting Packet Header Information Overview on page 262](#)

Setting Ingress DSCP Bits for Multicast Traffic over Layer 3 VPNs

By default, the DSCP bits on outer IP headers arriving at an ingress PE router using generic routing encapsulation (GRE) are not set for multicast traffic sent over an Layer 3 virtual private network (VPN) provider network. However, you can configure a type-of-service (ToS) rewrite rule so the router sets the DSCP bits of GRE packets to be consistent with the service provider's overall core network CoS policy. The bits are set at the core-facing interface of the ingress provider edge (PE) router. For more information about rewriting IP header bits, see ["Rewriting Packet Header Information Overview" on page 262](#).

This section describes this configuration from a CoS perspective. The examples are not complete multicast or VPN configurations. For more information about multicast, see the Multicast Protocols Configuration Guide. For more information about Layer 3 VPNs, see the Junos OS VPNs Configuration Guide.

To configure the rewrite rules on the core-facing interface of the ingress PE, include the **rewrite-rules** statement at the **[edit class-of-service]** hierarchy level. You apply the rule to the proper ingress interface at the **[edit class-of-service interfaces]** hierarchy level to complete the configuration. This ingress DSCP rewrite is independent of classifiers placed on ingress traffic arriving on the customer-facing interface of the PE router.

The rewrite rules are applied to all unicast packets and multicast groups. You cannot configure different rewrite rules for different multicast groups. The use of DSCPv6 bits is not supported because IPv6 multicast is not supported. You can configure another rewrite rule for the EXP bits on MPLS CE-CE unicast traffic.

This example defines a rewrite rule called **dscp-rule** that establishes a value of **000000** for best-effort traffic. The rule is applied to the outgoing, core-facing PE interface **ge-2/3/0**.

```
[edit class-of-service]
rewrite-rules {
  dscp dscp-rule {
    forwarding-class best-effort {
```

```
        loss-priority low code-point 000000;  
    }  
}  
  
[edit class-of-service interfaces]  
ge-2/3/0 {  
    unit 0 {  
        rewrite-rules {  
            dscp dscp-rule;  
        }  
    }  
}
```


PART 3

CoS Configuration on Various PIC Types

- [Hardware Capabilities and Routing Engine Protocol Queue Assignments on page 289](#)
- [Configuring CoS for Tunnels on page 311](#)
- [Configuring CoS on Services PICs on page 317](#)
- [Configuring CoS on Enhanced IQ PICs on page 327](#)
- [Configuring CoS on Ethernet IQ2 and Enhanced IQ2 PICs on page 363](#)
- [Configuring CoS on SONET/SDH OC48/STM16 IQE PICs on page 387](#)
- [Configuring CoS on 10-Gigabit Ethernet LAN/WAN PICs with SFP+ on page 421](#)
- [Configuring CoS on Enhanced Queuing DPCs on page 431](#)
- [Configuring CoS on MIC and MPC Interfaces on page 449](#)
- [Configuring CoS on Circuit Emulation ATM MIC Interfaces on page 497](#)

CHAPTER 15

Hardware Capabilities and Routing Engine Protocol Queue Assignments

This topic discusses the following:

- [Hardware Capabilities and Limitations on page 289](#)
- [CoS Capabilities and Limitations on IQ2 and IQ2E PICs \(M Series and T Series Platforms\) on page 298](#)
- [M320 Routers FPCs and CoS on page 298](#)
- [MX Series Router CoS Hardware Capabilities and Limitations on page 300](#)
- [Default Routing Engine Protocol Queue Assignments on page 301](#)
- [Changing the Routing Engine Outbound Traffic Defaults on page 303](#)
- [CoS Features of Router Hardware and Interface Families on page 304](#)

Hardware Capabilities and Limitations

For basic MX Series router architecture information, see [“Packet Flow on MX Series Ethernet Services Routers” on page 14](#). For CoS hardware capabilities about other routers, see these sections:

- [CoS Hardware Capabilities and Limitations on J Series, M Series, and T Series Routers on page 289](#)
- [CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches on page 295](#)

CoS Hardware Capabilities and Limitations on J Series, M Series, and T Series Routers

Juniper Networks J Series Services Routers, M320 Multiservice Edge Routers, and T Series Core Routers, as well as M Series Multiservice Edge Routers with enhanced Flexible PIC Concentrators (FPCs), have more CoS capabilities than M Series routers that use other FPC models. [Table 48 on page 290](#) lists some of these the differences.

To determine whether your M Series router is equipped with an enhanced FPC, issue the **show chassis hardware** command. The presence of an enhanced FPC is designated by the **E-FPC** description in the output.

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			31959	M7i
Midplane	REV 02	710-008761	CA0209	M7i Midplane
Power Supply 0	REV 04	740-008537	PD10272	AC Power Supply
Routing Engine	REV 01	740-008846	1000396803	RE-5.0
CFEB	REV 02	750-009492	CA0166	Internet Processor IIv1
FPC 0				E-FPC
PIC 0	REV 04	750-003163	HJ6416	1x G/E, 1000 BASE-SX
PIC 1	REV 04	750-003163	HJ6423	1x G/E, 1000 BASE-SX
PIC 2	REV 04	750-003163	HJ6421	1x G/E, 1000 BASE-SX
PIC 3	REV 02	750-003163	HJ0425	1x G/E, 1000 BASE-SX
FPC 1				E-FPC
PIC 2	REV 01	750-009487	HM2275	ASP - Integrated
PIC 3	REV 01	750-009098	CA0142	2x F/E, 100 BASE-TX

J Series Services Routers do not use FPCs. Instead, they use Physical Interface Modules (PIMs), which are architecturally like FPCs but functionally like PICs. Both PIMs and PICs provide the interfaces to the routers.

Many operations involving the DSCP bits depend on the router and PIC type. For example, some DSCP classification configurations for MPLS and Internet can only be performed on MX, M120, and M320 routers with Enhanced Type III FPCs only. For examples of these possibilities, see [“Applying Classifiers to Logical Interfaces” on page 52](#).

In [Table 48 on page 290](#), the information in the column titled “M320 and T Series FPCs” is valid for all M320 and T Series router FPCs, including Enhanced II FPCs.



NOTE: The T4000 router supports the lowest of the scaling numbers for classifiers, rewrite rules, and WRED associated with MX Series and T Series routers.

Table 48: Comparison of CoS Hardware Capabilities and Limitations

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
Classifiers					
Maximum number per FPC, PIC, or PIM	64	1	8	64	For M Series router FPCs, the one-classifier limit includes the default IP precedence classifier. If you create a new classifier and apply it to an interface, the new classifier does not override the default classifier for other interfaces on the same FPC. In general, the first classifier associated with a logical interface is used. The default classifier can be replaced only when a single interface is associated with the default classifier. For more information, see “Applying Classifiers to Logical Interfaces” on page 52 .

Table 48: Comparison of CoS Hardware Capabilities and Limitations (*continued*)

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
<p>NOTE: On IQ2 and IQ2E PICs, the CoS classification and CoS rewrite processes are offloaded from the FPC to the PIC, thus the capabilities and limitations of these types of PIC must be taken into consideration. For information about CoS classifiers and rewrite rules limitations on IQ2 and IQ2E PICs, see “CoS Capabilities and Limitations on IQ2 and IQ2E PICs (M Series and T Series Platforms)” on page 298.</p> <p>NOTE: For information about CoS classifiers and rewrite rules on Trio MPC/MIC platforms, see “CoS Capabilities and Limitations on MPCs and MICs” on page 453</p>					
dscp	Yes	No	Yes	Yes	On all routers, you cannot configure IP precedence and DiffServ code point (DSCP) classifiers on a single logical interface, because both apply to IPv4 packets. For more information, see “Applying Classifiers to Logical Interfaces” on page 52.
dscp-ipv6	Yes	No	Yes	Yes	<p>For T Series routers, you can apply separate classifiers for IPv4 and IPv6 packets per logical interface.</p> <p>For M Series router enhanced FPCs, you cannot apply separate classifiers for IPv4 and IPv6 packets. Classifier assignment works as follows:</p> <ul style="list-style-type: none"> • If you assign a DSCP classifier only, IPv4 and IPv6 packets are classified using the DSCP classifier. • If you assign an IP precedence classifier only, IPv4 and IPv6 packets are classified using the IP precedence classifier. The lower three bits of the DSCP field are ignored because IP precedence mapping requires the upper three bits only. • If you assign either the DSCP or the IP precedence classifier in conjunction with the DSCP IPv6 classifier, the commit fails. • If you assign a DSCP IPv6 classifier only, IPv4 and IPv6 packets are classified using the DSCP IPv6 classifier, but the commit displays a warning message. <p>For more information, see “Applying Classifiers to Logical Interfaces” on page 52.</p>
ieee-802.1p	Yes	No	Yes	Yes	<p>On M Series router enhanced FPCs and T Series routers, if you associate an IEEE 802.1p classifier with a logical interface, you cannot associate any other classifier with that logical interface. For more information, see “Applying Classifiers to Logical Interfaces” on page 52.</p> <p>For most PICs, if you apply an IEEE 802.1p classifier to a logical interface, you cannot apply non-IEEE classifiers on other logical interfaces on the same physical interface. This restriction does not apply to Gigabit Ethernet IQ2 PICs.</p>

Table 48: Comparison of CoS Hardware Capabilities and Limitations (*continued*)

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
inet-precedence	Yes	Yes	Yes	Yes	On all routers, you cannot assign IP precedence and DSCP classifiers to a single logical interface, because both apply to IPv4 packets. For more information, see "Applying Classifiers to Logical Interfaces" on page 52.
mpls-exp	Yes	Yes	Yes	Yes	For M Series router FPCs, only the default MPLS EXP classifier is supported; the default MPLS EXP classifier takes the EXP bits 1 and 2 as the output queue number.
Loss priorities based on the Frame Relay discard eligible (DE) bit	Yes	No	No	No	—

Table 48: Comparison of CoS Hardware Capabilities and Limitations (*continued*)

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
Drop Profiles					
Maximum number per FPC, PIC, or PIM	32	2	16	32	—
Per queue	Yes	No	Yes	Yes	—
Per loss priority	Yes	Yes	Yes	Yes	—
Per Transmission Control Protocol (TCP) bit	Yes	No	Yes	Yes	—
Policing					
Adaptive shaping for Frame Relay traffic	Yes	No	No	No	—
Traffic policing	Yes	Yes	Yes	Yes	—
Two-rate tricolor marking (TCM)	No	No	No	Yes	Allows you to configure up to four loss priorities. Two-rate TCM is supported on T Series routers with Enhanced II FPCs and the T640 Core Router with Enhanced Scaling FPC4.
Virtual channels	Yes	No	No	No	—
Queuing					
<p>Gigabit Ethernet IQ2 PICs support only one queue in the scheduler map with medium-high, high, or strict-high priority. If more than one queue is configured with high or strict-high priority, the one that appears first in the configuration is implemented as strict-high priority. This queue receives unlimited transmission bandwidth. The remaining queues are implemented as low priority, which means they might be starved.</p> <p>On the IQE PIC, you can rate-limit the strict-high and high queues. Without this limiting, traffic that requires low latency (delay) such as voice can block the transmission of medium-priority and low-priority packets. Unless limited, high and strict-high traffic is always sent before lower priority traffic.</p>					

Table 48: Comparison of CoS Hardware Capabilities and Limitations (*continued*)

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
Priority	Yes	No	Yes	Yes	Support for the medium-low and medium-high queuing priority mappings varies by FPC type. For more information, see “Platform Support for Priority Scheduling” on page 176 .
Per-queue output statistics	Yes	No	Yes	Yes	Per-queue output statistics are shown in the output of the show interfaces queue command.
Rewrite Markers					
Maximum number per FPC, PIC, or PIM	64	No maximum	No maximum	64	—
<p>NOTE: On IQ2 and IQ2E PICs, the CoS classification and CoS rewrite processes are offloaded from the FPC to the PIC, thus the capabilities and limitations of these types of PIC must be taken into consideration. For information about CoS classifiers and rewrite rules limitations on IQ2 and IQ2E PICs, see “CoS Capabilities and Limitations on IQ2 and IQ2E PICs (M Series and T Series Platforms)” on page 298.</p> <p>For information about CoS classifiers and rewrite rules on Trio MPC/MIC platforms, see “CoS Capabilities and Limitations on MPCs and MICs” on page 453</p>					
dscp	Yes	No	Yes	Yes	<p>For J Series router PIMs and M Series Enhanced FPCs, bits 0 through 5 are rewritten, and bits 6 through 7 are preserved.</p> <p>For M320 and T Series router non-IQ FPCs, bits 0 through 5 are rewritten, and bits 6 through 7 are preserved.</p> <p>For M320 and T Series router FPCs, you must decode the loss priority using the firewall filter before you can use loss priority to select the rewrite CoS value. For more information, see “Setting Packet Loss Priority” on page 64.</p> <p>For M320 and T Series router FPCs, Adaptive Services PIC link services IQ interfaces (lsq-) do not support DSCP rewrite markers.</p>
dscp-ipv6	Yes	No	Yes	Yes	<p>For J Series router PIMs, M Series router Enhanced FPCs, and M320 and T Series router FPCs, bits 0 through 5 are rewritten, and bits 6 through 7 are preserved.</p> <p>For M320 and T Series routers FPCs, you must decode the loss priority using the firewall filter before you can use loss priority to select the rewrite CoS value. For more information, see “Setting Packet Loss Priority” on page 64.</p> <p>For M320 and T Series router FPCs, Adaptive Services PIC link services IQ interfaces (lsq-) do not support DSCP rewrite markers.</p>
frame-relay-de	Yes	No	No	No	—

Table 48: Comparison of CoS Hardware Capabilities and Limitations (*continued*)

Feature	J Series PIMs	M Series FPCs	M Series Enhanced FPCs	M320 and T Series FPCs	Comments
ieee-802.1	Yes	No	Yes	Yes	For M Series router enhanced FPCs and T Series router FPCs, fixed rewrite loss priority determines the value for bit 0; queue number (forwarding class) determines bits 1 and 2. For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.
inet-precedence	Yes	Yes	Yes	Yes	<p>For J Series router PIMs, bits 0 through 2 are rewritten, and bits 3 through 7 are preserved.</p> <p>For M Series router FPCs, bits 0 through 2 are rewritten, and bits 3 through 7 are preserved.</p> <p>For M Series router Enhanced FPCs, bits 0 through 2 are rewritten, bits 3 through 5 are cleared, and bits 6 through 7 are preserved.</p> <p>For M320 and T Series routers FPCs, bits 0 through 2 are rewritten and bits 3 through 7 are preserved.</p> <p>For M320 and T Series router FPCs, you must decode the loss priority using the firewall filter before you can use loss priority to select the rewrite CoS value. For more information, see “Setting Packet Loss Priority” on page 64.</p>
mpls-exp	Yes	Yes	Yes	Yes	<p>For M320 and T Series router FPCs, you must decode the loss priority using the firewall filter before you can use loss priority to select the rewrite CoS value. For more information, see “Setting Packet Loss Priority” on page 64.</p> <p>For M Series routers FPCs, fixed rewrite loss priority determines the value for bit 0; queue number (forwarding class) determines bits 1 and 2.</p>

CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches

Table 49: CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches

Feature	PTX Series	Comments
Classifiers		

Table 49: CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches (*continued*)

Feature	PTX Series	Comments
Maximum number per PFE	64	<p>L2 classifiers (sum of ieee-802.1 + ieee-802.1ad cannot exceed 32)</p> <p>DSCP and inet-precedence classifiers (sum of dscp + inet-precedence classifiers cannot exceed 32)</p> <p>dscp-ipv6 classifiers</p> <p>exp classifiers</p>
dscp	Yes	DSCP and IP precedence classifiers cannot be configured on the same logical interface.
dscp-ipv6	Yes	Separate classifiers can be applied for IPv4 and IPv6 packets per logical interface.
ieee-802.1p	Yes	You can associate ieee-802.1p with any other type of classifier on the same logical interface. For L3 packets, an L3 classifier takes precedence over an IEEE classifier.
inet-precedence	Yes	
mpls-exp	Yes	
Loss priorities based on the Frame Relay discard eligible (DE) bit	No	

Table 49: CoS Hardware Capabilities and Limitations on PTX Series Packet Transport Switches (*continued*)

Feature	PTX Series	Comments
Drop Profiles		
Maximum number	32	You can configure up to 32 drop profiles in the PTX chassis.
Per queue	Yes	
Per loss priority	Yes	
Per Transmission Control Protocol (TCP) bit	No	
Policing		
Traffic policing	Yes	
Two-rate tricolor marking (TCM)	Yes	
Queuing		
Priority	Yes (4)	
Per-queue output statistics	Yes	Red-dropped counters are not maintained per drop precedence. Also tail drop counters always show zero because packets are always dropped by the RED algorithm.
Rewrite Markers		
Maximum number per PFE	64	The sum of L2 and L3 rewrite rules cannot exceed 64.
dscp	Yes	
dscp-ipv6	Yes	
ieee-802.1	Yes	L2 and L3 rewrites can be applied to the same packet simultaneously.
inet-precedence	No	
mpls-exp	Yes	

CoS Capabilities and Limitations on IQ2 and IQ2E PICs (M Series and T Series Platforms)

This topic describes CoS scaling and performance parameters that apply to IQ2 and IQ2E PICs on M series and T series routers.

Rewrite Operations

802.1p or 802.1ad rewrite operations are done on the PIC. A total of eight rewrite markers of each type are supported on the PIC. For other rewrite operations, the numbers are the same as for any other M series FPCs. See [“Hardware Capabilities and Limitations” on page 289](#) for details.

Classification

Classification is done on the PIC. There are eight classifier tables of each type (ieee-802.1p, mpls-exp, inet-precedence, dscp, and dscp-ipv6) supported per PIC.

For each classifier type, one table is reserved for a default classifier. This table is used when no classifier is configured, or when the number of tables configured exceeds eight.

Related Documentation

- [Hardware Capabilities and Limitations on page 289](#)

M320 Routers FPCs and CoS

On Juniper Networks M320 Multiservice Edge Routers, CoS is supported with two types of FPCs: the Enhanced II FPC and the Enhanced III FPC. The Enhanced III FPC provides different CoS functionality than the standard and Enhanced II FPCs. You can mix the FPC types in a single M320 router, but CoS processing for packets traveling between the Enhanced II and Enhanced III FPCs differ from the processing of packets traveling between FPCs of the same type. In cases of mixed FPC types, only the least common denominator of CoS functions is supported.

In particular, the drop priority classification behavior is different for packets traveling between Enhanced II and Enhanced III FPCs in an M320 router chassis. In the Enhanced III FPC, the packet is always classified into one of four packet drop priorities whether the **tri-color** statement is configured or not. However, depending on the presence or absence of the **tri-color** statement, the four colors might have a different meaning to the Enhanced II FPC. For more information about the **tri-color** statement, see [“Enabling Tricolor Marking” on page 108](#).

When packets flow from an Enhanced III FPC to an Enhanced II FPC, the drop priority classification behavior is shown in [Table 50 on page 299](#).

Table 50: Drop Priority Classification for Packet Sent from Enhanced III to Enhanced II FPC on M320 Routers

Enhanced III FPC Drop Priority	Enhanced II FPC Drop Priority (Without Tricolor Marking Enabled)	Enhanced II FPC Drop Priority (with Tricolor Marking Enabled)
low	low	low
medium-low	low	medium-low
medium-high	high	medium-high
high	high	high

When packets flow from an Enhanced II FPC without tricolor marking enabled to an Enhanced III FPC, the drop priority classification behavior is shown in [Table 51 on page 299](#).

Table 51: Drop Priority Classification for Packet Sent from Enhanced II FPC Without Tricolor Marking to Enhanced III FPC on M320 Routers

Enhanced II FPC (Without Tricolor Marking Enabled)	Enhanced III FPC
low	low
high	medium-high

When packets flow from an Enhanced II FPC with tricolor marking enabled to an Enhanced III FPC, the drop priority classification behavior is shown in [Table 52 on page 299](#).

Table 52: Drop Priority Classification for Packet Sent from Enhanced II FPC with Tricolor Marking to Enhanced III FPC on M320 Routers

Enhanced II FPC (With Tricolor Marking Enabled)	Enhanced III FPC
low	low
medium-low	medium-low
medium-high	medium-high
high	high

MX Series Router CoS Hardware Capabilities and Limitations

Generally, the Layer 3 CoS hardware capabilities and limitations for Juniper Networks MX Series Ethernet Service Routers are the same as for M Series Multiservice Edge Routers (M120 routers in particular).

In particular, the following scaling and performance parameters apply to MX Series routers:

- 32 classifiers of each type
- 32 rewrite tables of each type
- Eight queues per port
- 64 WRED profiles
- 100-ms queue buffering for interfaces 1 Gbps and above; 500 ms for all others
- Line-rate CoS features

For more information about MX Series router CoS capabilities, including software configuration, see [“Configuring Hierarchical Schedulers for CoS” on page 225](#) and [“Enhanced Queuing DPC Hardware Properties” on page 431](#).

On MX Series routers, you can apply classifiers or rewrite rules to an integrated bridging and routing (IRB) interface at the **[edit class-of-service interfaces irb unit *logical-unit-number*]** level of the hierarchy. All types of classifiers and rewrite rules are allowed. These classifiers and rewrite rules are independent of others configured on an MX Series router.

```
[edit class-of-service interfaces]
irb {
  unit logical-unit-number {
    classifiers {
      type (classifier-name | default) family (mpls | all);
    }
    rewrite-rules {
      dscp (rewrite-name | default);
      dscp-ipv6 (rewrite-name | default);
      exp (rewrite-name | default) protocol protocol-types;
      ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
      inet-precedence (rewrite-name | default);
    }
  }
}
```

For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.

The IRB classifiers and rewrite rules are applied only to the “routed” packets. For logical interfaces that are part of a bridge domain, only IEEE classifiers and IEEE rewrite rules are allowed. Only the listed options are available for rewrite rules on an IRB.

For dual-tagged bridge domain logical interfaces, you can configure classification based on the inner or outer VLAN tag's IEEE 802.1p bits using the **vlan-tag** statement with the **inner** or **outer** option:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
classifiers {
  ieee-802.1 (classifier-name | default) vlan-tag (inner | outer);
}
```

Also, for dual-tagged bridge domain logical interfaces, you can configure rewrite rules to rewrite the outer or both outer and inner VLAN tag's IEEE 802.1p bits using the **vlan-tag** statement with the **outer** or **outer-and-inner** option:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
rewrite-rules {
  ieee-802.1 (rewrite-rule-name | default) vlan-tag (outer | outer-and-inner);
}
```

Default Routing Engine Protocol Queue Assignments

Table 53 on page 301 lists (in alphabetical order) how Routing Engine-sourced traffic is mapped to output queues. The following caveats apply to Table 53 on page 301:

- For all packets sent to queue 3 over a VLAN-tagged interface, the software sets the 802.1p bit to 110.
- For IPv4 and IPv6 packets, the software copies the IP type-of-service (ToS) value into the 802.1p field independently of which queue the packets are sent out.
- For MPLS packets, the software copies the EXP bits into the 802.1p field.

Table 53: Routing Engine Protocol Queue Assignments

Routing Engine Protocol	Queue Assignment
Adaptive Services PIC	TCP tickle (keepalive packets for idle session generated with stateful firewall to probe idle TCP sessions) are sent from queue 0.
ATM Operation, Administration, and Maintenance (OAM)	Queue 3
Bidirectional Forwarding Detection (BFD) Protocol	Queue 3
Border Gateway Protocol (BGP)	Queue 0
BGP TCP Retransmission	Queue 3
Cisco High-Level Data Link Control (HDLC)	Queue 3
Distance Vector Multicast Routing Protocol (DVMRP)	Queue 3
Frame Relay Local Management Interface (LMI)	Queue 3

Table 53: Routing Engine Protocol Queue Assignments (*continued*)

Routing Engine Protocol	Queue Assignment
Frame Relay Asynchronization permanent virtual circuit (PVC)/data link connection identifier (DLCI) status messages	Queue 3
FTP	Queue 0
Intermediate System-to-Intermediate System (IS-IS) Open Systems Interconnection (OSI)	Queue 3
Internet Group Management Protocol (IGMP) query	Queue 3
IGMP Report	Queue 0
IP version 6 (IPv6) Neighbor Solicitation	Queue 3
IPv6 Neighbor Advertisement	Queue 3
IPv6 Router Advertisement	Queue 0
Label Distribution Protocol (LDP) User Datagram Protocol (UDP) hello	Queue 3
LDP keepalive and Session data	Queue 0
LDP TCP Retransmission	Queue 3
Link Aggregation Control Protocol (LACP)	Queue 3
Link Services (LS) PIC	If link fragmentation and interleaving (LFI) is enabled, all routing protocol packets larger than 128 bytes are transmitted from queue 0. This ensures that VoIP traffic is not affected. Fragmentation is supported on queue 0 only.
Multicast listener discovery (MLD)	Queue 0
Multicast Source Discovery Protocol (MSDP)	Queue 0
MSDP TCP Retransmission	Queue 3
Multilink Frame Relay Link Integrity Protocol (LIP)	Queue 3
Open Shortest Path First (OSPF) protocol data unit (PDU)	Queue 3
Point-to-Point Protocol (PPP)	Queue 3
Protocol Independent Multicast (PIM)	Queue 3

Table 53: Routing Engine Protocol Queue Assignments (*continued*)

Routing Engine Protocol	Queue Assignment
Real-time performance monitoring (RPM) probe packets	Queue 3
Resource Reservation Protocol (RSVP)	Queue 3
Routing Information Protocol (RIP)	Queue 3
Simple Network Management Protocol (SNMP)	Queue 0
SSH	Queue 0
Telnet	Queue 0
Virtual Router Redundancy Protocol (VRRP)	Queue 3
xnm-clear-text	Queue 0
xnm-ssl	Queue 0

Changing the Routing Engine Outbound Traffic Defaults

You can modify the default queue assignment (forwarding class) and DSCP bits used in the ToS field of packets generated by the Routing Engine. By default, the forwarding class (queue) and packet loss priority (PLP) bits are set according to the values given in [“Default DSCP and DSCP IPv6 Classifier” on page 46](#).

TCP-related packets, such as BGP or LDP, use queue 3 (network control) for retransmitted traffic. Changing the defaults for Routing Engine-sourced traffic does not affect transit or incoming traffic. The changes apply to all packets relating to Layer 3 and Layer 2 protocols, but not MPLS EXP bits or IEEE 802.1p bits. This feature applies to all application-level traffic such as FTP or ping operations as well.

This feature is not available on Juniper Networks J Series Services Routers.

The queue selected is global to the router. That is, the traffic is placed in the selected queue on all egress interfaces. In the case of a restricted interface, the Routing Engine-sourced traffic flows through the restricted queue.

The queue selected must be properly configured on all interfaces. For more information about configuring queues and forwarding classes, see [“Overview of Forwarding Classes” on page 123](#).

To change the default queue and DSCP bits for Routing Engine-sourced traffic, include the **host-outbound-traffic** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
  host-outbound-traffic {
```

```

forwarding-class class-name;
dscp-code-point value;
}

```

The following example places all Routing Engine-sourced traffic into queue 3 (network control) with a DSCP code point value of 101010:

```

[edit class-of-service]
host-outbound-traffic {
  forwarding-class network-control;
  dscp-code-point 101010;
}

```

CoS Features of Router Hardware and Interface Families

- [CoS Features of the Router Hardware, PIC, and MIC and MPC Interface Families on page 304](#)
- [Scheduling on the Router Hardware, PIC, and MIC and MPC Interface Families on page 305](#)
- [Schedulers on the Router Hardware, PIC, and MIC and MPC Families on page 305](#)
- [Queuing Parameters for the Router Hardware, PIC, and MIC and MPC Interface Families on page 306](#)
- [Junos Trio Chipset on MX Series FAQs on page 307](#)

CoS Features of the Router Hardware, PIC, and MIC and MPC Interface Families

[Table 54 on page 304](#) compares the PIC families with regard to major CoS features. Note that this table reflects the ability to perform the CoS function *at the PIC or MPC/MIC interface level* and not on the system as a whole.

Table 54: CoS Features of the Router Hardware and Interface Families Compared

Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	Enhanced IQ PICs
BA classification	Yes	Yes	–	–	–	Yes
ToS bit rewrites	Yes	Yes	Yes, for IEEE bits only	Yes, for IEEE bits only	Yes, for IEEE bits only	–
Ingress ToS bit rewrites	–	Yes, with firewall filter	–	–	–	Yes
Hierarchical policers	–	Yes	–	–	–	Yes

Scheduling on the Router Hardware, PIC, and MIC and MPC Interface Families

Table 55 on page 305 compares the PIC and MIC and MPC interface families with regard to scheduling abilities or features. Note that this table reflects the ability to perform the function *at the PIC or MPC/MIC interface level* and not necessarily on the system as a whole.

In this table, the OSE PICs refer to the 10-port 10-Gigabit OSE PICs (described in some guides as the 10-Gigabit Ethernet LAN/WAN PICs with SFP+).

Table 55: Scheduling on Router Hardware and Interface Families Compared

Scheduling Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	OSE PICs on T Series	Enhanced IQ PICs
Per-unit scheduling	–	Yes, for EQ MPC	Yes	Yes	Yes	–	Yes
Physical port and logical unit shaping	–	Yes	–	Yes	Yes	–	Yes
Guaranteed rate or peak rate support	–	Yes	–	Yes, supports both CIR and PIR on the same logical unit.	Yes	Yes, at the queue level	Yes, at the logical unit
Excess rate support	–	Yes	–	–	–	Yes	Yes, at the logical unit
Shared scheduler support	–	–	–	Yes	Yes	–	–

Schedulers on the Router Hardware, PIC, and MIC and MPC Families

Table 56 on page 305 compares the PIC and MPC/MIC interface families with regard to scheduler statements or features. Note that this table reflects the ability to perform the scheduler function *at the PIC or MPC/MIC interface level* and not necessarily on the system as a whole.

In this table, the OSE PICs refer to the 10-port 10-Gigabit OSE PICs (described in some guides as the 10-Gigabit Ethernet LAN/WAN PICs with SFP+).

Table 56: Schedulers on the Router Hardware and Interface Families Compared

Scheduler Statement or Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	OSE PICs on T Series	Enhanced IQ PICs
Exact transmit rate	Yes	Yes	Yes	–	–	Yes	Yes

Table 56: Schedulers on the Router Hardware and Interface Families Compared (*continued*)

Scheduler Statement or Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	OSE PICs on T Series	Enhanced IQ PICs
Rate-limit transmit rate	–	Yes	–	Yes	Yes	Yes	Yes
More than one high-priority queue	Yes	Yes	Yes	–	Yes	–	Yes
Excess priority or sharing	–	Yes	–	–	–	–	Yes
Hierarchical Scheduling	–	Yes, for EQ MPC	–	–	Yes	–	–

Queuing Parameters for the Router Hardware, PIC, and MIC and MPC Interface Families

Table 57 on page 306 compares the PIC and MPC/MIC interface families with regard to queuing parameters and features. In this table, the OSE PICs refer to the 10-port 10-Gigabit OSE PICs (described in some guides as the 10-Gigabit Ethernet LAN/WAN PICs with SFP+).

Table 57: Queue Parameters on the Router Hardware and Interface Families Compared

Queuing Statement or Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	OSE PICs on T Series	Enhanced IQ PICs
Maximum number of queues	8	8	8 on M320 or T Series routers, 4 on M7, M10, M20 routers	8	8	4 ingress, 8 egress	8
Maximum delay buffer bandwidth	80 ms: Type 1 and 2 FPC, 50 ms: Type 3 FPC	100 ms for 1 Gbps and up; 500 ms for others	100 ms	200 ms	200 ms	–	up to 4000 ms
Packet transmit priority level	3 and 3	3 and 2	2 and 2	2	3	2	3 and 2

Table 57: Queue Parameters on the Router Hardware and Interface Families Compared (*continued*)

Queuing Statement or Feature:	M320 and T Series	MIC and MPC Interfaces	IQ PICs	IQ2 PICs	IQ2E PICs	OSE PICs on T Series	Enhanced IQ PICs
Maximum number of drop profiles	32 (32 samples)	64	32 (32 samples)	32	32	–	64
Packet loss priority level	4	4	4	4	4	4	4

Junos Trio Chipset on MX Series FAQs

Junos Trio is a chipset with revolutionary 3D scaling technology that enables networks to dynamically scale for more bandwidth, subscribers, and services. This section answers questions related to this chipset used with Junos OS Release 10.1 and later.

Which product platforms use the Junos Trio chipset?

- MX Series MPC line cards

The MX Series MPC provides the connection between the customer's Ethernet interfaces and the routing fabric of the MX Series chassis. The board features two Junos Trio chipsets.

- 16-port 10-Gigabit Ethernet MPC

This MPC provides the connection between 10-Gigabit Ethernet LAN interfaces and the routing fabric of the MX Series chassis. It has four identical packet processing paths combined with a control plane.

- 100-Gigabit Ethernet MPC

This MPC provides the connection between 100-Gigabit Ethernet LAN interfaces and the routing fabric of the MX Series chassis. It supports two separate slots for MICs.

- MX5, MX10, MX40, and MX80 routers.

What is the total number of Packet Forwarding Engines in each of the DPCs using the Junos Trio chipset?

- The 16-port 10-Gigabit Ethernet MPC on MX Series routers has a total of four Packet Forwarding Engines per MPC.
- Each MPC has two Packet Forwarding Engines.

What is the default power-on sequence when line cards with Junos Trio chipsets are in the same chassis with other types of line cards?

If the **set chassis network-services** attribute is not configured, the following is the line card power-up rule:

- If the first PIC concentrator powered up is a DPC, then only DPCs within the box are allowed to power up.
- If the first PIC concentrator powered up is an MPC, then only MPCs are allowed to power up.

As of Junos OS Release 10.2 and later, the power-up rule has been changed to the following:

- If the **set chassis network-services** attribute is configured as **ip** at start time, any MX Series device-supported boards (such as DPC, FPC, and MPC) will boot.
- If the **set chassis network-services** attribute is configured as **ethernet** at start time, any MX Series device-supported boards (such as DPC, FPC, and MPC) will boot.
- If the **set chassis network-services** attribute is configured as **enhanced-ip** at start time, only MPCs and MS-DPCs are powered on in the chassis. Non-service DPCs do not work with enhanced network services mode options.
- If the **set chassis network-services** attribute is configured as **enhanced-ethernet** at start time, only MPCs and MS-DPCs are powered on in the chassis.

What are the QoS differences between the 16-port 10-Gigabit Ethernet MPC and the I-chip-based DPC?

- Dynamic memory is not supported on the 16-port 10-Gigabit Ethernet MPC.
- A buffer configured on an MPC queue is treated as the maximum. However, it is treated as the minimum on the I-chip DPC.
- The MPC maintains packets in 128-byte chunks.
- Port shaping is supported on all MPCs.
- Queues can have unique shaping and guaranteed rate configuration.

What is the difference in buffer management on the MPCs compared with the DPCs?

On port-queuing DPCs, 64 byte-per-unit dynamic buffers are available per queue. If a queue is using more than its allocated bandwidth share due to excess bandwidth left over from other queues, its buffers are dynamically increased. This is feasible because the I-chip on the DPCs primarily perform weighted random early detection (WRED) drops at the head of the queue, as opposed to “tail-assisted” drops, which are performed only when a temporal buffer is configured or when the queue becomes full. When a temporal buffer is not configured, the allocated buffer is treated as the minimum for that queue, and can expand if other queues are not using their share.

With the Trio chipset on the MPCs, WRED drops are performed at the tail of the queue. The packet buffer is organized into 128-byte units. Before a packet is queued, buffer and WRED checks are performed, and the decision to drop is made at this time. Once a packet is queued, it is not dropped. As a result, dynamic buffer allocation is not supported on the Packet Forwarding Engines containing the Trio chipset. The buffer allocation per

queue on the Packet Forwarding Engines containing the Trio chipset is considered the maximum for that queue. Once the allocated buffer becomes full, subsequent packets are dropped until space is available, even if other queues are idle. Buffering is only required during oversubscription.

To provide larger buffers on Packet Forwarding Engines with the Trio chipset, the delay buffer can be increased from the default 100 ms to 200 ms of the port speed. the delay buffer can also be oversubscribed using the **delay-buffer-rate** configuration per port.

What are the supported QoS features for the 16-port 10-Gigabit Ethernet MPC and 100-Gigabit Ethernet MPC.

The Gigabit Ethernet MPCs supports the following QoS functionality:

- Port-based queuing
 - Per-port shaping
 - Eight queues per port
 - 100 ms of delay buffer by default per port
 - 200 ms of delay buffer configurable per port
 - Ability to oversubscribe the delay buffer beyond 200 ms per port
- Queue-level shaping and guaranteed rate
 - Separate guaranteed and shaping rates
 - Rate limit option to police a queue to act as a Low Latency Queue (LLQ)
- Four WRED profiles per queue
- Multiple queue priority levels
- Strict High, High, Medium, and Low guaranteed priority levels
 - Strict High and High are at the same hardware priority level
 - Round robin at each guaranteed priority level
- High and Low excess priority levels
 - Queues perform WRR at the excess priority levels
 - Strict priority scheduling at each excess priority level
- Classification per VLAN
 - MPLS EXP
 - IPv6, IPv4 ToS
 - Inner and outer tag 802.1p (and DEI7)
 - MF classifiers per VLAN
- Policers per VLAN

- Single rate, single-rate tricolor marking, two-rate tricolor marking, hierarchical policers
- Class-aware intelligent hierarchical policers
- Physical interface policers
- Rewrites per VLAN
 - MPLS EXP, IP DSCP/PREC
 - Inner and outer tag 802.1p (and DEI7)
 - Ingress DSCP rewrite

**Related
Documentation**

- [MX Series QoS FAQ Overview on page 494](#)
- Dense Port Concentrators FAQs

Configuring CoS for Tunnels

This topic discusses the following:

- [CoS for Tunnels Overview on page 311](#)
- [Configuring CoS for Tunnels on page 312](#)
- [Example: Configuring CoS for Tunnels on page 312](#)
- [Example: Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header on page 315](#)

CoS for Tunnels Overview

For Adaptive Services, Link Services, and Tunnel PICs installed on Juniper Networks M Series Multiservice Edge Routers and T Series Core Routers with enhanced Flexible PIC Concentrators (FPCs), class-of-service (CoS) information is preserved inside generic routing encapsulation (GRE) and IP-IP tunnels.

For the ES PIC installed on M Series and T Series routers with enhanced FPCs, class-of-service information is preserved inside IP Security (IPsec) tunnels. For IPsec tunnels, you do not need to configure CoS, because the ES PIC copies the type-of-service (ToS) byte from the inner IP header to the GRE or IP-IP header.

For IPsec tunnels, the IP header type-of-service (ToS) bits are copied to the outer IPsec header at encryption side of the tunnel. You can rewrite the outer ToS bits in the IPsec header using a rewrite rule. On the decryption side of the IPsec tunnel, the ToS bits in the IPsec header are not written back to the original IP header field. You can still apply a firewall filter to the ToS bits to apply a packet action on egress. For more information about ToS bits and the Multiservices PICs, see [“Multiservices PIC ToS Translation” on page 325](#). For more information about IPsec and Multiservices PICs, see the Junos Services Interfaces Configuration Release 11.2.

To configure CoS for tunnels, include the following statements at the **[edit class-of-service]** and **[edit interfaces]** hierarchy level:

```
[edit class-of-service]
interfaces {
  interface-name {
    unit logical-unit-number {
      rewrite-rules {
        dscp (rewrite-name | default);
        dscp-ipv6 (rewrite-name | default);
```

```

    exp (rewrite-name | default) protocol protocol-types;
    exp-push-push default;
    exp-swap-push-push default;
    ieee-802.1 (rewrite-name | default);
    inet-precedence (rewrite-name | default);
  }
}
}
rewrite-rules {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point (alias | bits);
    }
  }
}
[edit interfaces]
gre-interface-name {
  unit logical-unit-number;
  copy-tos-to-outer-ip-header;
}

```

Configuring CoS for Tunnels


To configure CoS for GRE and IP-IP tunnels, perform the following configuration tasks:

1. To configure the tunnel, include the **tunnel** statement at the **[edit interfaces ip-fpc/pic/port unit logical-unit-number]** or **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level.
2. To rewrite traffic on the outbound interface, include the **rewrite-rules** statement at the **[edit class-of-service]** and **[edit class-of-service interfaces interface-name unit logical-unit-number]** hierarchy levels. For GRE and IP-IP tunnels, you can configure IP precedence and DSCP rewrite rules.
3. To classify traffic on the inbound interface, you can configure a behavior aggregate (BA) classifier or firewall filter. Include the **loss-priority** and **forwarding-class** statements at the **[edit firewall filter filter-name term term-name then]** hierarchy level, or the **classifiers** statement at the **[edit class-of-service]** hierarchy level.
4. For a GRE tunnel, the default is to set the ToS bits in the outer IP header to all 0s. To copy the ToS bits from the inner IP header to the outer, include the **copy-tos-to-outer-ip-header** statement at the **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level. (This inner-to-outer ToS bits copying is already the default behavior for IP-IP tunnels.)

Example: Configuring CoS for Tunnels

In [Figure 21 on page 313](#), Router A acts as a tunnel ingress device. The link between interfaces **ge-1/0/0** in Router A and **ge-1/3/0** in Router B is the GRE or IP-IP tunnel. Router A monitors the traffic received from interface **ge-1/3/0**. By way of interface **ge-1/0/0**, Router C generates traffic to Router B.

Figure 21: CoS with a Tunnel Configuration

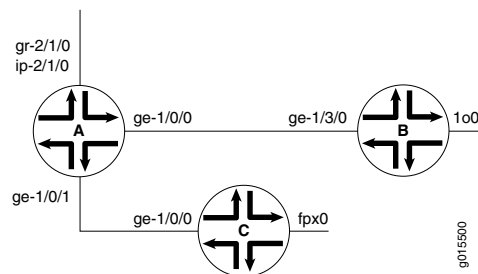

```

Router A  [edit interfaces]
          ge-1/0/0 {
            unit 0 {
              family inet {
                address 10.80.0.2/24;
              }
            }
          }
          ge-1/0/1 {
            unit 0 {
              family inet {
                filter {
                  input zf-catch-all;
                }
                address 10.90.0.2/24;
              }
            }
          }
          gr-2/1/0 {
            unit 0 {
              tunnel {
                source 11.11.11.11;
                destination 10.255.245.46;
              }
              family inet {
                address 21.21.21.21/24;
              }
            }
          }
          ip-2/1/0 {
            unit 0 {
              tunnel {
                source 12.12.12.12;
                destination 10.255.245.46;
              }
              family inet {
                address 22.22.22.22/24;
              }
            }
          }
        }

[edit routing-options]
static {
  route 1.1.1.1/32 next-hop gr-2/1/0.0;
}

```

```
route 2.2.2.2/32 next-hop ip-2/1/0.0;
}

[edit class-of-service]
interfaces {
  ge-1/0/0 {
    unit 0 {
      rewrite-rules {
        inet-precedence zf-tun-rw-ipprec-00;
      }
    }
  }
}
rewrite-rules {
  inet-precedence zf-tun-rw-ipprec-00 {
    forwarding-class best-effort {
      loss-priority low code-point 000;
      loss-priority high code-point 001;
    }
    forwarding-class expedited-forwarding {
      loss-priority low code-point 010;
      loss-priority high code-point 011;
    }
    forwarding-class assured-forwarding {
      loss-priority low code-point 100;
      loss-priority high code-point 101;
    }
    forwarding-class network-control {
      loss-priority low code-point 110;
      loss-priority high code-point 111;
    }
  }
}
dscp zf-tun-rw-dscp-00 {
  forwarding-class best-effort {
    loss-priority low code-point 000000;
    loss-priority high code-point 001001;
  }
  forwarding-class expedited-forwarding {
    loss-priority low code-point 010010;
    loss-priority high code-point 011011;
  }
  forwarding-class assured-forwarding {
    loss-priority low code-point 100100;
    loss-priority high code-point 101101;
  }
  forwarding-class network-control {
    loss-priority low code-point 110110;
    loss-priority high code-point 111111;
  }
}

[edit firewall]
filter zf-catch-all {
  term term1 {
    then {
```

```

        loss-priority high;
        forwarding-class network-control;
    }
}
}

Router B [edit interfaces]
ge-1/3/0 {
  unit 0 {
    family inet {
      address 10.80.0.1/24;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.245.46/32;
    }
  }
}

Router C [edit interfaces]
ge-1/0/0 {
  unit 0 {
    family inet {
      address 10.90.0.1/24;
    }
  }
}

[edit routing-options]
static {
  route 1.1.1.1/32 next-hop 10.90.0.2;
  route 2.2.2.2/32 next-hop 10.90.0.2;
}

```

Example: Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header

Unlike IP-IP tunnels, GRE tunnels do not copy the ToS bits to the outer IP header by default. To copy the inner ToS bits to the outer IP header (which is required for some tunneled routing protocols) on packets sent by the Routing Engine, include the **copy-tos-to-outer-ip-header** statement at the logical unit hierarchy level of a GRE interface. This example copies the inner ToS bits to the outer IP header on a GRE tunnel:

```

[edit interfaces]
gr-0/0/0 {
  unit 0 {
    copy-tos-to-outer-ip-header;
    family inet;
  }
}

```


Configuring CoS on Services PICs

This topic discusses the following:

- [Overview of CoS on Services PICs on page 317](#)
- [Configuring CoS Rules on page 318](#)
- [Configuring CoS Rule Sets on page 323](#)
- [Output Packet Rewriting on page 323](#)
- [Allocating Excess Bandwidth Among Frame Relay DLCIs on Multiservices PICs on page 323](#)
- [Multiservices PIC ToS Translation on page 325](#)
- [Example: Configuring CoS Rules on page 325](#)

Overview of CoS on Services PICs

On Adaptive Services (AS) PICs and Multiservices PICs with **lsq-** interfaces, there are additional features you can configure. One such feature is an additional method of classifying traffic flows based on applications, for example stateful firewalls and network address translation (NAT).

Application-based traffic flow classification enables you to configure a rule-based service that provides DiffServ code point (DSCP) marking and forwarding-class assignments for traffic transiting the AS PIC. The service enables you to specify matching by application, application set, source, destination address, and match direction, and uses a similar structure to other rule-based services such as stateful firewall. The service actions allow you to associate the DSCP alias or value, forwarding-class name, system log activity, or a preconfigured application profile with the matched packet flows.



NOTE: If you configure a forwarding class map associating a forwarding class with a queue number, these maps are not supported on Multiservices link services intelligent queuing (**lsq-**) interfaces.

To configure class-of-service (CoS) features on the Adaptive Services PIC or Multiservices PIC, include the **cos** statement at the **[edit services]** hierarchy level:

```
[edit services]
cos {
```

```

application-profile profile-name {
  ftp {
    data {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
  sip {
    video {
      dscp (alias | bits);
      forwarding-class class-name;
    }
    voice {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
}
rule rule-name {
  match-direction (input | output | input-output);
  term term-name {
    from {
      application-sets [ set-names ];
      applications [ application-names ];
      destination-address (CoS) address;
      destination-address-range low minimum-value high maximum-value <except>;
      destination-prefix-list list-name <except>;
      source-address address;
      source-address-rangesource-address-range low minimum-value
        high maximum-value <except>;
      source-prefix-list list-name <except>;
    }
    then {
      application-profile profile-name;
      dscp (alias | bits);
      forwarding-class class-name;
      syslog;
      (reflexive | reverse) {
        application-profile profile-name;
        dscp (alias | bits);
        forwarding-class class-name;
        syslog;
      }
    }
  }
}
rule-set rule-set-name {
  [ rule rule-names ];
}

```

Configuring CoS Rules

To configure a CoS rule, include the **rule** *rule-name* statement at the **[edit services cos]** hierarchy level:


```

[edit services cos]
rule rule-name {
  match-direction (input | output | input-output);
  term term-name {
    from {
      application-sets [ set-names ];
      applications [ application-names ];
      destination-address (CoS) address;
      destination-address-range low minimum-value high maximum-value <except>;
      destination-prefix-list list-name <except>;
      source-address address;
      source-address-range source-address-range low minimum-value high maximum-value
        <except>;
      source-prefix-list list-name <except>;
    }
    then {
      application-profile profile-name;
      dscp (alias | bits);
      forwarding-class class-name;
      syslog;
      (reflexive | reverse) {
        application-profile profile-name;
        dscp (alias | bits);
        forwarding-class class-name;
        syslog;
      }
    }
  }
}

```

Each CoS rule consists of a set of terms, similar to a filter configured at the **[edit firewall]** hierarchy level. A term consists of the following:

- **from** statement—Specifies the match conditions and applications that are included and excluded.
- **then** statement—Specifies the actions and action modifiers to be performed by the router software.

In addition, each rule must include a **match-direction** statement that specifies the direction in which the rule match is applied. To configure where the match is applied, include the **match-direction** statement at the **[edit services cos rule rule-name]** hierarchy level:

```
match-direction (input | output | input-output);
```

If you configure **match-direction input-output**, bidirectional rule creation is allowed.

The match direction is used with respect to the traffic flow through the Services PIC. When a packet is sent to the Services PIC, direction information is carried along with it.

With an interface service set, packet direction is determined by whether a packet is entering or leaving the interface on which the service set is applied.

With a next-hop service set, packet direction is determined by the interface used to route the packet to the Services PIC. If the inside interface is used to route the packet, the packet direction is **input**. If the outside interface is used to direct the packet to the Services

PIC, the packet direction is **output**. For more information on inside and outside interfaces, see the Junos Services Interfaces Configuration Release 11.2.

On the Services PIC, a flow lookup is performed. If no flow is found, rule processing is performed. All rules in the service set are considered. During rule processing, the packet direction is compared against rule directions. Only rules with direction information that matches the packet direction are considered.

The following sections describe CoS rule content in more detail:

- [Configuring Match Conditions in a CoS Rule on page 320](#)
- [Configuring Actions in a CoS Rule on page 321](#)

Configuring Match Conditions in a CoS Rule

To configure CoS match conditions, include the **from** statement at the **[edit services cos rule *rule-name* term *term-name*]** hierarchy level:

```
[edit services cos rule rule-name term term-name]  
from {  
  application-sets [ set-names ];  
  applications [ application-names ];  
  destination-address (CoS) address;  
  destination-address-range low minimum-value high maximum-value <except>;  
  destination-prefix-list list-name <except>;  
  source-address address;  
  source-address-range source-address-range low minimum-value high maximum-value  
    <except>;  
  source-prefix-list list-name <except>;  
}
```

You can use either the source address or the destination address as a match condition, in the same way that you would configure a firewall filter; for more information, see the Firewall Filters Configuration Guide.

If you omit the **from** term, the router accepts all traffic and the default protocol handlers take effect:

- User Datagram Protocol (UDP), Transmission Control Protocol (TCP), and Internet Control Message Protocol (ICMP) create a bidirectional flow with a predicted reverse flow.
- IP creates a unidirectional flow.

You can also include application protocol definitions that you have configured at the **[edit applications]** hierarchy level; for more information, see the Junos Services Interfaces Configuration Release 11.2.

- To apply one or more specific application protocol definitions, include the **applications** statement at the **[edit services cos rule *rule-name* term *term-name* from]** hierarchy level.
- To apply one or more sets of application protocol definitions you have defined, include the **application-sets** statement at the **[edit services cos rule *rule-name* term *term-name* from]** hierarchy level.



NOTE: If you include a statement that specifies application protocols, the router derives port and protocol information from the corresponding configuration at the `[edit applications]` hierarchy level; you cannot specify these properties as match conditions.

Configuring Actions in a CoS Rule

To configure CoS actions, include the **then** statement at the `[edit services cos rule rule-name term term-name]` hierarchy level:

```
[edit services cos rule rule-name term term-name]
then {
  application-profile profile-name;
  dscp (alias | bits);
  forwarding-class class-name;
  syslog;
  (reflexive | reverse) {
    application-profile profile-name;
    dscp (alias | bits);
    forwarding-class class-name;
    syslog;
  }
}
```

The principal CoS actions are as follows:

- **dscp**—Marks the packet with the specified DiffServ code point (DSCP) value or alias.
- **forwarding-class**—Assigns the packet to the specified forwarding class.

You can optionally set the configuration to record information in the system logging facility by including the **syslog** statement at the `[edit services cos rule rule-name term term-name then]` hierarchy level. This statement overrides any **syslog** setting included in the service set or interface default configuration.

For information about some additional CoS actions, see the following sections:

- [Configuring Application Profiles on page 321](#)
- [Configuring Reflexive and Reverse CoS Actions on page 322](#)

Configuring Application Profiles

You can optionally define one or more application profiles for inclusion in CoS actions. To configure, include the **application-profile** statement at the `[edit services cos]` hierarchy level:

```
[edit services cos]
application-profile profile-name {
  ftp {
    data {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
}
```

```

    }
  }
  sip {
    video {
      dscp (alias | bits);
      forwarding-class class-name;
    }
    voice {
      dscp (alias | bits);
      forwarding-class class-name;
    }
  }
}

```

The **application-profile** statement includes two main components and three traffic types: **ftp** with the **data** traffic type and **sip** with the **video** and **voice** traffic types. You can set the appropriate **dscp** and **forwarding-class** values for each component within the application profile.



NOTE: The **ftp** and **sip** statements are not supported on Juniper Network MX Series Ethernet Services Routers.

You can apply the application profile to a CoS configuration by including it at the **[edit services cos rule rule-name term term-name then]** hierarchy level.

Configuring Reflexive and Reverse CoS Actions

It is important to understand that CoS services are unidirectional. It might be necessary to specify different treatments for flows in opposite directions.

Regardless of whether a packet matches the input, output, or input-output direction, flows in both directions are created. The difference is that a forward, reverse, or forward-and-reverse CoS action is associated with each flow. You should bear in mind that the flow in the opposite direction might end up having a CoS action associated with it, which you have not specifically configured.

To control the direction in which service is applied, separate from the direction in which the rule match is applied, you can configure the **reflexive** or **reverse** statement at the **[edit services cos rule rule-name term term-name then]** hierarchy level:

```

[edit services cos rule rule-name term term-name then]
(reflexive | reverse) {
  application-profile profile-name;
  dscp (alias | bits);
  forwarding-class class-name;
  syslog;
}

```

The two actions are mutually exclusive. If nothing is specified, data flows inherit the CoS behavior of the forward control flow.

- **reflexive** causes the equivalent reverse CoS action to be applied to flows in the opposite direction.

- **reverse** allows you to define the CoS behavior for flows in the reverse direction.

Configuring CoS Rule Sets

The **rule-set** statement defines a collection of CoS rules that determine what actions the router software performs on packets in the data stream. You define each rule by specifying a rule name and configuring terms. You then specify the order of the rules by including the **rule-set** statement at the **[edit services cos]** hierarchy level:

```
[edit services cos]
rule-set rule-set-name {
  rule rule-name1;
  rule rule-name2;
  rule rule-name3;
  ...
}
```

The router software processes the rules in the order in which you specify them in the configuration. If a term in a rule matches the packet, the router performs the corresponding action and the rule processing stops. If no term in a rule matches the packet, processing continues to the next rule in the rule set. If none of the rules match the packet, the packet is dropped by default.

Output Packet Rewriting

On M Series routers, you can configure rewrite rules to change packet header information and attach it to an output interface. Because these rules can possibly overwrite the DSCP marking configured on the AS PIC, it is important to create system-wide configurations carefully.

For example, knowing that the AS PIC or Multiservices PIC can mark packets with any ToS or DSCP value and the output interface is restricted to only eight DSCP values, rewrite rules on the output interface condense the mapping from 64 to 8 values with overall loss of granularity. In this case, you have the following options:

- Remove rewrite rules in the output interface.
- Configure the output interface to include the most important mappings.

Allocating Excess Bandwidth Among Frame Relay DLCIs on Multiservices PICs

By default, all logical (**lsq-**) interfaces on a Multiservices PIC share bandwidth equally in the excess region (that is, bandwidth available once these interfaces have exhausted their committed information rate (CIR)).

However, you can include the **excess-rate** statement to control an independent set of parameters for bandwidth sharing in the excess region of a frame relay data-link connection identifier (DLCI) on a Multiservices PIC. Include the **excess-rate** statement at the **[edit class-of-service traffic-control-profile traffic-control-profile-name]** hierarchy level.

```
[edit class-of-service traffic-control-profile traffic-control-profile-name]  
excess-rate percent percentage;
```

There are several limitations to this feature:

- The excess bandwidth comes from bandwidth not used by any DLCIs (that is, bandwidth above the CIR). Therefore, only FRF.16 is supported.
- Only CIR mode is supported (you must configure a CIR on at least one DLCI).
- Only the **percent** option is supported for **lsq**- interfaces. The **priority** option is not supported for DLCIs.
- You cannot configure this feature if you also include one of the following statements in the configuration:
 - **scheduler-map**
 - **shaping-rate**
 - **adaptive-shaper** (valid on J Series Services Routers only)
 - **virtual-channel-group** (valid on J Series Services Routers only)
- If you oversubscribe the DLCIs, then the bandwidth can only be distributed equally.
- The **excess-priority** statement is not supported. However, for consistency, this statement will not result in a commit error.
- This feature is only supported on the Multiservices 100, Multiservices 400, and Multiservices 500 PICs.

This example configures excess bandwidth sharing in the ratio of 70 to 30 percent for two frame relay DLCIs. Only FRF.16 interfaces are supported.

Configuring the Frame Relay DLCIs

You must configure the per-unit scheduler.

```
[edit interfaces]  
lsq-1/3/0:0 {  
  per-unit-scheduler;  
  unit 0 {  
    dlc1 100;  
  }  
  unit 1 {  
    dlc1 200;  
  }  
}
```

Configuring the Traffic Control Profile

Only the **percent** option is supported.

```
[edit class-of-service]  
traffic-control-profiles {  
  tc_70 {  
    excess-rate percent 70;  
  }  
  tc_30 {  
    excess-rate percent 30;  
  }  
}
```

```
}

```

Applying the Traffic Control Profiles

Only FRF.16 is supported.

```
[edit interfaces]
lsq-1/3/0 {
  unit 0 {
    output-traffic-control-profile tc_70;
  }
  unit 1 {
    output-traffic-control-profile tc_30;
  }
}
```

Multiservices PIC ToS Translation

By default, all logical (**lsq-**) interfaces on a Multiservices PIC preserve the type-of-service (ToS) bits in an incoming packet header.

However, you can use the **translation-table** statement at the **[edit class-of-service]** hierarchy level to replace the arriving ToS bit pattern with a user-defined value.

This feature follows exactly the same configuration rules as the Enhanced IQ PIC. For configuration details, see [“Configuring ToS Translation Tables” on page 328](#).

Example: Configuring CoS Rules

The following example show a CoS configuration containing two rules, one for input matching on a specified application set and the other for output matching on a specified source address:

```
[edit services]
cos {
  application-profile cosprofile {
    ftp {
      data {
        dscp af11;
        forwarding-class 1;
      }
    }
  }
  application-profile cosrevprofile {
    ftp {
      data {
        dscp af22;
      }
    }
  }
  rule cosrule {
    match-direction input;
    term costerm {
      from {
        source-address {
          any-unicast;

```

```
    }
    applications junos-ftp;
  }
  then {
    dscp af33;
    forwarding-class 3;
    application-profile cosprofile;
    reverse {
      dscp af43;
      application-profile cosrevprofile;
    }
  }
}
}
}
stateful-firewall {
  rule r1 {
    match-direction input;
    term t1 {
      from {
        application-sets junos-algs-outbound;
      }
      then {
        accept;
      }
    }
    term t2 {
      then {
        accept;
      }
    }
  }
  service-set test {
    stateful-firewall-rules r1;
    cos-rules cosrule;
    interface-service {
      service-interface sp-1/3/0;
    }
  }
}
```


CHAPTER 18

Configuring CoS on Enhanced IQ PICs

This topic discusses the following:

- [CoS on Enhanced IQ PICs Overview on page 327](#)
- [Configuring ToS Translation Tables on page 328](#)
- [Configuring Excess Bandwidth Sharing on IQE PICs on page 332](#)
- [Calculation of Expected Traffic on IQE PIC Queues on page 335](#)
- [Configuring Layer 2 Policing on IQE PICs on page 356](#)
- [Configuring Low-Latency Static Policers on IQE PICs on page 359](#)
- [Assigning Default Frame Relay Rewrite Rule to IQE PICs on page 360](#)
- [Defining Custom Frame Relay Rewrite Rule on IQE PICs on page 361](#)

CoS on Enhanced IQ PICs Overview

The Enhanced IQ (IQE) PIC family supports a series of non-channelized and channelized interfaces that run at a large variety of speeds. Sophisticated Class-of-Service (CoS) techniques are available for the IQE PICs at the channel level. These techniques include policing based on type-of-service (ToS) bits, five priority levels, two shaping rates (the guaranteed rate and shaping rate), a shared scheduling option, DiffServ code point (DSCP) rewrite on egress, and configurable delay buffers for queuing. All of these features, with numerous examples, are discussed in this chapter. For a comparison of the capabilities of IQE PICs with other types of PICs, see [“Hardware Capabilities and Limitations” on page 289](#).

For information about CoS components that apply generally to all interfaces, see [“CoS Overview” on page 3](#). For general information about configuring interfaces, see the Junos® OS Network Interfaces.

IQE PICs can be used in Juniper Networks M40e, M120, M320 Multiservice Edge Routers and T Series Core Routers to supply enhanced CoS capabilities for edge aggregation. The same interface configuration syntax is used for basic configuration, and other CoS statements are applied at channel levels. Some configuration statements are available only in Junos OS Release 9.3 and later, as noted in this chapter.

Configuring ToS Translation Tables

On the IQE PICs, the behavior aggregate (BA) translation tables are included for every logical interface (unit) protocol family configured on the logical interface. The proper default translation table is active even if you do not include any explicit translation tables. You can display the current translation table values with the **show class-of-service classifiers** command.

On M40e, M120, M320, and T Series routers with IQE PICs, or on any system with IQ2 or Enhanced IQ2 PICs, you can replace the ToS bit value on the incoming packet header on a logical interface with a user-defined value. The new ToS value is used for all class-of-service processing and is applied before any other class-of-service or firewall treatment of the packet. On the IQE PIC, the values configured with the **translation-table** statement determines the new ToS bit values.

Four types of translation tables are supported: IP precedence, IPv4 DSCP, IPv6 DSCP, and MPLS EXP. You can configure a maximum of eight tables for each supported type. If a translation table is enabled for a particular type of traffic, then behavior aggregate (BA) classification of the same type must be configured for that logical interface. In other words, if you configure an IPv4 translation table, you must configure IPv4 BA classification on the same logical interface.

To configure ToS translation on the IQE PIC, include the **translation-table** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
translation-table {
  (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp |
   to-inet-precedence-from-inet-precedence) table-name {
    to-code-point value from-code-points (* | [ values ] );
  }
}
```

The **from-code-points** statement establishes the values to match on the incoming packets. The **default** option is used to match all values not explicitly listed, and, as a single entry in the translation table, to mark all incoming packets on an interface the same way. The **to-code-point** statement establishes the target values for the translation. If an incoming packet header ToS bit configuration is not covered by the translation table list and a ***** option is not specified, the ToS bits in the incoming packet header are left unchanged.

You can define many translation tables, as long as they have distinct names. You apply a translation table to a logical interface at the **[edit class-of-service interfaces]** hierarchy level. Translation tables always translate “like to like.” For example, a translation table applied to MPLS traffic can only translate from received EXP bit values to new EXP bit values. That is, translation tables cannot translate (for instance) from DSCP bits to INET precedence code points.

On the IQE PIC, incoming ToS bit translation is subject to the following rules:

- Locally generated traffic is not subject to translation.
- The **to-dscp-from-dscp** translation table type is not supported if an Internet precedence classifier is configured.
- The **to-inet-precedence-from-inet-precedence** translation table type is not supported if a DSCP classifier is configured.
- The **to-dscp-from-dscp** and **to-inet-precedence-from-inet-precedence** translation table types cannot be configured on the same unit.
- The **to-dscp-from-dscp** and **to-inet-precedence-from-inet-precedence** translation table types are supported for IPv4 packets.
- Only the **to-dscp-ipv6-from-dscp-ipv6** translation table type is supported for IPv6 packets.
- Only the **to-exp-from-exp** translation table type is supported for MPLS packets.



NOTE: Translation tables are not supported if fixed classification is configured on the logical interface.

The following example translates incoming DSCP values to the new values listed in the table. All incoming DSCP values other than 111111, 111110, 000111, and 100111 are translated to 000111.

```
[edit class-of-service]
translation-table {
  to-dscp-from-dscp dscp-trans-table {
    to-code-point 000000 from-code-points 111111;
    to-code-point 000001 from-code-points 111110;
    to-code-point 111000 from-code-points [ 000111 100111 ];
    to-code-point 000111 from-code-points *;
  }
}
```

You must apply the translation table to the logical interface input on the Enhanced IQ PIC:

```
[edit class-of-service interfaces so-1/0/0 unit 0]
translation-table to-dscp-from-dscp dscp-trans-table;
```

A maximum of 32 distinct translation tables are supported on each IQE PIC. However, this maximum is limited by the number of classifiers configured along with translation tables because on the IQE PIC the hardware tables are not always merged. For example, if a translation table and a classifier are both configured on the same logical interface (such as **unit 0**), there is only one hardware table and only one table added to the 32 translation table limit. However, if the translation table is configured on **unit 0** and the classifier on **unit 1** on the same physical interface, then two hardware tables are used and these two tables count toward the 32 maximum.

If you try to configure mutually exclusive translation tables on the same interface unit, you will get a warning message when you display or commit the configuration:

```
ge-0/1/1 {
  unit 0 {
    translation-table {
      ##
      ## Warning: to-dscp-from-dscp and
to-inet-precedence-from-inet-precedence not allowed on same unit
      ##
      to-inet-precedence-from-inet-precedence inet-trans-table;
      to-dscp-from-dscp dscp-trans-table;
    }
  }
}
```

You can issue the following operational mode commands to verify your configuration:

- **show class-of-service translation-table**
- **show class-of-service interface *interface-name***

To verify that the correct values are configured, use the **show class-of-service translation-table** command. The **show class-of-service translation-table** command displays the code points of all translation tables configured. All values are displayed, not just those configured:

```
user@host> show class-of-service translation-table
Translation Table: dscp-trans-table, Translation table type: dscp-to-dscp, Index:
6761
  From Code point    To Code Point
000000              000111
000001              000111
000010              000111
000011              000111
000100              000111
000101              000111
000110              000111
000111              111000
001000              000111
001001              000111
001010              000111
001011              000111
001100              000111
001101              000111
001110              000111
001111              000111
010000              000111
010001              000111
010010              000111
010011              000111
010100              000111
010101              000111
010110              000111
010111              000111
011000              000111
011001              000111
011010              000111
011011              000111
011100              000111
```

011101	000111
011110	000111
011111	000111
100000	000111
100001	000111
100010	000111
100011	000111
100100	000111
100101	000111
100110	000111
100111	111000
101000	000111
101001	000111
101010	000111
101011	000111
101100	000111
101101	000111
101110	000111
101111	000111
110000	000111
110001	000111
110010	000111
110011	000111
110100	000111
110101	000111
110110	000111
110111	000111
111000	000111
111001	000111
111010	000111
111011	000111
111100	000111
111101	000111
111110	000001
111111	000000

To verify that the configured translation table is applied to the correct interface, use the **show class-of-service interface *interface-name*** command. The **show class-of-service interface *interface-name*** command displays the translation tables applied to the IQE interface:

```

user@host> show class-of-service interface ge-0/1/1
Physical interface: ge-0/1/1, Index: 156  From Code point    To Code Point
Queues supported: 4, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Chassis scheduler map: <default-chassis>, Index: 4

Logical interface: so-2/3/0.0, Index: 68
Object      Name                Type                Index
-----
Rewrite     exp-default         exp (mpls-any)      29
Classifier  dscp-default        dscp                7
Classifier  exp-default         exp                 10
Translation Table  exp-trans-table    EXP_TO_EXP          61925

```

ToS translation on the IQE PIC is a form of behavior aggregate (BA) classification. The IQE PIC does not support multifield classification of packets at the PIC level. For more information about multifield classification, see [“Multifield Classifier Overview” on page 76](#).

Configuring Excess Bandwidth Sharing on IQE PICs

The IQE PIC gives users more control over excess bandwidth sharing. You can set a shaping rate and a guaranteed rate on a queue or logical interface and control the excess bandwidth (if any) that can be used after all bandwidth guarantees have been satisfied. This section discusses the following topics related to excess bandwidth sharing on the IQE PIC:

- [IQE PIC Excess Bandwidth Sharing Overview on page 332](#)
- [IQE PIC Excess Bandwidth Sharing Configuration on page 333](#)

IQE PIC Excess Bandwidth Sharing Overview

On some types of PICs, including the IQ and IQ2, and Enhanced Queuing DPCs, you can configure either a committed information rate (CIR) using the **guaranteed-rate** statement or a peak information rate (PIR) using the **shaping-rate** statement. You can configure both a PIR and CIR, and in most cases the CIR is less than the value of PIR. For bursty traffic, the CIR represents the average rate of traffic per unit time and the PIR represents the maximum amount of traffic that can be transmitted in a given interval. In other words, the PIR (**shaping-rate**) establishes the maximum bandwidth available. The CIR (**guaranteed-rate**) establishes the minimum bandwidth available if all sources are active at the same time. Theoretically, the PIR or CIR can be established at the queue, logical interface, or physical interface level. In this section, the PIRs or CIRs apply at the queue or logical interface (or both) levels.



NOTE: You can configure a shaping rate at the physical interface, logical interface, or queue level. You can configure a guaranteed rate or excess rate only at the logical interface and queue level.

Once all of the bandwidth guarantees (the sum of the CIRs at that level) are met, there could still be some excess bandwidth available for use. In existing PICs, you have no control over how this excess bandwidth is used. For example, consider the situation shown in [Table 58 on page 332](#) regarding a 10-Mbps physical interface. This example assumes that all queues are of the same priority. Also, if you do not specify a priority for the excess bandwidth, the excess priority is the same as the normal priority.

Table 58: Default Handling of Excess Traffic

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Traffic Rate	Guaranteed Rate (Total = 6 Mbps)	Maximum Rate	Excess Bandwidth (Part of 4 Mbps Excess)	Expected Transmit Rate (Guarantee + Excess)
Q0	10%	80%	10 Mbps	1 Mbps	8 Mbps	0.73 Mbps	1.73 Mbps

Table 58: Default Handling of Excess Traffic (*continued*)

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Traffic Rate	Guaranteed Rate (Total = 6 Mbps)	Maximum Rate	Excess Bandwidth (Part of 4 Mbps Excess)	Expected Transmit Rate (Guarantee + Excess)
Q1	20%	50%	10 Mbps	2 Mbps	5 Mbps	1.45 Mbps	3.45 Mbps
Q2	5%	5%	10 Mbps	0.5 Mbps	0.5 Mbps	0 Mbps	0.5 Mbps
Q3	25%	NA ("100%")	10 Mbps	2.5 Mbps	10 Mbps	1.82 Mbps	4.32 Mbps

A 10-Mbps interface (the Traffic Rate column) has four queues, and the guaranteed rates are shown as percentages (Transmit Rate column) and in bits per second (Guaranteed Rate column). The table also shows the shaping rate (PIR) as a percentage (Shaping Rate column) and the actual maximum possible transmitted rate (Traffic Rate column) on the oversubscribed interface. Note the guaranteed rates (CIRs) add up to 60 percent of the physical port speed or 6 Mbps. This means that there are 4 Mbps of “excess” bandwidth that can be used by the queues. This excess bandwidth is used as shown in the last two columns. One column (the Excess Bandwidth column) shows the bandwidth partitioned to each queue as a part of the 4-Mbps excess. The excess 4 Mbps bandwidth is shared in the ratio of the transmit rate (CIR) percentages of 10, 20, 5, and 25, adjusted for granularity. The last column shows the transmit rate the users can expect: the sum of the guaranteed rate plus the proportion of the excess bandwidth assigned to the queue.

Note that on PICs other than the IQE PICs the user has no control over the partitioning of the excess bandwidth. Excess bandwidth partitioning is automatic, simply assuming that the distribution and priorities of the excess bandwidth should be the same as the distribution and priorities of the other traffic. However, this might not always be the case and the user might want more control over excess bandwidth usage.

For more information on how excess bandwidth sharing is handled on the Enhanced Queuing DPC, see [“Configuring Excess Bandwidth Sharing”](#) on page 440.

IQE PIC Excess Bandwidth Sharing Configuration

On PICs other than IQE PICs, you can limit a queue’s transmission rate by including the **transmit-rate** statement with the **exact** option at the **[edit class-of-service schedulers scheduler-name]** hierarchy level. However, on the IQE PIC, you can set a shaping rate independent of the transmit rate by including the **shaping-rate** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level. Also, other PICs share excess bandwidth (bandwidth left over once the guaranteed transmit rate is met) in an automatic, nonconfigurable fashion. You cannot configure the priority of the queues for the excess traffic on other PICs either.

To share excess bandwidth on IQE PICs, include the **excess-rate** statement along with the **guaranteed-rate** statement (to define the CIR) and the **shaping-rate** statement (to define the PIR):

```
[edit class-of-service traffic-control-profile profile-name]
[edit class-of-service schedulers scheduler-name]
  excess-rate percent percentage;
  guaranteed-rate (percent percentage | rate);
  shaping-rate (percent percentage | rate);
```

To apply these limits to a logical interface, configure the statements at the **[edit class-of-service traffic-control-profile *profile-name*]** hierarchy level. To apply these limits to a specific queue, configure the statements at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level. You must also complete the configuration by applying the scheduler map or traffic control profile correctly.

You configure the excess rate as a percentage from 1 through 100. By default, excess bandwidth is automatically distributed as on other PIC types.

You can also configure a high or low priority for excess bandwidth by including the **excess-priority** statement with the **high** or **low** option at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level. This statement establishes the priority at the queue level, which then applies also at the logical and physical interface levels.

```
[edit class-of-service schedulers scheduler-name]
  excess-priority (high | low);
```



NOTE: You cannot configure an excess rate for a logical interface if there is no guaranteed rate configured on any logical interface belonging to the physical interface.

The following example configures the excess rate in a traffic control profile:

```
[edit class-of-service traffic-control-profiles]
  for-unit-0-percent {
    shaping-rate 10k;
    guaranteed-rate 1k;
    excess-rate percent 30;
  }
  for-unit-1-proportion {
    shaping-rate 20k;
    guaranteed-rate 10k;
    excess-rate percent 35;
  }
```

The following example configures the excess rate in a scheduler.

```
[edit class-of-service schedulers]
  scheduler-for-excess-low {
    transmit-rate 1m;
    shaping-rate 5m;
    excess-rate percent 30;
    excess-priority low;
  }
  scheduler-for-excess-high {
```



```

transmit-rate percent 20;
shaping-rate percent 30;
excess-rate percent 25;
excess-priority high;
}

```



NOTE: All of these parameters apply to egress traffic only and only for per-unit schedulers. That is, there is no hierarchical or shared scheduler support.

You can issue the following operational mode commands to verify your configuration:

- **show class-of-service scheduler-map**
- **show class-of-service traffic-control-profile**

Calculation of Expected Traffic on IQE PIC Queues

This topic discusses the following topics related to calculating the expected traffic flow on IQE PIC queues:

- [Excess Bandwidth Calculations Terminology on page 335](#)
- [Excess Bandwidth Basics on page 335](#)
- [Logical Interface Modes on IQE PICs on page 337](#)
- [Default Rates for Queues on IQE PICs on page 341](#)
- [Sample Calculations of Excess Bandwidth Sharing on IQE PICs on page 343](#)

Excess Bandwidth Calculations Terminology

The following terms are used in this discussion of IQE PIC queue calculations:

- **CIR mode**—A physical interface is in CIR mode when one or more of its “children” (logical interfaces in this case) have a guaranteed rate configured, but some logical interfaces have a shaping rate configured.
- **Default mode**—A physical interface is in default mode if none of its “children” (logical interfaces in this case) have a guaranteed rate or shaping rate configured.
- **Excess mode**—A physical interface is in excess mode when one or more of its “children” (logical interfaces in this case) have an excess rate configured.
- **PIR mode**—A physical interface is in PIR mode if none of its “children” (logical interfaces in this case) have a guaranteed rate configured, but some logical interfaces have a shaping rate configured.

Excess Bandwidth Basics

This basic example illustrates the interaction of the guaranteed rate, the shaping rate, and the excess rate applied to four queues. The same concepts extend to logical interfaces (units) and cases in which the user does not configure an explicit value for these parameters (in that case, the system uses implicit parameters).

In this section, the term “not applicable” (NA) means that the feature is not explicitly configured. All traffic rates are in megabits per second (Mbps).

The hardware parameters derived from the configured rates are relatively straightforward except for the excess weight. The excess rate is translated into an absolute value called the excess weight. The scheduler for an interface picks a logical unit first, and then a queue within the logical unit for transmission. Logical interfaces and queues that are within their guaranteed rates are picked first, followed by those in the excess region. If the transmission rate for a logical interface or queue is more than the shaping rate, the scheduler skips the logical interface or queue. Scheduling in the guaranteed region uses straight round-robin, whereas scheduling in the excess region uses weighed round-robin (WRR) based on the excess weights. The excess weights are in the range from 1 to 127, but they are transparent to the user and subject to change with implementation. The weights used in this example are for illustration only.

This example uses a logical interface with a transmit rate (CIR) of 10 Mbps and a shaping rate (PIR) of 10 Mbps. The user has also configured percentage values of transmit rate (CIR), shaping rate (PIR), and excess rate as shown in [Table 59 on page 336](#).

Table 59: Basic Example of Excess Bandwidth

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	5%	5%	10%	10 Mbps
Q1	30%	80%	50%	10 Mbps
Q2	10%	15%	30%	10 Mbps
Q3	15%	35%	30%	10 Mbps

The values used by the hardware based on these parameters are shown in [Table 60 on page 336](#).

Table 60: Hardware Use of Basic Example Parameters

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Weight	Expected Traffic Rate
Q0	0.5 Mbps	0.5 Mbps	10	0.5 Mbps
Q1	3 Mbps	8 Mbps	50	5.19 Mbps
Q2	1 Mbps	1.5 Mbps	30	1.5 Mbps
Q3	1.5 Mbps	3.5 Mbps	30	2.81 Mbps
Totals:	6 Mbps	13.5 Mbps	120	10 Mbps (maximum output)

There are a number of important points regarding excess bandwidth calculations:

- The guaranteed rates should add up to less than the logical interface guaranteed rate (10 Mbps).
- Shaping rates (PIRs) can be oversubscribed.
- Excess rates can be oversubscribed. This rate is only a ratio at which the sharing occurs.
- Each queue receives the minimum of the guaranteed bandwidth because each queue is transmitting at its full burst if it can.
- The excess (remaining) bandwidth is shared among the queues in the ratio of their excess rates. In this case, the excess bandwidth is the logical interface bandwidth minus the sum of the queue transmit rates, or $10 \text{ Mbps} - 6 \text{ Mbps} = 4 \text{ Mbps}$.
- However, transmission rates are capped at the shaping rate (PIR) of the queue. For example, Queue 0 gets 0.5 Mbps.
- Queue 0 also gets a guaranteed transmit rate (CIR) of 0.5 Mbps and is eligible for excess bandwidth calculated as 4 Mbps ($10 \text{ Mbps} - 6 \text{ Mbps}$) multiplied by $10/127$. However, because the shaping rate (PIR) for Queue 0 is 0.5 Mbps, the expected traffic rate is capped at 0.5 Mbps.
- Queue 1 gets its guaranteed transmit rate (CIR) of 3 Mbps. Because Queue 0 has already been dealt with, Queue 1 is eligible for sharing the excess bandwidth along with Queue 2 and Queue 3. So Queue 1 is entitled to an excess bandwidth of 4 Mbps multiplied by $50 / (30 + 30 + 50)$, or 1.81 Mbps.
- In the same way, Queue 2 is eligible for its guaranteed transmit rate (CIR) of 1 Mbps and an excess bandwidth of 4 Mbps multiplied by $30 / (30 + 30 + 50)$, or 1.09 Mbps. However, because Queue 2 has a shaping rate (PIR) of 1.5 Mbps, the bandwidth of Queue 2 is capped at 1.5 Mbps. The additional 0.59 Mbps can be shared by Queue 1 and Queue 3.
- Queue 3 is eligible for an excess of 4 Mbps multiplied by $30 / (30 + 30 + 50)$, or 1.09 Mbps. This total of 2.59 Mbps is still below the shaping rate (PIR) for Queue 3 (3.5 Mbps).
- The remaining bandwidth of 0.59 Mbps (which Queue 2 could not use) is shared between Queue 1 and Queue 3 in the ratio 50/30. So Queue 3 can get 0.59 multiplied by $30 / (50 + 30)$, or 0.22 Mbps. This gives a total of 2.81 Mbps.
- Therefore, Queue 1 gets $3 \text{ Mbps} + 1.82 \text{ Mbps} + (0.59 \text{ Mbps} * 50 / (50 + 30))$, or approximately 5.19 Mbps.

Logical Interface Modes on IQE PICs

On IQE PICs, scheduling occurs level-by-level. That is, based on the parameters configured on the logical interface, the scheduler first picks a logical interface to transmit from. Then, based on the configuration of the underlying queues, the IQE PIC selects one of the queues to transmit from. Therefore, it is important to understand how different logical interface parameters are configured or derived (not explicitly configured), and also how the same values are established at the queue level.

In the following examples, assume that the bandwidth available at the physical interface level is 400 Mbps and there are four logical interfaces (units) configured. A per-unit scheduler is configured, so the logical interfaces operate in different modes depending on the parameters configured.

If no class-of-service parameters are configured on any of the logical interfaces, the interface is in default mode. In default mode, the guaranteed rate (CIR) available at the physical interface (400 Mbps) is divided equally among the four logical interfaces. Each of the four gets a guaranteed rate (CIR) of 100 Mbps. Because none of the four logical interfaces have a shaping rate (PIR) configured, each logical interface can transmit up to the maximum of the entire 400 Mbps. Because there is no excess rate configured on any of the logical interfaces, each of the four gets an equal, minimum excess weight of 1. The configured and hardware-derived bandwidths for this default mode example are shown in [Table 61 on page 338](#).

Table 61: Default Mode Example for IQE PICs

Logical Interface	Configured			Hardware		
	Guaranteed rate (CIR)	Shaping Rate (PIR)	Excess Rate	Guaranteed Rate	Shaping Rate	Excess Weight
Unit 0	NA	NA	NA	100 Mbps	400 Mbps	1
Unit 1	NA	NA	NA	100 Mbps	400 Mbps	1
Unit 2	NA	NA	NA	100 Mbps	400 Mbps	1
Unit 3	NA	NA	NA	100 Mbps	400 Mbps	1

If a subset of the logical interfaces (units) have a shaping rate (PIR) configured, but none of them have a guaranteed rate (CIR) or excess rate, then the physical interface is in PIR mode. Furthermore, if the sum of the shaping rates on the logical interfaces is less than or equal to the physical interface bandwidth, the physical interface is in undersubscribed PIR mode. If the sum of the shaping rates on the logical interfaces is more than the physical interface bandwidth, the physical interface is in oversubscribed PIR mode. These modes are the same as on other PICs, where only a shaping rate and guaranteed rate can be configured.

In undersubscribed PIR mode, the logical interfaces with a configured shaping rate receive preferential treatment over those without a configured shaping rate. For logical interfaces with a shaping rate configured, the guaranteed rate is set to the shaping rate. For the logical interfaces without a shaping rate, the remaining logical interface bandwidth is distributed equally among them. Excess weights for the logical interfaces with a shaping rate are set to an implementation-dependent value proportional to the shaping rate. Excess weights for the logical interfaces without a shaping rate are set to the minimum weight (1). However, although the excess weights for the configured logical interfaces are never used because the logical interfaces cannot transmit above their guaranteed rates, the excess weights are still determined for consistency with oversubscribed mode. Also, logical interfaces without a configured shaping rate can transmit up to a maximum

of the physical bandwidth of the other queues that are not transmitting. Therefore, the shaping rate (PIR) is set to the physical interface bandwidth on these interfaces.

The configured and hardware-derived bandwidths for the undersubscribed PIR mode example are shown in [Table 62 on page 339](#). Note that the sum of the shaping rates configured on the logical interfaces (500 Mbps) is more than the physical interface bandwidth (400 Mbps).

Table 62: Undersubscribed PIR Mode Example for IQE PICs

Logical Interface	Configured			Hardware		
	Guaranteed rate (CIR)	Shaping Rate (PIR)	Excess Rate	Guaranteed Rate	Shaping Rate	Excess Weight
Unit 0	NA	100 Mbps	NA	100 Mbps	100 Mbps	127
Unit 1	NA	200 Mbps	NA	200 Mbps	200 Mbps	63
Unit 2	NA	NA	NA	50 Mbps	400 Mbps	1
Unit 3	NA	NA	NA	50 Mbps	400 Mbps	1

In the oversubscribed PIR mode, where the sum of the configured shaping rates on the logical interfaces exceeds the physical interface bandwidth, we cannot set the guaranteed rate to the shaping rate because this might result in the sum of the guaranteed rates exceeding the physical interface bandwidth, which is not possible. In this mode, we want the logical interfaces with shaping rates configured to share the traffic proportionally when these logical interfaces are transmitting at full capacity. This could not happen if the guaranteed rate was set to the shaping rate. Instead, in hardware, we set the guaranteed rates to a “scaled down” shaping rate, so that the sum of the guaranteed rates of the logical interfaces do not exceed the physical interface bandwidth. Because there is no remaining bandwidth once this is done, the other logical interfaces receive a guaranteed rate of 0. Excess weights are set proportionally to the shaping rates and for logical interfaces without a shaping rate, the excess weight is set to a minimum value (1). Finally, the shaping rate is set to the shaping rate configured on the logical interface or to the physical interface bandwidth otherwise.



NOTE: When the sum of shaping rate at a logical interface is greater than the interface's bandwidth and a rate limit is applied to one of the logical interface queues, the bandwidth limit for the queue is based on a scaled down logical interface shaping rate value rather than the configured logical interface shaping rate.

The configured and hardware-derived bandwidths for the oversubscribed PIR mode example are shown in [Table 63 on page 340](#). Note that the sum of the shaping rates configured on the logical interfaces (300 Mbps) is less than the physical interface bandwidth (400 Mbps).

Table 63: Oversubscribed PIR Mode Example for IQE PICs

Logical Interface	Configured			Hardware		
	Guaranteed rate (CIR)	Shaping Rate (PIR)	Excess Rate	Guaranteed Rate	Shaping Rate	Excess Weight
Unit 0	NA	100 Mbps	NA	80 Mbps	100 Mbps	50
Unit 1	NA	150 Mbps	NA	120 Mbps	150 Mbps	76
Unit 2	NA	250 Mbps	NA	200 Mbps	250 Mbps	127
Unit 3	NA	NA	NA	0 Mbps	400 Mbps	1

If none of the logical interfaces have an excess rate configured, but at least one of the logical interfaces has a guaranteed rate (CIR) configured, then the physical interface is in CIR mode. In this case, the guaranteed rates are set in hardware to the configured guaranteed rate on the logical interface. For logical interfaces that do not have a guaranteed rate configured, the guaranteed rate is set to 0. The hardware shaping rate is set to the value configured on the logical interface or to the full physical interface bandwidth otherwise. The excess weight is calculated proportional to the configured guaranteed rates. Logical interfaces without a configured guaranteed rate receive a minimum excess weight of 1.

The configured and hardware-derived bandwidths for the CIR mode example are shown in [Table 64 on page 340](#). In CIR mode, the shaping rates are ignored in the excess weight calculations. So although logical unit 1 has an explicitly configured PIR and logical unit 3 does not, they both receive the minimum excess weight of 1.

Table 64: CIR Mode Example for IQE PICs

Logical Interface	Configured			Hardware		
	Guaranteed rate (CIR)	Shaping Rate (PIR)	Excess Rate	Guaranteed Rate	Shaping Rate	Excess Weight
Unit 0	50 Mbps	100 Mbps	NA	50 Mbps	100 Mbps	127
Unit 1	NA	150 Mbps	NA	0 Mbps	150 Mbps	1
Unit 2	100 Mbps	NA	NA	100 Mbps	400 Mbps	63
Unit 3	NA	NA	NA	0 Mbps	400 Mbps	1

If one of the logical interfaces has an excess rate configured, then the physical interface is in excess rate mode. Strictly speaking, this mode only matters for the calculation of excess weights on the logical interface. The hardware guaranteed and shaping rates are determined as described previously. In excess rate mode, the excess weights are set to a value based on the configured excess rate. Logical interfaces which do not have excess rates configured receive a minimum excess weight of 1.



NOTE: Because the excess rate only makes sense above the guaranteed rate, you cannot configure an excess rate in PIR mode (PIR mode has only shaping rates configured). You must configure at least one guaranteed rate (CIR) on a logical interface to configure an excess rate.

The excess rate is configured as a percentage in the range from 1 through 100. The configured value is used to determine the excess weight in the range from 1 through 127.

The configured and hardware-derived bandwidths for the excess rate mode example are shown in [Table 65 on page 341](#). When an excess rate is configured on one or more logical interfaces, the shaping rate and the guaranteed rate are both ignored in the excess weight calculations. So logical unit 2 gets a minimum excess weight of 1, even though it has a guaranteed rate configured.

Table 65: Excess Rate Mode Example for IQE PICs

Logical Interface	Configured			Hardware		
	Guaranteed rate (CIR)	Shaping Rate (PIR)	Excess Rate	Guaranteed Rate	Shaping Rate	Excess Weight
Unit 0	50 Mbps	100 Mbps	20%	50 Mbps	100 Mbps	50
Unit 1	NA	150 Mbps	50%	0 Mbps	150 Mbps	127
Unit 2	100 Mbps	NA	NA	100 Mbps	400 Mbps	1
Unit 3	NA	NA	50%	0 Mbps	400 Mbps	127

Default Rates for Queues on IQE PICs

The IQE PIC operates at the queue level as well as at the logical unit level. This section discusses how the IQE PIC derives hardware values from the user configuration parameters. First, the default behavior without explicit configuration is investigated, along with the rules used to derive hardware parameters from the scheduler map configuration of the transmit rate, shaping rate, and excess rate. For more information about configuring schedulers and scheduler maps, see [“Schedulers Overview” on page 158](#).

When you do not configure any CoS parameters, a default scheduler map is used to establish four queues: best-effort, expedited-forwarding, assured-forwarding, and network-control. Each queue has the default transmit rate, shaping rate, and excess rate shown in [Table 66 on page 341](#).

Table 66: Default Queue Rates on the IQE PIC

Queue	Transmit Rate	Shaping Rate	Excess Rate
best-effort (Q0)	95%	100%	95%
expedited-forwarding (Q1)	0%	100%	0%

Table 66: Default Queue Rates on the IQE PIC (*continued*)

Queue	Transmit Rate	Shaping Rate	Excess Rate
assured-forwarding (Q2)	0%	100%	0%
network-control (Q3)	5%	100%	5%

When you configure a scheduler map to change the defaults, the IQE PIC hardware derives the values for each of the three major parameters: transmit rate, shaping rate, and excess rate.

The transmit rate is determined as follows:

- If a transmit rate is configured, then:
 - If the transmit rate is configured as an absolute bandwidth value, the configured value is used by the hardware.
 - If the transmit rate is configured as a percentage, then the percentage is used to calculate an absolute value used by the hardware, based on the guaranteed rate (CIR) configured at the logical interface or physical interface level. The CIR itself can be a default, configured, or derived value.
 - If the transmit rate is configured as a remainder, then the remaining value of the logical interface (unit) guaranteed rate (CIR) is divided equally among the queues configured as remainder.
- If a transmit rate is not configured, then the default transmit rate is derived based on remainder (for backward compatibility).
- If an excess rate is configured on any of the queues in a scheduler map, then the transmit rate on the queue is set to 0.

The shaping rate is determined as follows:

- If a shaping rate is configured:
 - If the shaping rate is configured as an absolute bandwidth value, the configured value is used by the hardware.
 - If the shaping rate is configured as a percentage, then the percentage is used to calculate an absolute value used by the hardware, based on the guaranteed rate (CIR) configured at the logical interface or physical interface level. Although it seems odd to base a shaping rate (PIR) on the CIR instead of a PIR, this is done so the shaping rate can be derived on the same basis as the transmit rate.
- If a shaping rate is not configured, then the default shaping rate is set to the shaping rate configured at the logical interface or physical interface level.

The excess rate is determined as follows:

- If an excess rate is configured on a queue, the value is used to derive an excess weight used by the IQE PIC hardware. The excess weight determines the proportional share of the excess bandwidth for which each queue can contend. The excess rate can be:
 - Percentage in the range from 1 through 100. This value is scaled to a hardware excess weight. Excess rates can add up to more than 100% for all queues under a logical or physical interface.
- If an excess rate is not configured on a queue, then the default excess rate is one of the following:
 - If a transmit rate is configured on any of the queues, then the excess weight is proportional to the transmit rates. Queues that do not have a transmit rate configured receive a minimum weight of 1.
 - If a transmit rate is not configured on any of the queues, but some queues have a shaping rate, then the excess weight is proportional to the shaping rates. Queues that do not have a shaping rate configured receive a minimum weight of 1.
 - If no parameters are configured on a queue, then the queue receives a minimum weight of 1.

Sample Calculations of Excess Bandwidth Sharing on IQE PICs

The following four examples show calculations for the PIR mode. In PIR mode, the transmit rate and shaping rate calculations are based on the shaping rate of the logical interface. All calculations assume that one logical interface (unit) is configured with a shaping rate (PIR) of 10 Mbps and a scheduler map with four queues.

The first example has only a shaping rate (PIR) configured on the queues, as shown in [Table 67 on page 343](#).

Table 67: PIR Mode, with No Excess Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	NA	80%	NA	10 Mbps
Q1	NA	50%	NA	1 Mbps
Q2	NA	40%	NA	0 Mbps
Q3	NA	30%	NA	5 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 68 on page 344](#).

Table 68: PIR Mode, with No Excess Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	2.5 Mbps	8.0 Mbps	50	6 Mbps
Q1	2.5 Mbps	5.0 Mbps	31	1 Mbps
Q2	2.5 Mbps	4.0 Mbps	25	0 Mbps
Q3	2.5 Mbps	3.0 Mbps	19	3 Mbps

In this first example, all four queues are initially serviced round-robin. Because there are no transmit rates configured on any of the queues, they receive a default “remainder” transmit rate of 2.5 Mbps per queue. But because there are shaping rates configured, the excess weights are calculated based on the shaping rates. For the traffic sent to each queue, Queue 0 and Queue 3 get their transmit rates of 2.5 Mbps and Queue 1 gets 1 Mbps. The remaining 4 Mbps is excess bandwidth and is divided between Queue 0 and Queue 3 in the ratio of the shaping rates (80/30). So Queue 3 expects an excess bandwidth of $4 \text{ Mbps} * (30\% / (80\% + 30\%)) = 1.09 \text{ Mbps}$. However, because the shaping rate on Queue 3 is 3 Mbps, Queue 3 can transmit only 3 Mbps and Queue 0 receives the remaining excess bandwidth and can transmit at 6 Mbps.

Note that if there were equal transmit rates explicitly configured, such as 2.5 Mbps for each queue, the excess bandwidth would be split based on the transmit rate (equal in this case), as long as the result is below the shaping rate for the queue.

The second example has a shaping rate (PIR) and transmit rate (CIR) configured on the queues, as shown in [Table 69 on page 344](#).

Table 69: PIR Mode with Transmit Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	50%	80%	NA	10 Mbps
Q1	40%	50%	NA	5 Mbps
Q2	10%	20%	NA	5 Mbps
Q3	NA	5%	NA	1 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 70 on page 344](#).

Table 70: PIR Mode with Transmit Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	5.0 Mbps	8.0 Mbps	63	5 Mbps

Table 70: PIR Mode with Transmit Rate Hardware Behavior (*continued*)

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q1	4.0 Mbps	5.0 Mbps	50	4 Mbps
Q2	1.0 Mbps	2.0 Mbps	12	1 Mbps
Q3	0.0 Mbps	0.5 Mbps	1	0.0 Mbps

In this second example, because the transmit rates are less than the shaping rates, each queue receives its transmit rate.

The third example also has a shaping rate (PIR) and transmit rate (CIR) configured on the queues, as shown in [Table 71 on page 345](#).

Table 71: Second PIR Mode with Transmit Rate Configuration Example

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	50%	80%	NA	10 Mbps
Q1	40%	50%	NA	5 Mbps
Q2	5%	20%	NA	0 Mbps
Q3	NA	5%	NA	1 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 72 on page 345](#).

Table 72: Second PIR Mode with Transmit Rate Hardware Behavior Example

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	5.0 Mbps	8.0 Mbps	66	5.27 Mbps
Q1	4.0 Mbps	5.0 Mbps	53	4.23 Mbps
Q2	0.5 Mbps	2.0 Mbps	13	0.0 Mbps
Q3	0.5 Mbps	0.5 Mbps	1	0.5 Mbps

In this third example, all four queues are initially serviced round-robin. However, Queue 2 has no traffic sent to its queue. So Queue 0, Queue 1, and Queue 3 all get their respective transmit rates, a total of 9.5 Mbps. The remaining 0.5 Mbps is used by Queue 3, because the transmit rate is the same as the shaping rate. Once this traffic is sent, Queue 0 and Queue 1 share the excess bandwidth in the ratio of their transmit rates, which total 9 Mbps. In this case, Queue 0 = 5 Mbps + $(0.5 \text{ Mbps} * 5/9)$ = 5.27 Mbps. Queue 1 = 4 Mbps + $(0.5 \text{ Mbps} * 4/9)$ = 4.23 Mbps.

The fourth example has a shaping rate (PIR), transmit rate (CIR), and excess rate configured on the queues, as shown in [Table 73 on page 346](#).

Table 73: PIR Mode with Transmit Rate and Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	30%	80%	50%	10 Mbps
Q1	25%	50%	10%	5 Mbps
Q2	10%	20%	30%	0 Mbps
Q3	5%	5%	NA	1 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 74 on page 346](#).

Table 74: PIR Mode with Transmit Rate and Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	3.0 Mbps	8.0 Mbps	70	6.33 Mbps
Q1	2.5 Mbps	5.0 Mbps	14	3.17 Mbps
Q2	1.0 Mbps	2.0 Mbps	42	0.0 Mbps
Q3	0.5 Mbps	0.5 Mbps	1	0.5 Mbps

In this fourth example, all four queues are initially serviced round-robin. Queue 3 gets 0.5 Mbps of guaranteed bandwidth but cannot transmit more because the shaping rate is the same. Queue 2 has no traffic to worry about at all. Queue 0 and Queue 1 get the respective transmit rates of 3.0 Mbps and 2.5 Mbps. The excess bandwidth of 4 Mbps is divided between Queue 0 and Queue 1 in the ratio on their excess rates. So Queue 1 gets 2.5 Mbps (the guaranteed rate) + 4 Mbps (the excess) + (10% / (50% + 10%)) = 3.17 Mbps. Queue 0 gets the rest, for a total of 6.33 Mbps.

You can configure only an excess rate on the queues, as shown in [Table 75 on page 346](#).

Table 75: Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	NA	NA	50%	10 Mbps
Q1	NA	NA	40%	10 Mbps
Q2	NA	NA	30%	10 Mbps
Q3	NA	NA	20%	10 Mbps

The way that the IQE PIC hardware interprets these excess rate parameters is shown in [Table 76 on page 347](#).

Table 76: Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	0 Mbps	10.0 Mbps	45	3.57 Mbps
Q1	0 Mbps	10.0 Mbps	40	2.86 Mbps
Q2	0 Mbps	10.0 Mbps	30	2.14 Mbps
Q3	0 Mbps	10.0 Mbps	20	1.43 Mbps

In this excess rate example, there are no transmit or shaping rates configured on any of the queues, only excess rates, so bandwidth division happens only on the basis of the excess rates. Note that all the transmit (guaranteed) rates are set to 0. Usually, when there are no excess rates configured, the queue transmit rate is calculated by default. But when there is an excess rate configured on any of the queues, the transmit rate is set to 0. The excess bandwidth (all bandwidths in this case) is shared in the ratio of the excess weights. So Queue 0 receives $10 \text{ Mbps} * (50 / (50 + 40 + 30 + 20)) = 3.57 \text{ Mbps}$.

It is possible to configure rate limits that result in error conditions. For example, consider the configuration shown in [Table 77 on page 347](#).

Table 77: PIR Mode Generating Error Condition

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	NA	80%	NA	10 Mbps
Q1	NA	50%	NA	5 Mbps
Q2	NA	20%	NA	5 Mbps
Q3	NA	5%	NA	1 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 78 on page 347](#).

Table 78: PIR Mode Generating Error Condition Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	2.5 Mbps	8.0 Mbps	818	4.03 Mbps
Q1	2.5 Mbps	5.0 Mbps	511	3.47 Mbps
Q2	2.5 Mbps	2.0 Mbps	255	2 Mbps

Table 78: PIR Mode Generating Error Condition Behavior (*continued*)

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q3	2.5 Mbps	0.5 Mbps	51	0.1 Mbps

In the error example, note that the shaping rates calculated on Queue 2 and Queue 3 are less than the transmit rates on those queues (2.0 Mbps and 0.5 Mbps are each less than 2.5 Mbps). This is an error condition and results in a syslog error message.

The following set of five examples involve the IQE PIC operating in CIR mode. In CIR mode, the transmit rate and shaping rate calculations are based on the transmit rate of the logical interface. All calculations assume that the logical interface has a shaping rate (PIR) of 20 Mbps and a transmit rate (CIR) of 10 Mbps. The scheduler map has four queues.

The first example has only a shaping rate (PIR) with no excess rate configured on the queues, as shown in [Table 79 on page 348](#).

Table 79: CIR Mode with No Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	NA	80%	NA	10 Mbps
Q1	NA	70%	NA	10 Mbps
Q2	NA	40%	NA	10 Mbps
Q3	NA	30%	NA	10 Mbps



NOTE: The transmit rate (CIR) of 10 Mbps is configured on the logical interface (unit) not the queues in the scheduler map. This is why the queue transmit rates are labeled NA.

The way that the IQE PIC hardware interprets these parameters is shown in [Table 80 on page 348](#).

Table 80: CIR Mode with No Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	2.5 Mbps	8.0 Mbps	50	6.76 Mbps
Q1	2.5 Mbps	7.0 Mbps	31	6.23 Mbps
Q2	2.5 Mbps	4.0 Mbps	25	4.0 Mbps
Q3	2.5 Mbps	3.0 Mbps	19	3.0 Mbps

In this first example, all four queues split the 10-Mbps transmit rate equally and each get a transmit rate of 2.5 Mbps. However, the shaping rate on the interface is 20 Mbps. The 10-Mbps excess bandwidth is divided among the queues in the ratio of their shaping rates. But Queue 2 and Queue 3 are shaped at 3.0 and 4.0 Mbps, respectively, so they cannot use more bandwidth and get those rates. This accounts for 2 Mbps (the 7 Mbps shaped bandwidth minus the 5 Mbps guaranteed bandwidth for Queue 2 and Queue 3) of the 10-Mbps excess, leaving 8 Mbps for Queue 0 and Queue 1. So Queue 0 and Queue 1 share the 8-Mbps excess bandwidth in the ratio of their shaping rates, which total 15 Mbps. In this case, Queue 0 = $8.0 \text{ Mbps} * 8/15 = 4.26 \text{ Mbps}$, for a total of $2.5 \text{ Mbps} + 4.26 \text{ Mbps} = 6.76 \text{ Mbps}$. Queue 1 = $8.0 \text{ Mbps} * 7/15 = 3.73 \text{ Mbps}$, for a total of $2.5 \text{ Mbps} + 3.73 \text{ Mbps} = 6.23 \text{ Mbps}$.

The second example has only a few shaping rates (PIR) with no excess rate configured on the queues, as shown in [Table 81 on page 349](#).

Table 81: CIR Mode with Some Shaping Rates and No Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	NA	80%	NA	10 Mbps
Q1	NA	50%	NA	5 Mbps
Q2	NA	NA	NA	10 Mbps
Q3	NA	NA	NA	1 Mbps



NOTE: If a configuration results in the calculated transmit rate of the queue exceeding the shaping rate of the queue, an error message is generated. For example, setting the shaping rate on Queue 2 and Queue 3 in the above example to 20 percent and 5 percent, respectively, generates an error message because the calculated transmit rate for these queues (2.5 Mbps) is more than their calculated shaping rates (2.0 Mbps and 0.5 Mbps).

The way that the IQE PIC hardware interprets these parameters is shown in [Table 82 on page 349](#).

Table 82: CIR Mode with Some Shaping Rates and No Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	2.5 Mbps	8.0 Mbps	78	8.0 Mbps
Q1	2.5 Mbps	5.0 Mbps	48	5.0 Mbps
Q2	2.5 Mbps	20 Mbps	1	6.0 Mbps
Q3	2.5 Mbps	20 Mbps	1	1.0 Mbps

In this second example, all four queues split the 10-Mbps transmit rate equally and each get a transmit rate of 2.5 Mbps. Because of their configured queue shaping rates, Queue 0 and Queue 1 receive preference over Queue 2 and Queue 3 for the excess bandwidth. Queue 0 (8.0 Mbps) and Queue 1 (5.0 Mbps) account for 13 Mbps of the 20 Mbps shaping rate on the logical interface. The remaining 7 Mbps is divided equally between Queue 2 and Queue 3. However, because Queue 3 only has 1 Mbps to send, Queue 2 uses the remaining 6 Mbps.

The third example has shaping rates (PIR) and transmit rates with no excess rate configured on the queues, as shown in [Table 83 on page 350](#).

Table 83: CIR Mode with Shaping Rates and Transmit Rates and No Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	50%	80%	NA	10 Mbps
Q1	40%	50%	NA	5 Mbps
Q2	10%	20%	NA	5 Mbps
Q3	NA	10%	NA	1 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 84 on page 350](#).

Table 84: CIR Mode with Shaping Rates and Transmit Rates and No Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	5.0 Mbps	8.0 Mbps	63	8.0 Mbps
Q1	4.0 Mbps	5.0 Mbps	50	5.0 Mbps
Q2	1.0 Mbps	2.0 Mbps	12	2.0 Mbps
Q3	0.0 Mbps	0.5 Mbps	1	0.5 Mbps

In this third example, the first three queues get their configured transmit rates and are serviced in round-robin fashion. This adds up to 10 Mbps, leaving a 10-Mbps excess from the logical interface shaping rate of 20 Mbps. The excess is shared in the ratio of the transmit rates, or 5:4:1:0. Therefore, Queue 0 receives 5 Mbps + $(5 * 10/10) = 10$ Mbps. This value is greater than the 8 Mbps shaping rate on Queue 0, so Queue 0 is limited to 8 Mbps. Queue 1 receives 4 Mbps + $(4 * 10/10) = 8$ Mbps. This value is greater than the 5 Mbps shaping rate on Queue 1, so Queue 1 is limited to 5 Mbps. Queue 2 receives 1 Mbps + $(1 * 10/10) = 2$ Mbps. This value is equal to the 2 Mbps shaping rate on Queue 2, so Queue 2 receives 2 Mbps. This still leaves 5 Mbps excess bandwidth, which can be used by Queue 3. Note that in this example bandwidth usage never reaches the shaping rate configured on the logical interface (20 Mbps).

The fourth example has shaping rates (PIR) and transmit rates with no excess rate configured on the queues. However, in this case the sum of the shaping rate percentages configured on the queues multiplied by the transmit rate configured on the logical interface is greater than the shaping rate configured on the logical interface. The configuration is shown in [Table 85 on page 351](#).

Table 85: CIR Mode with Shaping Rates Greater Than Logical Interface Shaping Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	50%	80%	NA	10 Mbps
Q1	40%	70%	NA	10 Mbps
Q2	10%	50%	NA	10 Mbps
Q3	NA	50%	NA	10 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 86 on page 351](#).

Table 86: CIR Mode with Shaping Rates Greater Than Logical Interface Shaping Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	5.0 Mbps	8.0 Mbps	63	8.0 Mbps
Q1	4.0 Mbps	7.0 Mbps	50	7.0 Mbps
Q2	1.0 Mbps	5.0 Mbps	12	5.0 Mbps
Q3	0.0 Mbps	5.0 Mbps	1	0.0 Mbps

In this fourth example, the first three queues get their configured transmit rates and are serviced in round-robin fashion. This adds up to 10 Mbps, leaving a 10-Mbps excess from the logical interface shaping rate of 20 Mbps. The excess is shared in the ratio of the transmit rates, or 5:4:1:0. Therefore, Queue 0 receives 5 Mbps + $(5 * 10/10) = 10$ Mbps. This value is greater than the 8 Mbps shaping rate on Queue 0, so Queue 0 is limited to 8 Mbps. Queue 1 receives 4 Mbps + $(4 * 10/10) = 8$ Mbps. This value is greater than the 7 Mbps shaping rate on Queue 1, so Queue 1 is limited to 7 Mbps. Queue 2 receives 1 Mbps + $(1 * 10/10) = 2$ Mbps. This value is less than the 5 Mbps shaping rate on Queue 2, so Queue 2 receives 2 Mbps. This still leaves 3 Mbps excess bandwidth, which can be used by Queue 2 (below its shaping rate) and Queue 3 (also below its shaping rate) in the ratio 1:0 (because of the transmit rate configuration). But 1:0 means Queue 3 cannot use this bandwidth, and Queue 2 utilizes 2 Mbps + $(3 \text{ Mbps} * 1/1) = 5$ Mbps. This is equal to the shaping rate of 5 Mbps, so Queue 2 receives 5 Mbps.

The fifth example has excess rates and transmit rates, but no shaping rates (PIR) configured on the queues. The configuration is shown in [Table 87 on page 352](#).

Table 87: CIR Mode with Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	30%	NA	50%	10 Mbps
Q1	25%	NA	10%	10 Mbps
Q2	NA	NA	30%	10 Mbps
Q3	10%	NA	NA	10 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 88 on page 352](#).

Table 88: CIR Mode with Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	3.0 Mbps	20 Mbps	70	10.5 Mbps
Q1	2.5 Mbps	20 Mbps	14	4.0 Mbps
Q2	0.0 Mbps	20 Mbps	42	4.5 Mbps
Q3	1.0 Mbps	20 Mbps	1	1.0 Mbps

In this fifth example, Queue 2 does not have a transmit rate configured. If there were no excess rates configured, then Queue 2 would get a transmit rate equal to the remainder of the bandwidth (3.5 Mbps in this case). However, because there is an excess rate configured on some of the queues on this logical interface, the transmit rate for Queue 2 is set to 0 Mbps. The others queues get their transmit rates and there leaves 13.5 Mbps of excess bandwidth. This bandwidth is divided among Queue 0, Queue 1, and Queue 3 in the ratio of their excess rates. So Queue 0, for example, gets $3.0 \text{ Mbps} + 13.5 \text{ Mbps} * (50 / (50 + 10 + 30)) = 10.5 \text{ Mbps}$.

Four other examples calculating expected traffic distribution are of interest. The first case has three variations, so there are six more examples in all.

- Oversubscribed PIR mode at the logical interface with transmit rates, shaping rates, and excess rates configured at the queues (this example has three variations).
- CIR mode at the logical interface (a non-intuitive case is used).
- Excess priority configured.
- Default excess priority used.

The first three examples all concern oversubscribed PIR mode at the logical interface with transmit rates, shaping rates, and excess rates configured at the queues. They all use a configuration with a physical interface having a shaping rate of 40 Mbps. The physical interface has two logical units configured, logical unit 1 and logical unit 2, with

a shaping rate of 30 Mbps and 20 Mbps, respectively. Because the sum of the logical interface shaping rates is more than the shaping rate on the physical interface, the physical interface is in oversubscribed PIR mode. The CIRs (transmit rates) are set to the scaled values of 24 Mbps and 16 Mbps, respectively.

Assume that logical unit 1 has 40 Mbps of traffic to be sent. The traffic is capped at 30 Mbps because of the shaping rate of 30 Mbps. Because the CIR is scaled down to 24 Mbps, the remaining 6 Mbps (30 Mbps – 24 Mbps) qualifies as excess bandwidth.

The following three examples consider different parameters configured in a scheduler map and the expected traffic distributions that result.

The first example uses oversubscribed PIR mode with only transmit rates configured on the queues. The configuration is shown in [Table 89 on page 353](#).

Table 89: Oversubscribed PIR Mode with Transmit Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	40%	NA	NA	15 Mbps
Q1	30%	NA	NA	10 Mbps
Q2	25%	NA	NA	10 Mbps
Q3	5%	NA	NA	5 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 90 on page 353](#).

Table 90: Oversubscribed PIR Mode with Transmit Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	9.6 Mbps	30 Mbps	50	12 Mbps
Q1	7.2 Mbps	30 Mbps	38	9 Mbps
Q2	6.0 Mbps	30 Mbps	31	7.5 Mbps
Q3	1.2 Mbps	30 Mbps	6	1.5 Mbps

The first example has hardware queue transmit rates based on the parent (logical interface unit 1) transmit rate (CIR) value of 24 Mbps. Because there are no excess rates configured, the excess weights are determined by the transmit rates. Therefore, both the logical interface CIR and excess bandwidth are divided in the ratio of the transmit rates. This is essentially the same as the undersubscribed PIR mode and the traffic distribution should be the same. The only difference is that the result is achieved as a combination of guaranteed rate (CIR) and excess rate sharing.

The second example also uses oversubscribed PIR mode, but this time with only excess rate configured on the queues. In other words, the same ratios are established with excess rate percentages instead of transmit rate percentages. In this case, when excess rates are configured, queues without a specific transmit rate are set to 0 Mbps. So the entire bandwidth qualifies as excess at the queue level and the bandwidth distribution is based on the configured excess rates. The expected output rate results are exactly the same as in the first example, except the calculation is based on different parameters.

The third example also uses oversubscribed PIR mode, but with both transmit rates and excess rates configured on the queues. The configuration is shown in [Table 91 on page 354](#).

Table 91: Oversubscribed PIR Mode with Transmit Rate and Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	40%	NA	50%	15 Mbps
Q1	30%	NA	50%	12 Mbps
Q2	25%	NA	NA	8 Mbps
Q3	5%	NA	NA	5 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 92 on page 354](#).

Table 92: Oversubscribed PIR Mode with Transmit Rate and Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	9.6 Mbps	30 Mbps	63	12.6 Mbps
Q1	7.2 Mbps	30 Mbps	63	10.2 Mbps
Q2	6.0 Mbps	30 Mbps	1	6.0 Mbps
Q3	1.2 Mbps	30 Mbps	1	1.2 Mbps

The third example has the configured queue transmit rate (CIR) divided according to the ratio of the transmit rates based on the logical interface unit 1 CIR of 25 Mbps. The rest of the excess bandwidth divided according the ratio of the excess rates. The excess 6-Mbps bandwidth is divided equally between Queue 0 and Queue 1 because the excess rates are both configured at 50%. This type of configuration is not recommended, however, because the CIR on the logical interface is a system-derived value based on the PIRs of the other logical units and the traffic distribution at the queue level is based on this value and, therefore, not under direct user control. We recommend that you either configure excess rates without transmit rates at the queue level when in PIR mode, or also define a CIR at the logical interface if you want to configure a combination of transmit rates and excess rates at the queue level. That is, you should use configurations of the CIR mode with excess rates types.

The fourth example uses CIR mode at the logical interface. For this example, assume that a physical interface is configured with a 40-Mbps shaping rate and logical interfaces unit 1 and unit 2. Logical interface unit 1 has a PIR of 30 Mbps and logical interface unit 2 has a PIR of 20 Mbps and a CIR of 10 Mbps. The configuration at the queue level of logical interface unit 1 is shown in [Table 93 on page 355](#).

Table 93: CIR Mode with Transmit Rate and Excess Rate Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	40%	NA	50%	15 Mbps
Q1	30%	NA	50%	12 Mbps
Q2	25%	NA	NA	8 Mbps
Q3	5%	NA	NA	5 Mbps

The way that the IQE PIC hardware interprets these parameters is shown in [Table 94 on page 355](#).

Table 94: CIR Mode with Transmit Rate and Excess Rate Hardware Behavior

Queue	Transmit Rate	Shaping Rate	Excess Weight	Expected Output Rate
Q0	0 Mbps	30 Mbps	63	15 Mbps
Q1	0 Mbps	30 Mbps	63	12 Mbps
Q2	0 Mbps	30 Mbps	1	1.5 Mbps
Q3	0 Mbps	30 Mbps	1	1.5 Mbps

The fourth example might be expected to divide the 40 Mbps of traffic between the two logical units in the ratio of the configured transmit rates. But note that because the logical interfaces are in CIR mode, and logical interface unit 1 does not have a CIR configured, the hardware CIR is set to 0 Mbps at the queue level. Bandwidth distribution happens based only on the excess weights. So Queue 0 and Queue 1 get to transmit up to 15 Mbps and 12 Mbps, respectively, while the remaining 3 Mbps is divided equally by Queue 2 and Queue 3.



NOTE: We recommend configuring a CIR value explicitly for the logical interface if you are configuring transmit rates and excess rates for the queues.

The fifth example associates an excess priority with the queues. Priorities are associated with every queue and propagated to the parent node (logical or physical interface). That is, when the scheduler picks a logical interface, the scheduler considers the logical interface priority as the priority of the highest priority queue under that logical interface. On the IQE PIC, you can configure an excess priority for every queue. The excess priority

can differ from the priority used for guaranteed traffic and applies only to traffic in the excess region. The IQE PIC has three “regular” priorities and two excess priorities (high and low, which is the default). The excess priorities are lower than the regular priorities. For more information about configuring excess bandwidth sharing and priorities, see “[IQE PIC Excess Bandwidth Sharing Configuration](#)” on page 333.

Consider a logical interface configured with a shaping rate of 10 Mbps and a guaranteed rate of 10 Mbps. At the queue level, parameters are configured as shown in [Table 95](#) on page 356.

Table 95: Excess Priority Configuration

Queue	Transmit Rate (CIR)	Shaping Rate (PIR)	Excess Rate	Traffic Sent To Queue
Q0	40%	NA	50%	10 Mbps
Q1	30%	NA	50%	10 Mbps
Q2	25%	NA	NA	0 Mbps
Q3	5%	NA	NA	1 Mbps

In this fifth example, Queue 0 is configured with an excess priority of **high** and all other queues have the default excess priority (**low**). Because there is no traffic on Queue 2, there is an excess bandwidth of 2.5 Mbps. Because Queue 0 has a higher excess priority, Queue 0 gets the entire excess bandwidth. So the expected output rates on the queues are 4 Mbps + 2.5 Mbps = 6.5 Mbps for Queue 0, 3 Mbps for Queue 1, 0 Mbps for Queue 2, and 0.5 Mbps for Queue 3. Note that this behavior is different than regular priorities. With regular priorities, the transmission is still governed by transmit rates and the priority controls only the order in which the packets are picked up by the scheduler. So without excess configuration, if Queue 0 had a regular priority of **high** and there was 10 Mbps of traffic on all four queues, the traffic distribution would be 4 Mbps for Queue 0, 3 Mbps for Queue 1, 2.5 Mbps for Queue 2, and 0.5 Mbps for Queue 3 instead of giving all 10 Mbps to Queue 0. Excess priority traffic distributions are governed first by the excess priority and then by the excess rates. Also note that in this example, although the queues are in the excess region because they are transmitting above their configured transmit rates, the logical interface is still within its guaranteed rate. So at the logical interface level, the priority of the queues get promoted to a regular priority and this priority is used by the scheduler at the logical interface level.

The sixth and final example considers the effects of the default excess priority. When the excess priority for a queue is not configured explicitly, the excess priority is based on the regular priority. A regular priority of **high** maps to an excess priority of **high**. All other regular priorities map to an excess priority of **low**. When there is no regular priority configured, the regular and excess priorities are both set to **low**.

Configuring Layer 2 Policing on IQE PICs

The IQE PIC can police traffic at Layer 2 in a hierarchical manner. *Policing* is the practice of making sure that different streams of incoming traffic conform to certain parameters

and limits. If the incoming traffic exceeds the established boundaries, that traffic can be marked or even ignored, depending on configuration. Hierarchical policing maintains two rates: an aggregate rate and a high-priority rate. The traffic is marked differently depending on service class (currently, the classes are expedited forwarding and nonexpedited forwarding). The expedited traffic has an additional rate configured, the guaranteed rate (CIR), which is only marked above that limit. If there is no expedited traffic present, then the non-expedited traffic is able to use the aggregate bandwidth rate before being marked with a packet loss priority. When expedited traffic is present, it is marked above the guaranteed rate, but also uses bandwidth from the nonexpedited range.

For example, consider an aggregate rate of 10 Mbps and a high-priority rate of 2 Mbps of a Fast Ethernet interface. The guaranteed rate is also set at 2 Mbps for expedited forwarding traffic. If there is no expedited traffic present, then nonexpedited traffic can use up to 10 Mbps before being marked. When expedited forwarding traffic is present, the expedited traffic is guaranteed 2 Mbps (of the 10 Mbps) without being marked, but is marked above the 2 Mbps limit. In this case, the nonexpedited forwarding traffic can use the remaining 8 Mbps before being marked.

This section discusses the following IQE PIC Layer 2 policing topics:

- [Layer 2 Policer Limitations on page 357](#)
- [Configuring Layer 2 Policers on IQE PICs on page 358](#)

Layer 2 Policer Limitations

Layer 2 policers configured on IQE PICs have the following limitations:

- Only one kind of policer is supported on a physical or logical interface. For example, a hierarchical or two- or three-color policer in the same direction on the same logical interface is not supported.
- Applying policers to both physical port and logical interface (policer chaining) is not supported.
- If there is no behavior aggregate classification, there is a limit of 64 policers per interface. (Usually, there will be a single policer per DLCI in frame relay and other logical interface types.)
- The policer should be independent of behavior aggregate classification. (Without a behavior aggregate, all traffic is treated as either expedited or non-expedited forwarding, depending on configuration.)
- With a behavior aggregate, traffic not matching any classification bits (such as DSCP or EXP) is policed as nonexpedited forwarding traffic.
- Only two levels of traffic policing are supported: **aggregate** and **premium**.

Configuring Layer 2 Policers on IQE PICs

To configure Layer 2 policing on the IQE PIC, for each forwarding class include the **class** statement with the **policing-priority** option at the **[edit class-of-service forwarding-classes]** hierarchy level. One forwarding class has the **premium** option and the others are configured as **normal**.

```
[edit class-of-service forwarding-classes]
{
  class fc1 queue-num 0 priority high policing-priority premium;
  class fc2 queue-num 1 priority low policing-priority normal;
  class fc3 queue-num 2 priority low policing-priority normal;
  class fc4 queue-num 3 priority low policing-priority normal;
}
```

You must also configure the **aggregate** and **premium** statements in the firewall filter performing the policing.

```
[edit firewall]
hierarchical-policer hier_example1 {
  aggregate {
    if-exceeding {
      bandwidth-limit 70m;
      burst-size-limit 1800;
    }
    then {
      discard;
    }
  }
  premium {
    if-exceeding {
      bandwidth-limit 70m;
      burst-size-limit 3600;
    }
    then {
      discard;
    }
  }
}
```

You must also apply the policer to the logical or physical interface on the IQE PIC:

```
[edit interfaces]
so-6/0/0 {
  unit 0 {
    layer2-policer {
      input-hierarchical-policer hier_example1; # Apply policer to logical unit.
    }
    family inet {
      address 10.0.22.1/30;
    }
    family iso;
    family mpls;
  }
}
```



```

so-5/0/0 {
  layer2-policer {
    input-hierarchical-policer hier_example1; # Apply policer to physical interface.
  }
  unit 0 {
    family inet {
      address 10.0.22.1/30;
    }
    family iso;
    family mpls;
  }
}

```

For SONET/SDH physical interfaces, the hierarchical policer configuration statements will only be visible for IQE PICs.

Configuring Low-Latency Static Policers on IQE PICs

You can rate-limit the strict-high and high queues on the IQE PIC. Without this limiting, traffic that requires low latency (delay) such as voice can block the transmission of medium-priority and low-priority packets. Unless limited, high and strict-high traffic is always sent before lower priority traffic, causing the lower priority queues to “starve” and cause timeouts and unnecessarily resent packets.

On the IQE PIC you can rate-limit queues before the packets are queued for output. All packets exceeding the configured rate limit are dropped, so care is required when establishing this limit. This model is also supported on IQ2 PICs and is the only way to perform egress policing on IQE PICs. This feature introduces no new configuration statements.

Although intended for low-latency traffic classes such as voice, the configuration allows any queue to be rate-limited. However, the configuration requires the rate-limited queue to have either a high or strict-high priority.



NOTE: You can configure a low-latency static policer for only one rate-limited queue per scheduler map. You can configure up to 1024 low-latency static policers.

This example limits the transmit rate of a strict-high expedited-forwarding queue to 1 Mbps. The scheduler and scheduler map are defined, and then applied to the traffic at the [edit interfaces] and [edit class-of-service] hierarchy levels:

```

[edit class-of-service]
schedulers {
  scheduler-1 {
    transmit-rate 1m rate-limit;
    priority strict-high;
  }
}
scheduler-maps {
  scheduler-map-1 {
    forwarding-class expedited-forwarding scheduler scheduler-1;
  }
}

```

```
    }  
  }  
  
[edit interfaces]  
so-2/0/0 {  
  per-unit-scheduler;  
  encapsulation frame-relay;  
  unit 0 {  
    dlci 1;  
  }  
}  
  
[edit class-of-service]  
interfaces {  
  so-2/0/0 {  
    unit 0 {  
      scheduler-map scheduler-map-1;  
      shaping-rate 2m;  
    }  
  }  
}
```

You can issue the following operational mode commands to verify your configuration (the first shows the rate limit in effect):

- **show class-of-service scheduler-map *scheduler-map-name***
- **show class-of-service interface *interface-name***

Assigning Default Frame Relay Rewrite Rule to IQE PICs

On the Enhanced IQ (IQE) PICs with the Frame Relay encapsulation, you can rewrite the discard eligibility (DE) bit based on the loss priority of the Frame Relay traffic. A rewrite rule sets the DE bit to the class-of-service (CoS) value **0** or **1**, based on the assigned loss priority of low, medium-low, medium-high, or high for each outgoing frame.

The default Frame Relay rewrite rule contains the following settings:

```
loss-priority low code-point 0;  
loss-priority medium-low code-point 0;  
loss-priority medium-high code-point 1;  
loss-priority high code-point 1;
```

The default rule sets the DE CoS value to **0** for each outgoing frame with the loss priority set to low or medium-low. The default rule sets the DE CoS value to **1** for each outgoing frame with the loss priority set to medium-high or high.

To assign the default Frame Relay rewrite rule to an interface:

1. Include the **frame-relay-de default** statement at the **[edit class-of-service interfaces interface *interface-name* unit *logical-unit-number* loss-priority-rewrites]** hierarchy level.

For example:

```
[edit class-of-service interfaces so-1/0/0 unit 0 loss-priority-rewrites]
```

```
user@host# set frame-relay-de default;
```

2. Verify the configuration in operational mode.

```
user@host> show class-of-service loss-priority-rewrite
Loss-priority-rewrite: frame-relay-de-default, Code point type: frame-relay-de,
Index: 38
  Loss priority      Code point
  low                0
  high               1
  medium-low         0
  medium-high        1
```

Defining Custom Frame Relay Rewrite Rule on IQE PICs

For Juniper Networks device interfaces with the Frame Relay encapsulation, you can rewrite the discard eligibility (DE) bit based on the loss priority of the Frame Relay traffic. A rewrite rule sets the DE bit to the class-of-service (CoS) value 0 or 1 based on the assigned loss priority of low, medium-low, medium-high, or high for each outgoing frame.

To define a Frame Relay DE bit rewrite rule:

1. Specify the rewrite rule for Frame Relay DE bit based on the loss priority at the **[edit class-of-service loss-priority-rewrites]** hierarchy level.

```
[edit class-of-service loss-priority-rewrites]
user@host# set frame-relay-de name loss-priority level code-point [alias | bits];
```

For example:

```
[edit class-of-service loss-priority-rewrites]
user@host# set frame-relay-de fr_rw loss-priority low code-point 0;
user@host# set frame-relay-de fr_rw loss-priority high code-point 0;
user@host# set frame-relay-de fr_rw loss-priority medium-low code-point 1;
user@host# set frame-relay-de fr_rw loss-priority medium-high code-point 1;
```



NOTE: The rewrite rule does not take effect until you apply it to a logical interface.

2. Apply a rule to a logical interface.

```
[edit class-of-service interfaces interface-name unit logical-unit-number
  loss-priority-rewrites]
user@host# set frame-relay-de name;
```

For example:

```
[edit class-of-service interfaces so-1/0/0 unit 0 loss-priority-rewrites]
user@host# set frame-relay-de fr_rw;
```

3. Verify the configuration in operational mode.

```
user@host> show class-of-service loss-priority-rewrite
Loss-priority-rewrite: frame-relay-de-fr_rw, Code point type: frame-relay-de,
Index: 38
  Loss priority      Code point
  low                0
```

high	0
medium-low	1
medium-high	1

CHAPTER 19

Configuring CoS on Ethernet IQ2 and Enhanced IQ2 PICs

This topic discusses the following:

- [CoS on Enhanced IQ2 PICs Overview on page 363](#)
- [Setting the Number of Egress Queues on IQ2 and Enhanced IQ2 PICs on page 365](#)
- [Configuring Rate Limits on IQ2 and Enhanced IQ2 PICs on page 365](#)
- [Configuring Shaping on 10-Gigabit Ethernet IQ2 PICs on page 367](#)
- [Shaping Granularity Values for Enhanced Queuing Hardware on page 369](#)
- [Understanding Burst Size Configuration on IQ2 and IQ2E Interfaces on page 371](#)
- [Configuring Burst Size for Shapers on IQ2 and IQ2E Interfaces on page 372](#)
- [Differences Between Gigabit Ethernet IQ and Gigabit Ethernet IQ2 PICs on page 373](#)
- [Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374](#)
- [Configuring a Separate Input Scheduler for Each Interface on page 376](#)
- [Configuring Per-Unit Scheduling for GRE Tunnels Using IQ2 and IQ2E PICs on page 377](#)
- [Configuring Hierarchical Input Shapers on page 379](#)
- [Configuring a Policer Overhead on page 379](#)
- [Example: Configuring a CIR and a PIR on Ethernet IQ2 Interfaces on page 380](#)
- [Example: Configuring Shared Resources on Ethernet IQ2 Interfaces on page 382](#)

CoS on Enhanced IQ2 PICs Overview

Some PICs, such as the Gigabit Ethernet Intelligent Queuing 2 (IQ2) and Ethernet Enhanced IQ2 (IQ2E) PICs, have eight egress queues enabled by default on platforms that support eight queues.

The IQ2E PICs preserve all of the features of the IQ2 PICs, such as the default support for eight egress queues on platforms that support eight queues.

The IQ2E PICs add features such as the ability to perform hierarchical scheduling. You can mix IQ2 and IQ2E PICs on the same router.

The IQ2E PICs offer:

- Three levels of hierarchical CoS
- More granularity than a high priority queue
- 16,000 queues
- 2,000 schedulers with 8 queues
- 4,000 schedulers with 4 queues

The IQ2E PICs also offer automatic scheduler allocation across ports, so there is no need to reset the PIC when this changes. Random early detection (RED) keeps statistics on a per-drop-profile basis, improving the ability to perform network capacity planning.

When you include the **per-unit-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level, each logical interface (unit) gets a dedicated scheduler (one scheduler is reserved for overflow). You can include the **per-session-scheduler** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level to shape Layer 2 Tunneling Protocol (L2TP) sessions. The behavior of these two-port scheduler modes is the same as in IQ2 PICs. However, IQ2E PICs use hierarchical schedulers and not shared schedulers; IQ2E PICs do not support the **shared-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level.

For more information about configuring hierarchical schedulers, including examples, see [“Configuring Hierarchical Schedulers for CoS” on page 225](#).

You can shape traffic at the physical interface (port), logical interface (unit), or interface set (set of units) levels. Shaping is not supported at the queue level. However, you can include the **transmit-rate** statement with the **rate-limit** option at the **[edit class-of-service schedulers *scheduler-name*]** hierarchy level to police the traffic passing through a queue (but only in the egress direction). See [“Configuring Rate Limits on IQ2 and Enhanced IQ2 PICs” on page 365](#).

At the physical interface (port) level, you can configure only a shaping rate (PIR). At the logical interface (unit) and interface set levels, you can configure both a shaping rate and a guaranteed rate (CIR). Note that the guaranteed rates at any level must be consistent with the parent level's capacity. In other words, the sum of the guaranteed rates on the logical interface (units) should be less than the guaranteed rate on the interface set, and the sum of the guaranteed rates on the logical interface (units) and interface sets should be less than the guaranteed rate on the physical interface (port).

You can control the rate of traffic that passes through the interface by configuring a policer overhead. When you configure a policer overhead, the configured policer overhead value is added to the length of the final Ethernet frame. This calculated length of the frame is used to determine the policer or the rate limit action. It does this because the policer overhead needs to be applied to policers just like shaping overhead is accounted for by shapers. The policer overhead is to be configured on the interface so that it is accounted for in the total packet length when policing traffic. See [“Configuring a Policer Overhead” on page 379](#)

The weighed RED (WRED) decision on the IQ2E PICs is done at the queue level. Once the accept or drop decision is made and the packet is queued, it is never dropped. Four drop profiles are associated with each queue: low, low-medium, medium-high, and high. WRED statistics are available for each loss priority (this feature is not supported on the IQ2 PICs). Also in contrast to the IQ2 PICs, the IQ2E PICs support WRED scaling profiles, allowing a single drop profile to be reused with a wide range of values. This practice increases the effective number of WRED drop profiles.

The IQ2E PICs provide four levels of strict priorities: strict-high, high, medium-high (medium-low) and low. In contrast to the IQ2 PICs, which support only one strict-high queue, the IQ2E PICs do not restrict the number of queues with a given priority. There is priority propagation among three levels: the logical interface, the logical interface set, and the physical port. These features are the same as those supported by Enhanced Queuing Dense Port Concentrators (DPCs) for Juniper Network MX Series Ethernet Services Routers. For more information about configuring these features, see [“Enhanced Queuing DPC Hardware Properties” on page 431](#).

The IQ2E PIC's queues are serviced with modified deficit round-robin (MDRR), as with the Enhanced Queuing DPCs. Excess bandwidth (bandwidth available after all guaranteed rates have been satisfied) can be shared equally or in proportion to the guaranteed rates. For more information about excess bandwidth sharing, see [“Configuring Excess Bandwidth Sharing” on page 440](#).

Related Documentation

- [egress-policer-overhead on page 588](#)
- [ingress-policer-overhead on page 634](#)

Setting the Number of Egress Queues on IQ2 and Enhanced IQ2 PICs

Gigabit Ethernet IQ2 4-port and 8-port Type 2 PICs are oversubscribed, which means the amount of traffic coming to the PIC can be more than the maximum bandwidth from the PIC to the Flexible PIC Concentrator (FPC).

By default, PICs on M320, MX Series, and T Series routers support a maximum of four egress queues per interface. Some PICs, such as the IQ2 and IQ2E PICs, have eight egress queues enabled by default on platforms that support eight queues. You configure the number of egress queues as four or eight by including the **max-queues-per-interface** statement at the **[edit chassis fpc slot-number pic pic-slot-number]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-slot-number]
max-queues-per-interface (4 | 8);
```

The numerical value can be 4 or 8.

For more information about configuring egress queues, see [“Enabling Eight Queues on Interfaces” on page 136](#).

Configuring Rate Limits on IQ2 and Enhanced IQ2 PICs

You can rate-limit strict-high and high queues on IQ2 and IQ2E PICs. Without this limiting, traffic in higher priority queues can block the transmission of lower priority packets. Unless

limited, higher priority traffic is always sent before lower priority traffic, causing the lower priority queues to “starve,” which in turn leads to timeouts and unnecessary resending of packets.

On the IQ2 and IQ2E PICs you can rate-limit queues before the packets are queued for output. All packets exceeding the configured rate limit are dropped, so care is required when establishing this limit. For more information about configuring CoS on IQ2E PICs, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).



NOTE: IQ2E PICs exclude the transmit rate of strict-high and high priority queues, thereby allowing low and medium priority queues to be configured up to 100 percent.

To rate-limit queues, include the **transmit-rate** statement with the **rate-limit** option at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
  transmit-rate rate rate-limit;
```

This example limits the transmit rate of a strict-high expedited-forwarding queue to 1 megabit per second (Mbps). The scheduler and scheduler map are defined and then applied to the traffic at the **[edit interfaces]** and **[edit class-of-service]** hierarchy levels:

```
[edit class-of-service]
  schedulers {
    scheduler-1 {
      transmit-rate 1m rate-limit; # This establishes the limit
      priority strict-high;
    }
  }
  scheduler-maps {
    scheduler-map-1 {
      forwarding-class expedited-forwarding scheduler scheduler-1;
    }
  }
```

```
[edit interfaces]
  so-2/1/0 {
    per-unit-scheduler;
    encapsulation frame-relay;
    unit 0 {
      dlci 1;
    }
  }
```

```
[edit class-of-service]
  interfaces {
    so-2/1/0 {
      unit 0 {
        scheduler-map scheduler-map-1;
        shaping-rate 2m;
      }
    }
  }
```



```
}
```

You can issue the following operational mode commands to verify your configuration (the first shows the rate limit in effect):

- **show class-of-service scheduler-map *scheduler-map-name***
- **show class-of-service interface *interface-name***

Configuring Shaping on 10-Gigabit Ethernet IQ2 PICs

The 10-Gigabit Ethernet IQ2 PIC (which has **xe-** interfaces) is unlike other Gigabit Ethernet IQ2 PICs in that it does not have oversubscription. The bandwidth from the PIC to the FPC is sufficient to transmit the full line rate. However, the 10-Gigabit Ethernet IQ2 PIC has the same hardware architecture as other Gigabit Ethernet IQ2 PICs and supports all the same class-of-service (CoS) features. For more information, see the PIC guide for your routing platform.

To handle oversubscribed traffic, you can configure input shaping and scheduling based on Layer 2, MPLS, and Layer 3 packet fields. Gigabit Ethernet IQ2 PICs also support simple filters, accounting, and policing. This chapter discusses input and output shaping and scheduling. For information about accounting and policing, see the Junos® OS Network Interfaces.



NOTE: The CoS functionality supported on Gigabit Ethernet IQ2 PICs is not available across aggregated Ethernet links. However, if you configure a CoS scheduler map on the link bundle, the configuration is honored by the individual links within that bundle.

Therefore, CoS behaves as configured on a per-link level, but not across the aggregated links. For example, if you configure a shaping transmit rate of 100 Mbps on an aggregated Ethernet bundle with three ports (by applying a scheduler for which the configuration includes the **transmit-rate** statement with the **exact** option at the [edit class-of-service schedulers *scheduler-name*] hierarchy level), each port is provisioned with a 33.33 Mbps shaping transmit rate.

You can configure shaping for aggregated Ethernet interfaces that use interfaces originating from Gigabit Ethernet IQ2 PICs. However, you cannot enable shaping on aggregated Ethernet interfaces when the aggregate bundle combines ports from IQ and IQ2 PICs.

By default, transmission scheduling is not enabled on logical interfaces. Logical interfaces without shaping configured share a default scheduler. This scheduler has a committed information rate (CIR) that equals 0. (The CIR is the guaranteed rate.) The default scheduler has a peak information rate (PIR) that equals the physical interface shaping rate. The default operation can be changed by configuring the software.



NOTE: For Gigabit Ethernet IQ2 interfaces, the logical interface egress statistics displayed in the `show interfaces` command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the Output bytes and Output packets logical interface counters. However, correct values display for both of these Transit statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.

To configure input and output shaping and scheduling, include the following statements at the `[edit class-of-service]` and `[edit interfaces]` hierarchy levels of the configuration:

```
[edit class-of-service]
traffic-control-profiles profile-name {
  delay-buffer-rate (percent percentage | rate);
  excess-rate percent percentage;
  guaranteed-rate (percent percentage | rate);
  scheduler-map map-name;
  shaping-rate (percent percentage | rate);
}
interfaces {
  interface-name {
    input-scheduler-map map-name;
    input-shaping-rate rate;
    scheduler-map map-name; # Output scheduler map
    shaping-rate rate; # Output shaping rate
  }
  unit logical-unit-number {
    input-scheduler-map map-name;
    input-shaping-rate (percent percentage | rate);
    scheduler-map map-name;
    shaping-rate (percent percentage | rate);
    input-traffic-control-profile profile-name shared-instance instance-name;
    output-traffic-control-profile profile-name shared-instance instance-name;
  }
}

[edit interfaces interface-name]
per-unit-scheduler;
shared-scheduler;
```



NOTE: As indicated by the preceding configuration, the `scheduler-map` and `shaping-rate` statements can be included at the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level. However, we do not recommend this configuration. Include the `output-traffic-control-profile` statement instead.

Related Documentation

- Simple Filter Overview

- How Simple Filters Evaluate Packets
- Guidelines for Configuring Simple Filters
- Guidelines for Applying Simple Filters

Shaping Granularity Values for Enhanced Queuing Hardware

Due to the limits placed on shaping thresholds used in the hierarchy, there is a granularity associated with the Enhanced IQ2 (IQ2E) PIC and the Enhanced Queuing (EQ) DPC. For these hardware models, the shaper accuracies differ at various levels of the hierarchy, with shapers at the logical interface level (Level 3) being more accurate than shapers at the interface set level (Level 2) or the port level (Level 1). [Table 96 on page 369](#) shows the accuracy of the logical interface shaper at various rates for Ethernet ports operating at 1 Gbps.

Table 96: Shaper Accuracy of 1-Gbps Ethernet at the Logical Interface Level

Range of Logical Interface Shaper	Step Granularity
Up to 4.096 Mbps	16 Kbps
4.096 to 8.192 Mbps	32 Kbps
8.192 to 16.384 Mbps	64 Kbps
16.384 to 32.768 Mbps	128 Kbps
32.768 to 65.535 Mbps	256 Kbps
65.535 to 131.072 Mbps	512 Kbps
131.072 to 262.144 Mbps	1024 Kbps
262.144 to 1 Gbps	4096 Kbps

[Table 97 on page 369](#) shows the accuracy of the logical interface shaper at various rates for Ethernet ports operating at 10 Gbps.

Table 97: Shaper Accuracy of 10-Gbps Ethernet at the Logical Interface Level

Range of Logical Interface Shaper	Step Granularity
Up to 10.24 Mbps	40 Kbps
10.24 to 20.48 Mbps	80 Kbps
10.48 to 40.96 Mbps	160 Kbps

Table 97: Shaper Accuracy of 10-Gbps Ethernet at the Logical Interface Level (*continued*)

Range of Logical Interface Shaper	Step Granularity
40.96 to 81.92 Mbps	320 Kbps
81.92 to 163.84 Mbps	640 Kbps
163.84 to 327.68 Mbps	1280 Kbps
327.68 to 655.36 Mbps	2560 Kbps
655.36 to 2611.2 Mbps	10240 Kbps
2611.2 to 5222.4 Mbps	20480 Kbps
5222.4 to 10 Gbps	40960 Kbps

[Table 98 on page 370](#) shows the accuracy of the interface set shaper at various rates for Ethernet ports operating at 1 Gbps.

Table 98: Shaper Accuracy of 1-Gbps Ethernet at the Interface Set Level

Range of Interface Set Shaper	Step Granularity
Up to 20.48 Mbps	80 Kbps
20.48 Mbps to 81.92 Mbps	320 Kbps
81.92 Mbps to 327.68 Mbps	1.28 Mbps
327.68 Mbps to 1 Gbps	20.48 Mbps

[Table 99 on page 370](#) shows the accuracy of the interface set shaper at various rates for Ethernet ports operating at 10 Gbps.

Table 99: Shaper Accuracy of 10-Gbps Ethernet at the Interface Set Level

Range of Interface Set Shaper	Step Granularity
Up to 128 Mbps	500 Kbps
128 Mbps to 512 Mbps	2 Mbps
512 Mbps to 2.048 Gbps	8 Mbps
2.048 Gbps to 10 Gbps	128 Mbps

[Table 100 on page 371](#) shows the accuracy of the physical port shaper at various rates for Ethernet ports operating at 1 Gbps.

Table 100: Shaper Accuracy of 1-Gbps Ethernet at the Physical Port Level

Range of Physical Port Shaper	Step Granularity
Up to 64 Mbps	250 Kbps
64 Mbps to 256 Mbps	1 Mbps
256 Mbps to 1 Gbps	4 Mbps

[Table 101 on page 371](#) shows the accuracy of the physical port shaper at various rates for Ethernet ports operating at 10 Gbps.

Table 101: Shaper Accuracy of 10-Gbps Ethernet at the Physical Port Level

Range of Physical Port Shaper	Step Granularity
Up to 640 Mbps	2.5 Mbps
640 Mbps to 2.56 Gbps	10 Mbps
2.56 Gbps to 10 Gbps	40 Mbps

Understanding Burst Size Configuration on IQ2 and IQ2E Interfaces

You can explicitly configure the burst size for shapers in a traffic control profile for IQ2 and IQ2E interfaces. This feature is supported on M7i, M10i, M40e, M120, M320 routers and all T Series routers.

The shaping burst size determines the maximum number of bytes that can be sent through a shaper during a burst. The guaranteed burst size determines when the scheduler moves from green to yellow.

The burst size limits the number of credits that can be accumulated for scheduling. Configuring a burst size is only useful in the case when traffic is sent after a long lull period so that credits can be accumulated until the burst size limit is reached. When traffic is continuous, credits are not accumulated, and the burst size limit is not reached.

If no burst size value is specified when the shaping rate or guaranteed rate is configured, then a default burst size (expressed as a time value) is applied. The default shaping burst size is 10 ms of the shaping rate (that is, $10 \times \text{shaping rate} / 1000$ bytes). The minimum value is 2048 bytes to accommodate the minimum of 1 MTU.

The burst size value is adjusted and rounded off to meet the restrictions enforced by the hardware. Thus, the actual burst size in the hardware might vary slightly from the configured value.

To enable this feature, include the **burst-size** statement at the following hierarchy levels:

```
[edit class-of-service traffic-control-profiles shaping-rate]
[edit class-of-service traffic-control-profiles guaranteed-rate]
```



NOTE: The **guaranteed-rate** burst size value cannot be greater than the **shaping-rate** burst size.

Related Documentation

- [Configuring Burst Size for Shapers on IQ2 and IQ2E Interfaces on page 372](#)
- [guaranteed-rate on page 621](#)
- [shaping-rate on page 710](#)

Configuring Burst Size for Shapers on IQ2 and IQ2E Interfaces

This topic shows how to set the **burst-size** while configuring the **shaping-rate** and **guaranteed-rate** under the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level.

In following configuration for tcp1, the **shaping-rate** burst size is set to 5 KB, and the **guaranteed-rate** burst size is set to 3 KB under the **traffic-control-profiles** statement. To apply this configuration to a logical interface (ifl), the traffic-control-profile is attached to the ifl.

```
class-of-service {
  traffic-control-profiles {
    tcp1 {
      shaping-rate 100m burst-size 5k;
      guaranteed-rate 50m burst-size 3k;
    }
    tcp2 {
      shaping-rate 100m burst-size 5k;
    }
  }
  interfaces {
    interface-set ifset1 {
      output-traffic-control-profile tcp1;
    }
    ge-1/2/1 {
      unit 0 {
        output-traffic-control-profile tcp1;
      }
    }
    ge-1/2/2 {
      output-traffic-control-profile tcp2;
    }
  }
}
```

Related Documentation

- [Understanding Burst Size Configuration on IQ2 and IQ2E Interfaces on page 371](#)
- [guaranteed-rate on page 621](#)
- [shaping-rate on page 710](#)

Differences Between Gigabit Ethernet IQ and Gigabit Ethernet IQ2 PICs

Because Gigabit Ethernet IQ PICs and Gigabit Ethernet IQ2 PICs use different architectures, they differ in the following ways:

- Gigabit Ethernet IQ2 PICs support a transmission rate within a queue, but do not support an exact rate within a queue. You can apply a weight to a queue, but you cannot put an upper limit on the queue transmission rate that is less than the logical interface can support. Consequently, including the **exact** option with the **transmit-rate (rate | percent percent)** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level is not supported for Gigabit Ethernet IQ2 interfaces.
- Gigabit Ethernet IQ2 PICs support only one queue in the scheduler map with **medium-high**, **high**, or **strict-high** priority. If more than one queue is configured with **medium-high**, **high**, or **strict-high** priority, the commit operation fails.
- To ensure that protocol control traffic (such as OSPF, BGP, and RIP) are not dropped at the oversubscribed ingress direction, the software puts control protocol packets into a separate control scheduler. There is one control scheduler per port. These control schedulers are implemented as strict-high priority, so they transmit traffic until they are empty.
- On Gigabit Ethernet IQ2 PICs, you can configure a single traffic-control profile to contain both a PIR (the **shaping-rate** statement) and a CIR (the **guaranteed-rate** statement). On Gigabit Ethernet IQ PICs, these statements are mutually exclusive.
- Gigabit Ethernet IQ2 PICs support only two fill levels in the RED drop profile. The recommended definition of the RED drop profile is as follows:

```
class-of-service {
  drop-profiles {
    drop-iq2-example1 {
      fill-level 20 drop-probability 0;
      fill-level 100 drop-probability 80;
    }
  }
}
```

This configuration defines a drop profile with a linear drop probability curve when the fill level is between 20 and 100 percent, and a maximum drop probability of 80 percent.

You can configure more than two fill levels in a drop profile, but the software only uses the points (**min_fill_level**, 0) and (**max_fill_level**, **max_probability**) and ignores other fill levels. The drop probability at the minimum fill level is set to 0 percent even if you configure a non-zero drop probability value at the minimum fill level. The following example shows a sample configuration and the software implementation:

Configuration	<pre>class-of-service { drop-profiles { drop-iq2-example2 { fill-level 30 drop-probability 10; fill-level 40 drop-probability 20; fill-level 100 drop-probability 80; } } }</pre>
----------------------	---

```

    }
  }

```

Implementation

```

class-of-service {
  drop-profiles {
    drop-iq2-example2-implementation {
      fill-level 30 drop-probability 0;
      fill-level 100 drop-probability 80;
    }
  }
}

```

If you configure more than two fill levels, a system log message warns you that the software supports only two fill levels and displays the drop profile that is implemented.

Though the **interpolate** statement is supported in the definition of a RED drop profile, we do not recommend using it. The following example shows a sample configuration and the software implementation:

Configuration

```

class-of-service {
  drop-profiles {
    drop-iq2-example3 {
      interpolate {
        fill-level [ 30 50 80 ];
        drop-probability [ 10 20 40 ];
      }
    }
  }
}

```

When you use the **interpolate** statement and the maximum fill level is not 100 percent, the software adds the point (100, 100). Therefore, the drop-iq2-example3 drop profile is implemented as:

Implementation

```

class-of-service {
  drop-profiles {
    drop-iq2-example3-implementation {
      fill-level 2 drop-probability 0;
      fill-level 100 drop-probability 100;
    }
  }
}

```

The implemented minimum fill level is not 30 percent as configured, but 2 percent because of the 64-point interpolation.

Configuring Traffic Control Profiles for Shared Scheduling and Shaping

Shared scheduling and shaping allows you to allocate separate pools of shared resources to subsets of logical interfaces belonging to the same physical port. You configure this by first creating a traffic-control profile, which specifies a shaping rate and references a scheduler map. You must then share this set of shaping and scheduling resources by applying an instance of the traffic-control profile to a subset of logical interfaces. You

can apply a separate instance of the same (or a different) traffic-control profile to another subset of logical interfaces, thereby allocating separate pools of shared resources.

To configure a traffic-control profile, perform the following steps:

1. Include the **shaping-rate** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  shaping-rate (percent percentage | rate);
```

You can configure the shaping rate as a percentage from 1 through 100 or as an absolute rate from 1000 through 160,000,000,000 bits per second (bps). The shaping rate corresponds to a peak information rate (PIR). For more information, see [“Oversubscribing Interface Bandwidth” on page 199](#).

2. Include the **scheduler-map** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  scheduler-map map-name;
```

For information about configuring schedulers and scheduler maps, see [“Configuring Schedulers” on page 160](#) and [“Configuring Scheduler Maps” on page 179](#). Gigabit Ethernet IQ2 interfaces support up to eight forwarding classes and queues.

3. Include the **delay-buffer-rate** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  delay-buffer-rate (percent percentage | rate);
```

You can configure the delay-buffer rate as a percentage from 1 through 100 or as an absolute rate from 1000 through 160,000,000,000 bits per second. The delay-buffer rate controls latency. For more information, see [“Oversubscribing Interface Bandwidth” on page 199](#) and [“Providing a Guaranteed Minimum Rate” on page 207](#).

4. Include the **guaranteed-rate** statement at the **[edit class-of-service traffic-control-profiles *profile-name*]** hierarchy level:

```
[edit class-of-service traffic-control-profiles profile-name]  
  guaranteed-rate (percent percentage | rate);
```

You can configure the guaranteed rate as a percentage from 1 through 100 or as an absolute rate from 1000 through 160,000,000,000 bps. The guaranteed rate corresponds to a committed information rate (CIR). For more information, see [“Providing a Guaranteed Minimum Rate” on page 207](#).

You must now share an instance of the traffic-control profile.

To share an instance of the traffic-control profile, perform the following steps:

1. Include the **shared-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
  shared-scheduler;
```

This statement enables logical interfaces belonging to the same physical port to share one set of shaping and scheduling resources.



NOTE: On each physical interface, the `shared-scheduler` and `per-unit-scheduler` statements are mutually exclusive. Even so, you can configure one logical interface for each shared instance. This effectively provides the functionality of per-unit scheduling.

2. To apply the traffic-control profile to an input interface, include the `input-traffic-control-profile` and `shared-instance` statements at the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
  input-traffic-control-profile profile-name shared-instance instance-name;
```

These statements are explained in Step 3.

3. To apply the traffic-control profile to an output interface, include the `output-traffic-control-profile` and `shared-instance` statements at the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
  output-traffic-control-profile profile-name shared-instance instance-name;
```

The profile name references the traffic-control profile you configured in Step 1 through Step 4 of the “Configuring Traffic Control Profiles for Shared Scheduling and Shaping” section. The shared-instance name does not reference a configuration. It can be any text string you wish to apply to multiple logical interfaces that you want to share the set of resources configured in the traffic-control profile. Each logical interface shares a set of scheduling and shaping resources with other logical interfaces that are on the same physical port and that have the same shared-instance name applied.

This concept is demonstrated in “[Example: Configuring Shared Resources on Ethernet IQ2 Interfaces](#)” on page 382.



NOTE: You cannot include the `output-traffic-control-profile` statement in the configuration if any of the following statements are included in the logical interface configuration: `scheduler-map`, `shaping-rate`, `adaptive-shaper`, or `virtual-channel-group` (the last two are valid on J Series routers only).

Configuring a Separate Input Scheduler for Each Interface

As an alternative to shared input traffic-control profiles, you can configure each interface to use its own input scheduler. For each physical interface, you can apply an input scheduler map to the physical interface or its logical interfaces, but not both.

For information about configuring schedulers and scheduler maps, see “[Configuring Schedulers](#)” on page 160 and “[Configuring Scheduler Maps](#)” on page 179. Gigabit Ethernet IQ2 interfaces support up to eight forwarding classes and queues.

To configure a separate input scheduler on the physical interface, include the **input-scheduler-map** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level:

```
[edit class-of-service interfaces interface-name]  
input-scheduler-map map-name;
```

To configure a separate input scheduler on a logical interface, perform the following steps:

1. Include the **input-scheduler-map** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]  
input-scheduler-map map-name;
```

2. For the corresponding physical interface, you must also include the **per-unit-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
per-unit-scheduler;
```

The **per-unit-scheduler** statement enables one set of output queues for each logical interface configured under the physical interface.

On Gigabit Ethernet IQ2 PIC interfaces, configuration of the **per-unit-scheduler** statement requires that you configure VLAN tagging also. When you include the **per-unit-scheduler** statement, the maximum number of VLANs supported is 768 on a single-port Gigabit Ethernet IQ PIC. On a dual-port Gigabit Ethernet IQ PIC, the maximum number is 384.

Configuring Per-Unit Scheduling for GRE Tunnels Using IQ2 and IQ2E PICs

M7i, M10i, M120, M320, T Series, and TX Matrix routers with Intelligent Queuing 2 (IQ2) PICs and Intelligent Queuing 2 Enhanced (IQ2E) PICs support per unit scheduling for Generic Routing Encapsulation (GRE) tunnels, adding all the functionality of tunnel PICs to GRE tunnels. The class of service (CoS) for the GRE tunnel traffic will be applied as the traffic is looped through the IQ2 and IQ2E PIC.

Shaping is performed on full packets that pass through the GRE tunnel.

IQ2 and IQ2E PICs support all interfaces that are supported on tunnel PICs, as follows:

- *gr-fpc/pic/port*
- *vt-fpc/pic/port*
- *lt-fpc/pic/port*
- *ip-fpc/pic/port*
- *pe-fpc/pic/port*
- *pd-fpc/pic/port*
- *mt-fpc/pic/port*

The port variable is always zero.

The provided tunnel functionality is the same as that of regular tunnel PICs.

You can specify that IQ2 and IQ2E PICs work exclusively in tunnel mode or as a regular PIC. The default setting uses IQ2 and IQ2E PICs as a regular PIC. To configure exclusive tunnel mode, use the **tunnel-only** statement at the **[edit chassis fpc slot-number pic slot-number tunnel-services]** hierarchy level.

You can use the **show interfaces queue gr-fpc/pic/port** command to display statistics for the specified tunnel.

IQ2E PIC schedulers can be dynamically allocated across ports.

When IQ2 and IQ2E PICs work exclusively as a tunnel PIC, they support the same number of tunnel logical interfaces as regular tunnel PICs; for example each PIC can support 4K gr- logical interfaces.



NOTE: This feature supports only traffic-control-profile on gr- logical interfaces. It does not support Class of Service (CoS) on gr- logical interfaces.

Also, a scheduler is allocated for a gr- logical interface only when there is a traffic-control profile configured for it.

The **tunnel-only** statement is used to specify that the IQ2 or IQ2E PIC needs to work in tunnel mode, as follows:

```
[edit]
chassis {
  fpc slot-number {
    pic slot-number {
      tunnel-services {
        tunnel-only;
      }
    }
  }
}
```

The PIC will be automatically bounced when the tunnel services configuration is changed.

The **chassis traffic-manager** mode must have the ingress traffic manager enabled in order for the tunnel-services to work correctly.

On gr- interfaces, you can configure the **output-traffic-control-profile** statement at the **[edit class-of-service interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level:

```
[edit]
class-of-service {
  traffic-control-profiles {
    tcp {
      shaping-rate rate;
    }
  }
  interfaces {
    gr-fpc/pic/port {
```

```

        unit logical-unit-number {
            output-traffic-control-profile tcp
        }
    }
}

```

The **gr-** logical interfaces without an explicit CoS configuration are not assigned a dedicated scheduler. These use a reserved scheduler meant for all unshaped tunnel traffic; that is, all traffic on **gr-** logical interfaces that do not have CoS configured and all traffic from other types of tunnels.

For more information on **chassis tunnel-services** configuration, see the Junos OS System Basics Configuration Guide.

To view the configuration and statistics for GRE tunnel logical interfaces, use the **show interfaces queue gr-** command. For more information, see the Junos OS Operational Mode Commands.

Configuring Hierarchical Input Shapers

You can apply input shaping rates to both the physical interface and its logical interfaces. The rate specified at the physical level is distributed among the logical interfaces based on their input shaping-rate ratio.

To configure an input shaper on the physical interface, include the **input-shaping-rate** statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level:

```

[edit class-of-service interfaces interface-name]
input-shaping-rate rate;

```

To configure an input shaper on the logical interface, include the **input-shaping-rate** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```

[edit class-of-service interfaces interface-name unit logical-unit-number]
input-shaping-rate (percent percentage | rate);

```

For each logical interface, you can specify a percentage of the physical rate or an actual rate. The software converts actual rates into percentages of the physical rate.

Configuring a Policer Overhead

Configuring a policer overhead allows you to control the rate of traffic sent or received on an interface. When you configure a policer overhead, the configured policer overhead value (bytes) is added to the length of the final Ethernet frame. This calculated length of frame is used to determine the policer or the rate limit action. Therefore, the policer overhead enables you to control the rate of traffic sent or received on an interface. You can configure the policer overhead to rate-limit queues and Layer 2 and MAC policers. The policer overhead and the shaping overhead can be configured simultaneously on an interface.

This feature is supported on M Series and T Series routers with IQ2 PICs or IQ2E PICs, and on MX Series DPCs.

To configure a policer overhead for controlling the rate of traffic sent or received on an interface:

1. In the **[edit chassis]** hierarchy level in configuration mode, create the interface on which to add the policer overhead to input or output traffic.

```
[edit chassis]
user@host# edit fpc fpc pic pic
```

For example:

```
[edit chassis]
user@host# edit fpc 0 pic 1
```

2. Configure the policer overhead to control the input or output traffic on the interface. You could use either statement or both the statements for this configuration.

```
[edit chassis fpc fpc pic pic]
user@host# set ingress-policer-overhead bytes;
user@host# set egress-policer-overhead bytes;
```

For example:

```
[edit chassis fpc 0 pic 1]
user@host# set ingress-policer-overhead 10;
user@host# set egress-policer-overhead 20;
```

3. Verify the configuration:

```
[edit chassis]
user@host# show
fpc 0 {
  pic 1 {
    ingress-policer-overhead 10;
    egress-policer-overhead 20;
  }
}
```



NOTE: When the configuration for the policer overhead bytes on a PIC is changed, the PIC goes offline and then comes back online. In addition, the configuration in the CLI is on a per-PIC basis and, therefore, applies to all the ports on the PIC.

- Related Documentation**
- [egress-policer-overhead on page 588](#)
 - [ingress-policer-overhead on page 634](#)

Example: Configuring a CIR and a PIR on Ethernet IQ2 Interfaces

On Gigabit Ethernet IQ2 interfaces, you can configure a CIR (guaranteed rate) and a PIR (shaping rate) on a single logical interface. The configured rates are gathered into a traffic

control profile. If you configure a traffic control profile with a CIR (guaranteed rate) only, the PIR (shaping rate) is set to the physical interface (port) rate.

In the following example, logical unit 0 has a CIR equal to 30 Mbps and a PIR equal to 200 Mbps. Logical unit 1 has a PIR equal to 300 Mbps. Logical unit 2 has a CIR equal to 100 Mbps and a PIR that is unspecified. For logical unit 2, the software causes the PIR to be 1 Gbps (equal to the physical interface rate) because the PIR must be equal to or greater than the CIR.

Excess bandwidth is the leftover bandwidth on the port after meeting all the guaranteed rate requirements of the logical interfaces. For each port, excess bandwidth is shared as follows:

- Proportional to the guaranteed rate—This method is used if you configure one or more logical interfaces on a port to have a guaranteed rate.
- Proportional to the shaping rate—This method is used if you configure none of the logical interfaces on a port to have a guaranteed rate.

In this example, bandwidth is shared proportionally to the guaranteed rate because at least one logical interface has a guaranteed rate.

```
class-of-service {
  traffic-control-profiles {
    profile1 {
      shaping-rate 200m;
      guaranteed-rate 30m;
      delay-buffer-rate 150m;
      scheduler-map sched-map;
    }
    profile2 {
      shaping-rate 300m;
      delay-buffer-rate 500k;
      scheduler-map sched-map;
    }
    profile3 {
      guaranteed-rate 100m;
      scheduler-map sched-map;
    }
  }
  interfaces {
    ge-3/0/0 {
      unit 0 {
        output-traffic-control-profile profile1;
      }
      unit 1 {
        output-traffic-control-profile profile2;
      }
      unit 2 {
        output-traffic-control-profile profile3;
      }
    }
  }
}
```

Example: Configuring Shared Resources on Ethernet IQ2 Interfaces

For input traffic on physical interface **ge-1/2/3**, logical interface units **1**, **2**, and **3** are sharing one set of scheduler-shaper resources, defined by traffic-control profile **s1**. Logical interface units **4**, **5**, and **6** are sharing another set of scheduler-shaper resources, defined by traffic-control profile **s1**.

For output traffic on physical interface **ge-1/2/3**, logical interface units **1**, **2**, and **3** are sharing one set of scheduler-shaper resources, defined by traffic-control profile **s2**. Logical interface units **4**, **5**, and **6** are sharing another set scheduler-shaper resources, defined by traffic-control profile **s2**.

For each physical interface, the **shared-instance** statement creates one set of resources to be shared among units **1**, **2**, and **3** and another set of resources to be shared among units **4**, **5**, and **6**. Input and output shaping rates are configured at the physical interface level, which demonstrates the hierarchical shaping capability of the Gigabit Ethernet IQ2 PIC.

```
[edit]
class-of-service {
  traffic-control-profiles {
    s1 {
      scheduler-map map1;
      shaping-rate 100k;
    }
    s2 {
      scheduler-map map1;
      shaping-rate 200k;
    }
  }
  forwarding-classes { # Map one forwarding class to one queue.
    queue 0 fc-be;
    queue 1 fc-be1;
    queue 2 fc-ef;
    queue 3 fc-ef1;
    queue 4 fc-af11;
    queue 5 fc-af12;
    queue 6 fc-nc1;
    queue 7 fc-nc2;
  }
  classifiers { # Map 802.1p bits to forwarding-class and loss-priority.
    ieee-802.1p-table {
      forwarding-class fc-nc2 {
        loss-priority low code-points [111];
      }
      forwarding-class fc-nc1 {
        loss-priority low code-points [110];
      }
      forwarding-class fc-af12 {
        loss-priority low code-points [101];
      }
      forwarding-class fc-af11 {
        loss-priority low code-points [100];
      }
    }
  }
}
```



```

    }
    forwarding-class fc-ef1 {
        loss-priority low code-points [011];
    }
    forwarding-class fc-ef {
        loss-priority low code-points [010];
    }
    forwarding-class fc-be1 {
        loss-priority low code-points [001];
    }
    forwarding-class fc-be {
        loss-priority low code-points [000];
    }
}
}
interfaces {
    ge-1/2/3 {
        input-shaping-rate 500m;
        shaping-rate 500m; # Output shaping rate
        unit 0 { # Apply behavior aggregate classifier to an interface.
            classifiers {
                ieee-802.1 ieee-8021p-table;
            }
        }
        unit 1 {
            input-traffic-control-profile s1 shared-instance 1;
            output-traffic-control-profile s2 shared-instance 1;
        }
        unit 2 {
            input-traffic-control-profile s1 shared-instance 1;
            output-traffic-control-profile s2 shared-instance 1;
        }
        unit 3 {
            input-traffic-control-profile s1 shared-instance 1;
            output-traffic-control-profile s2 shared-instance 1;
        }
        unit 4 {
            input-traffic-control-profile s1 shared-instance 2;
            output-traffic-control-profile s2 shared-instance 2;
        }
        unit 5 {
            input-traffic-control-profile s1 shared-instance 2;
            output-traffic-control-profile s2 shared-instance 2;
        }
        unit 6 {
            input-traffic-control-profile s1 shared-instance 2;
            output-traffic-control-profile s2 shared-instance 2;
        }
    }
}
}

```

Configuring a Simple Filter

Configure a simple filter that overrides the classification derived from the lookup of the Layer 2 fields.

```

firewall {

```

```

family inet {
  simple-filter sf-1 {
    term 1 {
      source-address 172.16.0.0/16;
      destination-address 20.16.0.0/16;
      source-port 1024-9071;
    }
    then { # Action with term-1
      forwarding-class fc-be1;
      loss-priority high;
    }
    term 2 {
      source-address 173.16.0.0/16;
      destination-address 21.16.0.0/16;
    }
    then { # Action with term-2
      forwarding-class fc-ef1;
      loss-priority low;
    }
  }
}
interfaces { # Apply the simple filter.
ge-1/2/3 {
  unit 0 {
    family inet {
      simple-filter {
        input sf-1;
      }
    }
  }
}
}

class-of-service {
  scheduler-maps { # Configure a custom scheduler map.
    map1 {
      forwarding-class fc-be scheduler sch-Q0;
      forwarding-class fc-be1 scheduler sch-Q1;
      forwarding-class fc-ef scheduler sch-Q2;
      forwarding-class fc-ef1 scheduler sch-Q3;
      forwarding-class fc-af11 scheduler sch-Q4;
      forwarding-class fc-af12 scheduler sch-Q5;
      forwarding-class fc-nc1 scheduler sch-Q6;
      forwarding-class fc-nc2 scheduler sch-Q7;
    }
  }
  schedulers { # Define schedulers.
    sch-Q0 {
      transmit-rate percent 25;
      buffer-size percent 25;
      priority low;
      drop-profile-map loss-priority any protocol any drop-profile drop-default;
    }
    sch-Q1 {
      transmit-rate percent 5;
      buffer-size temporal 2000;
      priority high;
      drop-profile-map loss-priority any protocol any drop-profile drop-ef;
    }
  }
}

```

```
}
sch-Q2 {
    transmit-rate percent 35;
    buffer-size percent 35;
    priority low;
    drop-profile-map loss-priority any protocol any drop-profile drop-default;
}
sch-Q3 {
    transmit-rate percent 5;
    buffer-size percent 5;
    drop-profile-map loss-priority any protocol any drop-profile drop-default;
}
sch-Q4 {
    transmit-rate percent 5;
    priority high;
    drop-profile-map loss-priority any protocol any drop-profile drop-ef;
}
sch-Q5 {
    transmit-rate percent 10;
    priority high;
    drop-profile-map loss-priority any protocol any drop-profile drop-ef;
}
sch-Q6 {
    transmit-rate remainder;
    priority low;
    drop-profile-map loss-priority any protocol any drop-profile drop-default;
}
sch-Q7 {
    transmit-rate percent 5;
    priority high;
    drop-profile-map loss-priority any protocol any drop-profile drop-default;
}
```


CHAPTER 20

Configuring CoS on SONET/SDH OC48/STM16 IQE PICs

This chapter discusses the following topics:

- CoS on SONET/SDH OC48/STM16 IQE PIC Overview on page 388
- Packet Classification on SONET/SDH OC48/STM16 IQE PICs on page 390
- Scheduling and Shaping on SONET/SDH OC48/STM16 IQE PICs on page 391
- Scaling for SONET/SDH OC48/STM16 IQE PICs on page 393
- Translation Table on SONET/SDH OC48/STM16 IQE PICs on page 394
- Priority Mapping on SONET/SDH OC48/STM16 IQE PICs on page 394
- MDRR on SONET/SDH OC48/STM16 IQE PICs on page 396
- WRED on SONET/SDH OC48/STM16 IQE PICs on page 396
- Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs on page 396
- Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs on page 396
- Forwarding Class to Queue Mapping on SONET/SDH OC48/STM16 IQE PICs on page 397
- Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 397
- Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs on page 398
- Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs on page 409
- Configuring Scheduling, Shaping, and Priority Mapping on SONET/SDH OC48/STM16 IQE PICs on page 409
- Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs on page 410
- Configuring WRED on SONET/SDH OC48/STM16 IQE PICs on page 411
- Configuring Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs on page 411
- Configuring Rewrite Rules on SONET/SDH OC48/STM16 IQE PIC on page 411
- Configuring Forwarding Classes on SONET/SDH OC48/STM16 IQE PIC on page 411
- Example: Transmit Rate Adding Up to More than 100 Percent on page 412
- Example: Priority Mapping on SONET/SDH OC48/STM16 IQE PICs on page 413

- [Example: Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 415](#)
- [Example: Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs on page 418](#)
- [Example: Configuring a CIR and a PIR on SONET/SDH OC48/STM16 IQE Interfaces on page 419](#)
- [Example: Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs on page 420](#)
- [Example: Configuring WRED on SONET/SDH OC48/STM16 IQE PICs on page 420](#)

CoS on SONET/SDH OC48/STM16 IQE PIC Overview

The SONET/SDH OC48/STM16 IQE PIC is a clear-channel PIC that is designed to provide better scaling and improved queuing, buffering, and traffic shaping along with clear-channel functionality. Class of service (CoS) on the SONET/SDH OC48/STM16 IQE PIC supports per data-link connection identifier (DLCI) queuing at egress. The SONET/SDH OC48/STM16 IQE PIC can be used in Juniper Networks M320, MX240, MX960, T640, and T1600 routers.

The SONET/SDH OC48/STM16 IQE PIC supports the following CoS features:

- Eight queues per logical interface.



NOTE: Queue configuration in other modes, such as 4 queues per scheduler, is not supported on the SONET/SDH OC48/STM16 IQE PIC.

- Two shaping rates: a committed information rate (CIR) and peak information rate (PIR) per data-link connection identifier (DLCI).
- Sharing of excess bandwidth among logical interfaces.
- Five levels of priorities—three priorities for traffic below the guaranteed rate and two priorities for traffic above the guaranteed rate. By default, a strict-high queue gets the excess high priority and all other queues get the excess low priority.
- Ingress behavior aggregate (BA) classification.
- Translation table and egress rewrite.
- Egress delay buffer of 214ms.
- Forwarding class to queue remapping per DLCI.
- Weighted round-robin (WRR), weighted random early detection (WRED).
- Rate limit on all queues to limit the transmission rate.
- Per unit scheduling via DLCI at egress, where each DLCI gets a dedicated set of queues and a scheduler. When per unit scheduling is configured, the shaping can be configured at the logical and physical interface levels.



NOTE: Because the SONET/SDH OC48/STM16 IQE PIC is not an oversubscribed PIC, there is no ingress queuing. Therefore, ingress scheduling or shaping is not supported in SONET/SDH OC48/STM16 IQE PIC.

- Packet or byte statistics are separately collected for ingress and egress queues. The SONET/SDH OC48/STM16 IQE PIC provides the following statistics:
 - Ingress statistics:
 - Per logical interface transmit and drop bytes/packets statistics (based on Layer 3).
 - Per physical interface traffic bytes/packets statistics (based on Layer 2).
 - Egress statistics:
 - Per queue transmit and drop bytes/packets statistics (based on Layer 2).
 - Per queue per color drop bytes/packets statistics (based on Layer 2).
 - Per logical interface transmit and drop bytes/packets statistics (based on Layer 3).
 - Per physical interface traffic bytes/packets statistics (based on Layer 2).

To configure the features mentioned above, include the corresponding class-of-service (CoS) statements at the **[edit class-of-service]** hierarchy level. The CoS configuration statements supported on the SONET/SDH OC48/STM16 IQE PIC are the same as the CoS configuration statements supported on the IQ2E PIC except for the following unsupported statements.

Unsupported configuration statements at the **[edit chassis]** hierarchy level:

- **max-queues-per-interface**
- **no-concatenate**
- **q-pic-large-buffer**
- **red-buffer-occupancy**
- **ingress-shaping-overhead**
- **traffic manager mode**

Unsupported configuration statements at the **[edit class-of-service]** hierarchy level:

- **input-excess-bandwidth-share**
- **input-traffic-control-profile**
- **per-session-scheduler**
- **simple-filter**

Related Documentation

- [Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs on page 396](#)
- [Scheduling and Shaping on SONET/SDH OC48/STM16 IQE PICs on page 391](#)
- [MDRR on SONET/SDH OC48/STM16 IQE PICs on page 396](#)
- [WRED on SONET/SDH OC48/STM16 IQE PICs on page 396](#)
- [Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs on page 396](#)
- [Packet Classification on SONET/SDH OC48/STM16 IQE PICs on page 390](#)
- [Translation Table on SONET/SDH OC48/STM16 IQE PICs on page 394](#)

Packet Classification on SONET/SDH OC48/STM16 IQE PICs

Packet classification is used to partition the packets into different classes of traffic. You can use three methods to classify a packet:

- Behavior aggregate (BA) classification
- Fixed classification
- Multifield classification

The SONET/SDH OC48/STM16 IQE PIC supports BA classification and fixed classification. It does not do multifield classification. However, multifield classification can be done at the Packet Forwarding Engine level using firewall filters, which overrides the classification done at the PIC level.

The BA classifier maps a class-of-service (CoS) value to a forwarding class and loss priority. The forwarding class determines the output queue. The loss priority is used by schedulers in conjunction with the weighted random early detection (WRED) algorithm to control packet discard during periods of congestion.

The SONET/SDH OC48/STM16 IQE PICs support the following BA classifiers:

- DSCP IP or IP precedence
- DSCP IPv6
- MPLS (EXP)

The fixed classification matches the traffic on a logical interface level. The following example classifies all traffic on logical unit zero to the queue corresponding to assured forwarding.

```
[edit class-of-service interfaces so-0/1/2 unit 0]  
forwarding-class af;
```

If the classifiers are not defined explicitly, then the default classifiers are applied as follows:

- All MPLS packets are classified using the MPLS (EXP) classifier. If there is no explicit MPLS (EXP) classifier, then the default MPLS (EXP) classifier is applied.

- All IPv4 packets are classified using the IP precedence or DSCP classifier. If there is no explicit IP precedence or DSCP classifier, then the default IP precedence classifier is applied.
- All IPv6 packets are classified using the DSCP IPv6 classifier. If there is no explicit DSCP IPv6 classifier, then the default DSCP IPv6 classifier is applied.

Related Documentation

- [Classifying Packets by Behavior Aggregate](#)
- [Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs on page 396](#)
- [Translation Table on SONET/SDH OC48/STM16 IQE PICs on page 394](#)

Scheduling and Shaping on SONET/SDH OC48/STM16 IQE PICs

The SONET/SDH OC48/STM16 IQE PIC supports the following scheduling and the shaping behavior:

- Per unit scheduling via data-link connection identifier (DLCI) at egress, where each DLCI gets a dedicated set of queues and a scheduler.



NOTE: Because the SONET/SDH OC48/STM16 IQE PIC is not an oversubscribed PIC, there is no ingress queuing. therefore, the ingress scheduling or shaping is not supported in SONET/SDH OC48/STM16 IQE PIC.

- When a per unit scheduling is configured , the shaping can be configured at the logical and the physical interface levels.
- In both guaranteed and excess regions, the traffic on queues at the same priority is scheduled in weighted-round-robin (WRR) discipline and there is no shaping at queue-level.

On SONET/SDH OC48/STM16 IQE interfaces, you can configure a CIR (guaranteed rate) and a PIR (shaping rate) per data-link connection identifier (DLCI). The configured rates are gathered into a traffic control profile. If you configure a traffic control profile with a CIR (guaranteed rate) only, the PIR (shaping rate) is set to the physical interface (port) rate.

The computation of CIR and PIR on logical interfaces is shown in [Table 102 on page 391](#). X and Y are values configured from the command-line interface.

Table 102: Computation of CIR and PIR on the Logical Interfaces

Port Mode	JUNOS OS CLI Configuration		SONET/SDH OC48/STM16 IQE PIC	
	Configured CIR	Configured PIR	Computed CIR	Computed PIR
Default (no CIR or PIR configured on logical interface)	Not configured	Not configured	Port speed	Port speed

Table 102: Computation of CIR and PIR on the Logical Interfaces (*continued*)

Port Mode	JUNOS OS CLI Configuration		SONET/SDH OC48/STM16 IQE PIC	
	Configured CIR	Configured PIR	Computed CIR	Computed PIR
Both CIR and PIR are configured on logical interface	X	Y	X	Y
CIR Mode (CIR is configured on at least one logical interface)	X	Not configured	X	Port speed
	Not configured	Y	50 Kbps	Y
	Not configured	Not configured	50 Kbps	Port speed
PIR Mode (PIR is configured on at least one logical interface)	Not configured	Y	Y	Y
	Not configured	Not configured	Remaining (port speed minus sum of PIRs of other logical interfaces) bandwidth is equally divided.	Port speed

The SONET/SDH OC48/STM16 IQE PIC supports rate limit on all queues. The computation of rate limit is shown in [Table 103 on page 392](#).

Table 103: Computation of Rate for the Rate Limit Configured on the Queue with Transmit Rate Percentage

Scenario	Configured CIR Value for the Logical Interface or DLCI	Configured PIR Value for the Logical Interface or DLCI	SONET/SDH OC48/STM16 IQE PIC
1	No	No	Port value
2	Yes	No	CIR value
3	No	Yes	PIR value
4	Yes	Yes	CIR value



NOTE: When the queue transmission rates are oversubscribed, the rate-limit option configured on any of the queues uses the configured rate limit values, although the transmission rates are oversubscribed.

Transmit Rate Adding Up to More than 100 Percent

The SONET/SDH OC48/STM16 IQE PIC supports the maximum bandwidth optimization by overconfiguring the bandwidth up to 300 percent.

When the sum of transmission rates for all queues exceeds 100 percent, the interface is in an oversubscribed state. At the time of oversubscription, the queues are split into three priority groups. :

- Strict-High
- High, Medium-High, and Medium-Low
- Low

This computation is done after the internal mapping of the excess priority or the excess rate.

The sum of transmission rates for all queues in each of the priority groups is less than or equal to 100 percent, thereby allowing the SONET/SDH OC48/STM16 IQE PICs to support the maximum bandwidth optimization by overconfiguring the available bandwidth up to 300 percent.



NOTE:

- The remainder option is not supported on an oversubscribed SONET/SDH OC48/STM16 IQE PIC. When the sum of transmission rates for all queues exceeds 100 percent, and if one or more queues are configured with the remainder option, a syslog error message is generated and the configuration is ignored.
- When the sum of transmission rates of all queues in any of the priority groups exceeds 100 percent, the commit fails and an error message is displayed.

Related Documentation

- [Example: Configuring a CIR and a PIR on SONET/SDH OC48/STM16 IQE Interfaces on page 419](#)
- [Example: Transmit Rate Adding Up to More than 100 Percent on page 412](#)

Scaling for SONET/SDH OC48/STM16 IQE PICs

The scaling parameters for the SONET/SDH OC48/STM16 IQE PIC are defined in the [Table 104 on page 393](#)

Table 104: Scaling for SONET/SDH OC48/STM16 IQE PIC

Scaling Parameter on SONET/SDH OC48/STM16 IQE PIC	Value
Number of physical interfaces per PIC	4
Maximum queues per physical interface	8176
Maximum queues per PIC	16000
Maximum logical interface (DLCI) per PIC without per-unit scheduling	4083

Table 104: Scaling for SONET/SDH OC48/STM16 IQE PIC (*continued*)

Scaling Parameter on SONET/SDH OC48/STM16 IQE PIC	Value
Maximum logical interface (DLCI) per PIC with per-unit scheduling	2000

Translation Table on SONET/SDH OC48/STM16 IQE PICs

On the SONET/SDH OC48/STM16 IQE PIC, the behavior aggregate (BA) translation tables are included for every logical interface (unit) protocol family configured on the logical interface. The proper default translation table is active even if you do not include any explicit translation tables. You can display the current translation table values with the **show class-of-service classifiers** command.

On M320, MX series, T640, and T1600 routers with SONET/SDH OC48/STM16 IQE PICs, you can replace the type-of-service (ToS) or DSCP or MPLS (EXP) bit value on the incoming packet header on a logical interface with a user-defined value. The new value is used for all class-of-service processing and is applied before any other class-of-service or firewall treatment of the packet. On the SONET/SDH OC48/STM16 IQE PIC, the values configured with the **translation-table** statement determines the new ToS bit values.

The SONET/SDH OC48/STM16 IQE PIC supports four types of translation tables: IP precedence, IPv4 DSCP, IPv6 DSCP, and MPLS (EXP). You can configure a maximum of eight tables for each supported type. If a translation table is enabled for a particular type of traffic, then BA classification of the same type must be configured for that logical interface. That is, if you configure an IPv4 translation table, you must configure IPv4 BA classification on the same logical interface.

You can define many translation tables, as long as they have distinct names. You apply a translation table to a logical interface at the **[edit class-of-service interfaces]** hierarchy level. Translation tables always translate “like to like.” For example, a translation table applied to MPLS traffic can translate only from received EXP bit values to new EXP bit values. That is, translation tables cannot translate, for instance, from DSCP bits to INET precedence code points.

With translation table, the original fields in the received packet are overwritten with the new values configured in the translation table and the old values will be lost.

Related Documentation

- [Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 397](#)
- [Example: Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 415](#)

Priority Mapping on SONET/SDH OC48/STM16 IQE PICs

The SONET/SDH OC48/STM16 IQE PIC supports three priorities for traffic below the guaranteed rate and two priorities for traffic above the guaranteed rate. The mapping between Junos OS priorities and the SONET/SDH OC48/STM16 IQE PIC hardware priorities below and above the guaranteed rate (CIR) is shown in [Table 105 on page 395](#).

By default, a strict-high queue gets the excess high priority and all other queues get the excess low priority.

Table 105: Junos OS Priorities Mapped to SONET/SDH OC48/STM16 IQE PIC Hardware Priorities

Junos OS Priority	SONET/SDH OC48/STM16 IQE PIC Hardware Priority Below Guaranteed Rate For Logical Interfaces	SONET/SDH OC48/STM16 IQE PIC Hardware Priority Above Guaranteed Rate For Logical Interfaces (Excess Priority)
Strict-high	High	High
High	High	Low
Medium-high	Medium	Low
Medium-low	Medium	Low
Low	Low	Low

The SONET/SDH OC48/STM16 IQE PIC internally maps the excess priority and the excess rate to achieve configuration parity with the other IQE PICs.

The queue-level mapping for the excess priority and the excess rate is shown in [Table 106 on page 395](#).

Table 106: Queue-Level Mapping for Excess Priority and Excess Rate

Configured Values				Mapped Values			
Transmit Priority	Transmit Rate %	Excess Rate %	Excess Priority	Transmit Priority	Transmit Rate %	Excess Rate %	Excess Priority
Strict-high	X	Any value	Any value	No mapping	No mapping	Ignored	Ignored
	0	Any value	Any value	No mapping	No mapping	Ignored	Ignored
High or Medium or Low	X	Any value	Any value	No mapping	No mapping	Ignored	Ignored
	0	X	High	Medium	X	Ignored	Low
			Low	Low	X	Ignored	Low
	0	Any value	Any value	No mapping	No mapping	Ignored	Ignored



NOTE: The value X is the configured rate.

The SONET/SDH OC48 IQE PIC maps the excess rate and the excess priority based on the following conditions:

- If the transmit priority is not strict-high, the transmit rate is zero, the excess rate is nonzero, and the excess priority is high, then the value of the transmit priority is changed to medium and the value of the excess priority is changed to low.
- If the transmit priority is not strict-high, the transmit rate is zero, the excess rate is nonzero, and the excess priority is low, then the value of the transmit priority is changed to low and the value of the excess priority is changed to low.
- In all the cases other than those mentioned above, the SONET/SDH OC48 IQE PIC ignores the excess rate and the excess priority configurations and generates the system log messages.

**Related
Documentation**

- [Example: Priority Mapping on SONET/SDH OC48/STM16 IQE PICs on page 413](#)

MDRR on SONET/SDH OC48/STM16 IQE PICs

The guaranteed rate (committed information rate) is implemented using modified deficit round-robin (MDRR). MDRR configuration on the SONET/SDH OC48/STM16 IQE PIC is the same as the MDRR configuration on the Enhanced Queuing DPC. For more information about MDRR configuration on the Enhanced Queuing DPC, see [“Configuring MDRR on Enhanced Queuing DPCs” on page 438](#).

WRED on SONET/SDH OC48/STM16 IQE PICs

Weighted random early detection (WRED) is done at the queue level in the SONET/SDH OC48/STM16 IQE PIC. With WRED, the decision to drop or send the packet is made before the packet is placed in the queue.

WRED configuration on the SONET/SDH OC48/STM16 IQE PIC is the same as the WRED configuration on the Enhanced Queuing DPC. For more information about WRED configuration on the Enhanced Queuing DPC, see [“Configuring WRED on Enhanced Queuing DPCs” on page 437](#).

**Related
Documentation**

- [Configuring WRED on SONET/SDH OC48/STM16 IQE PICs on page 411](#)
- [Example: Configuring WRED on SONET/SDH OC48/STM16 IQE PICs on page 420](#)

Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs

Excess bandwidth sharing configuration on SONET/SDH OC48/STM16 IQE PIC is the same as the excess bandwidth sharing on Enhanced Queuing DPC. For more information about excess bandwidth sharing configuration, see [“Configuring Excess Bandwidth Sharing” on page 440](#).

Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs

The egress rewrite on **inet-precedence**, **dscp**, **dscp-ipv6**, and **exp** is done by the packet forwarding engine (PFE) based on the features supported by the PFE.

- Related Documentation**
- [Applying Rewrite Rules to Output Logical Interfaces on page 266](#)
 - [Example: Configuring and Applying Rewrite Rules](#)
 - [Packet Classification on SONET/SDH OC48/STM16 IQE PICs on page 390](#)
 - [Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 397](#)

Forwarding Class to Queue Mapping on SONET/SDH OC48/STM16 IQE PICs

Forwarding class to queue mapping is done per data-link connection identifier. For information about configuring forwarding classes and queues, see [“Configuring Forwarding Classes” on page 128](#).

- Related Documentation**
- [Classifying Packets by Egress Interface on page 129](#)

Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs

The SONET/SDH OC48/STM16 IQE PIC supports four types of translation tables: IP precedence, IPv4 DSCP, IPv6 DSCP, and MPLS (EXP). You can configure a maximum of eight tables for each supported type. If a translation table is enabled for a particular type of traffic, then behavior aggregate (BA) classification of the same type must be configured for that logical interface. That is, if you configure an IPv4 translation table, you must configure IPv4 BA classification on the same logical interface.

To configure ToS translation on the SONET/SDH OC48/STM16 IQE PIC:

1. Access the class-of-service hierarchy:

```
[edit]
user@host# edit class-of-service
```

2. Define the type of translation table:

```
[edit class-of-service]
translation-table {
  (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp |
   to-inet-precedence-from-inet-precedence) table-name {
    to-code-point value from-code-points (* | [ values ]);
  }
}
```

On the SONET/SDH OC48/STM16 IQE PIC, incoming ToS bit translation is subject to the following rules:

- Locally generated traffic is not subject to translation.
- The **to-dscp-from-dscp** translation table type is not supported if an Internet precedence classifier is configured.
- The **to-inet-precedence-from-inet-precedence** translation table type is not supported if a DSCP classifier is configured.

- The **to-dscp-from-dscp** and **to-inet-precedence-from-inet-precedence** translation table types cannot be configured on the same unit.
- The **to-dscp-from-dscp** and **to-inet-precedence-from-inet-precedence** translation table types are supported for IPv4 packets.
- Only the **to-dscp-ipv6-from-dscp-ipv6** translation table type is supported for IPv6 packets.
- Only the **to-exp-from-exp** translation table type is supported for MPLS packets.

The **from-code-points** statement establishes the values to match on the incoming packets. The **default** option is used to match all values not explicitly listed, and, as a single entry in the translation table, to mark all incoming packets on an interface the same way. The **to-code-point** statement establishes the target values for the translation. If an incoming packet header ToS bit configuration is not covered by the translation table list and a ***** option is not specified, the ToS bits in the incoming packet header are left unchanged.



NOTE: Translation tables are not supported if fixed classification is configured on the logical interface.

**Related
Documentation**

- [Translation Table on SONET/SDH OC48/STM16 IQE PICs on page 394](#)
- [Example: Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 415](#)

Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs

- [Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs Overview on page 398](#)
- [Example: Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs on page 402](#)

Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs Overview

Junos OS class of service (CoS) enables you to treat traffic differently by providing a minimum bandwidth guarantee, low latency, low packet loss, or a combination of these properties for categories of traffic, called forwarding classes. When traffic reaches an outbound interface, traffic is queued for transmission on the physical media. The forwarding class determines the queuing of traffic and other functions of processing class of service, such as rewriting behavior aggregate markers.

You can control the way the system services queues by configuring schedulers and scheduler maps. After traffic is placed in the appropriate queues, a scheduler defines how an interface should process this traffic from each queue. A scheduler is associated with a particular queue and a forwarding class through a scheduler map.

The parameters in a scheduler that define how to service a queue include transmission rate, transmission priority, buffer size, and a random early detection (RED) algorithm. You can define the order in which packets transmit a queue by configuring a priority and transmission rate for each queue. The buffer size and RED configuration define the storage and dropping of packets for each queue.

Junos OS supports multiple levels of transmission priority, with higher-priority queues being serviced before lower-priority queues, as long as the higher-priority forwarding classes retain enough bandwidth credit. The priority levels are Strict-High, High, Medium-High, Medium-Low, and Low. The priority scheduling of forwarding classes determines the order in which an outbound interface transmits traffic from the queues.

The transmission rate, on the other hand, controls how much bandwidth the traffic associated with a given forwarding class can consume. By default, all queues can exceed their assigned transmission rate if other queues are not fully utilizing their assigned rates, unless you configure the transmission rate with the **exact** option.

The transmission rate can be a fixed value, such as 1 megabit per second (Mbps), a percentage of the total available bandwidth, or the rest of the available bandwidth. You can limit the transmission bandwidth to the exact value you configure, or allow it to exceed the configured rate if additional bandwidth is available from other queues. This property enables you to ensure that each queue receives the amount of bandwidth appropriate to its level of service.

The SONET/SDH OC48/STM16 IQE PIC is a clear-channel PIC that is designed to provide better scaling and improved queuing, buffering, and traffic shaping along with clear-channel functionality. The PIC is preconfigured with five levels of priorities with three priorities for traffic below the guaranteed rate (CIR) and two priorities for traffic above the guaranteed rate (PIR).

Oversubscription is a state where the transmission rate of the incoming packet is much higher than the rate the Packet Forwarding Engine and system can handle, causing important packets to be dropped. If an oversubscribed link or service experiences an excess of traffic—either bursty or non-bursty—it can result in traffic loss or delay that could potentially affect other services and links. To reduce the risks of oversubscription, the SONET/SDH OC48/STM16 IQE PIC ensures prioritization and allows mission-critical services to be protected during congestion with intelligent dropping of packets. In addition to dropping low priority packets during congestion, the PIC prevents quality deterioration in periods of high traffic with intelligent sharing of excess bandwidth, providing bandwidth optimization.

Previously, the SONET/SDH OC48/STM16 IQE PIC supported a maximum bandwidth optimization by oversubscribing the available bandwidth up to 200 percent. This optimization was achieved by excluding the transmission rate percentage specified for the Strict-High queue from the total 100 percent transmission rate. Therefore, the transmission rate percentage for all the non-Strict-High queues added up to 100 percent. This computation was done after the internal mapping of the excess priority or the excess rate.

At the time of oversubscription, the queues were split into two priority groups:

- Strict-High
- High, Medium-High, Medium-Low, and Low

As an enhancement to the intelligent oversubscription feature on SONET/SDH OC48/STM16 IQE PICs, support for maximum bandwidth optimization is increased to 300 percent with an additional priority group being created for all queues marked with low priority.

When the sum of transmission rates for all queues exceeds 100 percent, the interface is in an oversubscribed state. At the time of oversubscription, the queues are split into three priority groups with the intelligent oversubscription feature enhancement:

- Strict-High
- High, Medium-High, and Medium-Low
- Low

The sum of transmission rates for all queues in each of the priority groups is less than or equal to 100 percent, thereby allowing the SONET/SDH OC48/STM16 IQE PICs to support the maximum bandwidth optimization by overconfiguring the available bandwidth up to 300 percent.



NOTE: When the sum of transmission rates of all queues in any of the priority groups exceeds 100 percent, the commit fails and an error message is displayed.

When the sum of transmission rates for all queues exceeds 100 percent, the configured transmission rates are scaled down to 100 percent. This is called rebasing and is required for accurate mapping of transmission rates to the weights assigned to each queue. Weights are assigned to a queue based on the queue properties and are used to determine the distribution of available bandwidth and flow of traffic from each queue.

Configuring any of the queues with the **remainder** option on an oversubscribed SONET/SDH OC48/STM16 IQE PIC is not allowed. When a queue is configured with the **remainder** option, and the sum of transmission rates for all non-remainder queues is less than or equal to 100 percent, rebasing is not required. However, calculating the remainder transmission rate for a queue configured with the **remainder** option differs.



NOTE: The **remainder** option is not supported on an oversubscribed SONET/SDH OC48/STM16 IQE PIC. When the sum of transmission rates for all queues exceeds 100 percent, and if one or more queues are configured with the **remainder** option, a syslog error message is generated and the configuration is ignored.

Previously, the remainder calculation on a SONET/SDH OC48/STM16 IQE PIC did not include the queues specified for Strict-High priority. The remainder transmission rate was calculated by taking into consideration transmission rates for all other queues excluding the sum of transmission rates of all Strict-High queues. With the enhancement to the intelligent oversubscription on a SONET/SDH OC48/STM16 IQE PIC, the remainder transmission rate is calculated by taking into consideration the transmission rates of all other queues irrespective of the priority specified.

The rebased values are only used for assigning weights to queues, which affect the order in which the queues are serviced. If any queue that qualifies for rebasing is configured with the rate-limit option, weights are assigned to queues after applying the configured value of rate-limit for that particular queue.

As an example, sample configurations A and B in [Table 107 on page 401](#) display the need for rebasing transmission rates and **remainder** calculation.

Table 107: Rebasing Transmission Rates and remainder Calculation

Queue	Priority	Transmission rate
Configuration A		
q0	Strict-High	100%
q1	High	30%
q2	Medium-High	30%
q3	Medium-Low	30%
q4	Low	20%
q5	Low	20%
q6	Low	20%
q7	Low	remainder
Configuration B		
q0	Strict-High	30%
q1	Medium	20%
q2	Low	40%
q3	Low	remainder

In Configuration A, the sum of transmission rates of non-remainder queues (q0, q1, q2, q3, q4, q5, and q6) exceeds 100 percent, leaving the interface in an oversubscribed state. Because configuring the **remainder** option is not supported on an oversubscribed PIC,

and q7 is a remainder queue, Configuration A is ignored, although all the queues qualify for rebasing.

However, if the sum of transmission rates for all the queues exceeded 300 percent, or if the sum of transmission rates for all queues in any of the priority groups exceeded 100 percent, the configuration is ignored.

In Configuration B, the sum of transmission rates of non-remainder queues (q0, q1, and q2) is less than 100 percent. Therefore, rebasing of transmission rates is not required. Remainder calculation for q3 is done by deducting the sum of transmission rates of non-remainder queues from 100, irrespective of the priority specified. In this example, the transmission rate for q3 is $(100 - 30 - 20 - 40)$ 10%.

The support for oversubscribing the bandwidth on a SONET/SDH OC48/STM16 IQE PIC up to 300 percent increases the efficiency of networks and reduces CapEx for network operators. Large service providers have exacting performance requirements, and the impact of traffic disruptions due to congestion on an oversubscribed interface can be significant. The SONET/SDH OC48/STM16 IQE PIC virtually eliminates this risk with intelligent oversubscription capabilities that enable carriers to ensure the performance of mission-critical services on oversubscribed interfaces and routers.

Example: Configuring Transmission Rate with Intelligent Oversubscription on SONET/SDH OC48/STM16 IQE PICs

This example shows how to configure transmission rates on a sonet interface for eight forwarding classes with transmission rate values that exceed 100 percent, causing the interface to be in an oversubscribed state.

- [Requirements on page 402](#)
- [Overview and Topology on page 402](#)
- [Configuration on page 404](#)
- [Verification on page 408](#)

Requirements

This example requires the following hardware and software components:

- Networking devices using a SONET/SDH OC48/STM16 IQE PIC.
- Junos OS Release 12.2 or later running on the devices.

Before you begin:

1. Configure the device interfaces.
2. Enable class-of-service (CoS) queuing, scheduling, and shaping on the device interfaces.

Overview and Topology

Junos OS Release 12.2 and later support oversubscribing the available bandwidth on a SONET/SDH OC48/STM16 IQE PIC up to 300 percent. This optimization is achieved by

creating an additional priority group for all queues specified for low priority, and the sum of transmission rates for all the low priority queues adding up to 100 percent, independent of the transmission rate configured for all other queues.

Previously, the SONET/SDH OC48/STM16 IQE PIC supported a maximum bandwidth optimization by oversubscribing the available bandwidth up to 200 percent, by excluding the transmission rate percentage specified for the Strict-High queue from the total 100 percent transmission rate. Therefore, the transmission rate percentage for all the non-Strict-High queues added up to 100 percent. This computation was done after the internal mapping of the excess priority or the excess rate.

As an enhancement to the intelligent oversubscription feature on SONET/SDH OC48/STM16 IQE PICs, support for maximum bandwidth optimization is increased to 300 percent.

When the sum of transmission rates for all queues exceeds 100 percent, the interface is in an oversubscribed state. At the time of oversubscription, the queues are split into three priority groups with the intelligent oversubscription feature enhancement:


- Strict-High
- High, Medium-High, and Medium-Low
- Low

Each of the above priority groups can be configured to have a transmission rate oversubscription up to 100 percent. The transmission rate oversubscription value can be expressed as a percentage of the CIR or PIR value or as an absolute value.



NOTE: The **remainder** option is not supported on an oversubscribed SONET/SDH OC48/STM16 IQE PIC. When the sum of the transmission rates for all queues exceeds 100 percent, and if one or more queues are configured with the **remainder** option, a syslog error message is generated and the configuration is ignored.

In this example, Router R0 is the route on which the CoS options are configured. Routers R1 and R2 are directly connected to R0 and send traffic to R0.

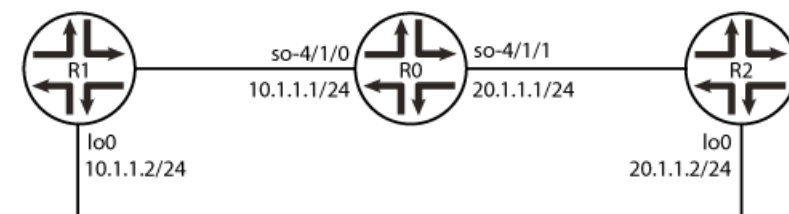

g040931

Configuration

CLI Quick Configuration To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```

R0    set class-of-service classifiers inet-precedence inet_classy forwarding-class fc0
      loss-priority low code-points 000
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc1
      loss-priority low code-points 001
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc2
      loss-priority low code-points 010
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc3
      loss-priority low code-points 011
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc4
      loss-priority low code-points 100
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc5
      loss-priority low code-points 101
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc6
      loss-priority low code-points 110
      set class-of-service classifiers inet-precedence inet_classy forwarding-class fc7
      loss-priority low code-points 111
      set class-of-service forwarding-classes class fc0 queue-num 0
      set class-of-service forwarding-classes class fc1 queue-num 1
      set class-of-service forwarding-classes class fc2 queue-num 2
      set class-of-service forwarding-classes class fc3 queue-num 3
      set class-of-service forwarding-classes class fc4 queue-num 4
      set class-of-service forwarding-classes class fc5 queue-num 5
      set class-of-service forwarding-classes class fc6 queue-num 6
      set class-of-service forwarding-classes class fc7 queue-num 7
      set class-of-service traffic-control-profiles TCP scheduler-map map_ifls
      set class-of-service traffic-control-profiles TCP shaping-rate 1g
      set class-of-service interfaces so-4/1/0 unit 0 classifiers inet-precedence inet_classy
      set class-of-service interfaces so-4/1/1 unit 0 output-traffic-control-profile TCP
      set class-of-service schedulers s0 transmit-rate percent 25
      set class-of-service schedulers s0 priority strict-high
      set class-of-service schedulers s1 transmit-rate percent 20
      set class-of-service schedulers s1 priority high
      set class-of-service schedulers s2 transmit-rate percent 15
      set class-of-service schedulers s2 priority high
      set class-of-service schedulers s3 transmit-rate percent 35
      set class-of-service schedulers s3 priority medium-high
      set class-of-service schedulers s4 transmit-rate percent 10
      set class-of-service schedulers s4 priority medium-low
      set class-of-service schedulers s5 transmit-rate percent 15
      set class-of-service schedulers s5 priority low
      set class-of-service schedulers s6 transmit-rate percent 15
      set class-of-service schedulers s6 priority low
      set class-of-service schedulers s7 transmit-rate percent 15
      set class-of-service schedulers s7 priority low
      set class-of-service scheduler-maps map_ifls forwarding-class fc0 scheduler s0
      set class-of-service scheduler-maps map_ifls forwarding-class fc1 scheduler s1
      set class-of-service scheduler-maps map_ifls forwarding-class fc2 scheduler s2
      set class-of-service scheduler-maps map_ifls forwarding-class fc3 scheduler s3

```

```

set class-of-service scheduler-maps map_ifls forwarding-class fc4 scheduler s4
set class-of-service scheduler-maps map_ifls forwarding-class fc5 scheduler s5
set class-of-service scheduler-maps map_ifls forwarding-class fc6 scheduler s6
set class-of-service scheduler-maps map_ifls forwarding-class fc7 scheduler s7

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*. To configure the R0 router:

1. Configure an IP Precedence classifier to classify incoming packets based on the code point values.

```

[edit class-of-service classifiers]
user@R0# set inet-precedence inet_classy

```

2. Define the classification of code point values to a forwarding class, and configure code point values to classify to loss priority Low.

```

[edit class-of-service classifiers inet-precedence inet_classy]
user@R0# set fc0 loss-priority low code-points 000
user@R0# set fc1 loss-priority low code-points 001
user@R0# set fc2 loss-priority low code-points 010
user@R0# set fc3 loss-priority low code-points 011
user@R0# set fc4 loss-priority low code-points 100
user@R0# set fc5 loss-priority low code-points 101
user@R0# set fc6 loss-priority low code-points 110
user@R0# set fc7 loss-priority low code-points 111

```

3. Define mapping of forwarding classes to queue numbers.

```

[edit class-of-service forwarding-classes class]
user@R0# set fc0 queue-num 0
user@R0# set fc1 queue-num 1
user@R0# set fc2 queue-num 2
user@R0# set fc3 queue-num 3
user@R0# set fc4 queue-num 4
user@R0# set fc5 queue-num 5
user@R0# set fc6 queue-num 6
user@R0# set fc7 queue-num 7

```

4. Configure traffic shaping and scheduling profiles.

```

[edit class-of-service traffic-control-profiles]
user@R0# set TCP scheduler-map map_ifls
user@R0# set TCP shaping-rate 1g

```

5. Apply the class-of-service options to interfaces.

```

[edit class-of-service interfaces]
user@R0# set so-4/1/0 unit 0 classifiers inet-precedence inet_classy
user@R0# set so-4/1/1 unit 0 output-traffic-control-profile TCP

```

6. Configure eight packet schedulers with scheduling priority and transmission rates.

```

[edit class-of-service schedulers]
user@R0# set s0 transmit-rate percent 25
user@R0# set s0 priority strict-high
user@R0# set s1 transmit-rate percent 20
user@R0# set s1 priority high

```

```
user@R0# set s2 transmit-rate percent 15
user@R0# set s2 priority high
user@R0# set s3 transmit-rate percent 35
user@R0# set s3 priority medium-high
user@R0# set s4 transmit-rate percent 0
user@R0# set s4 priority medium-low
user@R0# set s5 transmit-rate percent 15
user@R0# set s5 priority low
user@R0# set s6 transmit-rate percent 15
user@R0# set s6 priority low
user@R0# set s7 transmit-rate percent 15
user@R0# set s7 priority low
```

7. Define mapping of forwarding classes to packet schedulers.

```
[edit class-of-service scheduler-maps]
user@R0# set map_ifls forwarding-class fc0 scheduler s0
user@R0# set map_ifls forwarding-class fc1 scheduler s1
user@R0# set map_ifls forwarding-class fc2 scheduler s2
user@R0# set map_ifls forwarding-class fc3 scheduler s3
user@R0# set map_ifls forwarding-class fc4 scheduler s4
user@R0# set map_ifls forwarding-class fc5 scheduler s5
user@R0# set map_ifls forwarding-class fc6 scheduler s6
user@R0# set map_ifls forwarding-class fc7 scheduler s7
```

Results

From configuration mode, confirm your configuration by entering the **show class-of-service** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
class-of-service {
  classifiers {
    inet-precedence inet_classy {
      forwarding-class fc0 {
        loss-priority low code-points 000;
      }
      forwarding-class fc1 {
        loss-priority low code-points 001;
      }
      forwarding-class fc2 {
        loss-priority low code-points 010;
      }
      forwarding-class fc3 {
        loss-priority low code-points 011;
      }
      forwarding-class fc4 {
        loss-priority low code-points 100;
      }
      forwarding-class fc5 {
        loss-priority low code-points 101;
      }
      forwarding-class fc6 {
        loss-priority low code-points 110;
      }
      forwarding-class fc7 {
```



```
        loss-priority low code-points 111;
    }
}
forwarding-classes {
    class fc0 queue-num 0;
    class fc1 queue-num 1;
    class fc2 queue-num 2;
    class fc3 queue-num 3;
    class fc4 queue-num 4;
    class fc5 queue-num 5;
    class fc6 queue-num 6;
    class fc7 queue-num 7;
}
traffic-control-profiles {
    TCP {
        scheduler-map map_ifls;
        shaping-rate 1g;
    }
}
interfaces {
    so-4/1/0 {
        unit 0 {
            classifiers {
                inet-precedence inet_classy;
            }
        }
    }
    so-4/1/1 {
        unit 0 {
            output-traffic-control-profile TCP;
        }
    }
}
schedulers {
    s0 {
        transmit-rate percent 25;
        priority strict-high;
    }
    s1 {
        transmit-rate percent 20;
        priority high;
    }
    s2 {
        transmit-rate percent 15;
        priority high;
    }
    s3 {
        transmit-rate percent 35;
        priority medium-high;
    }
    s4 {
        transmit-rate percent 10;
        priority medium-low;
    }
    s5 {
```

```
        transmit-rate percent 15;
        priority low;
    }
    s6 {
        transmit-rate percent 15;
        priority low;
    }
    s7 {
        transmit-rate percent 15;
        priority low;
    }
}
scheduler-maps {
    map_ifls {
        forwarding-class fc0 scheduler s0;
        forwarding-class fc1 scheduler s1;
        forwarding-class fc2 scheduler s2;
        forwarding-class fc3 scheduler s3;
        forwarding-class fc4 scheduler s4;
        forwarding-class fc5 scheduler s5;
        forwarding-class fc6 scheduler s6;
        forwarding-class fc7 scheduler s7;
    }
}
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

Confirm that the configuration is working properly.

- [Verifying Queue Transmission Rate Oversubscription on page 408](#)

Verifying Queue Transmission Rate Oversubscription

Purpose Verify that the SONET/SDH OC48/STM16 IQE PIC supports 300 percent oversubscription.

Action Configure the queue transmission rates such that they are oversubscribed up to 300 percent.

The sum of transmission rates of all queues can be less than or equal to 300 percent.

The sum of transmission rates of all queues in each priority group should be less than or equal to 100 percent.

In this example, Router R0 interfaces have been oversubscribed by 150 percent of the available bandwidth. The sum of transmission rates of all the queues in each of the priority groups are:

- Strict-High—(q0) 25%
- High, Medium-High, Medium-Low—(q1, q2, q3, and q4) 80%
- Low—(q5, q6, and q7) 45%

When the sum of transmission rates of all queues in any of the priority groups exceeds 100 percent, the commit fails.

For example, if the transmission rate of q1 is 30 percent, the sum of the transmission rates of all queues (q1, q2, q3, and q4) in the High-Medium priority group is 110 percent. At the time of commit, the following error is displayed:

```
Total bandwidth allocation for high-med priority queues exceeds 100 percent for
scheduler-map map_ifls
error: configuration check-out failed
```

Meaning When the sum of transmission rates of all queues exceeds 100 percent, a new priority group is created for all Low priority queues. The queue transmission rates in the Low priority group can add up to 100 percent.

Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs

You can rate-limit all queues on SONET/SDH OC48/STM16 IQE PICs. However, overall you can have only 256 distinct policed rates. Without this limiting, traffic in higher-priority queues can block the transmission of lower-priority packets. If you do not rate-limit queues, higher-priority traffic is always sent before lower-priority traffic, causing the lower-priority queues to “starve,” which in turn leads to timeouts and unnecessary resending of packets.

On the SONET/SDH OC48/STM16 IQE PICs, you can rate-limit queues before the packets are queued for output (analogous to policing). All packets exceeding the configured rate limit are dropped, so care is required when establishing this limit. The rate-limit can be configured on the non strict-high queues also.



NOTE: When the queue transmission rates are oversubscribed, the rate-limit option configured on any of the queues uses the configured rate limit values, although the transmission rates are oversubscribed.

To rate-limit queues, include the **transmit-rate** statement with the **rate-limit** option at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
  transmit-rate percent percentage rate rate-limit;
  Priority priority-level
```

Related Documentation

- [Example: Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs on page 418](#)

Configuring Scheduling, Shaping, and Priority Mapping on SONET/SDH OC48/STM16 IQE PICs

To configure shaping, scheduling, and priority mapping on the SONET/SDH OC48/STM16 IQE PIC, include the following statements at the **[edit class-of-service]** and **[edit interfaces]** hierarchy levels of the configuration:

```

[edit class-of-service]
traffic-control-profiles profile-name {
  guaranteed-rate (percent percentage | rate);
  scheduler-map map-name;
  shaping-rate (percent percentage | rate);
}
interfaces {
  interface-name {
    unit logical-unit-number {
      dlcid dlcid-identifier;
      output-traffic-control-profile profile-name ;
    }
  }
}
schedulers {
  scheduler-name {
    buffer-size (seconds | percent percentage | remainder | temporal microseconds);
    excess-priority value ;
    excess-rate percent percentage
    priority priority-level;
    transmit-rate (percent percentage | rate | remainder) < rate-limit>;
  }
}

[edit interfaces interface-name]
per-unit-scheduler;

```



NOTE:

- As indicated in the configuration, the scheduler-map and shaping-rate statements can be included at the [edit class-of-service interfaces interface-name unit logical-unit-number] hierarchy level. However, we do not recommend this configuration. Include the output-traffic-control-profile statement instead.
- The excess-rate or the excess-priority statements are mapped for a specific configuration and are ignored otherwise. These two statements are enabled only for the configuration similarity with the other IQE PICs configuration statements.

Related
Documentation

- [Example: Priority Mapping on SONET/SDH OC48/STM16 IQE PICs on page 413](#)

Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs

MDRR configuration on the SONET/SDH OC48/STM16 IQE PIC is the same as the MDRR configuration on the Enhanced Queuing DPC. For more information about MDRR configuration on the Enhanced Queuing DPC, see [“Configuring MDRR on Enhanced Queuing DPCs” on page 438](#).

Configuring WRED on SONET/SDH OC48/STM16 IQE PICs

WRED configuration on the SONET/SDH OC48/STM16 IQE PIC is the same as the WRED configuration on the Enhanced Queuing DPC. For more information about WRED configuration on the Enhanced Queuing DPC, see [“Configuring WRED on Enhanced Queuing DPCs” on page 437](#).

Configuring Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs

Excess bandwidth sharing configuration on SONET/SDH OC48/STM16 IQE PIC is the same as the excess bandwidth sharing on Enhanced Queuing DPC. For more information about excess bandwidth sharing configuration, see [“Configuring Excess Bandwidth Sharing” on page 440](#).

Configuring Rewrite Rules on SONET/SDH OC48/STM16 IQE PIC

To configure a rewrite rules mapping and associate it with the appropriate forwarding class and code-point alias or bit set, include the **rewrite-rules** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
rewrite-rules {
  (dscp | dscp-ipv6 | exp | inet-precedence) rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point (alias | bits);
    }
  }
}
```



NOTE: The egress rewrite on the **dscp**, **dscp-ipv6**, **exp**, or **inet-precedence** field is done by the Packet Forwarding Engine based on the features it supports.

Related Documentation

- [CoS Inputs and Outputs Overview on page 9](#)
- [Egress Rewrite on SONET/SDH OC48/STM16 IQE PICs on page 396](#)

Configuring Forwarding Classes on SONET/SDH OC48/STM16 IQE PIC

To configure the forwarding class, you assign each forwarding class to an internal queue number by including the **forwarding-classes** statement at the **[edit class-of-service]** hierarchy level:

To configure CoS forwarding classes, include the **forwarding-classes** statement at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
forwarding-classes {
  class class-name queue-num queue-number priority (high | low);
}
```

```

    queue queue-number class-name priority (high | low);
  }
  forwarding-classes-interface-specific forwarding-class-map-name {
    class class-name queue-num queue-number [ restricted-queue queue-number ];
  }
  interfaces {
    interface-name {
      unit logical-unit-number {
        forwarding-class class-name;
        forwarding-classes-interface-specific forwarding-class-map-name;
      }
    }
  }
  restricted-queues {
    forwarding-class class-name queue queue-number;
  }

```

You cannot commit a configuration that assigns the same forwarding class to two different queues.

Related Documentation

- [Configuring Forwarding Classes on page 128](#)

Example: Transmit Rate Adding Up to More than 100 Percent

In the following example, **ef** is an expedited forwarding traffic queue; **nc** is a network control traffic queue; **af_01**, **af_02**, **af_03**, and **af_04** are assured forwarding traffic queues; and **be** is a best effort forwarding queue. **so-2/2/0 unit 0** is the logical interface.

```

[edit class-of-service]
  traffic-control profiles tcp {
    shaping-rate 300M;
  }
  interfaces {
    so-2/2/0 {
      unit 0 {
        output-traffic-control-profiles tcp;
      }
    }
    schedulers {
      ef {
        transmit-rate percent 50 rate-limit;
        priority strict-high;
      }
      nc {
        transmit-rate percent 5;
        priority high;
      }
      af_04 {
        transmit-rate percent 20;
        priority medium;
      }
      af_03 {
        transmit-rate percent 35;
        priority low;
      }
    }
  }

```

```

    }
    af_02 {
        transmit-rate percent 30;
        priority low;
    }
    af_01 {
        transmit-rate percent 9;
        priority low;
    }
    be {
        transmit-rate percent 1;
        priority low;
    }
}

```

The **ef** and the **nc** queues are at the same priority. Therefore, both these queues take precedence over all the other queues. The **ef** queue consumes 100 Mbps (50 percent of the CIR; that is, 50 percent of 200 Mbps) bandwidth. The remaining 200 Mbps is rate limited. The **nc** queue continues to consume the bandwidth till the logical interface reaches its CIR of 200 Mbps. Therefore, the **nc** queue gets 100 Mbps bandwidth. When the logical interface reaches its CIR, all queues transition into the excess region and the scheduler allocates the remaining bandwidth to the non-expedited forwarding queues based on their default excess priorities and default excess rates (same as the transmit rates).

As per the priority mapping table in “MDRR on SONET/SDH OC48/STM16 IQE PICs” on page 396, all the non-strict-high queues are in the same excess priority (in this case, low priority), these non-strict-high queues get the bandwidth out of the remaining 100 Mbps in the ratio of 5: 20:35:30:9:1 till the logical interface consumes its shaping rate of 300 Mbps. Thus, the non-strict-high queues add up to 100 percent of bandwidth utilization to optimize the bandwidth usage.

- Related Documentation**
- [CoS on SONET/SDH OC48/STM16 IQE PIC Overview on page 388](#)
 - [Scheduling and Shaping on SONET/SDH OC48/STM16 IQE PICs on page 391](#)

Example: Priority Mapping on SONET/SDH OC48/STM16 IQE PICs

In the following example, **ef** is an expedited forwarding traffic queue; **af_01**, **af_02**, **af_03**, and **af_04** are assured forwarding traffic queues; **be** is a best effort forwarding queue; and **nc** is a network control traffic queue.

```

[edit class-of-service]
traffic-control profiles tcp {
    shaping-rate 300M;
}
[edit class-of-service]
interfaces {
    so-2/2/0 {
        unit 0 {
            output-traffic-control-profiles tcp;
        }
    }
}

```

```
schedulers {  
  ef {  
    transmit-rate percent 50 rate-limit;  
    buffer-size percent 5;  
    priority strict-high;  
  }  
  nc {  
    transmit-rate percent 0;  
    excess-rate percent 5;  
    buffer-size percent 5;  
    priority low;  
    excess-priority high;  
  }  
  af_01 {  
    transmit-rate percent 0;  
    excess-rate percent 20;  
    buffer-size percent 18;  
    priority low;  
    excess-priority low;  
  }  
  af_02 {  
    transmit-rate percent 0;  
    excess-rate percent 35;  
    buffer-size percent 18;  
    priority low;  
    excess-priority low;  
  }  
  af_03 {  
    transmit-rate percent 0;  
    excess-rate percent 30;  
    buffer-size percent 18;  
    priority low;  
    excess-priority low;  
  }  
  af_04 {  
    transmit-rate percent 0;  
    excess-rate percent 9;  
    buffer-size percent 18;  
    priority low;  
    excess-priority low;  
  }  
  be {  
    transmit-rate percent 0;  
    excess-rate percent 1;  
    buffer-size percent 18;  
    priority low;  
    excess-priority low;  
  }  
}
```


Table 108: Priority Mapping and Output Calculation for Different Queues on the SONET/SDH OC48/STM16 IQE PIC

Queue	Priority	Transmit Rate	Excess Priority on the SONET/SDH OC48/STM16 IQE PIC (Mapped to Guaranteed Priority)	Excess Rate on the SONET/SDH OC48/STM16 IQE PIC (Mapped to Transmit Rate)	Input (Mbps)	Output (Mbps)
ef	Strict-high	50 (50% of PIR=150 Mbps)	Not applicable	Not applicable	300	150
nc	Low	0	Excess high	5	300	150
af_01	Low	0	Excess low	20	300	0
af_02	Low	0	Excess low	35	300	0
af_03	Low	0	Excess low	30	300	0
af_04	Low	0	Excess low	9	300	0
be	Low	0	Excess low	1	300	0

As shown in [Table 108 on page 415](#), the **ef** queue takes precedence over all queues and consumes 150 Mbps (50 percent of the PIR; that is, half of 300 Mbps) bandwidth. The remaining 150 Mbps is rate limited. The **af_01**, **af_02**, **af_03**, **af_04** and the **be** queues do not get any bandwidth.

Because the rate limit is not configured on the **nc** queue, and it has the excess high priority, the **nc** queue consumes the remaining bandwidth of 150 Mbps.

Related Documentation

- [CoS on SONET/SDH OC48/STM16 IQE PIC Overview on page 388](#)
- [Configuring MDRR on Enhanced Queuing DPCs on page 438](#)

Example: Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs

The following example translates incoming DSCP values to the new values listed in the translation table. All incoming DSCP values other than 111111, 111110, 000111, and 100111 are translated to 000111.

```
[edit class-of-service]
translation-table {
  to-dscp-from-dscp dscp-trans-table {
    to-code-point 000000 from-code-points 111111;
    to-code-point 000001 from-code-points 111110;
    to-code-point 111000 from-code-points [ 000111 100111 ];
    to-code-point 000111 from-code-points *;
  }
}
```

You must apply the translation table to the logical interface input on the SONET/SDH OC48/STM16 IQE PIC:

```
[edit class-of-service interfaces so-1/0/0 unit 0]
translation-table to-dscp-from-dscp dscp-trans-table;
```

If you try to configure mutually exclusive translation tables on the same interface unit, you get a warning message when you display or commit the configuration:

```
so-0/1/1 {
  unit 0 {
    translation-table {
      ##
      ## Warning: to-dscp-from-dscp and
to-inet-precedence-from-inet-precedence not allowed on same unit
      ##
      to-inet-precedence-from-inet-precedence inet-trans-table;
      to-dscp-from-dscp dscp-trans-table;
    }
  }
}
```

You can issue the following operational mode commands to verify your configuration:

- **show class-of-service translation-table**
- **show class-of-service interface *interface-name***

To verify that the correct values are configured, use the **show class-of-service translation-table** command. The **show class-of-service translation-table** command displays the code points of all translation tables configured. All values are displayed, not just those configured:

```
user@host> show class-of-service translation-table
Translation Table: dscp-trans-table, Translation table type: dscp-to-dscp, Index:
6761
  From Code point    To Code Point
000000              000111
000001              000111
000010              000111
000011              000111
000100              000111
000101              000111
000110              000111
000111              111000
001000              000111
001001              000111
001010              000111
001011              000111
001100              000111
001101              000111
001110              000111
001111              000111
010000              000111
010001              000111
010010              000111
010011              000111
010100              000111
010101              000111
010110              000111
```

010111	000111
011000	000111
011001	000111
011010	000111
011011	000111
011100	000111
011101	000111
011110	000111
011111	000111
100000	000111
100001	000111
100010	000111
100011	000111
100100	000111
100101	000111
100110	000111
100111	111000
101000	000111
101001	000111
101010	000111
101011	000111
101100	000111
101101	000111
101110	000111
101111	000111
110000	000111
110001	000111
110010	000111
110011	000111
110100	000111
110101	000111
110110	000111
110111	000111
111000	000111
111001	000111
111010	000111
111011	000111
111100	000111
111101	000111
111110	000001
111111	000000

To verify that the configured translation table is applied to the correct interface, use the **show class-of-service interface *interface-name*** command. The **show class-of-service interface *interface-name*** command displays the translation tables applied to the IQE interface:

```
user@host> show class-of-service interface so-2/3/0
```

```
Logical interface: so-2/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	29
Classifier	dscp-default	dscp	7
Classifier	exp-default	exp	10
Translation Table	exp-trans-table	EXP_TO_EXP	61925

ToS translation on the SONET/SDH OC48/STM16 IQE PIC is a form of behavior aggregate (BA) classification. The SONET/SDH OC48/STM16 IQE PIC does not support multifield classification of packets at the PIC level. For more information about multifield classification, see [“Multifield Classifier Overview” on page 76](#).

Related Documentation

- [Configuring Translation Tables on SONET/SDH OC48/STM16 IQE PICs on page 397](#)

Example: Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs

This example limits the transmit rate of a strict-high expedited forwarding queue to 1 megabit per second (Mbps). The scheduler and scheduler map are defined and then applied to the traffic at the **[edit interfaces]** and **[edit class-of-service]** hierarchy levels:

```
[edit class-of-service]
schedulers {
  scheduler-1 {
    transmit-rate 1m rate-limit; # This establishes the limit
    priority strict-high;
  }
}
scheduler-maps {
  scheduler-map-1 {
    forwarding-class expedited-forwarding scheduler scheduler-1;
  }
}

[edit interfaces]
so-2/1/0 {
  per-unit-scheduler;
  encapsulation frame-relay;
  unit 0 {
    dlci 1;
  }
}

[edit class-of-service]
interfaces {
  so-2/1/0 {
    unit 0 {
      scheduler-map scheduler-map-1;
      shaping-rate 2m;
    }
  }
}
```

You can issue the following operational mode commands to verify your configuration (the first shows the rate limit in effect):

- **show class-of-service scheduler-map *scheduler-map-name***
- **show class-of-service interface *interface-name***

Related Documentation • [Configuring Rate Limits on SONET/SDH OC48/STM16 IQE PICs on page 409](#)

Example: Configuring a CIR and a PIR on SONET/SDH OC48/STM16 IQE Interfaces

On SONET/SDH OC48/STM16 IQE interfaces, you can configure a CIR (guaranteed rate) and a PIR (shaping rate) on a single logical interface. The configured rates are gathered into a traffic control profile. If you configure a traffic control profile with a CIR (guaranteed rate) only, the PIR (shaping rate) is set to the physical interface (port) rate.



NOTE: CIR and PIR are not supported at the queue level.

In the following example, logical unit 0 has a CIR equal to 30 Mbps and a PIR equal to 200 Mbps. Logical unit 1 has a PIR equal to 300 Mbps. Logical unit 2 has a CIR equal to 100 Mbps and a PIR that is unspecified. For logical unit 2, the software gives the PIR the value of 1 Gbps (equal to the physical interface rate) because the PIR must be equal to or greater than the CIR.

In this example, bandwidth is shared proportionally to the guaranteed rate because at least one logical interface has a guaranteed rate.

```
class-of-service {
  traffic-control-profiles {
    profile1 {
      shaping-rate 200m;
      guaranteed-rate 30m;
      delay-buffer-rate 150m;
      scheduler-map sched-map;
    }
    profile2 {
      shaping-rate 300m;
      delay-buffer-rate 500k;
      scheduler-map sched-map;
    }
    profile3 {
      guaranteed-rate 100m;
      scheduler-map sched-map;
    }
  }
  interfaces {
    se-3/0/0 {
      unit 0 {
        output-traffic-control-profile profile1;
      }
      unit 1 {
        output-traffic-control-profile profile2;
      }
      unit 2 {
        output-traffic-control-profile profile3;
      }
    }
  }
}
```

```
}
```

**Related
Documentation**

- [Excess Bandwidth Sharing on SONET/SDH OC48/STM16 IQE PICs on page 396](#)

Example: Configuring MDRR on SONET/SDH OC48/STM16 IQE PICs

MDRR configuration on the SONET/SDH OC48/STM16 IQE PIC is same as the MDRR configuration on the Enhanced Queuing DPC. For more information about MDRR configuration on the Enhanced Queuing DPC, see [“Configuring MDRR on Enhanced Queuing DPCs” on page 438](#).

Example: Configuring WRED on SONET/SDH OC48/STM16 IQE PICs

WRED configuration on the SONET/SDH OC48/STM16 IQE PIC is same as the WRED configuration on the Enhanced Queuing DPC. For more information about WRED configuration on the Enhanced Queuing DPC, see [“Configuring WRED on Enhanced Queuing DPCs” on page 437](#).

CHAPTER 21

Configuring CoS on 10-Gigabit Ethernet LAN/WAN PICs with SFP+

This chapter discusses the following topics:

- CoS on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview on page 421
- DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ on page 422
- Configuring DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC on page 425
- BA and Fixed Classification on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview on page 426
- Example: Configuring IEEE 802.1p BA Classifier on 10-Gigabit Ethernet LAN/WAN PICs on page 427
- Queuing on 10-Gigabit Ethernet LAN/WAN PICs Properties on page 428
- Example: Mapping Forwarding Classes to CoS Queues on 10-Gigabit Ethernet LAN/WAN PICs on page 428
- Scheduling and Shaping on 10-Gigabit Ethernet LAN/WAN PICs Overview on page 429
- Example: Configuring Shaping Overhead on 10-Gigabit Ethernet LAN/WAN PICs on page 430

CoS on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview

The 10-Gigabit Ethernet LAN/WAN PIC with SFP+ supports intelligent handling of oversubscribed traffic in applications, such as data centers and dense-core uplinks. The 10-Gigabit Ethernet LAN/WAN PIC with SFP+ supports line-rate operation for five 10-Gigabit Ethernet ports from each port group or a total WAN bandwidth of 100 Gbps with Packet Forwarding Engine bandwidth of 50 Gbps.



NOTE: This PIC has a front panel label with the designation “ETHERNET 10GBASE-SFP+ LAN-WAN” and can also be identified by its model number, PD-5-10XGE-SFPP. It is referred to hereafter as the 10-Gigabit Ethernet LAN/WAN PIC.

The class-of-service (CoS) configuration for the 10-Gigabit Ethernet LAN/WAN PICs are supported on standalone T640 and T1600 core routers, as well as T640 and T1600

routers in a routing matrix. The 10-Gigabit Ethernet LAN/WAN PICs support behavior aggregate (BA) and fixed classification, weighted round-robin scheduling with two queue priorities (low and strict-high), committed and peak information rate shaping on a per-queue basis, and excess information rate configuration for allocation of excess bandwidth.

To configure these features, include the corresponding class-of-service (CoS) statements at the **[edit class-of-service]** hierarchy level. The CoS statements supported on the 10-Gigabit Ethernet LAN/WAN PICs are shown in [Table 109 on page 422](#).

Table 109: CoS Statements Supported on the 10-Gigabit Ethernet LAN/WAN PICs

CoS Statements	Supported
<code>buffer-size</code>	No
<code>drop-profile-map</code>	No
<code>excess-priority</code>	No
<code>excess-rate</code>	Yes
<code>priority</code>	Yes
<code>shaping-rate</code>	Yes
<code>transmit-rate</code>	Yes

For information about CoS components that apply generally to all interfaces, see [“Hardware Capabilities and Limitations” on page 289](#). For general information about configuring interfaces, see the Junos® OS Network Interfaces.

DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC with SFP+

The 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (Model Number: PD-5-10XGE-SFPP) in T640 and T1600 standalone routers and TX Matrix and TX Matrix Plus routing matrices supports 6-bit DSCP rewrite (IPv4 and IPv6) functionality. The following DSCP rewrite features are supported:

- Full 6-bit DSCP rewrite
- Independent rewrite for DSCPv4 and DSCPv6 simultaneously on the same logical interface
- Four tables per PIC for DSCPv4 and DSCPv6, respectively
- Rewrite based on queue number rather than forwarding class. Queues are mapped to a forwarding class by using the global **forwarding-class** configuration on the router.

- Ability to bind multiple (maximum of all) logical interfaces on the PIC to the same rewrite table.
- Ability of DSCP rewrite on the PIC to configure, by default, code-point 000000 if you do not specify a classifier in the **rewrite-rules** statement.

**NOTE:**

The 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (P/N: PD-5-10XGE-SFPP), when used in T640 and T1600 standalone routers, and T640 and T1600 routers in TX Matrix and TX Matrix Plus routing matrices, has the following known limitations:

- DSCP rewrite on the PIC does not support distinct DSCP code-point rewrites if multiple forwarding classes (FC) are configured to map to the same queue in the “forwarding-class” configuration.
- The PIC can perform DSCP rewrite based on three PLP values, unlike four PLP values by the Packet Forwarding Engine.
- The protocol option is not supported in the following DSCP rewrite rule configuration:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]  
rewrite-rules {  
    dscp (rewrite-name | <default>) protocol <protocol-types>;  
}
```

- The PIC has the ability to parse a packet with up to two VLAN tags. However, the following conditions apply when DSCP rewrite is enabled:
 - The PIC supports DSCP rewrite only for untagged and single VLAN tagged packets.
 - For DSCP rewrite in conjunction with VLAN rewrite push operations, the PIC can push only one tag if the packet is untagged.
 - If the packet has more than one VLAN tag (either because it was double tagged or because additional tags were pushed as part of a VLAN rewrite), then DSCP rewrite is not executed.
- Configuration of DSCP rewrite rules on the PIC overwrites the DSCP value coming from the Routing Engine for host-generated traffic. The behavior is as follows:
 - If the packet's forwarding class and packet loss priority (PLP) match the DSCP rewrite rule on the PIC, then the DSCP code-point rewritten by the `host-outbound-traffic` statement is overwritten by the PIC's DSCP rewrite with the corresponding DSCP code-point configured in the rewrite rule.
 - If the packet's forwarding class and PLP do not match any DSCP rewrite rule on the PIC, then the DSCP code-point rewritten by the `host-outbound-traffic` statement is overwritten by the PIC's DSCP rewrite as 6b'000000.

This behavior is different from DSCP rewrites done in the Packet Forwarding Engine for other PICs. In those cases, the Packet Forwarding Engine processing is bypassed for host-generated packets and hence the DSCP set in the Routing Engine for host-generated packets is not overwritten in the Packet Forwarding Engine or PIC.

- If multiple forwarding classes map to the same queue, then the last forwarding class that maps to the same queue is picked and its code-point is used for DSCP rewrite.
- If both medium-high and medium-low PLP values are configured in the rewrite rule and if their rewrite code-points are different, then the code-point associated with medium-high is used for rewrite for both medium-high and medium-low packets on that logical interface. If only one of the PLP values (either medium-high or medium-low) is configured, then its corresponding code-point is used for rewrite for both medium-high and medium-low packets on that logical interface.



NOTE: A system error message can result if a configuration that conflicts with these limitations is committed or used.

Related Documentation

- [Configuring DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC on page 425](#)
- [dscp on page 585](#)
- [dscp-ipv6 on page 587](#)
- [forwarding-class on page 609](#)
- [rewrite-rules on page 691](#)
- [Understanding DSCP Classification for VPLS on page 66](#)
- [Default DSCP and DSCP IPv6 Classifier on page 46](#)

Configuring DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC

To configure DSCP rewrite, use the **rewrite-rules** statement at the **class-of-service interfaces** *interface-name* unit *logical-unit-number* hierarchy level, as shown in the following configuration example:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
rewrite-rules {
  dscp (rewrite-name | <default>);
  dscp-ipv6 (rewrite-name | <default>);
  exp (rewrite-name | <default>) protocol <protocol-types>;
  exp-push-push-push <default>;
  exp-swap-push-push <default>;
  ieee-802.1 (rewrite-name | <default>) vlan-tag (outer | outer-and-inner);
  inet-precedence (rewrite-name | <default>) protocol <protocol-types>;
}
```

To configure DSCP rewrite rules, use the **rewrite-rules** statement's (<dscp> | <dscp-ipv6>) option's subordinate rewrite rules statements at the **edit class-of-service** hierarchy level, as shown in the following configuration example:

```
[edit class-of-service]
```

```

rewrite-rules {
  (<dscp> | <dscp-ipv6> | <exp> | <ieee-802.1> | <inet-precedence>) <rewrite-name> {
    import (rewrite-name | <default>);
    forwarding-class class-name {
      loss-priority level code-point (alias | bits);
    }
  }
}

```

Related Documentation

- [DSCP Rewrite for the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ on page 422](#)
- [dscp on page 585](#)
- [dscp-ipv6 on page 587](#)
- [forwarding-class on page 609](#)
- [rewrite-rules on page 691](#)
- [Understanding DSCP Classification for VPLS on page 66](#)
- [Default DSCP and DSCP IPv6 Classifier on page 46](#)

BA and Fixed Classification on 10-Gigabit Ethernet LAN/WAN PIC with SFP+ Overview

The 10-Gigabit Ethernet LAN/WAN PICs support the following behavior aggregate (BA) classifiers:

- DSCP, DSCP IPv6, or IP precedence—IP packet classification (Layer 3 headers)
- MPLS EXP—MPLS packet classification (Layer 2 headers)
- IEEE 802.1p—Packet classification (Layer 2 headers)
- IEEE 802.1ad—Packet classification for IEEE 802.1ad formats (including DEI bit)

Multiple classifiers can be configured to a single logical interface. However, there are some restrictions on which the classifiers can coexist. For example, the DSCP and IP precedence classifiers cannot be configured on the same logical interface. The DSCP and IP precedence classifiers can coexist with the DSCP IPv6 classifier on the same logical interface. An IEEE 802.1 classifier can coexist with other classifiers and is applicable only if a packet does not match any of the configured classifiers. For information about the supported combinations, see [“Applying Classifiers to Logical Interfaces” on page 52](#).

If the classifiers are not defined explicitly, then the default classifiers are applied as follows:

- All MPLS packets are classified using the MPLS (EXP) classifier. If there is no explicit MPLS (EXP) classifier, then the default MPLS (EXP) classifier is applied.
- All IPv4 packets are classified using the IP precedence and DSCP classifiers. If there is no explicit IP precedence and DSCP classifiers, then the default IP precedence classifier is applied.

- All IPv6 packets are classified using DSCP IPv6 classifier. If there is no explicit DSCP IPv6 classifier, then the default DSCP IPv6 classifier is applied.
- If the IEEE 802.1p classifier is configured and a packet does not match any explicitly configured classifier, then the IEEE 802.1p classifier is applied.

The fixed classification matches the traffic on a logical interface level. The following example classifies all traffic on logical unit zero to the queue corresponding to assured forwarding.

```
[edit class-of-service interfaces xe-0/1/2 unit 0]
forwarding-class fc-af11;
```



NOTE: The 10-Gigabit Ethernet LAN/WAN PICs do not support multifield classification. However, the multifield classification can be done at the Packet Forwarding Engine using the firewall filters, which overrides the classification done at the PIC level. The multifield classification at the Packet Forwarding Engine occurs after the PIC handles the oversubscribed traffic.

Example: Configuring IEEE 802.1p BA Classifier on 10-Gigabit Ethernet LAN/WAN PICs

To configure an IEEE 802.1p behavior aggregate (BA) classifier on the 10-Gigabit Ethernet LAN/WAN PICs, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service classifiers]
ieee-802.1 classifier-name {
  forwarding-class fc-nc2 {
    loss-priority low code-points [111];
  }
  forwarding-class fc-nc1 {
    loss-priority low code-points [110];
  }
  forwarding-class fc-af12 {
    loss-priority low code-points [101];
  }
  forwarding-class fc-af11 {
    loss-priority low code-points [100];
  }
  forwarding-class fc-ef1 {
    loss-priority low code-points [011];
  }
  forwarding-class fc-ef {
    loss-priority low code-points [010];
  }
  forwarding-class fc-be1 {
    loss-priority low code-points [001];
  }
  forwarding-class fc-be {
    loss-priority low code-points [000];
  }
}
```

```
[edit class-of-service interfaces xe-0/1/2 unit 0]
classifiers {
  ieee-802.1 classifier-name;
}
```



NOTE: The 10-Gigabit Ethernet LAN/WAN PICs do not support queuing at the logical interface level. However, the classifiers can be configured to the individual logical interfaces. The same classifier can be configured to the multiple logical interfaces.

Queuing on 10-Gigabit Ethernet LAN/WAN PICs Properties

The 10-Gigabit Ethernet LAN/WAN PICs have the following features to support queuing:

- Committed and peak information rate shaping on a per-queue basis
- Excess information rate configuration for allocation of excess bandwidth
- Ingress queuing based on behavior aggregate (BA) classification
- Egress queuing at the Packet Forwarding Engine and at the PIC level

The Packet Forwarding Engine egress queues are shared by two physical interfaces in a port group.

- Weighted round-robin (WRR) scheduling with two queue priorities (low and strict-high)
- Two special queues available in ingress, one per physical interface, called *control queues*

Layer 2 and Layer 3 control protocol packets (OSPF, OSPF3, VRRP, IGMP, RSVP, PIM, BGP, BFD, LDP, ISIS, RIP, RIPV6, LACP, ARP, IPv6 NDP, CFM, and LFM) are mapped to the control queue. In the control queue, these packets are not dropped even if there is oversubscription or congestion on a port group.



NOTE: The control queue is rate-limited to 2 Mbps per physical interface. The packets in excess of 2 Mbps are dropped and accounted for.

Example: Mapping Forwarding Classes to CoS Queues on 10-Gigabit Ethernet LAN/WAN PICs

The 10-Gigabit Ethernet LAN/WAN PICs support eight CoS queues per port in the egress direction. To map forwarding classes to the eight CoS queues in egress, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service forwarding-classes] {
  class fc-be queue-num 0;
  class fc-be1 queue-num 1;
  class fc-ef queue-num 2;
  class fc-ef1 queue-num 3;
  class fc-af11 queue-num 4;
```

```

class fc-af12 queue-num 5;
class fc-nc1 queue-num 6;
class fc-nc2 queue-num 7;
}

```

The 10-Gigabit Ethernet LAN/WAN PICs support four ingress queues per physical interface. The PICs use restricted-queues configuration to map multiple forwarding classes to the four queues. There are no queues at the logical interface level. In the following example, two forwarding classes are mapped to one queue.

```

[edit class-of-service restricted-queues] {
  forwarding-class fc-be queue-num 0;
  forwarding-class fc-be1 queue-num 0;
  forwarding-class fc-ef queue-num 1;
  forwarding-class fc-ef1 queue-num 1;
  forwarding-class fc-af11 queue-num 2;
  forwarding-class fc-af12 queue-num 2;
  forwarding-class fc-nc1 queue-num 3;
  forwarding-class fc-nc2 queue-num 3;
}

```

Scheduling and Shaping on 10-Gigabit Ethernet LAN/WAN PICs Overview

The 10-Gigabit Ethernet LAN/WAN PIC has ten 10-Gigabit Ethernet ports providing 100 Gbps of WAN bandwidth and 50 Gbps of Packet Forwarding Engine bandwidth. On the ingress side of the 10-Gigabit Ethernet LAN/WAN PIC, two consecutive physical interfaces on the PICs are grouped together into a port group and are serviced by a single scheduler. The port groups are as shown in [Table 110 on page 429](#):

Table 110: Port Groups on 10-Gigabit Ethernet LAN/WAN PICs

Port Group	Mapped Ports
Group 1	<i>xe-fpc/pic/0</i> <i>xe-fpc/pic/1</i>
Group 2	<i>xe-fpc/pic/2</i> <i>xe-fpc/pic/3</i>
Group 3	<i>xe-fpc/pic/4</i> <i>xe-fpc/pic/5</i>
Group 4	<i>xe-fpc/pic/6</i> <i>xe-fpc/pic/7</i>
Group 5	<i>xe-fpc/pic/8</i> <i>xe-fpc/pic/9</i>

The two physical interfaces in a port group share 10 Gbps bandwidth towards the Packet Forwarding Engine. A scheduler has eight class-of-service (CoS) queues and two control queues. On the ingress side of the 10-Gigabit Ethernet LAN/WAN PIC, the eight CoS queues are split four plus four for the two physical interfaces. Thus, the 10-Gigabit Ethernet LAN/WAN PIC supports four ingress queues and eight egress queues per physical interface.

At the ingress side of the 10-Gigabit Ethernet LAN/WAN PIC, multiple forwarding classes can be mapped to one queue using the restricted-queue configuration. When creating a scheduler-map for the ingress queues, only one forwarding class should be chosen from the multiple forwarding classes that map to the same queue. Then, the scheduler-map can be specified using the **set class-of-service scheduler-maps *map-name* forwarding-class *class-name* scheduler *scheduler*** command.

The 10-Gigabit Ethernet LAN/WAN PICs manage packet buffering internally and no configuration is required.



NOTE: The delay-bandwidth buffering configuration is not supported on the 10-Gigabit Ethernet LAN/WAN PICs.

Example: Configuring Shaping Overhead on 10-Gigabit Ethernet LAN/WAN PICs

By default, the 10-Gigabit Ethernet LAN/WAN PIC uses 20 bytes as the shaping overhead. This includes 8 bytes preamble and 12 bytes interpacket gap (IPG) in shaper operations. To exclude this overhead, it should be configured as –20 bytes. The shaping overhead value can be set between 0 and 31 bytes, as shown in the following example. This range translates to a CLI range of –20 to 11 bytes for the shaping overhead configuration.

```
show chassis
  fpc 6 {
    pic 0 {
      traffic-manager {
        ingress-shaping-overhead -20;
        egress-shaping-overhead -20;
      }
    }
  }
```



NOTE: When the configuration for the overhead bytes on a PIC are changed, the PIC is taken offline and then brought back online. In addition, the configuration in the CLI is on a per-PIC basis, and thus, applies to all the ports on the PIC.

Configuring CoS on Enhanced Queuing DPCs

This topic discusses the following:

- [Enhanced Queuing DPC Hardware Properties on page 431](#)
- [Configuring Rate Limits on Enhanced Queuing DPCs on page 434](#)
- [Configuring Simple Filters on Enhanced Queuing DPCs on page 435](#)
- [Configuring WRED on Enhanced Queuing DPCs on page 437](#)
- [Configuring MDRR on Enhanced Queuing DPCs on page 438](#)
- [Configuring Excess Bandwidth Sharing on page 440](#)
- [Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445](#)
- [Configuring Customer VLAN \(Level 3\) Shaping on Enhanced Queuing DPCs on page 446](#)

Enhanced Queuing DPC Hardware Properties

On a Juniper Networks MX Series 3D Universal Edge Router with Enhanced Queuing Dense Port Concentrators (DPCs), you can configure schedulers and queues. You can configure 15 VLAN sets per Gigabit Ethernet (1G) port and 255 VLAN sets per 10-Gigabit Ethernet (10G) port. The Enhanced Queuing DPC performs priority propagation from one hierarchy level to another and drop statistics are available on the Enhanced Queuing DPC per color per queue instead or just per queue.

Juniper Networks MX Series 3D Universal Edge Routers with Enhanced Queuing DPCs have Packet Forwarding Engines that can support up to 515 MB of frame memory, and packets are stored in 512-byte frames. [Table 111 on page 431](#) compares the major properties of the Intelligent Queuing 2 (IQ2) PIC and the Packet Forwarding Engine within the Enhanced Queuing DPC.

Table 111: IQ2 PIC and Enhanced Queuing DPC Compared

Feature	IQ2 PIC	Packet Forwarding Engine Within Enhanced Queuing DPC
Number of usable queues	8,000	16,000

Table 111: IQ2 PIC and Enhanced Queuing DPC Compared (*continued*)

Feature	IQ2 PIC	Packet Forwarding Engine Within Enhanced Queuing DPC
Number of shaped logical interfaces	1,000 with 8 queues each.	2,000 with 8 queues each, or 4,000 with 4 queues each.
Number of hardware priorities	2	4
Priority propagation	No	Yes
Dynamic mapping	No: schedulers/port are fixed.	Yes: schedulers/port are not fixed.
Drop statistics	Per queues	Per queue per color (PLP high, low)

In addition, the Enhanced Queuing DPC features support for hierarchical weighted random early detection (WRED) and enhanced queuing on aggregated Ethernet interfaces with link protection as well.

The Enhanced Queuing DPC supports the following hierarchical scheduler characteristics:

- Shaping at the physical interface level
- Shaping and scheduling at the service VLAN interface set level
- Shaping and scheduling at the customer VLAN logical interface level
- Scheduling at the queue level

VLAN (Level 3) shaping on a 10-Gigabit Ethernet MX Series Enhanced Queuing DPC differs from the VLAN (Level3) shaping on a 1-Gigabit Ethernet Enhanced Queuing DPC. To use the VLAN (Level 3) shaping on a 10-Gigabit Ethernet MX Series Enhanced Queuing DPC, configure an interface set at the **[edit interfaces interface-set]** hierarchy level. The interface set configuration is not required for configuring a 1-Gigabit Ethernet VLANs on the same Enhanced Queuing DPC.

The Enhanced Queuing DPC supports the following features for scalability:

- 16,000 queues per Packet Forwarding Engine
- 4 Packet Forwarding Engines per DPC
 - 4000 schedulers at logical interface level (Level 3) with 4 queues each
 - 2000 schedulers at logical interface level (Level 3) with 8 queues each
- 255 schedulers at the interface set level (Level 2) per 1-port Packet Forwarding Engine on a 10-Gigabit Ethernet DPC
- 15 schedulers at the interface set level (Level 2) per 10-port Packet Forwarding Engine on a 1-Gigabit Ethernet DPC

- About 400 milliseconds of buffer delay (this varies by packet size and if large buffers are enabled)
- 4 levels of priority (strict-high, high, medium, and low)



NOTE: Including the `transmit-rate rate exact` statement at the `[edit class-of-service schedulers scheduler-name]` hierarchy level is not supported on Enhanced Queuing DPCs on MX Series routers.

The way that the Enhanced Queuing DPC maps a queue to a scheduler depends on whether 8 queues or 4 queues are configured. By default, a scheduler at level 3 has 4 queues. Level 3 scheduler X controls queue $X*4$ to $X*4+3$, so that scheduler 100 (for example) controls queues 400 to 403. However, when 8 queues per scheduler are enabled, the odd numbered schedulers are disabled, allowing twice the number of queues per subscriber as before. With 8 queues, level 3 scheduler X controls queue $X*4$ to $X*4+7$, so that scheduler 100 (for example) now controls queues 400 to 407.

You configure the `max-queues-per-interface` statement to set the number of queues at 4 or 8 at the FPC level of the hierarchy. Changing this statement results in a restart of the DPC. For more information about the `max-queues-per-interface` statement, see the Junos® OS Network Interfaces.

The Enhanced Queuing DPC maps level 3 (customer VLAN) schedulers in groups to level 2 (service VLAN) schedulers. Sixteen contiguous level 3 schedulers are mapped to level 2 when 4 queues are enabled, and 8 contiguous level 3 schedulers are mapped to level 2 when 8 queues are enabled. All of the schedulers in the group should use the same queue priority mapping. For example, if the queue priorities of one scheduler are high, medium, low, and low, then all members of this group should have the same queue priority.

Mapping of a group at level 3 to level 2 can be done at any time. However, a group at level 3 can only be unmapped from a level 2 scheduler only if all the schedulers in the group are free. Once unmapped, a level 3 group can be remapped to any level 2 scheduler. There is no restriction on the number of level 3 groups that can be mapped to a particular level 2 scheduler. There can be 256 level 3 groups, but fragmentation of the scheduler space can reduce the number of schedulers available. In other words, there are scheduler allocation patterns that might fail even though there are free schedulers.

In contrast to level-3-to-level-2 mapping, the Enhanced Queuing DPC maps level 2 (service VLAN) schedulers in a fixed mode to level 1 (physical interface) schedulers. On 40-port Gigabit Ethernet DPCs, there are 16 level 1 schedulers, and 10 of these are used for the physical interfaces. There are 256 level 2 schedulers, or 16 per level 1 scheduler. A level 1 scheduler uses level schedulers $X*16$ through $X*16+15$. So level 1 scheduler 0 uses level 2 schedulers 0 through 15, level 1 scheduler 1 uses level 2 schedulers 16 through 31, and so on. On 4-port 10-Gigabit Ethernet PICs, there is one level 1 scheduler for the physical interface, and 256 level 2 schedulers are mapped to the single level 1 scheduler.

The maximum number of level 3 (customer VLAN) schedulers that can be used is 4076 (4 queues) or 2028 (8 queues) for the 10-port Gigabit Ethernet Packet Forwarding Engine

and 4094 (4 queues) or 2046 (8 queues) for the 10-Gigabit Ethernet Packet Forwarding Engine.

Enhanced Queuing is supported on aggregated Ethernet (AE) interfaces with two links in link protection mode. However, only one link in the AE bundle can be active at a time. Traffic is shaped independently on the two links, but the member's links do not need to reside in the same Packet Forwarding Engine or the same DPC. Finally, shared schedulers are not supported on the Enhanced Queuing DPC (use hierarchical schedulers to group logical interfaces).

Related Documentation

- [Configuring Customer VLAN \(Level 3\) Shaping on Enhanced Queuing DPCs on page 446](#)

Configuring Rate Limits on Enhanced Queuing DPCs

You can rate-limit the strict-high and high queues on the Enhanced Queuing DPC. Without rate limits, traffic in higher priority queues can block the transmission of lower priority packets. Unless limited, higher priority traffic is always sent before lower priority traffic, causing the lower priority queues to “starve” and cause timeouts and unnecessarily resent packets.

On the Enhanced Queuing DPC, you can rate-limit queues before the packets are queued for output. All packets exceeding the configured rate limit are dropped, so care is required when establishing this limit. This model is also supported on IQ2 PICs. For more information about configuring CoS on IQ2 PICs, see [“CoS on Enhanced IQ2 PICs Overview” on page 363](#).



NOTE: Rate limiting is implemented differently on Enhanced Queuing DPCs and non-queuing Packet Forwarding Engines. On Enhanced Queuing DPCs, rate-limiting is implemented using a single rate two color policer. On non-queuing Packet Forwarding Engines, rate-limiting is achieved by shaping the queue to the transmit rate and keeping the queue delay buffers small to prevent too many packets from being queued once the shaping rate is reached.

To rate-limit queues, include the **transmit-rate** statement with the **rate-limit** option at the **[edit class-of-service schedulers scheduler-name]** hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
  transmit-rate rate rate-limit;
```

This example limits the transmit rate of a strict-high expedited-forwarding queue to 1 Mbps. The scheduler and scheduler map are defined, and then applied to the traffic at the **[edit interfaces]** and **[edit class-of-service]** hierarchy levels:

```
[edit class-of-service]
  schedulers {
    scheduler-1 {
      transmit-rate 1m rate-limit; # This establishes the limit
      priority strict-high;
    }
  }
```

```

}
scheduler-maps {
  scheduler-map-1 {
    forwarding-class expedited-forwarding scheduler scheduler-1;
  }
}

[edit interfaces]
so-2/2/0 {
  per-unit-scheduler;
  encapsulation frame-relay;
  unit 0 {
    dlci 1;
  }
}

[edit class-of-service]
interfaces {
  so-2/2/0 {
    unit 0 {
      scheduler-map scheduler-map-1;
      shaping-rate 2m;
    }
  }
}

```

You can issue the following operational mode commands to verify your configuration (the first shows the rate limit in effect):

- **show class-of-service scheduler-map** *scheduler-map-name*
- **show class-of-service interface** *interface-name*

Configuring Simple Filters on Enhanced Queuing DPCs

You can configure and apply a simple filter to perform multifield classification on the ingress interfaces of an MX Series router with Enhanced Queuing DPCs. These simple filters can be used to override default CoS classification parameters such as forwarding class or loss priority. Simple filters, in contrast to other firewall filters, only support a subset of the full firewall filter syntax.

To configure a simple filter, include the **simple-filter** statement at the **[edit firewall family inet]** hierarchy level:

```

[edit firewall family inet]
simple-filter filter-name {
  term term-name {
    from {
      ... match-conditions ...
    }
    then {
      forwarding-class class-name;
      loss-priority priority;
    }
  }
}

```

```

    }
  }

```

The following example configures a simple filter to detect ingress packets from various source addresses (10.1.1.1/32, 10.10.10.10/32, and 10.4.0.0/8), destination addresses (10.6.6.6/32), protocols (**tcp**), and source ports (400-500, **http**). The filter then assigns various forwarding classes and loss priorities to the filtered traffic. Finally, the filter is applied to the input side of an Enhanced Queuing DPC interface (**ge-2/3/3**).

```

[edit]
firewall {
  family inet {
    simple-filter sf-for-eq-dpc {
      term 1 {
        from {
          source-address 10.1.1.1/32;
          protocol tcp;
        }
        then loss-priority low;
      }
      term 2 {
        from {
          source-address 10.4.0.0/8;
          source-port http;
        }
        then loss-priority high;
      }
      term 3 {
        from {
          destination-address 10.6.6.6/32;
          source-port 400-500;
        }
        then {
          loss-priority low;
          forwarding-class best-effort;
        }
      }
      term 4 {
        from {
          forwarding-class expedited-forwarding;
          source-address 10.10.10.10/32;
        }
        then loss-priority low;
      }
      term 5 {
        from {
          source-address 10.10.10.10/32;
        }
        then loss-priority low;
      }
    }
  }
}

interfaces { # Apply the simple filter above to the input side of the interface.
  ge-2/3/3 {
    unit 0 {

```

```

family inet {
  simple-filter {
    input sf-for-eq-dpc;
  }
}

```

Related Documentation

- [Simple Filter Overview](#)
- [How Simple Filters Evaluate Packets](#)
- [Guidelines for Configuring Simple Filters](#)
- [Guidelines for Applying Simple Filters](#)

Configuring WRED on Enhanced Queuing DPCs

Shaping to drop out-of-profile traffic is done on the Enhanced Queuing DPC at all levels but the queue level. However, weighed random early discard (WRED) is done at the queue level with much the same result. With WRED, the decision to drop or send the packet is made before the packet is placed in the queue.

WRED shaping on the Enhanced Queuing DPC is similar to the IQ2 PIC, but involves only two levels, not 64. The probabilistic drop region establishes a minimum and a maximum queue depth. Below the minimum queue depth, the drop probability is 0 (send). Above the maximum level, the drop probability is 100 (certainty).

There are four drop profiles associated with each queue. These correspond to each of four loss priorities (low, medium-low, medium-high, and high). Sixty-four sets of four drop profiles are available (32 for ingress and 32 for egress). In addition, there are eight WRED scaling profiles in each direction.

To configure WRED, include the **drop-profiles** statement at the **[edit class-of-service]** hierarchy level:

```

[edit class-of-service]
drop-profiles {
  profile-name {
    fill-level percentage drop-probability percentage;
  }
}

```

The following example is an Enhanced Queuing DPC drop profile for expedited forwarding traffic:

```

[edit class-of-service drop-profiles]
drop-ef {
  fill-level 20 drop-probability 0; # Minimum Q depth
  fill-level 100 drop-probability 100; # Maximum Q depth
}

```

Note that only two fill levels can be specified for the Enhanced Queuing DPC. You can configure the **interpolate** statement, but only two fill levels are used. The **delay-buffer-rate** statement in the traffic control profile determines the maximum queue size. This delay

buffer rate is converted to a packet delay buffers, where one buffer is equal to 512 bytes. For example, at 10 Mbps, the Enhanced Queuing DPC allocates 610 delay buffers when the delay-buffer rate is set to 250 milliseconds. The WRED threshold values are specified in terms of absolute buffer values.

The WRED scaling factor multiplies all WRED thresholds (both minimum and maximum) by the value specified. There are eight values in all: 1, 2, 4, 8, 16, 32, 64, and 128. The WRED scaling factor is chosen to best match the user-configured drop profiles. This is done because the hardware supports only certain values of thresholds (all values must be a multiple of 16). So if the configured value of a threshold is 500 (for example), the multiple of 16 is 256 and the scaling factor applied is 2, making the value 512, which allows the value of 500 to be used. If the configured value of a threshold is 1500, the multiple of 16 is 752 and the scaling factor applied is 2, making the value 1504, which allows the value of 1500 to be used.

Hierarchical RED is used to support the oversubscription of the delay buffers (WRED is only configured at the queue, physical interface, and PIC level). Hierarchical RED works with WRED as follows:

- If any level accepts the packet (the queue depth is less than the minimum buffer level), then this level accepts the packet.
- If any level probabilistically drops the packet, then this level drops the packet.

However, these rules might lead to the accepting of packets under loaded conditions which might otherwise have been dropped. In other words, the logical interface accepts packets if the physical interface is not congested.

Related Documentation

- [Shaping Granularity Values for Enhanced Queuing Hardware on page 369](#)
- For more information about configuring RED drop profiles, see [RED Drop Profiles Overview on page 253](#).

Configuring MDRR on Enhanced Queuing DPCs

The guaranteed rate (CIR) at the interface set level is implemented using modified deficit round-robin (MDRR). The Enhanced Queuing DPC hardware provides four levels of strict priority. There is no restriction on the number of queues for each priority. MDRR is used among queues of the same priority. Each queue has one priority when it is under the guaranteed rate and another priority when it is over the guaranteed rate but under the shaping rate (PIR). The Enhanced Queuing DPC hardware implements the priorities with 256 service profiles. Each service profile assigns eight priorities for eight queues. One set is for logical interfaces under the guaranteed rate and another set is for logical interfaces over the guaranteed rate but under the shaping rate. Each service profile is associated with a group of 16 level 3 schedulers, so there is a unique service profile available for all 256 groups at level 3, giving 4096 logical interfaces.

The Junos OS provides three priorities for traffic under the guaranteed rate and one reserved priority for traffic over the guaranteed rate that is not configurable. The Junos OS provides three priorities when there is no guaranteed rate configured on any logical interface.

The relationship between Junos OS priorities and the Enhanced Queuing DPC hardware priorities below and above the guaranteed rate (CIR) is shown in [Table 112 on page 439](#).

Table 112: Junos Priorities Mapped to Enhanced Queuing DPC Hardware Priorities

Junos OS Priority	Enhanced Queuing DPC Hardware Priority Below Guaranteed Rate	Enhanced Queuing DPC Hardware Priority Above Guaranteed Rate
Strict-high	High	High
High	High	Low
Medium-high	Medium-high	Low
Medium-low	Medium-high	Low
Low	Medium-low	Low

To configure MDRR, configure a scheduler at the **[edit class-of-service schedulers]** hierarchy level:

```
[edit class-of-service schedulers]
scheduler-name {
  buffer-size (seconds | percent percentage | remainder | temporal microseconds);
  priority priority-level;
  transmit-rate (percent percentage | rate | remainder) <exact | rate-limit>;
}
```

The following example creates two schedulers for MDRR:

```
[edit class-of-service schedulers]
best-effort-scheduler {
  transmit-rate percent 30; # if no shaping rate
  buffer-size percent 30;
  priority high;
}
expedited-forwarding-scheduler {
  transmit-rate percent 40; # if no shaping rate
  buffer-size percent 40;
  priority strict-high;
}
```



NOTE: The use of both shaping rate and a guaranteed rate at the interface set level (level 2) is not supported.

MDRR is provided at three levels of the scheduler hierarchy of the Enhanced Queuing DPC with a granularity of 1 through 255. There are 64 MDRR profiles at the queue level, 16 at the interface set level, and 32 at the physical interface level.

Queue transmit rates are used for queue level MDRR profile weight calculation. The queue MDRR weight is calculated differently based on the mode set for sharing excess

bandwidth. If you configure the **equal** option for excess bandwidth, then the queue MDRR weight is calculated as:

$$\text{Queue weight} = (255 * \text{Transmit-rate-percentage}) / 100$$

If you configure the **proportional** option for excess bandwidth, which is the default, then the queue MDRR weight is calculated as:

$$\text{Queue weight} = \text{Queue-transmit-rate} / \text{Queue-base-rate}, \text{ where}$$

$$\text{Queue-transmit-rate} = (\text{Logical-interface-rate} * \text{Transmit-rate-percentage}) / 100, \text{ and}$$

$$\text{Queue-base-rate} = \text{Excess-bandwidth-proportional-rate} / 255$$

To configure the way that the Enhanced Queuing DPC should handle excess bandwidth, configure the **excess-bandwidth-share** statement at the **[edit interface-set interface-set-name]** hierarchy level. By default, the excess bandwidth is set to **proportional** with a default value of 32.64 Mbps. In this mode, the excess bandwidth is shared in the ratio of the logical interface shaping rates. If set to **equal**, the excess bandwidth is shared equally among the logical interfaces.

This example sets the excess bandwidth sharing to proportional at a rate of 100 Mbps with a shaping rate of 80 Mbps.

```
[edit interface-set example-interface-set]
excess-bandwidth-share proportional 100m;
output-traffic-control-profile PIR-80Mbps;
```

Shaping rates established at the logical interface level are used to calculate the MDRR weights used at the interface set level. The 16 MDRR profiles are set to initial values, and the closest profile with rounded values is chosen. By default, the physical port MDRR weights are preset to the full bandwidth on the interface.

Configuring Excess Bandwidth Sharing

When using the Enhanced Queuing DPC on an MX Series router, there are circumstances when you should configure excess bandwidth sharing and minimum logical interface shaping. This section details some of the guidelines for configuring excess bandwidth sharing.

- [Excess Bandwidth Sharing and Minimum Logical Interface Shaping on page 440](#)
- [Selecting Excess Bandwidth Sharing Proportional Rates on page 441](#)
- [Mapping Calculated Weights to Hardware Weights on page 442](#)
- [Allocating Weight with Only Shaping Rates or Unshaped Logical Interfaces on page 442](#)
- [Sharing Bandwidth Among Logical Interfaces on page 443](#)

Excess Bandwidth Sharing and Minimum Logical Interface Shaping

The default excess bandwidth sharing proportional rate is 32.65 Mbps (128 Kbps x 255). In order to have better weighed fair queuing (WFQ) accuracy among queues, the shaping rate configured should be larger than the excess bandwidth sharing proportional rate. Some examples are shown in [Table 113 on page 441](#).

Table 113: Shaping Rates and WFQ Weights

Shaping Rate	Configured Queue Transmit Rate	WFQ Weight	Total Weights
10 Mbps	(30, 40, 25, 5)	(22, 30, 20, 4)	76
33 Mbps	(30, 40, 25, 5)	(76, 104, 64, 13)	257
40 Mbps	(30, 40, 25, 5)	(76, 104.64, 13)	257

With a 10-Mbps shaping rate, the total weights are 76. This is divided among the four queues according to the configured transmit rate. Note that when the shaping rate is larger than the excess bandwidth sharing proportional rate of 32.65 Mbps, the total weights on the logical interface are 257 and the WFQ accuracy is the same.

Selecting Excess Bandwidth Sharing Proportional Rates

A good excess bandwidth sharing proportional rate to configure is to choose the largest CIR (guaranteed rate) among all the logical interfaces (units). If the logical units have PIRs (shaping rates) only, then choose the largest PIR rate. However, this is not ideal if a single logical interface has a large weighed round-robin (WRR) rate. This can skew the distribution of traffic across the queues of the other logical interfaces. To avoid this issue, set the excess bandwidth sharing proportional rate to a lower value on the logical interfaces where the WRR rates are concentrated. This improves the bandwidth sharing accuracy among the queues on the same logical interface. However, the excess bandwidth sharing for the logical interface with the larger WRR rate is no longer proportional.

As an example, consider five logical interfaces on the same physical port, each with four queues, all with only PIRs configured and no CIRs. The WRR rate is the same as the PIR for the logical interface. The excess bandwidth is shared proportionally with a rate of 40 Mbps. The traffic control profiles for the logical interfaces are shown in [Table 114 on page 441](#).

Table 114: Example Shaping Rates and WFQ Weights

Shaping Rate	Configured Queue Transmit Rate	WFQ Weight	Total Weights
(Unit 0) 10 Mbps	(95, 0, 0, 5)	(60, 0, 0, 3)	63
(Unit 1) 20 Mbps	(25, 25, 25, 25)	(32, 32, 32, 32)	128
(Unit 2) 40 Mbps	(40, 30, 20, 10)	(102, 77, 51, 26)	255
(Unit 3) 200 Mbps	(70, 10, 10, 10)	(179, 26, 26, 26)	255
(Unit 4) 2 Mbps	(25, 25, 25, 25)	(5, 5, 5, 5)	20

Even though the maximum transmit rate for the queue on logical interface unit 3 is 200 Mbps, the excess bandwidth sharing proportional rate is kept at a much lower value. Within a logical interface, this method provides a more accurate distribution of weights

across queues. However, the excess bandwidth is now shared equally between unit 2 and unit 3 (total weight of each = 255).

Mapping Calculated Weights to Hardware Weights

The calculated weight in a traffic control profile is mapped to hardware weight, but the hardware only supports a limited WFQ profile. The weights are rounded to the nearest hardware weight according to the values in [Table 115 on page 442](#).

Table 115: Rounding Configured Weights to Hardware Weights

Traffic Control Profile Number	Number of Traffic Control Profiles	Weights	Maximum Error
1–16	16	1–16 (interval of 1)	50.00%
17–29	13	18–42 (interval of 2)	6.25%
30–35	6	45–60 (interval of 3)	1.35%
36–43	8	64–92 (interval of 4)	2.25%
44–49	6	98–128 (interval of 6)	3.06%
50–56	7	136–184 (interval of 8)	3.13%
57–62	6	194–244 (interval of 10)	2.71%
63–63	1	255–255 (interval of 11)	2.05%

From the table, as an example, the calculated weight of 18.9 is mapped to a hardware weight of 18, because 18 is closer to 18.9 than 20 (an interval of 2 applies in the range 18–42).

Allocating Weight with Only Shaping Rates or Unshaped Logical Interfaces

Logical interfaces with only shaping rates (PIRs) or unshaped logical interfaces (units) are given a weight of 10. A logical interface with a small guaranteed rate (CIR) might get an overall weight less than 10. In order to allocate a higher share of the excess bandwidth to logical interfaces with a small guaranteed rate in comparison to the logical interfaces with only shaping rates configured, a minimum weight of 20 is given to the logical interfaces with guaranteed rates configured.

For example, consider a logical interface configuration with five units, as shown in [Table 116 on page 442](#).

Table 116: Allocating Weights with PIR and CIR on Logical Interfaces

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 1	PIR 100 Mbps	95, 0, 0, 5	10, 1, 1, 1

Table 116: Allocating Weights with PIR and CIR on Logical Interfaces (*continued*)

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 2	CIR 20 Mbps	25, 25, 25, 25	64, 64, 64, 64
Unit 3	PIR 40 Mbps, CIR 20 Mbps	50, 30, 15, 5	128, 76, 38, 13
Unit 4	Unshaped	95, 0, 0, 5	10, 1, 1, 1
Unit 5	CIR 1 Mbps	95, 0, 0, 5	10, 1, 1, 1

The weights for these units are calculated as follows:

- Select the excess bandwidth sharing proportional rate to be the maximum CIR among all the logical interfaces: 20 Mbps (unit 2).
- Unit 1 has a PIR and unit 4 is unshaped. The weight for these units is 10.
- The weight for unit 1 queue 0 is 9.5 ($10 \times 95\%$), which translates to a hardware weight of 10.
- The weight for unit 1 queue 1 is 0 ($0 \times 0\%$), but although the weight is zero, a weight of 1 is assigned to give minimal bandwidth to queues with zero WRR.
- Unit 5 has a very small CIR (1 Mbps), and a weight of 20 is assigned to units with a small CIR.
- The weight for unit 5 queue 0 is 19 ($20 \times 95\%$), which translates to a hardware weight of 18.
- Unit 3 has a CIR of 20 Mbps, which is the same as the excess bandwidth sharing proportional rate, so it has a total weight of 255.
- The weight of unit 3 queue 0 is 127.5 ($255 \times 50\%$), which translates to a hardware weight of 128.

Sharing Bandwidth Among Logical Interfaces

As a simple example showing how bandwidth is shared among the logical interfaces, assume that all traffic is sent on queue 0. Assume also that there is a 40-Mbps load on all of the logical interfaces. Configuration details are shown in [Table 117 on page 443](#).



NOTE: On the MX960 router, bandwidth sharing across high priority and strict-high priority schedulers configured on logical interfaces might not be as expected. This is a hardware limitation.

Table 117: Sharing Bandwidth Among Logical Interfaces

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 1	PIR 100 Mbps	95, 0, 0, 5	10, 1, 1, 1

Table 117: Sharing Bandwidth Among Logical Interfaces (*continued*)

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 2	CIR 20 Mbps	25, 25, 25, 25	64, 64, 64, 64
Unit 3	PIR 40 Mbps, CIR 20 Mbps	50, 30, 15, 5	128, 76, 38, 13
Unit 4	Unshaped	95, 0, 0, 5	10, 1, 1, 1

1. When the port is shaped at 40 Mbps, because units 2 and 3 have a guaranteed rate (CIR) configured, both units 2 and 3 get 20 Mbps of shared bandwidth.
2. When the port is shaped at 100 Mbps, because units 2 and 3 have a guaranteed rate (CIR) configured, each of them can transmit 20 Mbps. On units 1, 2, 3, and 4, the 60 Mbps of excess bandwidth is shaped according to the values shown in [Table 118 on page 444](#).

Table 118: First Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
Unit 1	$10 / (10+64+128+10) \times 60$ Mbps	2.83 Mbps
Unit 2	$64 / (10+64+128+10) \times 60$ Mbps	18.11 Mbps
Unit 3	$128 / (10+64+128+10) \times 60$ Mbps	36.22 Mbps
Unit 4	$10 / (10+64+128+10) \times 60$ Mbps	2.83 Mbps

However, unit 3 only has 20 Mbps extra (PIR and CIR) configured. This means that the leftover bandwidth of 16.22 Mbps (36.22 Mbps – 20 Mbps) is shared among units 1, 2, and 4. This is shown in [Table 119 on page 444](#).

Table 119: Second Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
Unit 1	$10 / (10+64+128+10) \times 16.22$ Mbps	1.93 Mbps
Unit 2	$64 / (10+64+128+10) \times 16.22$ Mbps	12.36 Mbps
Unit 4	$10 / (10+64+128+10) \times 16.22$ Mbps	1.93 Mbps

Finally, [Table 120 on page 445](#) shows the resulting allocation of bandwidth among the logical interfaces when the port is configured with a 100-Mbps shaping rate.

Table 120: Final Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
Unit 1	2.83 Mbps + 1.93 Mbps	4.76 Mbps
Unit 2	20 Mbps + 18.11 Mbps + 12.36 Mbps	50.47 Mbps
Unit 3	20 Mbps + 20 Mbps	40 Mbps
Unit 4	2.83 Mbps + 1.93 Mbps	4.76 Mbps

Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs

You can configure ingress CoS parameters, including hierarchical schedulers, on MX Series routers with Enhanced Queuing DPCs. In general, the supported configuration statements apply to per-unit schedulers or to hierarchical schedulers.

To configure ingress CoS for per-unit schedulers, include the following statements at the `[edit class-of-service interfaces interface-name]` hierarchy level:

```
[edit class-of-service interfaces interface-name]
input-excess-bandwidth-share (proportional value | equal);
input-scheduler-map map-name;
input-shaping-rate rate;
input-traffic-control-profile profile-name shared-instance instance-name;
unit logical-unit-number;
  input-scheduler-map map-name;
  input-shaping-rate (percent percentage | rate);
  input-traffic-control-profile profile-name shared-instance instance-name;
}
```

To configure ingress CoS for hierarchical schedulers, include the `interface-set` *interface-set-name* statement at the `[edit class-of-service interfaces]` hierarchy level:

```
[edit class-of-service interfaces]
interface-set interface-set-name {
  input-excess-bandwidth-share (proportional value | equal);
  input-traffic-control-profile profile-name shared-instance instance-name;
  input-traffic-control-profile-remaining profile-name;
  interface interface-name {
    input-excess-bandwidth-share (proportional value | equal);
    input-traffic-control-profile profile-name shared-instance instance-name;
    input-traffic-control-profile-remaining profile-name;
    unit logical-unit-number;
    input-traffic-control-profile profile-name shared-instance instance-name;
  }
}
}
```

By default, ingress CoS features are disabled on the Enhanced Queuing DPC.

You must configure the **traffic-manager** statement with **ingress-and-egress** mode to enable ingress CoS on the ED DPC:

```
[edit chassis fpc slot-number pic pic-number]
traffic-manager mode ingress-and-egress;
```

Configured CoS features on the ingress are independent of CoS features on the egress except that:

- If you configure a per-unit or hierarchical scheduler at the **[edit class-of-service interfaces]** hierarchy level, the schedulers apply in both the ingress and egress directions.
- You cannot configure the same logical interface on an ingress and an egress interface set. A logical interface can only belong to one interface set.
- The DPC's frame buffer of 512 MB is shared between ingress and egress configurations.

The following behavior aggregate (BA) classification tables are supported on the ingress side of the Enhanced Queuing DPC:

- inet-precedence
- DSCP
- exp (MPLS)
- DSCP for IPv6
- IEEE 802.1p

Configuring Customer VLAN (Level 3) Shaping on Enhanced Queuing DPCs

Customer VLAN (level 3) shaping on an MX Series 10-Gigabit Ethernet Enhanced Queuing DPC differs from the customer VLAN (level 3) shaping on an MX Series 1-Gigabit Ethernet Enhanced Queuing DPC. To use the customer VLAN (level 3) shaping on an MX Series 10-Gigabit Ethernet Enhanced Queuing DPC, configure an interface set at the **[edit interfaces interface-set]** hierarchy level. You do not need to configure the interface set while using customer VLAN (level 3) on an MX Series 1-Gigabit Ethernet Enhanced Queuing DPC.

To configure customer VLAN (level 3) shaping on an MX Series 10-Gigabit Ethernet Enhanced Queuing DPC:

1. Configure the interface set at the **[edit interfaces]** hierarchy level.

```
[edit interfaces]
user@host# set interface-set jnpr interface unit 100
user@host# set interface-set jnpr interface xe-1/0/0 unit 101
```

2. Configure the hierarchical scheduler and enable VLAN tagging.

```
[edit interfaces]
user@host# set xe-1/0/0 hierarchical-scheduler
user@host# set xe-1/0/0 vlan-tagging
```

3. Configure the logical interface properties.

```
[edit interfaces]
```



```

user@host# set xe-1/0/0 unit 100 vlan-id 100
user@host# set xe-1/0/0 unit 100 family inet address 10.1.0.1/24
user@host# set xe-1/0/0 unit 101 vlan-id 101
user@host# set xe-1/0/0 unit 101 family inet address 10.1.1.1/24

```

4. Configure the traffic control profiles at the **[edit class-of-service]** hierarchy level.

```

[edit class-of-service]
user@host# set traffic-control-profiles profile1 shaping-rate 10g burst-size 2k
user@host# set traffic-control-profiles profile1 guaranteed-rate 10g burst-size 2k
user@host# set traffic-control-profiles profile2 shaping-rate 50m burst-size 2k
user@host# set traffic-control-profiles profile2 guaranteed-rate 50m burst-size 2k
user@host# set traffic-control-profiles profile3 shaping-rate 80m burst-size 3k
user@host# set traffic-control-profiles profile3 guaranteed-rate 80m burst-size 3k

```

5. Configure the output traffic control profiles at the **[edit class-of-service interfaces]** hierarchy level.

```

[edit class-of-service interfaces]
user@host# set interface-set jnpr output-traffic-control-profiles profile1
user@host# set xe-1/0/0 unit 100 output-traffic-control-profiles profile2
user@host# set xe-1/0/0 unit 101 output-traffic-control-profiles profile3

```

To configure customer VLAN (level 3) shaping on an MX Series 1-Gigabit Ethernet Enhanced Queuing DPC:

1. Configure the interface set at the **[edit interfaces]** hierarchy level.

```

[edit interfaces]
user@host# set interface ge-1/0/0 unit 100
user@host# set interface ge-1/0/0 unit 101

```

2. Configure the hierarchical scheduler and enable the VLAN tagging.

```

[edit interfaces]
user@host# set ge-1/0/0 hierarchical-scheduler
user@host# set ge-1/0/0 vlan-tagging

```

3. Configure the logical interface properties.

```

[edit interfaces]
user@host# set ge-1/0/0 unit 100 vlan-id 100
user@host# set ge-1/0/0 unit 100 family inet address 10.1.0.1/24
user@host# set ge-1/0/0 unit 101 vlan-id 101
user@host# set ge-1/0/0 unit 101 family inet address 10.1.1.1/24

```

4. Configure the traffic control profiles at the **[edit class-of-service]** hierarchy level.

```

[edit class-of-service]
user@host# set traffic-control-profiles profile1 shaping-rate 10g burst-size 2k
user@host# set traffic-control-profiles profile1 guaranteed-rate 10g burst-size 2k
user@host# set traffic-control-profiles profile2 shaping-rate 50m burst-size 2k
user@host# set traffic-control-profiles profile2 guaranteed-rate 50m burst-size 2k
user@host# set traffic-control-profiles profile3 shaping-rate 80m burst-size 3k
user@host# set traffic-control-profiles profile3 guaranteed-rate 80m burst-size 3k

```

5. Configure the traffic control profiles at the **[edit class-of-service interfaces]** hierarchy level.

```

[edit class-of-service interfaces]

```

```
user@host# set ge-1/0/0 unit 100 output-traffic-control-profiles profile2
user@host# set ge-1/0/0 unit 101 output-traffic-control-profiles profile3
```

Related Documentation

- [Enhanced Queuing DPC Hardware Properties on page 431](#)

CHAPTER 23

Configuring CoS on MIC and MPC Interfaces

This topic discusses the following:

- [CoS on MIC and MPC Features Overview on page 450](#)
- [CoS Capabilities and Limitations on MPCs and MICs on page 453](#)
- [Scheduler Node Scaling on MIC and MPC Interfaces Overview on page 454](#)
- [Dedicated Queue Scaling for CoS Configurations on MIC and MPC Interfaces Overview on page 455](#)
- [Managing Dedicated and Remaining Queues for Static CoS Configurations on MIC and MPC Interfaces on page 459](#)
- [Verifying the Number of Dedicated Queues Configured on MIC and MPC Interfaces on page 461](#)
- [Excess Bandwidth Distribution on MIC and MPC Interfaces Overview on page 461](#)
- [Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462](#)
- [Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464](#)
- [Example: Configuring Per-Priority Shaping on MIC and MPC Interfaces on page 468](#)
- [Traffic Burst Management on MIC and MPC Interfaces Overview on page 475](#)
- [CoS on Ethernet Pseudowires in Universal Edge Networks Overview on page 477](#)
- [Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks on page 477](#)
- [CoS Scheduling Policy on Logical Tunnel Interfaces Overview on page 478](#)
- [Configuring a CoS Scheduling Policy on Logical Tunnel Interfaces on page 479](#)
- [Bandwidth Management for Downstream Traffic in Edge Networks Overview on page 480](#)
- [Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 482](#)
- [Example: Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 483](#)
- [CoS for L2TP LNS Inline Services Overview on page 486](#)
- [Configuring Static CoS for an L2TP LNS Inline Service on page 487](#)

- [Intelligent Oversubscription on the MIC and MPC Interfaces Overview on page 489](#)
- [Configuring Ingress Hierarchical CoS on MPC and MIC Interfaces on page 491](#)
- [Class of Service on Application Services Modular Line Card Overview on page 492](#)
- [MX Series QoS FAQ Overview on page 494](#)

CoS on MIC and MPC Features Overview

This topic covers aspects of Class of Service (CoS) configuration for the Modular Port Concentrator (MPC) and Modular Interface Card (MIC), with the emphasis on differences between the Trio interface family and other families of interface types. The CoS characteristics of the Trio queuing model are optimized compared to the CoS characteristics of the standard queuing model. The Trio queuing model also supports four levels of hierarchical scheduling, with scheduling node levels corresponding to the physical interface to the queue itself. For more information on hierarchical schedulers in general, see [“Configuring Hierarchical Schedulers for CoS” on page 225](#).

Key aspects of the Trio queuing model are:

- The model separates the guaranteed bandwidth concept from the weight of a interface node. Although often used interchangeably, guaranteed bandwidth is the bandwidth a node can use when it wants to, independently of what is happening at the other nodes of the scheduling hierarchy. On the other hand, the weight of a node is a quantity that determines how the excess bandwidth is used. The weight is important when the siblings of a node (that is, other nodes at the same level) use less than the sum of the their guaranteed bandwidths. In some applications, such as constant bit rate voice where there is little concern about excess bandwidth, the guaranteed bandwidth dominates the node; whereas in others, such as bursty data, where a well-defined bandwidth is not always possible, the concept of weight dominates the node.
- The model allows multiple levels of priority to be combined with guaranteed bandwidth in a general and useful way. There is a set of priorities for guaranteed levels and a set of priorities for excess levels that are at a lower absolute level. For each guaranteed level, there is only one excess level paired with it. There are three guaranteed priorities and two excess priorities. You can configure one guaranteed priority and one excess priority. For example, you can configure a queue for guaranteed low (GL) as the guaranteed priority and configure excess high (EH) as the excess priority.
- However, for an excess level, there can be any number of guaranteed priority levels, including none. Nodes maintain their guaranteed priority level (for example, guaranteed high, GH) as long as they do not exceed their guaranteed bandwidth. If the queue bandwidth exceeds the guaranteed rate, then the priority drops to the excess priority (for example, excess high, EH). Because excess level priorities are lower than their guaranteed counterparts, the bandwidth guarantees for each of the other levels can be maintained.

There are a number of other general points about the Trio queuing model interfaces that should be kept in mind:

- Input queuing is not supported on the MPC and MIC interfaces.
- On MPCs, you can configure up to 32 DCSP or Internet or EXP rewrite rules, and 32 IEEE rewrite rules. However, if you configure all 32 allowed rewrite rules, the class-of-service process intermittently fails and generates syslog entries.
- The MPC and MIC interfaces do not support the **q-pic-large-buffer** statement at the `[edit chassis fpc mpc-number pic mic-number]` hierarchy level. By default, 500 ms worth of buffer is supported when the delay buffer rate is less than 1 Gbps. By default, 100 ms worth of buffer is supported when the delay buffer rate is 1 Gbps or more. The maximum supported value for the delay buffer is 256 MB and the minimum value is 4 KB. However, due to the limited number of drop profiles supported and the large range of supported speeds, there can be differences between the user-configured value and the observed hardware value. The enhanced queuing (EQ) interfaces on MICs and MPCs support up to 255 drop profiles, and up to 128 tail-drop priorities for guaranteed low (GL) priorities and 64 each for guaranteed high and medium priorities.
- All tunnel interfaces have 100 ms buffers. The **huge-buffer-temporal** statement is not supported.
- The interfaces on MICs and MPCs take all Layer 1 and Layer 2 overhead bytes into account for all levels of the hierarchy, including preamble, interpacket gaps, frame check sequence, and cyclical redundancy check. Queue statistics also take these overheads into account when displaying byte statistics.
- The interfaces on MICs and MPCs do not support the **excess-bandwidth-sharing** statement. You can use the **excess-rate** statement in scheduler maps and traffic control profiles instead.
- To rewrite service VLAN tag COS bits on MIC and MPC interfaces for VPLS or bridge domains, configure the rewrite rules on the core-facing interface.

The interfaces on MICs and MPCs have a certain granularity in the application of configured shaping and delay buffer parameters. In other words, the values used are not necessarily precisely the values configured. Nevertheless, the derived values are as close to the configured values as allowed. For the MPC, the shaping rate granularity is 250 kbps for coarse-grained queuing on the basic hardware and 24 kbps for fine-grained queuing on the enhanced queuing devices.

MPC shaping granularities are listed in [Table 121 on page 451](#)

Table 121: MPC Interfaces Shaping Granularities

Enhanced Queuing MPCs		
Port Speed	Queues/Port Level	Logical Interface/Interface Set Level
10 Gbps	6 Kbps	24 Kbps
1 Gbps	1.5 Kbps	6 Kbps
Queuing MPCs		

Table 121: MPC Interfaces Shaping Granularities (*continued*)

Enhanced Queuing MPCs		
Port Speed	Queues/Port Level	Logical Interface/Interface Set Level
10 Gbps	9.6 Kbps	38 Kbps
1 Gbps	2.4 Kbps	9.5 Kbps
Non-queuing MPCs		
Port Speed	Queues/Port Level	Logical Interface/Interface Set Level
1 Gbps/10 Gbps	250 Kbps	n/a

For delay buffers, the coarse-grained devices support 100 ms of transit rate by default, which can be changed by configuring an explicit buffer size. For fine-grained queuing on enhanced queuing devices, 500 ms of transmit rate is available by default, which can be changed by configuring an explicit buffer size. When this value is changed, there are 256 points available and the closest point is chosen. High-priority and medium-priority queues use 64 points, and the low-priority queues uses 128.

Another useful feature is the ability to control how much overhead to count with the **traffic-manager** statement and options. By default, overhead of 24 bytes (20 bytes for the header, plus 4 bytes of cyclical redundancy check [CRC]), is added to egress shaping statistics. You can configure the system to adjust the number of bytes to add to a packet to determine shaped session packet length by adding more bytes (up to 192) of overhead. You can also subtract bytes for egress shaping overhead (up to minus 63 bytes).

This example adds 12 more bytes of overhead to the egress shaping statistics:

```
[edit chassis fpc 0 pic 0]
traffic-manager egress-shaping-overhead 12;
```

In contrast to the Intelligent Queuing Enhanced (IQE) and Intelligent Queuing 2 Enhanced (IQ2E) PICs, the interfaces on MPCs and MICs set the guaranteed rate to zero in oversubscribed PIR mode for the per-unit scheduler. Also, the configured rate is scaled down to fit the oversubscribed value. For example, if there are two logical interface units with a shaping rate of 1 Gbps each on a 1-Gbps port (which is, therefore, oversubscribed 2 to 1), then the guaranteed rate on each unit is scaled down to 500 Mbps (scaled down by 2).

With hierarchical schedulers in oversubscribed PIR mode, the guaranteed rate for every logical interface unit is set to zero. This means that the queue transmit rates are always oversubscribed.

Because in oversubscribed PIR mode the queue transmit rates are always oversubscribed, the following are true:

- If the queue transmit rate is set as a percentage, then the guaranteed rate of the queue is set to zero; but the excess rate (weight) of the queue is set correctly.
- If the queue transmit rate is set as an absolute value and if the queue has guaranteed high or medium priority, then traffic up to the queue's transmit rate is sent at that

priority level. However, for guaranteed low traffic, that traffic is demoted to the excess low region. This means that best-effort traffic well within the queue's transmit rate gets a lower priority than out-of-profile excess high traffic. This differs from the IQE and IQ2E PICs.

Several other aspects of the interfaces on MPCs and MICs should be kept in mind when configuring CoS:

- When the interface's delay buffers are oversubscribed by configuration (that is, the user has configured more delay-buffer memory than the system can support), then the configured weighted random early detection (WRED) profiles are implicitly scaled down to drop packets more aggressively from the relatively full queues. This creates buffer space for packets in the relatively empty queues and provides a sense of fairness among the delay buffers. There is no configuration needed for this feature.
- When load balancing EQ MIC interfaces installed in Type 1 MPCs, you should configure odd- and even-numbered interfaces in the form ***interface-fpc/odd | even/ports***. For example, if one link is ***xe-1/0/0***, the other should be ***xe-1/1/0***. If you do not configure odd and even load balancing, the system RED-drops packets when sending at line rate. This limitation does not apply to interfaces on EQ MICs installed in Type 2 MPCs.
- When you configure a behavior aggregate (BA) classifier that does not include a specific rewrite rule for MPLS packets, we highly recommend that you include the ***rewrite-rules exp default*** statement at the ***[edit class-of-service interfaces interface-name unit logical-unit-number]*** hierarchy level. Doing so ensures that MPLS exp value is rewritten according to the BA classifier rules configured for forwarding or packet loss priority.

**Related
Documentation**

- [CoS Capabilities and Limitations on MPCs and MICs on page 453](#)

CoS Capabilities and Limitations on MPCs and MICs

This topic describes CoS scaling and performance parameters that apply to interfaces on MPCs and MICs.

Rewrite Operations

On MPCs, you can configure up to 32 DCSP, or Internet, or EXP rewrite rules, or 32 IEEE rewrite rules. However, if you configure all 32 allowed rewrite rules, the class-of-service process intermittently fails and generates system log entries.

Classification

MPCs support up to 32 classifiers of each type per module.

**Related
Documentation**

- [CoS on MIC and MPC Features Overview on page 450](#)


Scheduler Node Scaling on MIC and MPC Interfaces Overview

The MPC/MIC interface hardware (but not the 10-Gigabit Ethernet MPC with SFP+) supports multiple levels of scheduler nodes. In per-unit-scheduling mode, each logical interface (unit) can have 4 or 8 queues and has a dedicated level 3 scheduler node. Scheduler nodes can be one of four levels: the queue itself (level 4), the logical interface or unit (level 3), the interface set or virtual LAN (VLAN) collection (level 2), or the physical interface or port (level 1). For more information about hierarchical scheduling levels, see [“Configuring Hierarchical Schedulers for CoS” on page 225](#).

The MPC/MIC interface hardware supports enhanced queuing in both per-unit scheduling and hierarchical scheduler modes. The way that the scheduler hierarchy is built depends on the scheduler mode configured.

In per-unit scheduling mode, each logical interface unit has its own dedicated level 3 node and all logical interface units share a common level 2 node (one per port). This scheduling mode is shown in [Figure 22 on page 454](#).


Figure 22: MIC and MPC Interface Per-Unit Scheduler Node Scaling

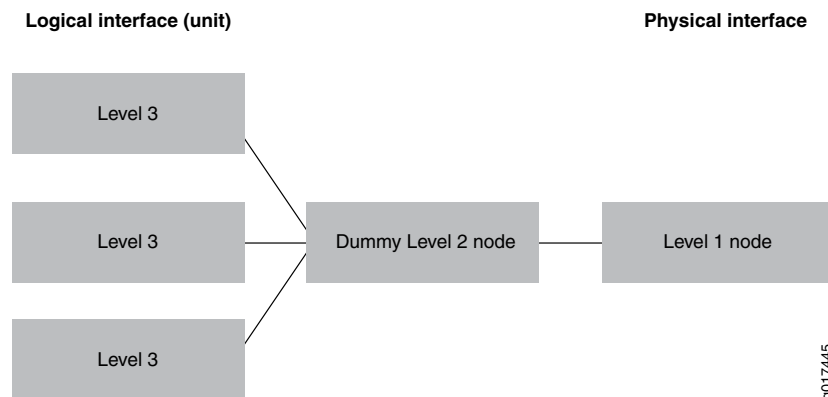

In this case, in per-unit scheduling mode, the level 2 node is a dummy node.

The case with hierarchical scheduling mode, for a similar configuration when there are no interface sets configured and only the logical interfaces have traffic control profiles is shown in [Figure 23 on page 455](#).

Figure 23: MIC and MPC Interface Hierarchical Scheduling Node Scaling

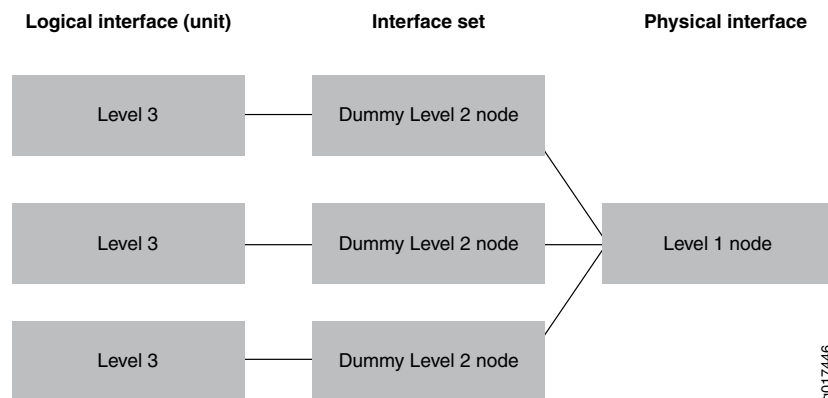

When an interface set has a CoS scheduling policy but none of its child logical interfaces has a CoS scheduling policy, then the interface set is considered to be a leaf node and has one level 2 and one level 3 node.

In per-unit scheduling, the logical interfaces share a common level 2 node (one per port). In hierarchical-scheduling mode, each logical interface has its own level 2 node. So scaling is limited by the number of level 2 nodes. For hierarchical schedulers, in order to better control system resources in hierarchical-scheduling mode, you can limit the number of hierarchical levels in the scheduling hierarchy to two. In this case, all logical interfaces and interface sets with CoS scheduling policy share a single (dummy) level 2 node, so the maximum number of logical interfaces with CoS scheduling policies is increased (the interface sets must be at level 3). To configure scheduler node scaling, include the **hierarchical-scheduler** statement with the **maximum-hierarchy-levels** option at the **[edit interfaces xe-fpc/pic/port]** hierarchy level. The only supported value is 2.

```
[edit interfaces]
xe-2/0/0 {
  hierarchical-scheduler {
    maximum-hierarchy-levels 2;
  }
}
```



NOTE: Level 3 interface sets are supported by the **maximum-hierarchy-levels** option, but level 2 interface sets are not supported. If you configure level 2 interface sets with the **maximum-hierarchy-levels** option, you generate Packet Forwarding Engine errors.

Dedicated Queue Scaling for CoS Configurations on MIC and MPC Interfaces Overview

The 30-Gigabit Ethernet Queuing and 60-Gigabit Ethernet Queuing and Enhanced Queuing Ethernet Modular Port Concentrators (MPCs) provide a set of dedicated queues for subscriber interfaces configured with hierarchical scheduling or per-unit scheduling.

The dedicated queues offered on these MPCs enable service providers to reduce costs through different scaling configurations. For example, the 60-Gigabit Ethernet Enhanced

Queuing MPC enables service providers to reduce the cost per subscriber by allowing many subscriber interfaces to be created with four or eight queues. Alternatively, the 30-Gigabit Ethernet and 60-Gigabit Ethernet Queuing MPCs enable service providers to reduce hardware costs, but allow fewer subscriber interfaces to be created with four or eight queues.

This topic describes the overall queue, scheduler node, and logical interface scaling for subscriber interfaces created on these MPC/MIC combinations.

Queue Scaling for MIC and MPC Combinations

Table 122 on page 456 lists the number of dedicated queues and number of subscribers supported per MPC.

Table 122: Dedicated Queues for MIC and MPC Interfaces

MPC	Dedicated Egress Queues	Supported Subscriber Interfaces	Logical Interfaces with 4 Queues	Logical Interfaces with 8 Queues
30-Gigabit Ethernet Queuing MPC	64,000	16,000	16,000 (8000 per PIC)	8000 (4000 per PIC)
60-Gigabit Ethernet Queuing MPC	128,000	32,000	32,000 (8000 per PIC)	16,000 (4000 per PIC)
60-Gigabit Ethernet Enhanced Queuing MPC	512,000	64,000	64,000 (16,000 per PIC)	64,000 (16,000 per PIC)

MPCs vary in the number of Packet Forwarding Engines on board. MPC1s, such as the 30-Gigabit Ethernet MPC, have one Packet Forwarding Engine. MPC2s, such as the 60-Gigabit Ethernet MPC, have two Packet Forwarding Engines. Each Packet Forwarding Engine has two schedulers that share the management of the queues.

A scheduler maps to one-half of a MIC; in CLI configuration statements, that one-half of a MIC corresponds to PIC 0, 1, 2, or 3. MIC ports are partitioned equally across the PICs. A two-port MIC has one port per PIC. A four-port MIC has two ports per PIC.

Each interface-set uses eight queues from total available egress queues.

Distribution of Queues on 30-Gigabit Ethernet Queuing MPCs

On 30-Gigabit Ethernet Queuing MPCs, each scheduler maps to different PICs. When only one MIC is installed, scheduler 0 maps to PIC 0 and scheduler 1 maps to PIC 1 on the MIC. When two MICs are installed, scheduler 0 can additionally distribute queues to PIC 2 on MIC 1, and scheduler 1 can additionally distribute queues to PIC 3 on MIC 1. However, the distribution of queues to the MICs is not hard-partitioned for 30-Gigabit Ethernet Queuing MPCs or other MPC1s. Distribution depends instead on how you allocate the queues to the PICs.

Figure 24 on page 457 shows the queue distribution on a 30-Gigabit Ethernet Queuing MPC with only one MIC installed. All 64,000 egress queues on the MPC are available to the single Packet Forwarding Engine. On the Packet Forwarding Engine, half of these queues (32,000) are managed by each scheduler. Scheduler 0 contributes all of its 32,000 queues to PIC 0. Scheduler 1 contributes all of its 32,000 queues to PIC 1.

Figure 24: Distribution of Queues on the 30-Gigabit Ethernet Queuing MPC with One MIC


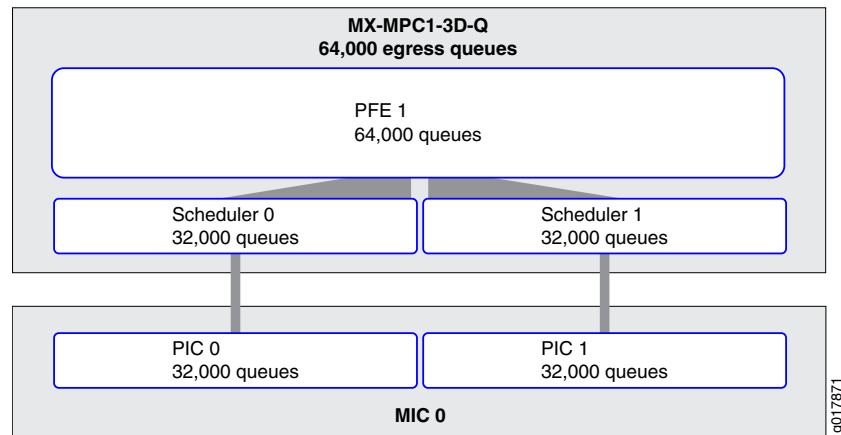


Figure 25 on page 457 shows the queue distribution on the same MPC with two MICs installed. In this case, each scheduler can supply two PICs, one on each MIC. Because the distribution of the queues across the MICs is not hard-partitioned, you can allocate from 0 to 32,000 queues from each scheduler's pool across the scheduler's associated PICs. For example, you can allocate 32,000 queues from Scheduler 0 to PIC 0, 4000 queues from Scheduler 1 to PIC 1, and 28,000 queues from Scheduler 1 to PIC 3. Alternatively, you can allocate the queues evenly across the PICs, or allocate them in other combinations with the limitation of 32,000 queues per PIC and 32,000 queues per port.

Figure 25: Distribution of Queues on the 30-Gigabit Ethernet Queuing MPC with Two MICs

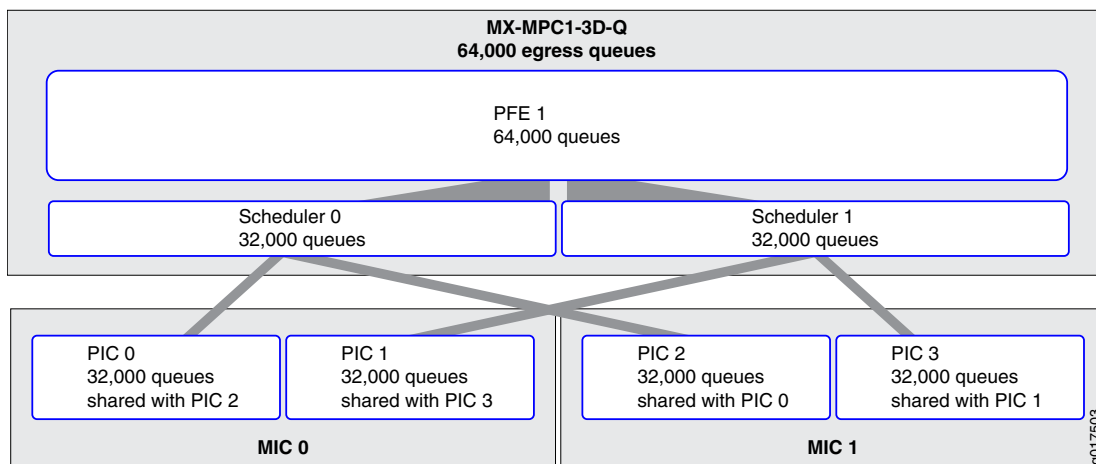


Distribution of Queues on 60-Gigabit Ethernet MPCs

On 60-Gigabit Ethernet Queuing and Enhanced Queuing Ethernet MPCs, each scheduler maps to a single PIC: PIC 0 or PIC 1 on MIC 0 and PIC 2 or PIC 3 on MIC 1. The distribution of the queues is hard-partitioned for these MPCs and other MPC2s; the only difference in distribution is in the total number of queues available.

For example, [Figure 26 on page 458](#) shows how queues are distributed on a 60-Gigabit Ethernet Enhanced Queuing MPC. Of the 512,000 egress queues on the MPC, half (256,000) are available to each of the two Packet Forwarding Engines. On each Packet Forwarding Engine, half of these queues (128,000) are managed by each scheduler. The complete scheduler complement (128,000) is available to only one PIC in a MIC. Thus the total number of queues available depends on the number of MICs installed. The MPC must have 2 MICs to achieve the maximum of 512,000 queues. With a single MIC, the MPC can achieve only 256,000 queues.

Figure 26: Distribution of Queues on the 60-Gigabit Ethernet Enhanced Queuing MPC

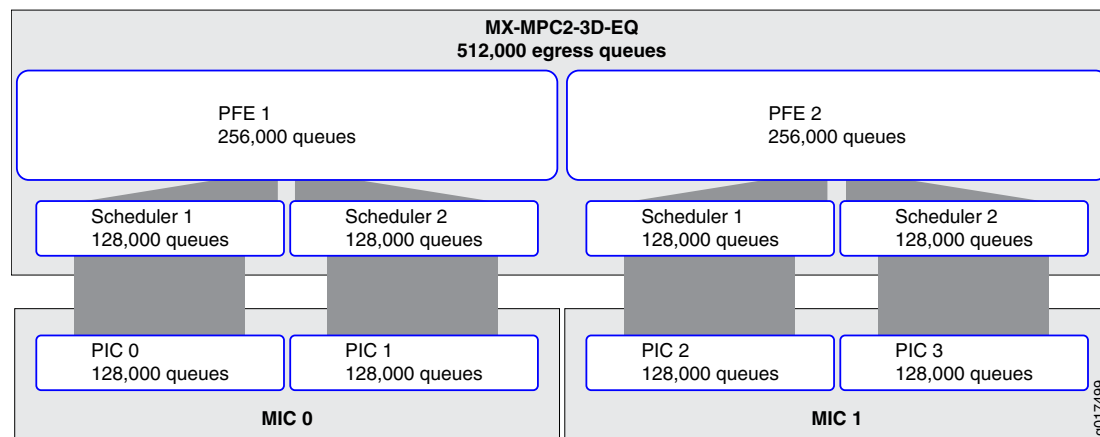

Determining Maximum Egress Queues and Subscriber Interfaces per Port

The number of MICs installed in an MPC and the number of ports per MIC do not affect the maximum number of queues available on a given port. These factors affect only how you are able to allocate queues (and, therefore, subscribers) for your network.

For example, a 30-Gigabit Ethernet Queuing MPC supports a maximum of 16,000 subscriber interfaces and has a maximum of 32,000 queues available per PIC. On this card, you can allocate up to 32,000 queues to a single port in each PIC. If you dedicate 4 queues per subscriber interface, you can accommodate a maximum of 8000 subscriber interfaces on a single port, and therefore need at least two ports to reach the maximum 16,000 subscriber interfaces. If you dedicate 8 queues per subscriber interface, you can accommodate a maximum of 4000 subscriber interfaces on a single port, and you need 4 ports for the maximum of 16,000 subscriber interfaces.

The 60-Gigabit Ethernet Enhanced Queuing MPC supports a maximum of 64,000 subscriber interfaces and has a maximum of 128,000 queues per PIC. You can allocate up to 128,000 queues to a single port in each PIC. However, if you dedicate 4 queues per subscriber interface, you can accommodate a maximum of only 16,000 subscriber

interfaces on a single MPC port—not 32,000—because the 60-Gigabit Ethernet Enhanced Queuing MPC is limited to 16,000 subscriber interfaces per PIC. If you dedicate 8 queues per subscriber interface, you can also accommodate a maximum of 16,000 subscriber interfaces on a single MPC port. In either case, you need at least 4 ports to reach the maximum of 64,000 subscriber interfaces.

Managing Remaining Queues

When the number of available dedicated queues on the MPC drops below 10 percent, an SNMP trap is generated to notify you .

When the maximum number of dedicated queues on the MPCs is reached, a system log message, **COSD_OUT_OF_DEDICATED_QUEUES**, is generated. The system does not provide subsequent subscriber interfaces with a dedicated set of queues. For per-unit scheduling configurations, there are no configurable queues remaining on the MPC.

For hierarchical scheduling configurations, remaining queues are available when the maximum number of dedicated queues is reached on the MPC. Traffic from these logical interfaces are considered unclassified and attached to a common set of queues that are shared by all subsequent logical interfaces. These common queues are the default port queues that are created for every port. You can configure a traffic control profile and attach that to the interface to provide CoS parameters for the remaining queues.

For example, when the 30-Gigabit Ethernet Queuing MPC is configured with 32,000 subscriber interfaces with four queues per subscriber, the MPC can support 16,000 subscribers with a dedicated set of queues. You can provide CoS shaping and scheduling parameters to the remaining queues for those subscriber interfaces by attaching a special traffic-control profile to the interface.

These subscriber interfaces remain with this traffic control profile, even if dedicated queues become available.

Related Documentation

- For information about managing dedicated queues in a static CoS configuration, see [Managing Dedicated and Remaining Queues for Static CoS Configurations on MIC and MPC Interfaces on page 459](#)
- For information about managing dedicated queues in a dynamic subscriber access configuration, see [Managing Dedicated and Remaining Queues for Dynamic CoS Configurations on MIC and MPC Interfaces](#)
- [Scheduler Node Scaling on MIC and MPC Interfaces Overview on page 454](#)
- COSD System Log Messages

Managing Dedicated and Remaining Queues for Static CoS Configurations on MIC and MPC Interfaces

This topic describes how to manage dedicated and remaining queues for static subscriber interfaces configured at the **[edit class-of-service]** hierarchy.

- [Configuring the Maximum Number of Queues for MIC and MPC Interfaces on page 460](#)
- [Configuring Remaining Common Queues on MIC and MPC Interfaces on page 460](#)

Configuring the Maximum Number of Queues for MIC and MPC Interfaces

30-Gigabit Ethernet Queuing MPCs and 60-Gigabit Ethernet Queuing and Enhanced Queuing MPCs support a dedicated number of queues when configured for hierarchical scheduling and per-unit scheduling configurations.

To scale the number of subscriber interfaces per queue, you can modify the number of queues supported on the MIC.

To configure the number of queues:

1. Specify that you want to configure the MIC.

```
user@host# edit chassis fpc slot-number pic pic-number
```

2. Configure the number of queues.

```
[edit chassis fpc slot-number pic pic-number]  
user@host# set max-queues-per-interface (8 | 4)
```

Configuring Remaining Common Queues on MIC and MPC Interfaces

30-Gigabit Ethernet Queuing MPCs and 60-Gigabit Ethernet Queuing and Enhanced Queuing MPCs support a dedicated set of queues when configured with hierarchical scheduling.

When the number of dedicated queues is reached on the module, there can be queues remaining. Traffic from these logical interfaces are considered unclassified and attached to a common set of queues that are shared by all subsequent logical interfaces.

You can configure traffic shaping and scheduling resources for the remaining queues by attaching a special traffic-control profile to the interface. This feature enables you to provide the same shaping and scheduling to remaining queues as the dedicated queues.

To configure the remaining queues on an MPC/MIC interface:

1. Configure CoS parameters in a traffic-control profile.

```
[edit class-of-service]  
user@host# edit traffic-control-profiles profile-name
```

2. Enable hierarchical scheduling for the interface.

```
[edit interfaces interface-name]  
user@host# set hierarchical-scheduler
```

3. Attach the traffic control profiles for the dedicated and remaining queues to the port on which you enabled hierarchical scheduling.

To provide the same shaping and scheduling parameters to dedicated and remaining queues, reference the same traffic-control profile.

- a. Attach the traffic-control profile for the dedicated queues on the interface.

```
[edit class-of-service interfaces interface-name]  
user@host# set output-traffic-control-profile profile-name
```

- b. Attach the traffic-control profile for the remaining queues on the interface.

```
[edit class-of-service interfaces interface-name]
```

```
user@host# set output-traffic-control-profile-remaining profile-name
```

- Related Documentation**
- [Dedicated Queue Scaling for CoS Configurations on MIC and MPC Interfaces Overview on page 455](#)
 - [Verifying the Number of Dedicated Queues Configured on MIC and MPC Interfaces on page 461](#)
 - [Configuring Hierarchical Schedulers for CoS on page 225](#)
 - [Configuring Interface Sets on page 226](#)

Verifying the Number of Dedicated Queues Configured on MIC and MPC Interfaces

Purpose Display the number of dedicated queue resources that are configured for the logical interfaces on a port.

Action

```
user@host#show class-of-service interface ge-1/1/0
Physical interface: ge-1/1/0, Index: 166
Queues supported: 4, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2
Chassis scheduler map: <default-chassis>, Index: 4

Logical interface: ge-1/1/0.100, Index: 72, Dedicated Queues: no
Shaping rate: 32000
Object      Name                Type                Index
Scheduler-map <remaining>          0
Classifier   ipprec-compatibility ip                    13

Logical interface: ge-1/1/0.101, Index: 73, Dedicated Queues: no
Shaping rate: 32000
Object      Name                Type                Index
Scheduler-map <remaining>          0
Classifier   ipprec-compatibility ip                    13

Logical interface: ge-1/1/0.102, Index: 74, Dedicated Queues: yes
Shaping rate: 32000
Object      Name                Type                Index
Traffic-control-profile <control_tc_prof> Output              45866
```

- Related Documentation**
- [Managing Dedicated and Remaining Queues for Static CoS Configurations on MIC and MPC Interfaces on page 459](#)
 - [Managing Dedicated and Remaining Queues for Dynamic CoS Configurations on MIC and MPC Interfaces](#)

Excess Bandwidth Distribution on MIC and MPC Interfaces Overview

Service providers often used tiered services to provide bandwidth for excess traffic as traffic patterns vary. By default, excess bandwidth between a configured guaranteed

rate and shaping rate is shared equally among all queues on MIC and MPC interfaces, which might not be optimal for all subscribers to a service.

You can adjust this distribution by configuring the rates and priorities for the excess bandwidth.

By default, when traffic exceeds the shaping or guaranteed rates, the system demotes traffic with guaranteed high (GH) priority and guaranteed medium (GM) priority. You can disable this priority demotion for the MIC and MPC interfaces in your router.

**Related
Documentation**

- [Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462](#)
- [Managing Excess Bandwidth Distribution for Dynamic CoS on MIC and MPC Interfaces](#)
- [Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464](#)
- [Traffic Burst Management on MIC and MPC Interfaces Overview on page 475](#)

Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs

Service providers often used tiered services that must provide bandwidth for excess traffic as traffic patterns vary. By default, excess bandwidth between a configured guaranteed rate and shaping rate is shared equally among all queues, which might not be optimal for all subscribers to a service.

To manage excess bandwidth:

1. Configure the parameters for the interface.
 - a. Configure the shaping rate.

```
[edit class-of-service traffic-control-profiles profile-name]  
user@host# set shaping-rate (percent percentage | rate) <burst-size bytes>
```



TIP: On MPC/MIC interfaces, the guaranteed rate and the shaping rate share the value specified for the burst size. If the guaranteed rate has a burst size specified, it is used for the shaping rate; if the shaping rate has a burst size specified, it is used for the guaranteed rate. If you have specified a burst for both rates, the system uses the lesser of the two values.

- b. Configure the excess rate.

You can configure an excess rate for all priorities of traffic.

```
[edit class-of-service traffic-control-profiles profile-name]  
user@host# set excess-rate (percent percentage | proportion value)
```

Optionally, you can configure an excess rate specifically for high- and low-priority traffic. When you configure the **excess-rate** statement for an interface, you cannot also configure the **excess-rate-low** and **excess-rate-high** statements.


```
[edit class-of-service traffic-control-profiles profile-name]
user@host# set excess-rate-high (percent percentage | proportion value)
user@host# set excess-rate-low (percent percentage | proportion value)
```



BEST PRACTICE: We recommend that you configure either a percentage or a proportion of the excess bandwidth for all schedulers with the same parent in the hierarchy. For example, if you configure interface 1.1 with twenty percent of the excess bandwidth, configure interface 1.2 with eighty percent of the excess bandwidth.

2. (Optional) Configure parameters for the queue.

a. Configure the shaping rate.

```
[edit class-of-service scheduler scheduler-name]
user@host# set shaping-rate (rate | $junos-cos-scheduler-shaping-rate) <burst-size
bytes>
```

b. Configure the excess rate.

```
[edit class-of-service scheduler scheduler-name]
user@host# set excess-rate (percent percentage | proportion value)
```

c. (Optional) Configure the priority of excess bandwidth for the queue.

```
[edit class-of-service scheduler scheduler-name]
user@host# set excess-priority (low | medium-low | medium-high | high | none)
```



TIP:

For queues, you cannot configure the excess rate in these cases:

- When the **transmit-rate exact** statement is configured. In this case, the shaping rate is equal to the transmit rate and the queue does not operate in the excess region.
- When the scheduling priority is configured as **strict-high**. In this case, the queue gets all available bandwidth and never operates in the excess region.

By default, when traffic exceeds the shaping or guaranteed rates, the system demotes traffic configured with guaranteed high (GH) priority and guaranteed medium (GM) priority. To disable priority demotion, specify the **none** option. You cannot configure this option when the parent's guaranteed rate is set to zero.

For example, the following statements establish a traffic control profile with a shaping rate of 80 Mbps and an excess rate of 100 percent.

```
[edit class-of-service traffic-control-profiles]
tcp-example-excess {
  shaping-rate 80m;
  excess-rate percent 100;
```

```
}
```

The following statements establish a scheduler with an excess rate of 5 percent and a low priority for excess traffic.

```
[edit class-of-service scheduler]
example-scheduler {
  excess-priority low;
  excess-rate percent 5;
}
```

**Related
Documentation**

- [Excess Bandwidth Distribution on MIC and MPC Interfaces Overview on page 461](#)
- For more information on hierarchical scheduling and operational modes, see [Configuring Hierarchical Schedulers for CoS on page 225](#).

Per-Priority Shaping on MIC and MPC Interfaces Overview

Per-priority shaping enables you to configure a separate shaping rate for each of the five priority levels supported by MPC/MIC interfaces. The main use of per-priority shaping rates is to ensure that higher priority services such as voice and video do not starve lower priority services such as data.

There are five scheduler priorities:

- Guaranteed high (GH)
- Guaranteed medium (GM)
- Guaranteed low (GL)
- Excess high (EH)
- Excess low (EL)

The five scheduler priorities support a shaping rate for each priority:

- Shaping rate priority high (GH)
- Shaping rate priority medium (GM)
- Shaping rate priority low (GL)
- Shaping rate excess high (EH)
- Shaping rate excess low (EL)

If each service is represented by a forwarding class queued at a separate priority, then assigning a per-priority shaping rate to higher priority services accomplishes the goal of preventing the starvation of lower priority services.

To configure per-priority shaping rates, include the **shaping-rate-excess-high rate <burst-size burst>**, **shaping-rate-excess-low rate <burst-size burst>**, **shaping-rate-priority-high rate <burst-size burst>**, **shaping-rate-priority-low rate <burst-size burst>**, or **shaping-rate-priority-medium rate <burst-size burst>** at the **[edit class-of-service traffic-control-profiles tcp-name]** hierarchy level and apply the traffic control profile at

the **[edit interfaces]** hierarchy level. You can specify the rate in absolute values, or by using **k** (kilo-), **m** (mega-) or **g** (giga-) units.

You can include one or more of the per-priority shaping statements in a traffic control profile:

```
[edit class-of-service]
traffic-control-profiles {
  tcp-ge-port {
    shaping-rate-excess-high rate <burst-size bytes>;
    shaping-rate-excess-low rate <burst-size bytes>;
    shaping-rate-priority-high rate <burst-size bytes>;
    shaping-rate-priority-low rate <burst-size bytes>;
    shaping-rate-priority-medium rate <burst-size bytes>;
  }
}
```



BEST PRACTICE: When planning your implementation, consider the following behavior. You can configure independent burst-size values for each rate, but the system uses the maximum burst-size value configured in each rate family. For example, the system uses the highest configured value for the guaranteed rates (GH and GM) or the highest value of the excess rates (EH and EM).


There are several important points about per-priority shaping rates:

- Per-priority shaping rates are only supported on MPC/MIC interfaces (but not the 10-Gigabit Ethernet MPC with SFP+).
- Per-priority shaping is only available for level 1 and level 2 scheduler nodes. (For more information on hierarchical schedulers, see [“Configuring Hierarchical Schedulers for CoS” on page 225.](#))
- Per-priority shaping rates are supported when level 1 or level 2 scheduler nodes have static or dynamic interfaces above them.
- Per-priority shaping rates are supported on aggregated Ethernet (AE) interfaces.
- Per-priority shaping rates are only supported in traffic control profiles.

Per-priority shaping rates can be helpful when the MX Series 3D Universal Edge Router is in a position between subscriber traffic on an access network and the carrier network, playing the role of a broadband services router. In that case, the MX Series router provides quality-of-service parameters on the subscriber access network so that each subscriber receives a minimum bandwidth (determined by the guaranteed rate) and a maximum bandwidth (determined by the shaping rate). This allows the devices closer to the carrier network to operate more efficiently and more simply and reduces operational network expenses because it allows more centralized network management.

One architecture for using per-priority shaping on the MX Series router is shown in [Figure 27 on page 466](#). In the figure, subscribers use residential gateways with various traffic classes to support voice, video, and data services. The MX Series router sends this traffic from the carrier network to the digital subscriber line access multiplexer (DSLAM) and from the DSLAM on to the residential gateway devices.

Figure 27: Architecture for MIC and MPC Interface Per-Priority Shaping

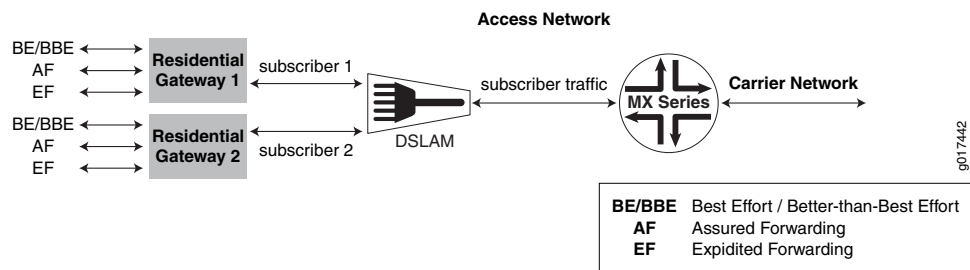


One way that the MX Series router can provide service classes for this physical network topology is shown in [Figure 28 on page 467](#). In the figure, services such as voice and video are placed in separate forwarding classes and the services at different priority levels. For example:

- All expedited-forwarding queues are voice services at a priority level of guaranteed high.
- All assured-forwarding queues are video services at a priority level of guaranteed medium.
- All better-than-best-effort queues are services at a priority level of excess high.
- All best-effort queues are services at a priority level of excess low.



NOTE: This list covers only one possible configuration. Others are possible and reasonable, depending on the service provider's goals. For example, best-effort and better-than-best-effort traffic can have the same priority level, with the better-than-best-effort forwarding class having a higher scheduler weight than the best-effort forwarding class. For more information on forwarding classes, see ["Configuring Forwarding Classes" on page 128](#).

Figure 28: Scheduling Hierarchy for Per-Priority Shaping

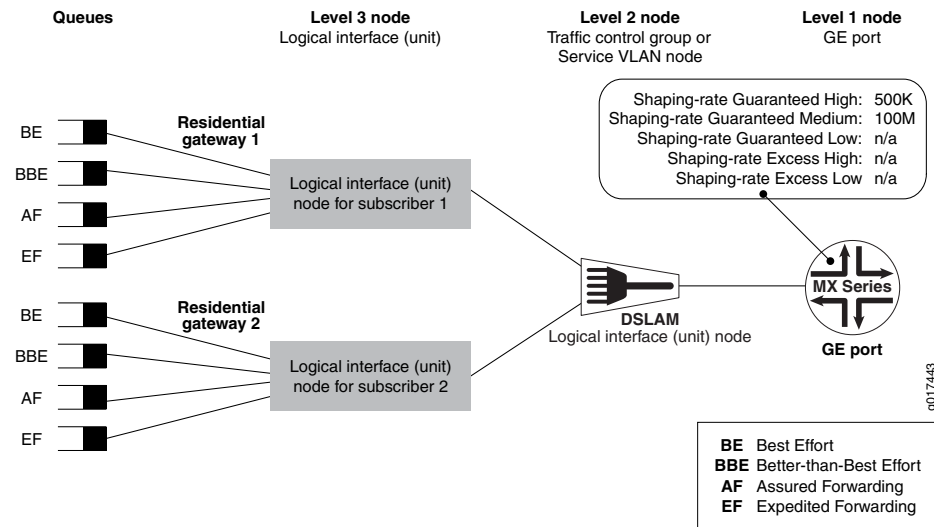

Aggregated voice traffic in this topology is shaped by applying a high-priority shaper to the port. Aggregated video traffic is shaped in the same way by applying a medium-priority shaper to the port. As long as the sum of the high- and medium-priority shapers is less than the port speed, some bandwidth is reserved for best-effort and better-than-best-effort traffic. So assured-forwarding and expedited-forwarding voice and video cannot starve best-effort and better-than-best-effort data services. One possible set of values for high-priority (guaranteed high) and medium-priority (guaranteed medium) traffic is shown in [Figure 28 on page 467](#).



BEST PRACTICE: We recommend that you do not shape delay-sensitive traffic such as voice traffic because it adds delay (latency). Service providers often use connection admission control (CAC) techniques to limit aggregated voice traffic. However, establishing a shaping rate for other traffic guards against CAC failures and can be useful in pacing extreme traffic bursts.

Per-priority shaping statements:

```
[edit class-of-service]
traffic-control-profile {
  tcp-for-ge-port {
    shaping-rate-priority-high 500k;
    shaping-rate-priority-medium 100m;
  }
}
```

Apply (attach) the traffic control profile to the physical interface (port) at the **[edit class-of-services interfaces]** hierarchy level:

```
[edit class-of-service]
interfaces {
  ge-1/0/0 {
    output-traffic-control-profile tcp-for-ge-port;
```

```
}  
}
```

Traffic control profiles with per-priority shaping rates can only be attached to interfaces that support per-priority shaping.

You can apply per-priority shaping to levels other than the level 1 physical interface (port) of the scheduler hierarchy. Per-priority shaping can also be applied at level 2, the interface set level, which would typically represent the digital subscriber link access multiplexer (DSLAM). At this level you could use per-priority shaping to limit to total amount of video traffic reaching a DSLAM, for example.

You apply (attach) the traffic control profile to an interface set at the **[edit class-of-services interfaces]** hierarchy level:

```
[edit class-of-service]  
interfaces {  
  interface-set svlan-1 {  
    output-traffic-control-profile tcp-for-ge-port;  
  }  
}
```



NOTE: Although you can configure both input and output traffic control profiles, only output traffic control profiles are supported for per-priority shaping.

You can configure per-priority shaping for the traffic remaining with the **output-traffic-control-profile-remaining** statement on a physical port (a level 2 node) but not for an interface set (a level 3 node).


**Related
Documentation**

- [Excess Bandwidth Distribution on MIC and MPC Interfaces Overview on page 461](#)

Example: Configuring Per-Priority Shaping on MIC and MPC Interfaces

In practice, per-priority shaping is used with other traffic control profiles to control traffic as a whole. Consider the traffic control profile applied to the physical interface (port), as shown in [Figure 29 on page 469](#).

Figure 29: Example MIC and MPC Interface Scheduling Hierarchy

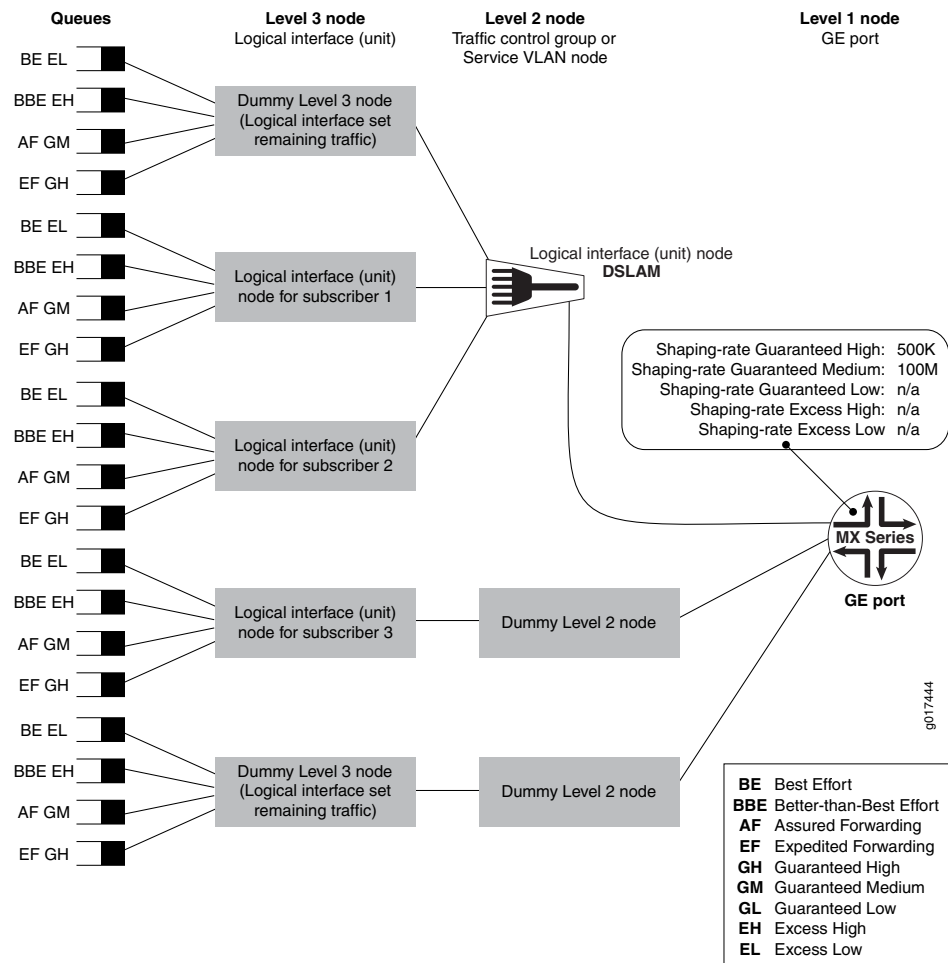

This example is more complex than those used before. In addition to a pair of subscribers in an interface set (DSLAM), the figure now adds the following:

- A dummy level 3 scheduler node (**interface-set-remaining-traffic**) that provides scheduling for interface set members that do not have explicit class-of-service parameters configured.
- A subscriber (Subscriber 3) that is not a member of an interface set. A dummy level 2 node connects Subscriber 3's level 3 node to level 1, making it appear to be at level 2.

- A dummy level 3 scheduler node (**port-remaining-traffic**) in order to provide queues for traffic that does not have explicit class-of-service parameters configured.
- A dummy level 2 scheduler node to connect level 1 and level 3 scheduler nodes. This dummy level 2 scheduler node is internal only.

This example uses a gigabit Ethernet interface with five logical interface units, each one representing one of the level 3 nodes in [Figure 29 on page 469](#).

From the top of the figure to the bottom, the level 3 nodes are:

- Unit 3 is scheduled as a “dummy” level 3 node because unit 3 is a member of an interface set (**ifset-1**) but there is no explicit CoS configuration.
- Unit 1 is scheduled as a logical interface node for subscriber 1 because unit 1 is a member of an interface set (**ifset-1**) and has an explicit CoS configuration under the **[edit class-of-service interfaces]** hierarchy.
- Unit 2 is scheduled as a logical interface node for subscriber 2 because unit 2 is a member of an interface set (**ifset-1**) and has an explicit CoS configuration under the **[edit class-of-service interfaces]** hierarchy.
- Unit 4 is scheduled as a logical interface node for subscriber 3 because unit 4 is not a member of an interface set but has an explicit CoS configuration under the **[edit class-of-service interfaces]** hierarchy level.
- Unit 5 is scheduled by another “dummy” level 3 node, this one for remaining traffic at the port level, because unit 5 is not a member of an interface set and has no explicit CoS configuration.

In this example, per-priority shaping is applied at the physical port level. The example uses three priorities, but other parameters are possible. The example does not use shaping rates, transmit rates, excess priorities, or other options for reasons of simplicity. The example uses five forwarding classes and leaves out a network control forwarding class that would typically be included in real configurations.

The example configuration is presented in several parts:

- Interfaces configuration
- Class-of-service forwarding classes and traffic control profiles configuration
- Class-of-service interfaces configuration
- Class-of-service schedulers and scheduler map configuration

Interfaces configuration:

```
[edit]
interfaces {
  # A three member interface-set.
  interface-set ifset-1 {
    interface ge-1/1/0 {
      unit 1;
      unit 2;
      unit 3;
```



```

    }
  }
  # A ge port configured for "hierarchical-scheduling" and
  # vlans. 5 vlans are configured for the 5 level-3 scheduler
  # nodes
  #
  ge-1/1/0 {
    hierarchical-scheduler;
    vlan-tagging;
    unit 1 {
      vlan-id 1;
    }
    unit 2 {
      vlan-id 2;
    }
    unit 3 {
      vlan-id 3;
    }
    unit 4 {
      vlan-id 4;
    }
    unit 5 {
      vlan-id 5;
    }
  }
}

```

Class-of-service forwarding classes and traffic control profiles configuration:

```

[edit class-of-service]
forwarding-classes {
  queue 0 BE priority low;
  queue 1 BBE priority low;
  queue 2 AF priority low;
  queue 3 EF priority high;
}
traffic-control-profiles {
  tcp-if-portd {
    shaping-rate-priority-high 500k;
    shaping-rate-priority-medium 100m;
  }
  tcp-if-port-rem {
    scheduler-map smap-1;
  }
  tcp-ifset-rem {
    scheduler-map smap-1;
  }
  tcp-if-unit {
    scheduler-map smap-1;
    shaping-rate 10m;
  }
}

```

Class-of-service interfaces configuration:

```

[edit class-of-service]
interfaces {

```

```

interface-set ifset-1 {
    output-traffic-control-profile-remaining tcp-ifset-rem;
}
ge-1/1/0 {
    output-traffic-control-profile tcp-if-port;
    output-traffic-control-profile-remaining tcp-if-port-rem;
    unit 1 {
        output-traffic-control-profile tcp-if-unit;
    }
    unit 2 {
        output-traffic-control-profile tcp-if-unit;
    }
    # Unit 3 present in the interface config and interface-set
    # config, but is absent in this CoS config so that we can
    # show traffic that uses the interface-set
    # remaining-traffic path.
    unit 4 {
        output-traffic-control-profile tcp-if-unit;
    }
    # Unit 5 is present in the interface config, but is absent
    # in this CoS config so that we can show traffic that
    # uses the if-port remaining-traffic path.
}
}

```

Class-of-service schedulers and scheduler map configuration:

```

[edit class-of-service]
scheduler-maps {
    smap-1 {
        forwarding-class BE scheduler sched-be;
        forwarding-class BBE scheduler sched-bbe;
        forwarding-class AF scheduler sched-af;
        forwarding-class EF scheduler sched-ef;
    }
}
schedulers {
    sched-be {
        priority low;
    }
    sched-bbe {
        priority low;
    }
    sched-af {
        priority medium-high;
    }
    sched-ef {
        priority high;
    }
}

```

You can configure both a shaping rate and a per-priority shaping rate. In this case, the legacy **shaping-rate** statement specifies the maximum rate for all traffic scheduled through the scheduler. Therefore, the per-priority shaping rates must be less than or equal to the overall shaping rate. So if there is a **shaping-rate 400m** statement configured in a traffic control profile, you cannot configure a higher value for a per-priority shaping rate (such as **shaping-rate-priority-high 500m**). However, the sum of the per-priority

shaping rates can exceed the overall shaping rate: for **shaping-rate 400m** you can configure both **shaping-rate-priority-high 300m** and **shaping-rate-priority-low 200m** statements.

Generally, you cannot configure a shaping rate that is smaller than the guaranteed rate (which is why it is guaranteed). However, no such restriction is placed on per-priority shaping rates unless all shaping rates are for priority high or low or medium traffic.

This configuration is allowed (per-priority rates smaller than guaranteed rate):

```
[edit class-of-service]
traffic-control-profile {
  tcp-for-ge-port {
    guaranteed-rate 500m;
    shaping-rate-priority-high 400m;
    shaping-rate-priority-medium 300m;
    shaping-rate-excess-high 100m;
  }
}
```

However, this configuration generates an error (no excess per-priority rate, so the node can never achieve its guaranteed rate):

```
[edit class-of-service]
traffic-control-profile {
  tcp-for-ge-port {
    guaranteed-rate 301m;
    shaping-rate-priority-high 100m;
    shaping-rate-priority-medium 100m;
    shaping-rate-priority-low 100m;
  }
}
```

You verify configuration of per-priority shaping with the **show class-of-service traffic-control-profile** command. This example shows shaping rates established for the high and medium priorities for a traffic control profile named **tcp-ge-port**.

```
user@host# show class-of-service traffic-control-profile
Traffic control profile: tcp-ae, Index: 22093
  Shaping rate: 3000000000
  Scheduler map: <default>
```

```
Traffic control profile: tcp-ge-port, Index: 22093
  Shaping rate priority high: 1000000000
  Shaping rate priority medium: 9000000000
  Scheduler map: <default>
```

There are no restrictions on or interactions between per-priority shaping rates and the excess rate. An excess rate (a weight) is specified as a percentage or proportion of excess bandwidth.

[Table 123 on page 474](#) shows where traffic control profiles containing per-priority shaping rates can be attached for both per-unit schedulers and hierarchical schedulers.


Table 123: Applying Traffic Control Profiles

Type of Traffic Control Profile	Per-unit Allowed?	Hierarchical Allowed?
Port level output-traffic-control-profile with per-priority shaping	Yes	Yes
Port level output-traffic-control-profile-remaining with per-priority shaping	No	Yes
Port level output-traffic-control-profile and output-traffic-control-profile-remaining with per-priority shaping	No	Yes
Port level input-traffic-control-profile with per-priority shaping	No	No
Port level input-traffic-control-profile-remaining with per-priority shaping	No	No
Interface set output-traffic-control-profile with per-priority shaping	No	Yes
Interface set output-traffic-control-profile-remaining with per-priority shaping	No	No
Interface set input-traffic-control-profile with per-priority shaping	No	No
Interface set input-traffic-control-profile-remaining with per-priority shaping	No	No
Logical interface level output-traffic-control-profile with per-priority shaping	No	No
Logical interface level input-traffic-control-profile with per-priority shaping	No	No

Traffic Burst Management on MIC and MPC Interfaces Overview

You can manage the impact of bursts of traffic on your network by configuring a burst-size value with the shaping rate or the guaranteed rate. The value is the maximum bytes of rate credit that can accrue for an idle queue or scheduler node. When a queue or node becomes active, the accrued rate credits enable the queue or node to catch up to the configured rate.

Figure 30: Sample Burst Shaping Rates

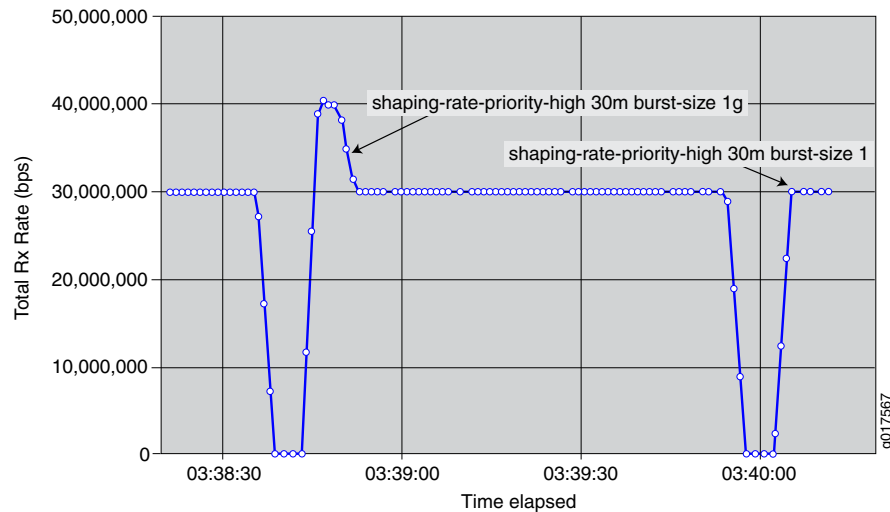

In [Figure 30 on page 475](#), the network administrator configures a large burst-size value for the shaping rate, then configures a small burst-size value. The larger burst size is subject to a maximum value. The smaller burst size is subject to a minimum value that enables the system to achieve the configured rates.

In both configurations, the scheduler node can burst beyond its shaping rate for a brief interval. The burst of traffic beyond the shaping rate is more noticeable with the larger burst size than the smaller burst size.

- [Guidelines for Configuring the Burst Size on page 475](#)
- [How the System Calculates the Burst Size on page 476](#)

Guidelines for Configuring the Burst Size

Typically, the default burst-size (100 ms) for both scheduler nodes and queues on MPC/MIC interfaces is adequate for most networks. However, if you have intermediate equipment in your network that has very limited buffering and is intolerant of bursts of traffic, you might want to configure a lower value for the burst size.

Use caution when selecting a different burst size for your network. A burst size that is too high can overwhelm downstream networking equipment, causing dropped packets and inefficient network operation. Similarly, a burst size that is too low can prevent the network from achieving your configured rate.

When configuring a burst size, keep the following considerations in mind:

- The system uses an algorithm to determine the actual burst size that is implemented for a node or queue. For example, to reach a shaping rate of 8 Mbps, you must allocate 1Mb of rate credits every second. A shaping rate of 8 Mbps with a burst size of 500,000 bytes of rate-credit per seconds enables the system to transmit at most 500,000 bytes, or 4 Mbps. The system cannot implement a burst size that prevents the rate from being achieved.

For more information, see [“How the System Calculates the Burst Size” on page 476](#).

- There are minimum and maximum burst sizes for each platform, and different nodes and queue types have different scaling factors. For example, the system ensures the burst cannot be set lower than 1 Mbps for a shaping rate of 8 Mbps. To smoothly shape traffic, rate credits are sent much faster than once per second. The interval at which rate credits are sent varies depending on the platform, the type of rate, and the scheduler level.
- When you have configured adjustments for the shaping rate (either by percentage or through an application such as ANCP or Multicast OIF), the system bases the default and minimum burst-size calculations on the adjusted shaping rate.
- When you have configured cell shaping mode to account for ATM cell tax, the system bases the default and minimum burst-size calculations on the post-tax shaping rate.
- The guaranteed rate and shaping rate share the value specified for the burst size. If the guaranteed rate has a burst size specified, that burst size is used for the shaping rate; if the shaping rate has a burst size specified, that burst size is used for the guaranteed rate. If you have specified a burst size for both rates, the system uses the lesser of the two values.
- The burst size configured for the guaranteed rate cannot exceed the burst-size configured for the shaping rate. The system generates a commit error.
- If you have not configured a guaranteed rate, logical interfaces and interface sets receive a default guaranteed rate from the port speed. Queues receive a default guaranteed rate from the parent logical interface or interface set.

How the System Calculates the Burst Size

When calculating the burst size, the system uses an exponent of a power of two. For example:

Shaping-rate in bps * 100 ms / (8 bits/byte * 1000 ms/s) = 1,875,000 bytes

The system then rounds this value up. For example, the system uses the following calculation to determine the burst size for a scheduler node with a shaping rate of 150 Mbps:

Max (Shaping rate, Guaranteed rate) bps * 100 ms / (8 bits/byte * 1000 ms/s) = 1,875,000 bytes

Rounded up to the next higher power of two = 2,097,150 (which is 221, or 0x2000000)**

The system assigns a single burst size to each of the following rate pairs:

- Shaping rate and guaranteed rate
- Guaranteed high (GH) and guaranteed medium (GM)
- Excess high (EH) and excess low (EL)
- Guaranteed low (GL)

To calculate the burst size for each pair, the system:

- Uses the configured burst-size if only one of the pair is configured.
- Uses the lesser of the two burst sizes if both values are configured.
- Uses the next lower power of two.
- To calculate the minimum burst size, the system uses the greater of the two rates.

**Related
Documentation**

- [Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464](#)
- [Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462](#)

CoS on Ethernet Pseudowires in Universal Edge Networks Overview

You can apply rewrite rules and classifiers to an Ethernet pseudowire on MIC and MPC interfaces on MX Series Routers. In an edge network, the pseudowire can represent a single customer.

To create the pseudowires, you use logical tunnel (LT) interfaces that connect two virtual routing forwarding (VRF) instances. To provide CoS to the LT interface, you can apply classifiers and rewrite rules. Rewrite rules enable you to rewrite packet header information by specifying various CoS values, including DiffServ code point (DSCP) and IP precedence.



NOTE: Scheduling is not supported on LT interfaces in the current release.

For example, a VPLS instance is connected to a Layer 3 routing instance. The logical tunnel labeled **lt-9/0/0.0** is configured with **vpls** as the family, and **lt-9/0/0.1** is configured with **inet** as the family. You can apply a rewrite rule and classifier for DSCP to **lt-9/0/0.1**, which can represent a business subscriber.

**Related
Documentation**

- [Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks on page 477](#)

Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks

You can configure rewrite rules and classifiers to logical tunnel (LT) interfaces that are configured to represent Ethernet pseudowires.

This feature is supported on MPC/MIC modules on MX Series routers.

To configure CoS on an LT interface configured for an Ethernet pseudowire:

1. Configure a pair of LT interfaces to represent a pseudowire.

To apply rewrite rules and classifiers to the pseudowire, you must assign one of the LT interfaces to the **inet** family.

```
[edit]
user@host#edit interfaces lt-fpc/pic/port
user@host#edit unit logical-unit-number
user@host#set encapsulation encapsulation
user@host#set family (inet | inet6 | iso | mpls)
user@host#set peer-unit unit-number
```

2. Configure the rewrite rule.

The available rewrite rule types for an LT interface are **dscp** and **inet-precedence**.

```
[edit class-of-service]
user@host#edit rewrite-rules (dscp | inet-precedence) rewrite-name
user@host#edit forwarding-class class-name
user@host#set loss-priority class-name code-point (alias | bits)
```

3. Configure the classifier.

The available classifier types for an LT interface are **dscp** and **inet-precedence**.

```
[edit class-of-service]
user@host#edit classifiers (dscp | inet-precedence) classifier-name
user@host#edit forwarding-class class-name
user@host#set loss-priority class-name code-points [aliases] [bit-patterns]
```

4. Apply the rewrite rule and classifier to the LT interface that you assigned to the **inet** family.

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
user@host#set rewrite-rule (dscp | inet-precedence) (rewrite-name | default) protocol
protocol-types
user@host# set classifiers (dscp | inet-precedence) (classifier-name | default)
```

Related Documentation

- [CoS on Ethernet Pseudowires in Universal Edge Networks Overview on page 477](#)
- For more information about rewrite rules and classifiers, see the Junos OS Class of Service Configuration Guide

CoS Scheduling Policy on Logical Tunnel Interfaces Overview

You can configure a CoS scheduling policy on a logical tunnel interface (LT ifl). Logical tunnel interfaces can be used to terminate a pseudowire into a virtual routing and forwarding (VRF) instance. If an LT device is used to terminate a pseudowire, CoS scheduling policies can be applied on the LT interface to manage traffic entering the pseudowire. You accomplish this by configuring the hierarchical-scheduler attribute on the physical interface.

This feature is supported on Trio MPC/MIC modules on MX Series routers.

- Related Documentation**
- [Configuring a CoS Scheduling Policy on Logical Tunnel Interfaces on page 479](#)
 - [Configuring Hierarchical Schedulers for CoS on page 225](#)
 - [CoS on Ethernet Pseudowires in Universal Edge Networks Overview on page 477](#)
 - [Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks on page 477](#)

Configuring a CoS Scheduling Policy on Logical Tunnel Interfaces

You can configure a CoS scheduling policy on a logical tunnel interface (LT ifl). Logical tunnel interfaces can be used to terminate a pseudowire into a virtual routing and forwarding (VRF) instance. If an Lt device is used to terminate a pseudowire, CoS scheduling policies can be applied on the Lt interface to manage traffic entering the pseudowire. You accomplish this by configuring the hierarchical-scheduler attribute on the physical interface.



NOTE: It is important to first commit the hierarchical-scheduler configuration under the logical tunnel physical interface (LT ifd), and subsequently add and commit the class-of-service configuration.



NOTE: The `output-traffic-control` statement applies only to the LT ifl that is part of an L3 VRF instance.

The following example shows two pseudowires (pw1 and pw2) over lt-1/0/10. pw1 carries data, voice, and video traffic, and pw2 carries only data and voice traffic. All pseudowire traffic is restricted to 800m bps. The shaping rate for traffic over pw1 is 400m bps and the shaping rate for traffic over pw2 is 400m bps.

```
[edit interfaces]
lt-1/0/10 {
  hierarchical-scheduler;
}
[edit class-of-service schedulers]
data_sch {
  buffer-size remainder;
  priority low;
}
voice_sch {
  transmit-rate 6k;
  priority strict-high;
}
video_sch {
  shaping-rate 1m;
  priority medium-low;
}
[edit class-of-service scheduler-maps]
pw1-smap {
  forwarding-class be scheduler data_sch;
  forwarding-class ef scheduler voice_sch;
```

```
    forwarding-class af scheduler video_sch;
  }
  pw2-smap {
    forwarding-class be scheduler data_sch;
    forwarding-class ef scheduler voice_sch;
  }
[edit class-of-service traffic-control-profiles]
pw1-tcp {
  scheduler-map pw1-smap;
  shaping-rate 400m;
}
pw2-tcp {
  scheduler-map pw2-smap;
  shaping-rate 400m;
}
all-pw-tcp {
  shaping-rate 800m;
}
lt-ifd-remain {
  shaping-rate 10m;
}
[edit class-of-service interfaces]
lt-1/0/10 {
  output-traffic-control-profile all-pw-tcp;
  output-traffic-control-profile-remaining lt-ifd-remain;
unit 1 {
  output-traffic-control-profile pw1-tcp;
}
unit 3 {
  output-traffic-control-profile pw2-tcp;
}
```

**Related
Documentation**

- [CoS Scheduling Policy on Logical Tunnel Interfaces Overview on page 478](#)
- [Configuring Hierarchical Schedulers for CoS on page 225](#)
- [Configuring Logical Tunnel Interfaces](#)
- [CoS on Ethernet Pseudowires in Universal Edge Networks Overview on page 477](#)
- [Configuring CoS on an Ethernet Pseudowire for Multiservice Edge Networks on page 477](#)

Bandwidth Management for Downstream Traffic in Edge Networks Overview

In a subscriber access network, traffic with different encapsulations can be passed downstream to other customer premise equipment (CPE) through the MX Series router. Managing the bandwidth of downstream ATM traffic to Ethernet interfaces can be especially difficult because of the different Layer 2 encapsulations.

The *overhead accounting* feature enables you to shape traffic based on either frames or cells and assign a byte adjustment value to account for different encapsulations.

This feature is available on MPC/MIC interfaces on MX Series routers.

Guidelines for Configuring the Shaping Mode

Frame shaping mode is useful for adjusting downstream traffic with different encapsulations. In frame shaping mode, shaping is based on the number of bytes in the frame, without regard to cell encapsulation or padding overhead. Frame is the default shaping mode on the router.

Cell shaping mode is useful for adjusting downstream cell-based traffic. In cell shaping mode, shaping is based on the number of bytes in cells, and accounts for the cell encapsulation and padding overhead.

When you specify cell mode, the resulting traffic stream conforms to the policing rates configured in downstream ATM switches, reducing the number of packet drops in the Ethernet network.

To account for ATM segmentation, the MX Series router adjusts all of the rates by 48/53 to account for ATM AAL5 encapsulation. In addition, the router accounts for cell padding, and internally adjusts each frame by 8 bytes to account for the ATM trailer.

Guidelines for Configuring Byte Adjustments

When the downstream traffic has different byte sizes per encapsulation, it is useful to configure a *byte adjustment* value to adjust the frame sizes. For example, you can configure the frame shaping mode and a byte adjustment value to account for differences in Layer 2 protocols for downstream Ethernet traffic.

We recommend that you specify a byte adjustment value that represents the difference between the CPE protocol overhead and B-RAS protocol overhead.

The system rounds up the byte adjustment value to the nearest multiple of 4. For example, a value of 6 is rounded to 8, and a value of -10 is rounded to -8.

You do not need to configure a byte adjustment value to account for the downstream ATM network. However, you can specify the byte value to account for additional encapsulations or decapsulations in the downstream network.

Relationship with Other CoS Features

Enabling the overhead accounting feature affects the resulting shaping rates, guaranteed rate, and excess rate parameters, if they are configured.

The overhead accounting feature also affects the egress shaping overhead feature that you can configure at the chassis level. We recommend that you use the egress shaping-overhead feature to account for the Layer 2 overhead of the outgoing interface, and use the overhead-accounting feature to account for downstream traffic with different encapsulations and cell-based networks.

When both features are configured together, the total byte adjustment value is equal to the adjusted value of the overhead-accounting feature plus the value of the egress-shaping-overhead feature. For example, if the configured byte adjustment value is 40, and the router internally adjusts the size of each frame by 8, the adjusted overhead

accounting value is 48. That value is added to the egress shaping overhead of 24 for a total byte adjustment value of 72.

Setting the Shaping-Rate and Overhead-Accounting Class-of-Service Attributes Based on Access Line Information

You can also use access line parameters in PPPoE discovery packets to set the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network. This feature is supported on MPC/MIC interfaces on MX Series routers.

The shaping rate is based on the actual-data-rate-downstream attribute.

The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).

You can mix ANCP and PPPoE vendor-specific tags for dynamically instantiated static and interface sets so that the shaping rate is first set using PPPoE vendor-specific tags and is later adjusted by ANCP. In this case, the shaping rate value overrides the PPPoE value.

The Access Node or DSLAM may forward access line information using several methods. This feature only uses access line information received in Vendor-Specific Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101].

When you enable this feature, the values supplied by the PPPoE vendor-specific tags override the parameters that you have configured in the CLI for shaping-rate and overhead-accounting statements at the **[edit dynamic-profiles profile-name class-of-service traffic-control-profile]** hierarchy level. The shaping rate is based on the actual-data-rate-downstream attribute, and is only overridden if the vs-tag value is less than the configured value.

Related Documentation

- To configure overhead accounting for static Ethernet interfaces, see [Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 482](#)
- To configure overhead accounting for dynamic subscriber access, see [Configuring Dynamic Shaping Parameters to Account for Overhead in Downstream Traffic Rates](#)
- [Setting Class-of-Service Parameters Using PPPoE Vendor-Specific Tags](#)
- [Configuring the Shaping Rate and Overhead Accounting Based on PPPoE Vendor-Specific Tags on Dynamic Subscriber Interfaces](#)

Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates

The overhead accounting feature enables you to account for downstream traffic that has different encapsulations or downstream traffic from cell-based equipment, such as ATM switches.

You can configure the overhead accounting feature to shape downstream traffic based on frames or cell shaping mode.

You can also account for the different byte sizes per encapsulation by configuring a byte adjustment value for the shaping mode.

To configure the shaping mode and byte adjustment value for static CoS configurations:

1. Specify the shaping mode.

Frame shaping mode is enabled by default.

```
[edit class-of-service traffic-control-profiles profile-name]
user@host# set overhead-accounting (frame-mode | cell-mode)
```

2. (Optional) Specify a byte adjustment value.

```
[edit class-of-service traffic-control-profiles profile-name]
user@host# set overhead-accounting bytes byte-value
```



BEST PRACTICE: We recommend that you specify a byte adjustment value that represents the difference between the customer premise equipment (CPE) protocol overhead and the B-RAS protocol overhead.

The available range is –120 through 124 bytes. The system rounds up the byte adjustment value to the nearest multiple of 4. For example, a value of 6 is rounded to 8, and a value of –10 is rounded to –8.


Related Documentation • [Bandwidth Management for Downstream Traffic in Edge Networks Overview on page 480](#)

Example: Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates

This topic describes two scenarios for which you can configure static shaping parameters to account for packet overhead in a downstream network.

[Figure 31 on page 483](#) shows the sample network that the examples reference.

Figure 31: Sample Network Topology for Downstream Traffic

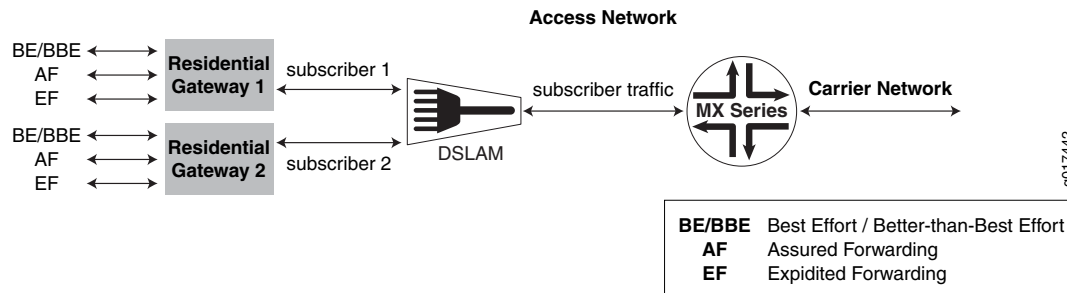

Managing Traffic with Different Encapsulations

In this example, the MX Series router shown in [Figure 31 on page 483](#) sends stacked VLAN frames to the DSLAM, and the DSLAM sends single-tagged VLAN frames to the residential gateway.

To accurately shape traffic at the residential gateway, the MX Series router must account for the different frame sizes. The difference between the stacked VLAN (S-VLAN) frames sent by the router and the single-tagged VLAN frames received at the residential gateway is a 4-byte VLAN tag. The residential gateway receives frames that are 4 bytes less.

To account for the different frame sizes, the network administrator configures the frame shaping mode with -4 byte adjustment:

1. The network administrator configure the traffic shaping parameters and attaches them to the interface.

Enabling the overhead accounting feature affects the resulting shaping rate, guaranteed rate, and excess rate parameters, if they are configured.

```
[edit]
class-of-service {
  traffic-control-profiles {
    tcp-example-overhead-accounting-frame-mode {
      shaping-rate 10m;
      shaping-rate-priority-high 4m;
      guaranteed-rate 2m;
      excess-rate percent 50;
      overhead-accounting frame-mode bytes -4;
    }
  }
  interfaces {
    ge-1/0/0 {
      output-traffic-control-profile tcp-example-overhead-accounting-frame-mode;
    }
  }
}
```

2. The network administrator verifies the adjusted rates.

```
user@host#show class-of-service traffic-control-profile
Traffic control profile: tcp-example-overhead-accounting-frame-mode, Index:
61785
Shaping rate: 10000000
Shaping rate priority high: 4000000
Excess rate 50
Guaranteed rate: 2000000
Overhead accounting mode: Frame Mode
Overhead bytes: -4
```

Managing Downstream Cell-Based Traffic

In this example, the DSLAM and residential gateway shown in [Figure 31 on page 483](#) are connected through an ATM cell-based network. The MX Series router sends Ethernet frames to the DSLAM, and the DSLAM sends ATM cells to the residential gateway.

To accurately shape traffic at the residential gateway, the MX Series router must account for the different physical network characteristics.

To account for the different frame sizes, the network administrator configures the cell shaping mode with -4 byte adjustment:

1. Configure the traffic shaping parameters and attach them to the interface.

Enabling the overhead accounting feature affects the resulting shaping rate, guaranteed rate, and excess rate parameters, if they are configured.

```
[edit]
class-of-service {
  traffic-control-profiles {
    tcp-example-overhead-accounting-cell-mode {
      shaping-rate 10m;
      shaping-rate-priority-high 4m;
      guaranteed-rate 2m;
      excess-rate percent 50;
      overhead-accounting cell-mode;
    }
  }
  interfaces {
    ge-1/0/0 {
      output-traffic-control-profile tcp-example-overhead-accounting-cell-mode;
    }
  }
}
```

2. Verify the adjusted rates.

```
user@host#show class-of-service traffic-control-profile
Traffic control profile: tcp-example-overhead-accounting-cell-mode, Index:
61785
Shaping rate: 10000000
Shaping rate priority high: 4000000
Excess rate 50
Guaranteed rate: 2000000
Overhead accounting mode: Cell Mode
Overhead bytes: 0
```

To account for ATM segmentation, the MX Series router adjusts all of the rates by 48/53 to account for ATM AAL5 encapsulation. In addition, the router accounts for cell padding, and internally adjusts each frame by 8 bytes to account for the ATM trailer.

Related Documentation

- [Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 482](#)

CoS for L2TP LNS Inline Services Overview

You can apply hierarchical scheduling and per-session shaping to Layer 2 Tunnel Protocol (L2TP) network server (LNS) inline services using a static or dynamic CoS configuration.

This feature is supported on MPC/MIC interfaces on MX240, MX480, and MX960 routers.

- [Guidelines for Applying CoS to the LNS on page 486](#)
- [Hardware Requirements for Inline Services on the LNS on page 486](#)

Guidelines for Applying CoS to the LNS


In L2TP configurations, IP, UDP, and L2TP headers are added to packets arriving at a PPP subscriber interface on the L2TP access concentrator (LAC) before being tunneled to the LNS.

When a service interface is configured for an L2TP LNS session, it has an *inner* IP header and an outer IP header. You can configure CoS for an LNS session that corresponds to the inner IP header only. The *outer* IP header is used for L2TP tunnel processing only.

However, we recommend that you configure classifiers and rewrite-rules to transfer the ToS (type of service) value from the inner IP header to the outer IP header of the L2TP packet.

[Figure 32 on page 486](#) shows the classifier and rewrite rules that you can configure on an LNS inline service.

Figure 32: Processing of CoS Parameters in an L2TP LNS Inline Service

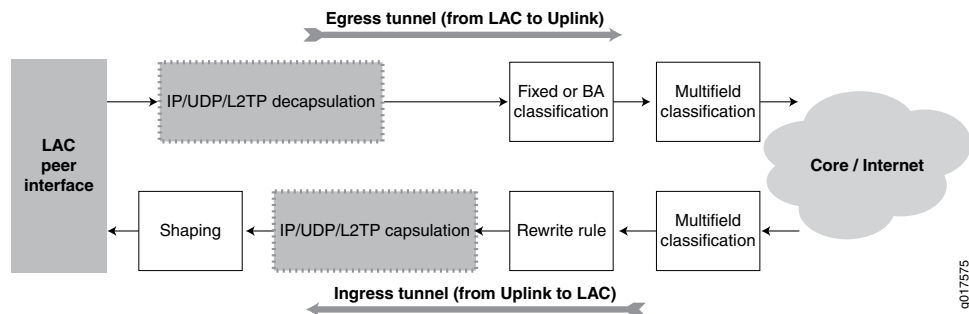

By default, the shaping calculation on the service interface includes the L2TP encapsulation. If necessary, you can configure additional adjustments for downstream ATM traffic from the LAC or differences in Layer 2 protocols.

Hardware Requirements for Inline Services on the LNS

Hierarchical scheduling for L2TP LNS inline services is supported on MPC/MIC modules only. The services that you can configure depend on the hardware combination. [Table 124 on page 487](#) lists the supported inline services and peer interfaces for each MPC/MIC combination.

Table 124: Hardware Requirements for L2TP LNS Inline Services

MPC Module	Inline Service Support—With Per-Session Shaping	Inline Service Support—Without Per-Session Shaping
MX-MPC1-3D	No	Yes
MX-MPC2-3D		
MX-MPC1-3D-Q	Yes	Yes
MX-MPC2-3D-Q		
MX-MPC2-3D-EQ		
MPC-3D-16XGE-SFPP	No	No

Related Documentation

- [Configuring Static CoS for an L2TP LNS Inline Service on page 487](#)
- [Configuring Dynamic CoS for an L2TP LNS Inline Service](#)

Configuring Static CoS for an L2TP LNS Inline Service

You can configure hierarchical scheduling for an L2TP LNS inline service and manage the IP header values using rewrite rules and classifiers.

Before you begin, configure the L2TP LNS inline service interface. See [Configuring an L2TP LNS with Inline Service Interfaces](#).

To configure static CoS for an L2TP LNS inline service:

1. Configure the hierarchical scheduler for the service interface (si) interface.

```
[edit interfaces si-fpc/port/pic ]
user@host# set hierarchical-scheduler maximum-hierarchy-levels 2
```



BEST PRACTICE: To enable Level 3 nodes in the LNS scheduler hierarchy and to provide better scaling, we recommend that you also specify a maximum of two hierarchy levels.

2. Configure the LNS to reflect the IP ToS value in the inner IP header to the outer IP header.

```
[edit services l2tp tunnel-group name]
user@host# set tos-reflect
```

3. Configure the classifier for egress traffic from the LAC:

- a. Define the fixed or behavior aggregate (BA) classifier.

- To configure a fixed classifier:

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number]
user@host# set forwarding-class class-name
```

- To configure a BA classifier:

```
[edit class-of-service]
user@host# set classifiers (dscp | dscp-ipv6 | inet-precedence) classifier-name
forwarding-class class-name loss-priority level code-points [ aliases ] [
bit-patterns]
```

- Apply the classifier to the service interface.

- To apply the classifier for the DSCP or DSCP IPv6 value:

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number classifiers]
user@host# set dscp (classifier-name | default)
user@host# set dscp-ipv6 (classifier-name | default)
```

- To apply the classifier for the ToS value:

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number classifiers]
user@host# set inet-precedence (classifier-name | default)
```

- Configure and apply a rewrite-rule to ingress traffic to the LAC:

- Configure the rewrite rule with the forwarding class and the loss priority value.

```
[edit class-of-service]
user@host# set rewrite-rules (dscp | dscp-ipv6 | inet-precedence) rewrite-name
forwarding-class class-name loss-priority level code-point (alias | bits)
```

- Apply the rewrite rule to the service interface.

- To apply the rewrite rule for the DSCP or DSCP IPv6 value:

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number
rewrite-rules]
user@host# set dscp(rewrite-name | <default>) protocol protocol-types
user@host# set dscp-ipv6 (rewrite-name | <default>)
```

- To apply the rewrite rule for the ToS value:

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number
rewrite-rules]
user@host# set inet-precedence (rewrite-name | <default>) protocol
protocol-types
```

- (Optional) Configure additional adjustments for downstream ATM traffic.

By default, the shaping calculation on the service interface includes the L2TP encapsulation. If necessary, you can configure additional adjustments for downstream ATM traffic from the LAC or differences in Layer 2 protocols.

```
[edit class-of-service traffic-control-profiles profile-name]
user@host# set overhead-accounting (frame-mode | cell-mode) <bytes byte-value
```

- Apply the traffic-control profile.

```
[edit class-of-service interfaces si-fpc/port/pic unit logical-unit-number]
user@host# set output-traffic-control-profile profile-name
```



BEST PRACTICE: To limit bandwidth for tunneled sessions with default CoS configurations, we recommend that you also configure CoS for the remaining traffic on the static service interface.

```
[edit class-of-service interfaces si-fpc/port/pic ]
user@host# set output-traffic-control-profile-remaining profile-name
```

- Related Documentation**
- [CoS for L2TP LNS Inline Services Overview on page 486](#)
 - [Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 482](#)

Intelligent Oversubscription on the MIC and MPC Interfaces Overview

On the MIC and MPC interfaces, as on other types of interface hardware, arriving packets are assigned to one of two preconfigured traffic classes (network control and best effort) based on their header types and destination media access control (MAC) address. Oversubscription, the situation when the incoming packet rate is much higher than the Packet Forwarding Engine and system can handle, can cause key packets to be dropped and result in a flurry of resends, making the problem worse. However, the Trio MPC/MIC interfaces handle oversubscription more intelligently and drops lower priority packets when oversubscription occurs. Protocols such as routing protocols are classified as network control. Protocols such as telnet, FTP, and SSH are classified as best effort. No configuration is necessary.

The following frames and packets are assigned to the network control traffic class:

- ARPs: Ethertype **0x0806** for ARP and **0x8035** for dynamic RARP
- IEEE 802.3ad Link Aggregation Control Protocol (LACP): Ethertype **0x8809** and **0x01** or **0x02** (subtype) in first data byte
- IEEE 802.1ah: Ethertype **0x8809** and subtype **0x03**
- IEEE 802.1g: Destination MAC address **0x01-80-C2-00-00-02** with Logical Link Control (LLC) **0xAAAA03** and Ethertype **0x08902**
- PVST: Destination MAC address **0x01-00-0C-CC-CC-CD** with LLC **0xAAAA03** and Ethertype **0x010B**
- xSTP: Destination MAC address **0x01-80-C2-00-00-00** with LLC **0x424203**
- GVRP: Destination MAC address **0x01-80-C2-00-00-21** with LLC **0x424203**
- GMRP: Destination MAC address **0x01-80-C2-00-00-20** with LLC **0x424203**
- IEEE 802.1x: Destination MAC address **0x01-80-C2-00-00-03** with LLC **0x424203**
- Any per-port **my-mac** destination MAC address
- Any configured global Integrated Bridging and Routing (IRB) **my-mac** destination MAC address

In addition, the following Layer 3 control protocols are assigned to the network control traffic class:

- IGMP query and report: Ethertype **0x0800** and carrying an IPv4 protocol or IPv6 next header field set to 2 (IGMP)
- IGMP DVMRP: IGMP field version = 1 and type = 3
- IPv4 ICMP: Ethertype **0x0800** and IPv4 protocols = 1 (ICMP)
- IPv6 ICMP: Ethertype **0x86DD** and IPv6 next header field = **0x3A** (ICMP)
- IPv4 or IPv6 OSPF: Ethertype **0x0800** and IPv4 protocol field or IPv6 next header field = **89** (OSPF)
- IPv4 or IPv6 VRRP: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD** and IPv4 protocol field or IPv6 next header field = **112** (VRRP)
- IPv4 or IPv6 RSVP: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD** and IPv4 protocol field or IPv6 next header field = **46** or **134**
- IPv4 or IPv6 PIM: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD** and IPv4 protocol field or IPv6 next header field = **103**
- IPv4 or IPv6 IS-IS: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD** and IPv4 protocol field or IPv6 next header field = **124**
- IPv4 router alert: IPv4 Ethertype **0x0800** and IPv4 option field = **0x94** (router alert)

Also, the following Layer 4 control protocols are assigned to the network control traffic class:

- IPv4 and IPv6 BGP: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD**, TCP port = **179**, and carrying an IPv4 protocol or IPv6 next header field set to 6 (TCP)
- IPv4 and IPv6 LDP: IPv4 Ethertype **0x0800** or IPv6 Ethertype **0x86DD**, TCP or UDP port = **646**, and carrying an IPv4 protocol or IPv6 next header field set to 6 (TCP) or 17 (UDP)
- IPv4 UDP/L2TP control frames: IPv4 Ethertype **0x0800**, UDP port = **1701**, and carrying an IPv4 protocol field set to 17 (UDP)
- DHCP: Ethertype **0x0800**, IPv4 protocol field set to 17 (UDP), and UDP destination port = **0x43** (DHCP service) or **0x44** (DHCP host)
- IPv4 or IPv6 UDP/BFD: Ethertype **0x0800**, UDP port = **3784**, and IPv4 protocol field or IPv6 next header field set to 17 (UDP)

Finally, any PPP encapsulation (Ethertype **0x8863** (PPPoE Discovery) or **0x8864** (PPPoE Session Control)) is assigned to the network control traffic class (queue 3).



NOTE: These classifications are preconfigured.

Configuring Ingress Hierarchical CoS on MPC and MIC Interfaces

You can configure ingress CoS parameters, including hierarchical schedulers, on MX Series routers with MPC/MIC interfaces. In general, the supported configuration statements apply to per-unit schedulers or to hierarchical schedulers.

To configure ingress CoS for per-unit schedulers, include the following statements at the `[edit class-of-service interfaces interface-name]` hierarchy level:

```
[edit class-of-service interfaces interface-name]
input-excess-bandwidth-share (proportional value | equal);
input-scheduler-map map-name;
input-shaping-rate rate;
input-traffic-control-profile profile-name;
unit logical-unit-number;
  input-scheduler-map map-name;
  input-shaping-rate (percent percentage | rate);
  input-traffic-control-profile profile-name;
```

To configure ingress CoS for hierarchical schedulers, include the `interface-set` `interface-set-name` statement at the `[edit class-of-service interfaces]` hierarchy level:

```
[edit class-of-service interfaces]
interface-set interface-set-name {
  input-traffic-control-profile profile-name;
  input-traffic-control-profile-remaining profile-name;
  interface interface-name {
    input-excess-bandwidth-share (proportional value | equal);
    input-traffic-control-profile profile-name;
    input-traffic-control-profile-remaining profile-name;
    unit logical-unit-number;
  }
}
```

By default, ingress CoS features are disabled on the MPC and MIC interfaces.

You must configure the `traffic-manager` statement with `ingress-and-egress` mode to enable ingress CoS on the MPC/MIC interface, as shown in the following example:

```
chassis {
  fpc 7 {
    pic 0 {
      traffic-manager {
        mode ingress-and-egress;
      }
    }
  }
}
```

Configured CoS features on the ingress are independent of CoS features on the egress.

The following behavior aggregate (BA) classification tables are supported on the ingress side of the MPC/MIC interfaces:

- DSCP
- DSCP for IPv6

- exp (MPLS)
- IEEE 802.1p
- inet-precedence

Class of Service on Application Services Modular Line Card Overview

The Application Services Modular Line Card (AS MLC) is designed to run services for real-time traffic on MX240, MX480, and MX960 routers. It consists of three main components:

- Application Services Modular Carrier Card (AS MCC)
- Application Services Modular Processing Card (AS MXC)
- Application Services Modular Storage Card (AS MSC)

It supports class-of-service (CoS) features to ensure the quality of service (QoS) for real-time traffic that is sensitive to latency on a network. The AS MLC supports the following CoS features:

- Code-point Aliases—A code-point alias assigns a name to a pattern of code-point bits. On the AS MLC, you can use the code-point alias name for CoS components such as classifiers and drop-profile maps.
- Classification—Packet classification refers to the examination of ingress packets. On the AS MLC, the traffic flowing from the Modular Processing Card (AS MXC) towards the Modular Carrier Card (AS MCC) supports three types of classification:
 - Behavior Aggregate (BA)—BA classifier can be configured on the aggregated logical interfaces to classify traffic flowing from the AS MXC towards the AS MCC. With BA classification you can set the forwarding class and loss priority of a packet based on its code points. The AS MLC only supports IP classification (classification based on Type of Service (ToS) and Differentiated Services Code Point (DSCP)) and classification is supported for the IPv4 family only. The Media Flow Controller application sets appropriate DSCP/ToS code-point in the packet that is evaluated by the BA classifier on the AS MCC to classify the packet.
 - Multifield Classification—With multifield classifiers you can set the class and loss priority based on one or more of the following packet header fields: destination address, destination port, DSCP, IP protocol, and source address. Multifield classifiers are used when a simple BA classifier is insufficient to classify a packet.
 - Fixed Classification—Fixed classification can be configured on logical interfaces by specifying a forwarding class to be applied to all packets received by the logical interface, regardless of the packet contents.
- Scheduling—Schedulers enable you to define the buffer sizes, delay buffer size, drop profile map, excess priority, excess rate percentage, output-traffic-control profile, priority, scheduler-map, shaping rate, transmit rate, and random early detection (RED) drop profiles to be applied to a particular queue for packet transmission.

The AS MLC provides CoS features in the following deployment scenarios:

- **HTTP Reverse Proxy**—In HTTP reverse proxy configurations, the service provider provides services to a set of domains (content providers) that buy content caching capability from the service provider. Clients connect to content providers through virtual IP (VIP) addresses. Service providers in the reverse proxy scenario generally deploy the routers with AS MLC hardware to honor service requests (such as caching) from the domain users.
- **HTTP Transparent Proxy**—In HTTP transparent proxy configurations, the service provider implements the AS MLC to improve its own caching capability and reduce the load on its own network. Implementing caching on an MX Series router with an AS MLC improves the retrieval speeds for data and optimizes the back-end network utilization.
- **Mixed Mode**—In mixed mode both reverse proxy and transparent proxy are configured on the same router.

CoS Implementation in HTTP Reverse Proxy Scenario

In the reverse proxy configuration, the AS MXC provides content to multiple domains. The Media Flow Controller application on an AS MXC implements the differentiated services by setting the DSCP or IP precedence value for the IP packets traversing from the AS MXC to an AS MCC on the AS MLC hardware. The Modular Carrier Card uses these values to classify the packet and provide a suitable level of service.

The Media Flow Controller application detects the domain it serves and marks the DSCP values or the IP precedence bit value based on how important the traffic corresponding to that particular domain is. The service provider operator also sets a behavior aggregate (BA) classifier on the aggregated interfaces on the AS MCC. Based on the DSCP/IP precedence bits, the classifier sets the forwarding class and packet loss priority for the packet. The forwarding class and the packet loss priority values govern the next-hop behavior of the packet traversing the Juniper Networks router.

Unlike a firewall, the Media Flow Controller application implemented on the AS MLC hardware marks the DSCP/IP precedence values based on the application layer protocols. This feature ensures that important traffic flowing from the AS MXC gets a higher priority and is processed accordingly. For example, if MPEG is implemented on the egress, the drop precedence for each frame can be different such that the P and B frames (which require more processing) are dropped before the I frames, resulting in a better quality video for the end user.

For traffic received on the ingress interfaces, end-to-end quality-of-service (QoS) policies ensure that the traffic arriving at the interface has the right DSCP values and the traffic is prioritized based on the forwarding class and packet loss priority values.

CoS Implementation in Transparent Proxy Scenario

In the HTTP transparent proxy configuration, the service provider deploys the AS MLC hardware to reduce its own traffic instead of serving a particular domain. The Media Flow Controller application marks the DSCP bits based on its own requirements rather than those of the domains. Besides this, the CoS implementation for the egress interface is similar to the reverse proxy configuration scenario. The incoming packets follow the QoS policies applied at the WAN interface.

CoS Implementation in Mixed-Mode Scenario

In mixed mode both reverse proxy and transparent proxy configuration coexist on the same AS MLC hardware. In such a scenario, reverse proxy is configured on an aggregated interface and transparent proxy is configured on a regular interface with the Media Flow Controller application marking the appropriate DSCP values for both the configurations. The individual CoS implementation in both the scenarios remains similar to the implementation discussed in [“CoS Implementation in HTTP Reverse Proxy Scenario” on page 493](#) and [“CoS Implementation in Transparent Proxy Scenario” on page 493](#)

MX Series QoS FAQ Overview

The increased demand for sophisticated, media-rich services, the exponential growth of mobile sessions, and the emerging trend of cloud computing require a networking infrastructure that supports massive numbers of subscribers, service types and instances, and bandwidth. A number of features and methods have been developed to address these advanced network requirements, including quality of service (QoS). QoS is a set of mechanisms that helps maintain specified service levels for your network by optimizing and prioritizing network traffic so that demand for resources can meet requirements. Use QoS mechanisms to control the allocation of network attributes such as available bandwidth, latency, jitter, packet drop, and bit rate errors so that resources are managed to levels acceptable to your network customers and applications.

QoS on Juniper Networks MX Series 3D Universal Edge Routers

MX Series routers are available in a variety of configurations with robust features, including options that provide the level and granularity of the QoS support needed in your network. The MX Series hardware options currently include five models of Modular Port Concentrators (MPCs), using several different Modular Interface Cards (MICs), and three models of Dense Port Concentrators (DPCs). The MPCs and DPCs provide varying degrees of QoS support.

The MPCs are next-generation line modules for advanced Ethernet services edge and broadband edge networks using high capacity, modular Gigabit Ethernet, 10-Gigabit Ethernet, and 100-Gigabit Ethernet hardware. The MPCs house Packet Forwarding Engines that deliver comprehensive Layer 3 routing (IPv4 and IPv6), Layer 2 switching, inline services, and advanced hierarchical quality of service (H-QoS) per MX Series slot. The MPCs can also take advantage of the high performance Junos Trio chipset.

Key QoS features provided by the MPCs include extensive queue management, scheduler hierarchy, shaping, intelligent oversubscription, weighted round robin (WRR), random early detection (RED), and weighted random early detection (WRED).

The DPCs (DPCE-X, DPCE-R, and DPCE-Q) each provide multiple physical interfaces and Packet Forwarding Engines on a single board that performs packet processing and forwarding. Each Packet Forwarding Engine consists of one I-chip for Layer 3 processing and one network processor for Layer 2. DPCE-Qs offer enhanced queuing capabilities and the QoS features of WRR, RED, and WRED.

**Related
Documentation**

- [Juniper Networks Datasheet MX Series 3D Universal Edge Routers](#)
- [Juniper Networks Datasheet Modular Port Concentrators for the MX Series](#)
- [Juniper Networks Datasheet Dense Port Concentrators](#)
- [Dense Port Concentrators FAQs](#)
- [Junos Trio Chipset on MX Series FAQs on page 307](#)

CHAPTER 24

Configuring CoS on Circuit Emulation ATM MIC Interfaces

This topic discusses the following:

- [CoS on Circuit Emulation ATM MICs Overview on page 497](#)
- [Configuring CoS on Circuit Emulation ATM MICs on page 498](#)

CoS on Circuit Emulation ATM MICs Overview

The following class-of-service features are supported on Circuit Emulation ATM MICs:

- Traffic shaping and scheduling—Traffic shaping determines the maximum amount of traffic that can be transmitted on an interface.

You can configure three different categories of ATM service: constant bit rate (**cbr**), non-real-time variable bit rate (**nrvtbr**), and real-time variable bit rate (**rtvtbr**). The service category works in conjunction with ATM cell parameters **peak-rate**, **sustained-rate**, and **max burst-size** to impose traffic shaping, transmit rate, shaping rate, and default excess rate for an ATM queue.

- Policing—Policing, or rate limiting, enables you to limit the amount of traffic that passes into or out of the interface. It works with firewall filters to thwart denial-of-service (DoS) attacks.

Networks police traffic by limiting the input or output transmission rate of a class of traffic on the basis of user-defined criteria. The ATM policer controls the maximum rate of traffic sent from or received on the interface on which it is applied.

To apply limits to the traffic flow, configure the **cdvt** and **peak-rate** parameters within the policer. Define the **policing-action** parameter as **discard**, **discard-tag**, and **count** to set a consequence for the packets that exceed these limits. The consequence is usually a higher loss priority so that if the packets encounter downstream congestion, they are discarded first.

Related Documentation

- [Configuring CoS on Circuit Emulation ATM MICs on page 498](#)

Configuring CoS on Circuit Emulation ATM MICs

On MX Series routers, you can configure the following class-of-service features on Circuit Emulation ATM MICs:

- Traffic shaping and scheduling—Traffic shaping determines the maximum amount of traffic that can be transmitted on an interface.
- Policing—Policing, or rate limiting, enables you to limit the amount of traffic that passes into or out of the interface. It works with firewall filters to thwart denial-of-service (DoS) attacks.

To configure a traffic shaping and scheduling profile on a Circuit Emulation ATM MIC:

1. Configure the traffic shaping and scheduling profile and specify the service category that determines the traffic shaping parameter for the ATM queue at the ATM MIC.

```
[edit class-of-service traffic-control-profile traffic-control-profile-name]  
user@host# set atm-service (cbr | rtvbr | nrtvbr)
```

2. Configure the transmit rate, shaping rate, and default excess rate for the ATM queue.

```
[edit class-of-service traffic-control-profile traffic-control-profile-name]  
user@host# set peak-rate peak-rate  
user@host# set sustained-rate rate  
user@host# set max-burst-size cells
```

To configure an ATM policer for a Circuit Emulation ATM MIC:

1. Create a policer for each cell in the ATM packet. A policer defines the maximum traffic that can flow through an interface and further determines the actions to be taken when the traffic exceeds the defined limits.

```
[edit firewall]  
user@host# set atm-policer atm-policer-name
```

2. Define the policer parameters. Configure the **atm-service** option. Apply limits to the traffic flow by configuring the **cdvt** and **peak-rate** parameters within the policer and define the **policing-action** parameter to set a consequence for the packets that exceed the traffic limits.

```
[edit firewall atm-policer atm-policer-name]  
user@host# set logical-interface-policer  
user@host# set atm-service (cbr | rtvbr | nrtvbr | ubr)  
user@host# set cdvt rate  
user@host# set peak-rate rate  
user@host# set policing-action (discard | discard-tag | count)
```

3. Apply the traffic-shaping profile at the interface level.

```
[edit interfaces at-fpc/pic/port unit unit-number]  
user@host# set class-of-service interfaces output-traffic-control-profile  
traffic-control-profile-name
```

4. Apply the policer at the interface level.

```
[edit interfaces at-fpc/pic/port unit unit-number]
```

```
user@host# set atm-policer input-atm-policer atm-policer-name
```

You can verify the configuration by using the **show class-of-service traffic-control-profile *traffic-control-profile-name*** command.

**Related
Documentation**

- ATM Support on Circuit Emulation PICs Overview
- [CoS on Circuit Emulation ATM MICs Overview on page 497](#)

PART 4

CoS Configuration for Specific Transports

- [Configuring Schedulers on Aggregated Ethernet and SONET/SDH Interfaces on page 503](#)
- [Configuring CoS on ATM Interfaces on page 515](#)
- [Configuring CoS on Ethernet Interfaces on page 535](#)
- [Configuring CoS for MPLS on page 541](#)

Configuring Schedulers on Aggregated Ethernet and SONET/SDH Interfaces

This topic discusses the following:

- [Configuring Schedulers on Aggregated Interfaces on page 503](#)
- [Limitations on CoS for Aggregated Interfaces on page 504](#)
- [Examples: Configuring CoS on Aggregated Interfaces on page 506](#)
- [Example: Configuring Scheduling Modes on Aggregated Interfaces on page 508](#)

Configuring Schedulers on Aggregated Interfaces

You can apply a class-of-service (CoS) configuration to aggregated Ethernet and aggregated SONET/SDH interfaces. The CoS configuration applies to all member links included in the aggregated interface. You cannot apply different CoS configurations to the individual member links.

You can configure shaping for aggregated Ethernet interfaces that use interfaces originating from Gigabit Ethernet IQ2 PICs. However, you cannot enable shaping on aggregated Ethernet interfaces when there is a mixture of ports from Intelligent Queuing (IQ) and Intelligent Queuing 2 (IQ2) PICs in the same bundle.

You cannot configure a shaping rate and guaranteed rate on an aggregated Ethernet interface with member interfaces on IQ or IQ2 PICs. The commit will fail. These statements are allowed only when the member interfaces are Enhanced Queuing DPC Gigabit Ethernet interfaces.

To view the summation of the queue statistics for the member links of an aggregate interface, issue the **show interfaces queue** command. To view the queue statistics for each member link, issue the **show interfaces queue aggregated-interface-name** command.

To configure CoS schedulers on aggregated interfaces, include the following statements at the **[edit class-of-service]** hierarchy level:

```
[edit class-of-service]
interfaces {
  interface-name {
    scheduler-map map-name;
    unit logical-unit-number {
```

```

        scheduler-map map-name;
    }
}
scheduler-maps {
    map-name {
        forwarding-class class-name scheduler scheduler-name;
    }
}
schedulers {
    scheduler-name {
        buffer-size (percent percentage | remainder | temporal microseconds);
        drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol
            (any | non-tcp | tcp) drop-profile profile-name;
        excess-priority (low | high);
        excess-rate percent percentage;
        priority priority-level;
        transmit-rate (rate | percent percentage | remainder) <exact>;
    }
}

```

Limitations on CoS for Aggregated Interfaces

Both Ethernet and SONET/SDH interfaces can be aggregated. The limitations covered here apply to both.

There are some restrictions when you configure CoS on aggregated Ethernet and SONET/SDH interfaces:

- Chassis scheduling, described in [“Applying Scheduler Maps to Packet Forwarding Component Queues” on page 211](#), is not supported on aggregated interfaces, because a chassis scheduler applies to the entire PIC and not just to one interface.
- An aggregated interface is a pseudo-interface. Therefore, CoS queues are not associated with the aggregated interface. Instead, CoS queues are associated with the member link interfaces of the aggregated interface.
- When you apply CoS parameters to the aggregated interface, they are applied to the CoS queues of the member link interfaces. You can apply CoS classifiers and rewrite rules directly to the member link interfaces, and the software uses the values you configure.
- You cannot apply a scheduler map to a member link of an aggregate interface.

When the scheduler map of the aggregate interface has schedulers configured for absolute transmit rate, the scheduler for the member link interfaces is scaled to the speed of each member link interface. Each member link interface has an automatic scheduler map that is not visible in the CLI. This scheduler map is allocated when the member link is added to the aggregate interface and is deleted when the member link is removed from the aggregate interface.

- If you configure the scheduler transmit rate of the aggregate interface as an absolute rate, the software uses the following formula to scale the transmit rate of each member link:

$$\begin{aligned} \text{transmit rate of member link interface} = & \\ & (\text{configured transmit rate of aggregate interface} / \\ & \text{total speed of aggregate interface}) * \\ & (\text{total speed of member link interface} / \text{total configured percent}) * 100 \end{aligned}$$

- If you configure the scheduler transmit rate of the aggregate interface as a percentage, the software uses the following formula to scale the transmit rate of each member link:

$$\begin{aligned} \text{transmit rate percent of member link interface} = & \\ & (\text{configured transmit rate percent of aggregate interface} / \\ & \text{total configured percent}) * 100 \end{aligned}$$

The total configured percent is the sum of the configured transmit rate of all schedulers in terms of percentage of the total speed of the aggregate interface.

For more information, see [“Examples: Configuring CoS on Aggregated Interfaces” on page 506](#).

- All the other parameters for the schedulers, including priority, drop profile, and buffer size, are copied without change from the scheduler of the aggregated interface to the member link interfaces.
- The configuration related to the logical interfaces, including classifiers and rewrite rules, is copied from the aggregated logical interface configuration to the member link logical interfaces.
- For the scheduler map applied to an aggregated interface, if you configure a transmission rate in absolute terms, then the traffic of all the member link interfaces might be affected if any of the member link interfaces go up or down.

When applying CoS configurations to bundles, you must apply the CoS configuration directly to the bundle, not to the physical ports that are part of the bundle. The device may give you a false commit if you apply a CoS configuration directly to a physical port that is part of a bundle. This limitation applies if you attempt to configure a physical port that is already a member of a bundle or if you attempt to add a physical port to a bundle that already has a CoS configuration applied to it.

If you want to add a physical port to a bundle that already has a CoS configuration, you must:

1. Remove the CoS configuration from the port.
2. Commit your changes on the device.
3. Add the port to the bundle. The CoS configurations that are present on the bundle will be applied to the port you are adding to the bundle.
4. Commit your changes on the device.

In addition, if you want to remove a physical port from a bundle and ensure the physical port has the appropriate CoS configurations, you must:

1. Remove the port from the bundle.
2. Commit your changes on the device.

3. Apply the applicable CoS configuration to the port.
4. Commit your changes on the device.

Examples: Configuring CoS on Aggregated Interfaces

This example illustrates how CoS scheduler parameters are configured and applied to aggregated interfaces.

Applying Scaling Formula to Absolute Rates

Configure queues as follows when the total speed of member link interfaces is 100 Mbps (the available bandwidth is 100 Mbps):

```
[edit class-of-service]
schedulers {
  be {
    transmit-rate 10m;
  }
  af {
    transmit-rate 20m;
  }
  ef {
    transmit-rate 80m;
  }
  nc {
    transmit-rate 30m;
  }
}
```

The total configured transmit rates of the aggregated interface is **10m + 20m + 80m + 30m = 140 Mbps**, meaning the transmit rate is overconfigured by 40 percent. Therefore, the software scales down the configuration to match the 100 Mbps of available bandwidth, as follows:

```
be = (10/140) * 100 = 7 percent of 100 Mbps = 7 Mbps
af = (20/140) * 100 = 14 percent of 100 Mbps = 14 Mbps
ef = (80/140) * 100 = 57 percent of 100 Mbps = 57 Mbps
nc = (30/140) * 100 = 21 percent of 100 Mbps = 21 Mbps
```

Applying Scaling Formula to Mixture of Percent and Absolute Rates

Configure the following mixture of percent and absolute rates:

```
[edit class-of-service]
schedulers {
  be {
    transmit-rate 20 percent;
  }
  af {
    transmit-rate 40 percent;
  }
  ef {
    transmit-rate 150m;
  }
  nc {
    transmit-rate 10 percent;
  }
}
```

Assuming 300 Mbps of available bandwidth, the configured percentages correlate with the following absolute rates:

```
schedulers {
  be {
    transmit-rate 60m;
  }
  af {
    transmit-rate 120m;
  }
  ef {
    transmit-rate 150m;
  }
  nc {
    transmit-rate 30m;
  }
}
```

The software scales the bandwidth allocation as follows:

```
be = (60/360) * 100 = 17 percent of 300 Mbps = 51 Mbps
af = (120/360) * 100 = 33 percent of 300 Mbps = 99 Mbps
ef = (150/360) * 100 = 42 percent of 300 Mbps = 126 Mbps
nc = (30/360) * 100 = 8 percent of 300 Mbps = 24 Mbps
```

Configuring an Aggregated Ethernet Interface

Configure an aggregated Ethernet interface with the following scheduler map:

```
[edit class-of-service]
scheduler-maps {
  aggregated-sched {
    forwarding-class be scheduler be;
    forwarding-class af scheduler af;
    forwarding-class ef scheduler ef;
    forwarding-class nc scheduler nc;
  }
}
schedulers {
  be {
    transmit-rate percent 10;
    buffer-size percent 25;
  }
  af {
    transmit-rate percent 20;
    buffer-size percent 25;
  }
  ef {
    transmit-rate 80m;
    buffer-size percent 25;
  }
  nc {
    transmit-rate percent 30;
    buffer-size percent 25;
  }
}
```

In this case, the transmission rate for the member link scheduler map is as follows:

- **be**—7 percent
- **af**—14 percent
- **ef**—57 percent
- **nc**—21 percent

If you add a Fast Ethernet interface to the aggregate, the aggregate bandwidth is 200 Mbps, and the transmission rate for the member link scheduler map is as follows:

- **be**—10 percent
- **af**—20 percent
- **ef**—40 percent
- **nc**—30 percent

Example: Configuring Scheduling Modes on Aggregated Interfaces

You can configure class-of-service parameters, such as queuing or shaping parameters on aggregated interfaces, in either link-protect or non-link-protect mode. You can configure these parameters for per-unit schedulers, hierarchical schedulers, or shaping at the physical and logical interface level. You can control the way these parameters are applied by configuring the aggregated interface to operate in **scale** or **replicate** mode.

You can apply these parameters on the following routers:

- MX Series routers with EQ DPCs
- MX Series routers with Trio MPC/MIC interfaces through Junos OS release 10.2 (non-link-protect mode only)
- M120 or M320 routers
- T Series routers with IQ2 PICs
- PTX Series Packet Transport Switches

You can configure the applied parameters for aggregated interfaces operating in non-link-protected mode. In link-protected mode, only one link in the bundle is active at a time (the other link is a backup link) so schedulers cannot be scaled or replicated. In non-link-protected mode, all the links in the bundle are active and send traffic; however, there is no backup link. If a link fails or is added to the bundle in non-link-protected mode, the links' traffic is redistributed among the active links.

To set the scheduling mode for aggregated interfaces, include the **scale** or **replicate** option of the **member-link-scheduler** statement at the **[edit class-of-service interfaces ean]** hierarchy level, where *n* is the configured number of the interface:

```
[edit class-of-service interfaces ean]  
  member-link-scheduler (replicate | scale);
```

By default, if you do not include the **member-link-scheduler** statement, scheduler parameters are applied to the member links in the **scale** mode (also called “equal division mode”).

The aggregated Ethernet interfaces are otherwise configured as usual. For more information on configuring aggregated Ethernet interfaces, see the Junos® OS Network Interfaces.

The following examples set **scale** mode on the **ae0** interface and **replicate** mode on the **ae1** interface.

```
[edit class-of-service]
interfaces ae0 {
  member-link-scheduler scale;
}
```

```
[edit class-of-service]
interfaces ae1 {
  member-link-scheduler replicate;
}
```



NOTE: The **member-link-scheduler** statement only appears for aggregated interfaces. You configure this statement for aggregated interfaces in non-link-protected mode. For more information about link protection modes, see the *Network Interfaces Configuration Guide*.

Aggregated interfaces support both hierarchical and per-unit schedulers. For more information about configuring schedulers, see “[Configuring Schedulers](#)” on page 160.



NOTE: The **traffic-control-profiles** statement is not supported for PTX Series Packet Transport Switches.

When interface parameters are using the **scale** option of the **member-link-scheduler** statement, the following parameters under the **[edit class-of-service traffic-control-profiles traffic-control-profile-name]** configuration are scaled on egress when hierarchical schedulers are configured:

- **shaping-rate** (PIR)
- **guaranteed-rate** (CIR)
- **delay-buffer-rate**

When interface parameters are using the **scale** option of the **member-link-scheduler** statement, the following parameters under the **[edit class-of-service schedulers scheduler-name]** configuration are scaled on egress when per-unit schedulers are configured:

- **transmit-rate**

- **buffer-size**



NOTE: You cannot apply a hierarchical scheduler at the interface set level for an **ae** interface. (Interface sets cannot be configured under an **ae** interface.)

The following configuration parameters are not supported on **ae** interfaces in non-link-protection mode:

- Input scheduler maps
- Input traffic control profiles
- Input shaping rates

The following configuration conventions are also not supported:

- Scaling of the **input-traffic-control-profile-remaining** statement.
- The **scheduler-map-chassis** statement and the **derived** option for the **ae** interface. Chassis scheduler maps should be applied under the physical interfaces.
- Dynamic and demux interfaces are not supported as part of the **ae** bundle.

Depending on whether the **scale** or **replicate** option is configured, the **member-link-scheduler** statement operates in either scaled mode (also called “equal division mode”) or replicated mode, respectively.

In scaled mode, a VLAN can have multiple flows that can be sent over multiple member links of the **ae** interface. Likewise, a member link can receive traffic from any VLAN in the **ae** bundle. In scaled mode, the physical interface bandwidth is divided equally among all member links of the **ae** bundle.

In scaled mode, the following scheduler parameter values are divided equally among the member links:

- When the parameters are configured using traffic control profiles, then the parameters scaled are the shaping rate, guaranteed rate, and delay buffer rate.
- When the parameters are configured using scheduler maps, then the parameters scaled are the transmit rate and buffer size.

For example, consider an **ae** bundle between routers R1 and R2 consisting of three links. These are **ge-0/0/1**, **ge-0/0/2** and **ge-0/0/3** (**ae0**) on R1; and **ge-1/0/0**, **ge-1/0/1**, and **ge-1/0/2** (**ae2**) on R2. Two logical interfaces (units) are also configured on the **ae0** bundle on R1: **ae0.0** and **ae0.1**.

On **ae0**, traffic control profiles on R1 are configured as follows:

- **ae0** (the physical interface level) has a PIR of 450 Mbps.
- **ae0.0** (VLAN 100 at the logical interface level) has a PIR of 150 Mbps and a CIR of 90 Mbps.

- **ae0.1** (VLAN 200 at the logical interface level) has a PIR of 90 Mbps and a CIR of 60 Mbps.

In scaled mode, the **ae0** PIR is first divided among the member physical interfaces. Because there are three members, each receives $450 / 3 = 150$ Mbps as a derived value. So the scaled PIR for the members interfaces is 150 Mbps each.

However, there are also two logical interfaces (**ae0.0** and **ae0.1**) and VLANs (100 and 200) on **ae0**. Traffic can leave on any of the three physical interfaces (**ge-0/0/1**, **ge-0/0/2**, or **ge-0/0/3**) in the bundle. Therefore, two derived logical interfaces are added to the member links to represent the two VLANs.

There are now six logical interfaces on the physical interfaces of the links making up the **ae** bundle, one set for VLAN 100 and the other for VLAN 200:

- **ge-0/0/1.0** and **ge-0/0/1.1**
- **ge-0/0/2.0** and **ge-0/0/2.1**
- **ge-0/0/3.0** and **ge-0/0/3.1**


The traffic control profile parameters configured on **ae0.0** are divided across all the underlying logical interfaces (the unit 0s). In the same way, the traffic control profile parameters configured on **ae0.1** are divided across all the underlying logical interfaces (the unit 1s).

Therefore, the derived values of the scaled parameters on the interfaces are:

- For **ge-0/0/1.0** and **ge-0/0/2.0** and **ge-0/0/3.0**, each CIR = $90 / 3 = 30$ Mbps, and each PIR = $150 / 3 = 50$ Mbps.
- For **ge-0/0/1.1** and **ge-0/0/2.1** and **ge-0/0/3.1**, each CIR = $60 / 3 = 20$ Mbps, and each PIR = $90 / 3 = 30$ Mbps.

The scaled values are shown in [Figure 33 on page 511](#).

Figure 33: Scaled Mode for Aggregated Ethernet Interfaces

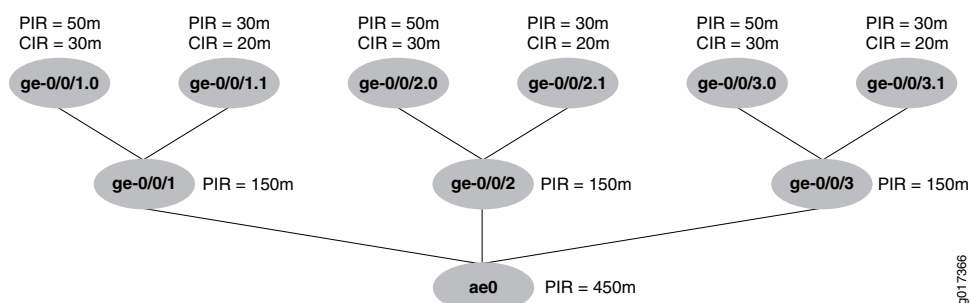

In scaled mode, when a new member link is added to the bundle, or an existing member link is either removed or fails, then the scaling factor (based on the number of active links) is recomputed and the new scheduler or traffic control profile parameters are reassigned. Only the PIR, CIR, and buffer parameters are recomputed: all other parameters are simply copied at each level.



NOTE: In `show class-of-service scheduler-map` commands, values derived in scaled mode instead of explicitly configured are flagged with `&**sf**n` suffix, where *n* indicates the value of the scaling factor.

The following sample shows the output for the scheduler map named `smap-all-abs` with and without a scaling factor:

```
user@host> show class-of-service scheduler-map
Scheduler map: smap-all-abs, Index: 65452

Scheduler: q0_sch_abs, Forwarding class: be, Index: 6775
Transmit rate: 40000000 bps, Rate Limit: none, Buffer size: remainder,
Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium low    any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>

user@host> show class-of-service scheduler-map
Scheduler map: smap-all-abs, Index: 65452

Scheduler: q0_sch_abs&**sf**3, Forwarding class: be, Index: 2128
Transmit rate: 13333333 bps, Rate Limit: none, Buffer size: remainder,
Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium low    any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>
```



NOTE: There can be multiple scheduler maps created with different scaling factors, depending on when the child interfaces come up. For example, if there are only two active children on a parent interface, a new scheduler map with a scaling factor of 2 is created. The scheduler map name is `smap-all-abs&**sf**2`.

In replicated mode, in contrast to scaled mode, the configured scheduler parameters are simply replicated, not divided, among all member links of the `ae` bundle.

In replicated mode, the following scheduler parameter values are replicated among the member links and logical interfaces:


- When the parameters are configured using traffic control profiles, then the parameters replicated are the shaping rate, guaranteed rate, and delay buffer rate.
- When the parameters are configured using scheduler maps, then the parameters replicated are the transmit rate and buffer size.

If the scheduler parameters in the example configuration between routers R1 and R2 are applied with the **member-link-scheduler replicate** statement and option, the following parameters are applied:

- The **ae0** PIR is copied among the member physical interfaces. Each receives 450 Mbps as a PIR.
- For each logical interface unit **.0**, the configured PIR and CIR for **ae0.0** is replicated (copied). Each logical interface unit **.0** receives a PIR of 150 Mbps and a CIR of 90 Mbps.
- For each logical interface unit **.1**, the configured PIR and CIR for **ae0.1** is replicated (copied). Each logical interface unit **.1** receives a PIR of 90 Mbps and a CIR of 60 Mbps.

The replicated values are shown in [Figure 34 on page 513](#).

Figure 34: Replicated Mode for Aggregated Ethernet Interfaces

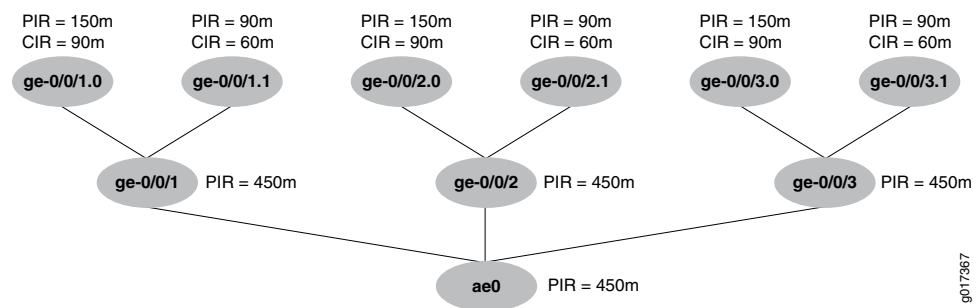

In replicated mode, when a new member link is added to the bundle, or an existing member link is either removed or fails, the values are either copied or deleted from the required levels.

Related Documentation

- [Schedulers Overview on page 158](#)
- [Default Schedulers Overview on page 159](#)
- [Configuring a Scheduler](#)

CHAPTER 26

Configuring CoS on ATM Interfaces

This topic discusses the following:

- [CoS on ATM Interfaces Overview on page 515](#)
- [Configuring Linear RED Profiles on ATM Interfaces on page 516](#)
- [Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces on page 517](#)
- [Example: Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces on page 519](#)
- [Configuring Scheduler Maps on ATM Interfaces on page 520](#)
- [Enabling Eight Queues on ATM Interfaces on page 522](#)
- [Configuring VC CoS Mode on ATM Interfaces on page 527](#)
- [Copying the PLP Setting to the CLP Bit on ATM Interfaces on page 528](#)
- [Applying Scheduler Maps to Logical ATM Interfaces on page 528](#)
- [Example: Configuring CoS for ATM2 IQ VC Tunnels on page 529](#)
- [Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530](#)
- [Configuring IEEE 802.1p BA Classifiers for Ethernet VPLS Over ATM on page 531](#)
- [Example: Combine Layer 2 and Layer 3 Classification on the Same ATM Physical Interface on page 532](#)

CoS on ATM Interfaces Overview

The ATM2 intelligent queuing (IQ) interface allows multiple IP queues into each virtual circuit (VC). On Juniper Networks M Series Multiservice Edge Routers (except the M320 router), a VC tunnel can support four class-of-service (CoS) queues. On M320 routers and T Series Core Routers, for all ATM2 IQ PICs except the OC48 PIC, a VC tunnel can support eight CoS queues. Within a VC tunnel, the weighted round-robin (WRR) algorithm schedules the cell transmission of each queue. You can configure the queue admission policies, such as early packet discard (EPD) or weighted random early detection (WRED), to control the queue size during congestion.

For information about CoS components that apply generally to all interfaces, see [“CoS Overview” on page 3](#). For general information about configuring ATM interfaces, see the Junos® OS Network Interfaces.

To configure ATM2 IQ VC tunnel CoS components, include the following statements at the **[edit interfaces at-*fpc/pic/port*]** hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
max-queues-per-interface number;

[edit interfaces at-fpc/pic/port]
atm-options {
  linear-red-profiles profile-name {
    high-plp-max-threshold percent;
    low-plp-max-threshold percent;
    queue-depth cells high-plp-threshold percent low-plp-threshold percent;
  }
  plp-to-clp;
  scheduler-maps map-name {
    forwarding-class class-name {
      epd-threshold cells plp cells;
      linear-red-profile profile-name;
      priority (high | low);
      transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
  }
}
unit logical-unit-number {
  atm-scheduler-map (map-name | default);
  family family {
    address address {
      destination address;
    }
  }
  plp-to-clp;
  shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
    length);
  }
  vci vpi-identifier.vci-identifier;
}
```

Configuring Linear RED Profiles on ATM Interfaces

Linear random early detection (RED) profiles define CoS virtual circuit drop profiles. You can configure up to 32 linear RED profiles per port. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.

To configure linear RED profiles, include the **linear-red-profiles** statement at the **[edit interfaces at-*fpc/pic/port* atm-options]** hierarchy level:

```
[edit interfaces at-fpc/pic/port atm-options]
linear-red-profiles profile-name {
  high-plp-max-threshold percent;
  low-plp-max-threshold percent;
  queue-depth cells high-plp-threshold percent low-plp-threshold percent;
}
```

The **queue-depth**, **high-plp-threshold**, and **low-plp-threshold** statements are mandatory.

You can define the following options for each RED profile:

- **high-plp-max-threshold**—Define the drop profile fill-level for the high packet loss priority (PLP) CoS VC. When the fill level exceeds the defined percentage, all packets with high PLP are dropped.
- **low-plp-max-threshold**—Define the drop profile fill-level for the low PLP CoS VC. When the fill level exceeds the defined percentage, all packets with low PLP are dropped.
- **queue-depth**—Define maximum queue depth in the CoS VC drop profile. Packets are always dropped beyond the defined maximum. The range you can configure is from 1 through 64,000 cells.
- **high-plp-threshold**—Define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED.
- **low-plp-threshold**—Define CoS VC drop profile fill-level percentage when linear RED is applied to cells with low PLP. When the fill level exceeds the defined percentage, packets with low PLP are randomly dropped by RED.

Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces

You can configure ATM scheduler maps on Ethernet VPLS over bridged ATM interfaces.

Before you begin, you must have done the following tasks:

- Properly configured the router basics
- Verified you have support for VPLS and routing instance configuration
- Installed ATM II IQ PICs

When you configure ATM scheduler maps on Ethernet VPLS over bridged ATM interfaces, you can assign ATM traffic to various forwarding classes and queues. This feature is only available with the ATM II IQ PIC with Ethernet VPLS-over-ATM encapsulation.

The configuration takes place in four steps: define the scheduler map for ATM options on the interface, set the encapsulation type to Ethernet VPLS over ATM LLC, attach the scheduler map to the logical interface (unit), and include the interface in the VPLS routing instance configuration.

To configure ATM scheduler maps on Ethernet VPLS over bridged ATM interfaces:

1. Define the scheduler map for ATM options on the interface:

```
[edit interfaces at-fpc/pic/port]
user@host# set atm-options pic-type atm2
user@host# set atm-options vpi vpi-number
user@host# set atm-options scheduler-maps scheduler-map-name forwarding-class
forwarding-class-name forwarding-class-option-statements
(repeat last set command as necessary)
```

2. Set the encapsulation type to Ethernet VPLS over ATM LLC:

```
[edit interfaces at-fpc/pic/port]  
user@host# set unit unit-number encapsulation ether-vpls-over-atm-llc  
user@host# set unit unit-number vci vci-number
```

3. Attach the scheduler map to the logical interface (unit):

```
[edit interfaces at-fpc/pic/port]  
user@host# set unit unit-number atm-scheduler-map scheduler-map-name
```

4. Include the interface in the VPLS routing instance configuration:

```
[edit interfaces at-fpc/pic/port]  
user@host# top  
[edit]  
user@host# edit routing-instances routing-instance-name  
[edit routing-instances routing-instance-name]  
user@host# set interface at-fpc/pic/port.unit-number  
user@host# set route-distinguisher value  
user@host# set vrf-target target-value  
user@host# set protocols vpls site-range value  
user@host# set protocols vpls site site-name site-identifier number
```

When you are done, the configuration statements you added should look like the listings below.

1. The scheduler map for ATM options on the interface:

```
[edit interfaces at-fpc/pic/port atm-options]  
pic-type atm2;  
vpi vpi-number;  
scheduler-maps {  
  scheduler-map-name {  
    forwarding-class forwarding-class-name {  
      (forwarding-class option statements);  
    }  
  }  
}
```

2. The encapsulation type to Ethernet VPLS over ATM LLC:

```
[edit interfaces at-fpc/pic/port unit unit-number]  
encapsulation ether-vpls-over-atm-llc;  
vci vci-number;
```

3. The scheduler map to the logical interface (unit):

```
[edit interfaces at-fpc/pic/port unit unit-number]  
atm-scheduler-map scheduler-map-name;
```

4. The interface in the VPLS routing instance configuration:

```
[edit routing-instances routing-instance-name]  
interface at-fpc/pic/port.unit-number;  
route-distinguisher value;  
vrf-target target-value;  
protocols {  
  vpls {  
    site-range value;
```



```

        site site-name {
            site-identifier number;
        }
    }
}

```

Related Documentation • [Example: Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces on page 519](#)

Example: Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces

The following example configures an ATM scheduler map named **cos-vpls** and attaches it to the ATM interface **at-1/0/0.0**, configures **ether-vpls-over-atm-llc** encapsulation, attaches the **cos-vpls** scheduler map to the logical interface (unit), and configures the ATM interface **at-1/0/0.0** as part of a VPLS routing instance named **cos-vpls-1**.

```

[edit]
interfaces {
  at-1/0/0 {
    atm-options {
      pic-type atm2;
      vpi 0;
      scheduler-maps {
        cos0 {
          forwarding-class assured-forwarding {
            priority low;
            transmit-weight percent 10;
          }
          forwarding-class best-effort {
            priority low;
            transmit-weight percent 20;
          }
          forwarding-class expedited-forwarding {
            priority low;
            transmit-weight percent 30;
          }
          forwarding-class network-control {
            priority high;
            transmit-weight percent 40;
          }
        }
      }
    }
  }
}
unit 0 {
  encapsulation ether-vpls-over-atm-llc;
  vci 0.1000;
  shaping {
    cbr 33k;
  }
  atm-scheduler-map cos0;
}
}

```

```

}

[edit]
routing-instances {
  cos-vpls-1 {
    instance-type vpls;
    interface at-1/0/0.0;
    route-distinguisher 10.255.245.51:1;
    vrf-target target:1234:1;
    protocols {
      vpls {
        site-range 10;
        no-tunnel-services;
        site vpls-1-site-1 {
          site-identifier 1;
        }
      }
    }
  }
}

```

**Related
Documentation**

- [Configuring ATM Scheduler Support for Ethernet VPLS over ATM Bridged Interfaces on page 517](#)

Configuring Scheduler Maps on ATM Interfaces

To define a scheduler map, you associate it with a forwarding class. Each class is associated with a specific queue, as follows:

- **best-effort**—Queue 0
- **expedited-forwarding**—Queue 1
- **assured-forwarding**—Queue 2
- **network-control**—Queue 3



NOTE: For M320 and T Series routers only, you can configure more than four forwarding classes and queues. For more information, see [“Enabling Eight Queues on ATM Interfaces” on page 522](#).

When you configure an ATM scheduler map, the Junos OS creates these CoS queues for a VC. The Junos OS prefixes each packet delivered to the VC with the next-hop rewrite data associated with each queue.

To configure an ATM scheduler map, include the **scheduler-maps** statement at the **[edit interfaces at-*fpc/pic/port* atm-options]** hierarchy level:

```

edit interfaces at-fpc/pic/port atm-options]
scheduler-maps map-name {
  forwarding-class class-name {
    epd-threshold cells plp1 cells;

```

```

linear-red-profile profile-name;
priority (high | low);
transmit-weight (cells number | percent number);
}
vc-cos-mode (alternate | strict);
}

```

You can define the following options for each forwarding class:

- **epd-threshold**—An EPD threshold provides a queue of cells that can be stored with tail drop. When a beginning-of-packet (BOP) cell is received, the VC's queue depth is checked against the EPD threshold. If the VC's queue depth exceeds the EPD threshold, the BOP cell and all subsequent cells in the packet are discarded.
- **linear-red-profile**—A linear RED profile defines the number of cells using the **queue-depth** statement within the RED profile. (You configure the **queue-depth** statement at the **[edit interfaces at-fpc/pic/port atm-options linear-red-profile *profile-name*]** hierarchy level.)

By default, if you include the **scheduler-maps** statement at the **[edit interfaces at-fpc/pic/port atm-options]** hierarchy level, the interface uses an EPD threshold that is determined by the Junos OS based on the available bandwidth and other parameters. You can override the default EPD threshold by setting an EPD threshold or a linear RED profile.

If shaping is enabled, the default EPD threshold is proportional to the shaping rate according to the following formula:

$$\text{default epd-threshold} = \text{number of buffers} * \text{shaping rate} / \text{line rate}$$

The minimum value is 48 cells. If the formula results in an EPD threshold less than 48 cells, the result is ignored, and the minimum value of 48 cells is used.

- **priority**—By default, queue 0 is high priority, and the remaining queues are low priority. You can configure high or low queuing priority for each queue.
- **transmit-weight**—By default, the transmit weight is 95 percent for queue 0, and 5 percent for queue 3. You can configure the transmission weight in number of cells or percentage. Each CoS queue is serviced in WRR mode. When CoS queues have data to send, they send the number of cells equal to their weight before passing control to the next active CoS queue. This allows proportional bandwidth sharing between multiple CoS queues within a rate-shaped VC tunnel. A CoS queue can send from 1 through 32,000 cells or from 5 through 100 percent of queued traffic before passing control to the next active CoS queue within a VC tunnel.

The AAL5 protocol prohibits cells from being interleaved on a VC; therefore, a complete packet is always sent. If a CoS queue sends more cells than its assigned weight because of the packet boundary, the deficit is carried over to the next time the queue is scheduled to transmit. If the queue is empty after the cells are sent, the deficit is waived, and the queue's assigned weight is reset.



NOTE: If you include the `scheduler-maps` statement at the `[edit interfaces at-fpc/pic/port atm-options]` hierarchy level, the `epd-threshold` statement at the `[edit interfaces interface-name unit logical-unit-number]` or `[edit interfaces interface-name unit logical-unit-number address address family family multipoint-destination address]` hierarchy level has no effect because either the default EPD threshold, the EPD threshold setting in the forwarding class, or the linear RED profile takes effect instead.

Enabling Eight Queues on ATM Interfaces

By default, ATM2 IQ PICs on M320 and T Series routers and Circuit Emulation PICs using ATM on the M120 and M320 are restricted to a maximum of four egress queues per interface. You can enable eight egress queues by including the **max-queues-per-interface** statement at the `[edit chassis fpc slot-number pic pic-number]` hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
max-queues-per-interface (4 | 8);
```

The numerical value can be 4 or 8.

If you include the **max-queues-per-interface** statement, all ports on the PIC use the configured maximum.

When you include the **max-queues-per-interface** statement and commit the configuration, all physical interfaces on the PIC are deleted and re-added. Also, the PIC is taken offline and then brought back online immediately. You do not need to manually take the PIC offline and online. You should change modes between four queues and eight queues only when there is no active traffic going to the PIC.




NOTE: When you are considering enabling eight queues on an ATM2 IQ interface, you should note the following:

- ATM2 IQ interfaces using Layer 2 circuit trunk transport mode support only four CoS queues.
- ATM2 IQ interfaces with MLPPP encapsulation support only four CoS queues.
- You can configure only four RED profiles for the eight queues. Thus, queue 0 and queue 4 share a single RED profile, as do queue 1 and queue 5, queue 2 and queue 6, and queue 3 and queue 7. There is no restriction on EPD threshold per queue.
- The default chassis scheduler allocates resources for queue 0 through queue 3, with 25 percent of the bandwidth allocated to each queue. When you configure the chassis to use more than four queues, you must configure and apply a custom chassis scheduler to override the default. To apply a custom chassis scheduler, include the `scheduler-map-chassis` statement at the `[edit class-of-service interfaces at-fpc/pic/*]` hierarchy level. For more information about configuring and applying a custom chassis scheduler, see [“Applying Scheduler Maps to Packet Forwarding Component Queues”](#) on page 211.

Example: Enabling Eight Queues on ATM2 IQ Interfaces

In [Figure 35 on page 523](#), Router A generates IP packets with different IP precedence settings. Router B is an M320 router or a T Series router with two ATM2 IQ interfaces. On Router B, interface `at-6/1/0` receives traffic from Router A, while interface `at-0/1/0` sends traffic to Router C. This example shows the CoS configuration for Router B.

Figure 35: Example Topology for Router with Eight Queues

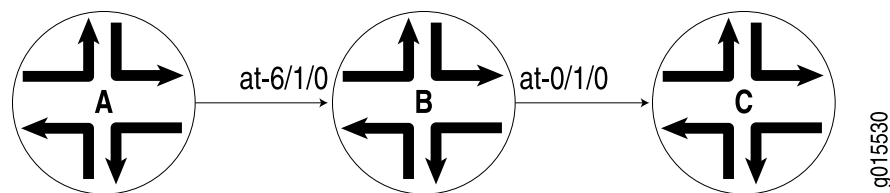

On Router B:

```
[edit chassis]
fpc 0 {
  pic 1 {
    max-queues-per-interface 8;
  }
}
fpc 6 {
  pic 1 {
    max-queues-per-interface 8;
  }
}
```

```
}

[edit interfaces]
at-0/1/0 {
  atm-options {
    linear-red-profiles {
      red_1 queue-depth 1k high-plp-threshold 50 low-plp-threshold 80;
      red_2 queue-depth 2k high-plp-threshold 40 low-plp-threshold 70;
      red_3 queue-depth 3k high-plp-threshold 30 low-plp-threshold 60;
      red_4 queue-depth 4k high-plp-threshold 20 low-plp-threshold 50;
    }
    scheduler-maps {
      sch_red {
        vc-cos-mode strict;
        forwarding-class fc_q0 {
          priority high;
          transmit-weight percent 5;
          linear-red-profile red_1;
        }
        forwarding-class fc_q1 {
          priority low;
          transmit-weight percent 10;
          linear-red-profile red_2;
        }
        forwarding-class fc_q2 {
          priority low;
          transmit-weight percent 15;
          linear-red-profile red_3;
        }
        forwarding-class fc_q3 {
          priority low;
          transmit-weight percent 20;
          linear-red-profile red_4;
        }
        forwarding-class fc_q4 {
          priority low;
          transmit-weight percent 5;
          linear-red-profile red_1;
        }
        forwarding-class fc_q5 {
          priority low;
          transmit-weight percent 10;
          linear-red-profile red_2;
        }
        forwarding-class fc_q6 {
          priority low;
          transmit-weight percent 15;
          linear-red-profile red_3;
        }
        forwarding-class fc_q7 {
          priority low;
          transmit-weight percent 20;
          linear-red-profile red_4;
        }
      }
    }
  }
  sch_epd {
```

```
vc-cos-mode alternate;
forwarding-class fc_q0 {
    priority high;
    transmit-weight percent 5;
    epd-threshold 1024;
}
forwarding-class fc_q1 {
    priority low;
    transmit-weight percent 10;
    epd-threshold 2048;
}
forwarding-class fc_q2 {
    priority low;
    transmit-weight percent 15;
    epd-threshold 3072;
}
forwarding-class fc_q3 {
    priority low;
    transmit-weight percent 20;
    epd-threshold 4096;
}
forwarding-class fc_q4 {
    priority low;
    transmit-weight percent 5;
    epd-threshold 2048;
}
forwarding-class fc_q5 {
    priority low;
    transmit-weight percent 10;
    epd-threshold 3072;
}
forwarding-class fc_q6 {
    priority low;
    transmit-weight percent 15;
    epd-threshold 4096;
}
forwarding-class fc_q7 {
    priority low;
    transmit-weight percent 20;
    epd-threshold 5120;
}
}
}
}
atm-options {
    vpi 0;
}
unit 0 {
    vci 0.100;
    shaping {
        cbr 1920000;
    }
    atm-scheduler-map sch_red;
    family inet {
        address 172.16.0.1/24;
    }
}
```

```
}
unit 1 {
  vci 0.101;
  shaping {
    vbr peak 1m sustained 384k burst 256;
  }
  atm-scheduler-map sch_epd;
  family inet {
    address 172.16.1.1/24;
  }
}
}
at-6/1/0 {
  atm-options {
    vpi 0;
  }
  unit 0 {
    vci 0.100;
    family inet {
      address 10.10.0.1/24;
    }
  }
  unit 1 {
    vci 0.101;
    family inet {
      address 10.10.1.1/24;
    }
  }
}
}
```

```
[edit class-of-service]
classifiers {
  inet-precedence inet_classifier {
    forwarding-class fc_q0 {
      loss-priority low code-points 000;
    }
    forwarding-class fc_q1 {
      loss-priority low code-points 001;
    }
    forwarding-class fc_q2 {
      loss-priority low code-points 010;
    }
    forwarding-class fc_q3 {
      loss-priority low code-points 011;
    }
    forwarding-class fc_q4 {
      loss-priority low code-points 100;
    }
    forwarding-class fc_q5 {
      loss-priority low code-points 101;
    }
    forwarding-class fc_q6 {
      loss-priority low code-points 110;
    }
    forwarding-class fc_q7 {
      loss-priority low code-points 111;
    }
  }
}
```



```

    }
  }
  forwarding-classes {
    queue 0 fc_q0;
    queue 1 fc_q1;
    queue 2 fc_q2;
    queue 3 fc_q3;
    queue 4 fc_q4;
    queue 5 fc_q5;
    queue 6 fc_q6;
    queue 7 fc_q7;
  }
  interfaces {
    at-6/1/0 {
      unit * {
        classifiers {
          inet-precedence inet_classifier;
        }
      }
    }
  }
}
[edit routing-options]
static {
  route 10.10.20.2/32 {
    next-hop at-0/1/0.0;
    retain;
    no-readvertise;
  }
  route 10.10.1.2/32 {
    next-hop at-0/1/0.1;
    retain;
    no-readvertise;
  }
}
}

```

Verifying the Configuration

To see the results of this configuration, you can issue the following operational mode commands:

- **show interfaces at-0/1/0 extensive**
- **show interfaces queue at-0/1/0**
- **show class-of-service forwarding-class**

Configuring VC CoS Mode on ATM Interfaces

VC CoS mode defines the CoS queue scheduling priority. By default, the VC CoS mode is alternate. When it is a queue's turn to transmit, the queue transmits up to its weight in cells as specified by the **transmit-weight** statement at the **[edit interfaces at-*fpc/pic/port* atm-options scheduler-maps *map-name* forwarding-class *class-name*]** hierarchy level.

The number of cells transmitted can be slightly over the configured or default transmit weight, because the transmission always ends at a packet boundary.

To configure the VC CoS mode, include the **vc-cos-mode** statement at the **[edit interfaces at-fpc/pic/port atm-options scheduler-maps]** hierarchy level:

```
edit interfaces at-fpc/pic/port atm-options scheduler-maps]
vc-cos-mode (alternate | strict);
```

Two modes of CoS scheduling priority are supported:

- **alternate**—Assign **high** priority to one queue. The scheduling of the queues alternates between the **high** priority queue and the remaining queues. Every other scheduled packet is from the **high** priority queue.
- **strict**—Assign strictly **high** priority to one queue. A queue with strictly **high** priority is always scheduled before the remaining queues. The remaining queues are scheduled in round-robin fashion.

Copying the PLP Setting to the CLP Bit on ATM Interfaces

For a provider-edge (PE) router with customer edge (CE)-facing, egress, ATM2 IQ interfaces configured with standard AAL5 encapsulation, you can enable the PLP setting to be copied into the CLP bit.



NOTE: This configuration setting is not applicable to Layer 2 circuit encapsulations because the control word captures and preserves CLP information. For more information about Layer 2 circuit encapsulations, see the Junos® OS Network Interfaces.

By default, at egress ATM2 IQ interfaces configured with standard AAL5 encapsulation, the PLP information is not copied to the CLP bit. This means the PLP information is not carried beyond the egress interface onto the CE router.

You can enable the PLP information to be copied into the CLP bit by including the **plp-to-clp** statement:

```
plp-to-clp;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* atm-options]**
- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

Applying Scheduler Maps to Logical ATM Interfaces

To apply the ATM scheduler map to a logical interface, include the **atm-scheduler-map** statement:

```
atm-scheduler-map (map-name | default);
```

When you add or change a scheduler map, the associated logical interface is taken offline and then brought back online immediately. For ATM CoS to take effect, you must configure the VCI and VPI identifiers and traffic shaping on each VC by including the following statements:

```
vci vpi-identifier.vci-identifier;
shaping {
  (cbr rate | rtvbr peak rate sustained rate burst length |vbr peak rate sustained rate burst
  length);
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

For more information, see the Junos® OS Network Interfaces.

You can also apply a scheduler map to the chassis traffic that feeds the ATM interfaces. For more information, see [“Applying Scheduler Maps to Packet Forwarding Component Queues” on page 211](#).

Example: Configuring CoS for ATM2 IQ VC Tunnels

This example configures ATM2 IQ VC tunnel CoS components:

```
[edit interfaces]
at-1/2/0 {
  atm-options {
    vpi 0;
    linear-red-profiles red-profile-1 {
      queue-depth 35000 high-plp-threshold 75 low-plp-threshold 25;
    }
    scheduler-maps map-1 {
      vc-cos-mode strict;
      forwarding-class best-effort {
        priority low;
        transmit-weight percent 25;
        linear-red-profile red-profile-1;
      }
    }
  }
}
unit 0 {
  vci 0.128;
  shaping {
    vbr peak 20m sustained 10m burst 20;
  }
  atm-scheduler-map map-1;
  family inet {
    address 192.168.0.100/32 {
      destination 192.168.0.101;
    }
  }
}
```

```
}
}
```

Configuring CoS for L2TP Tunnels on ATM Interfaces

The Layer 2 Tunneling Protocol (L2TP) is often used to carry traffic securely between an L2TP network server (LNS) to an L2TP access concentrator (LAC). CoS is supported for L2TP session traffic to a LAC on platforms configured as an LNS that include egress IQ2 PICs. Supported routers are:

- M7i and M10i routers
- M120 routers

To enable session-aware CoS on an L2TP interface, include the **per-session-scheduler** statement at the **[edit interfaces unit *logical-unit-number*]** hierarchy level.

```
[edit interfaces interface-name unit logical-unit-number]
  per-session-scheduler;
```

You also must set the IQ2 PIC mode for session-aware traffic shaping and set the number of bytes to add to or subtract from the packet before ATM cells are created. To configure these options on the ingress side of the tunnel, include the **ingress-shaping-overhead** and **mode session-shaping** statements at the **[edit chassis fpc *slot-number* pic *pic-number* traffic-manager]** hierarchy level.

```
[edit chassis fpc slot-number pic pic-number]
  traffic-manager {
    ingress-shaping-overhead number;
    mode session-shaping;
  }
```

Various limitations apply to this feature:

- Only 991 shapers are supported on each IQ2 PIC.
- Sessions in excess of 991 cannot be shaped (but they can be policed).
- There is no support for PPP multilinks.
- The overall traffic rate cannot exceed the L2TP traffic rate, or else random drops result.
- There is no support for logical interface scheduling and shaping at the ingress because all schedulers are now reserved for L2TP.
- There is no support for physical interface rate shaping at the ingress.

You can provide policing support for sessions with more than the 991 shapers on each IQ2 PIC. Each session can have four or eight different classes of traffic (queues). Each class needs its own policer; for example, one for voice and one for data traffic. The policer is configured within a **simple-filter** statement and only **forwarding class** is supported in the **from** clause. Only one policer can be referenced in each simple filter.

The following example shows a policer within a simple filter applied to two assured forwarding classes:

```

[edit firewall]
policer P1 {
  if-exceeding {
    bandwidth-limit 400k;
    burst-size-limit 1500;
  }
  then discard;
}
family inet {
  simple-filter SF-1 {
    term T-1 {
      from {
        forwarding-class [ af11 af21 ];
      }
      then policer P1;
    }
  }
}

```

You can also set the number of bytes to add to or subtract from the packet at the egress of the tunnel. To configure these options on the egress side of the tunnel, include the **egress-shaping-overhead** and **mode session-shaping** statements at the **[edit chassis fpc slot-number pic pic-number traffic-manager]** hierarchy level.

```

[edit chassis fpc slot-number pic pic-number]
traffic-manager {
  egress-shaping-overhead number;
  mode session-shaping;
}

```

Configuring IEEE 802.1p BA Classifiers for Ethernet VPLS Over ATM

You can apply an IEEE 802.1p behavior aggregate (BA) classifier to VPLS in a bridged Ethernet over ATM environment using ATM (RFC 1483) encapsulation. This extracts the Layer 2 (frame level) IEEE 802.1p information from the cells arriving on the ATM interface. Note that the interface must be configured for the Ethernet VPLS service over ATM links.

This example applies the classifier **atm-ether-vpls-classifier** to an ATM interface using **ether-vpls-over-atm-llc** encapsulation. This is not a complete CoS configuration example.

```

[edit class-of-service interfaces]
at-1/2/3 {
  unit 0 {
    (...) # Other CoS features
    classifiers {
      ieee-802.1 atm-ether-vpls-classifier; # Classifier defined elsewhere
    }
  }
}

[edit]
interface at-1/2/3 {
  atm-options {
    vpi 0;
  }
}

```

```
    unit 0 {
      encapsulation ether-vpls-over-atm-llc; # Required encapsulation type
      vci 0.100;
      family vpls;
    }
  }
```

You must configure a routing instance for the VPLS as well:

```
[edit routing-instances]
cos-test-1 {
  instance-type vpls; #This is required
  interface at-1/2/3;
  route-distinguisher 10.10.10.1;
  vrf-target target:11111:1;
  protocols {
    vpls {
      site-range 10;
      site cos-test-v1-site1 {
        site-identifier 1;
      }
    }
  }
}
```

The Layer 2 VPN classification on an ATM interface is limited to the Layer 2 granularity, not to each separate VLAN/VPLS instance. In other words, all of the VLAN/VPLS packets arriving on an ATM virtual circuit are classified by a single IEEE 802.1p classifier. The individual flow of each VLAN cannot be identified at this level.

Example: Combine Layer 2 and Layer 3 Classification on the Same ATM Physical Interface

With the ATM II IQ PIC installed on the M320 router with the Enhanced Type 3 FPC or the M120 router, you can combine Layer 2 and Layer 3 classifiers on the same ATM physical interface. However, you must apply the classifiers to different logical interfaces (units). The Layer 3 interface can belong to a Layer 3 VPN or VPLS routing instance and the Layer 2 interface can belong to a VPLS routing instance. If the Layer 3 interface belongs to a VPLS routing instance, only IPv4 DSCP or Internet precedence classification is supported. When the ATM interface is part of a Layer 3 VPN, both IPv4 and IPv6 DSCP or Internet precedence classification is supported.

This example applies a Layer 3 DSCP classifier named **dscp-1** and a Layer 2 IEEE 802.1p classifier named **ieee-1** to ATM interface **at-4/1/1** units 0 and 1. The **inet-precedence** Layer 3 classification is also supported but is not used in this example.

```
[edit]
class-of-service {
  interfaces {
    at-4/1/1 {
      unit 0 {
        classifiers {
          dscp dscp_1;
        }
      }
      unit 1 {
```

```
classifiers {  
  ieee-802.1 ieee;  
}  
}  
}
```

Related Documentation • [BA Classifier Overview on page 41](#)

Configuring CoS on Ethernet Interfaces

- [CoS for L2TP Tunnels on Ethernet Interface Overview on page 535](#)
- [Configuring CoS for L2TP Tunnels on Ethernet Interfaces on page 536](#)
- [Configuring LNS CoS for Link Redundancy on page 537](#)
- [Example: L2TP LNS CoS Support for Link Redundancy on page 538](#)

CoS for L2TP Tunnels on Ethernet Interface Overview

For effective packet tunneling, CoS is implemented over L2TP tunnels. For Ethernet interfaces, CoS is supported for L2TP session traffic to a LAC on platforms configured as an LNS that include egress IQ2 or IQ2E PICs.

This feature is supported on the following platforms:

- M7i and M10i routers
- M120 routers

To enable session-aware CoS on an L2TP interface, include the **per-session-scheduler** statement at the **[edit interfaces unit *logical-unit-number*]** hierarchy level.

After CoS is configured on an L2TP tunnel, Junos OS dynamically creates a traffic shaper for the traffic-shaping-profile and the L2TP tunnel based on the tunnel identification number. This ensures that the packets are monitored at the LAC and classified to allow the traffic flow to be adjusted on congested networks.

This feature has the following limitations:

- Only 991 shapers are supported on each IQ2 or IQ2E PIC.
- For a 4-port IQ2E PIC, you can configure up to 1976 shapers for an 8-queue session and 3952 shapers for a 4-queue session.
- For an 8-port IQ2E PIC, you can configure up to 1912 shapers for an 8-queue session and up to 3824 shapers for a 4-queue session.
- Sessions in excess of the maximum supported values specified for the PICs cannot be shaped (but they can be policed).
- There is no support for PPP multilinks.

- The overall traffic rate cannot exceed the L2TP traffic rate, or else random drops result.
- There is no support for logical interface scheduling and shaping at the ingress because all schedulers are now reserved for L2TP.
- There is no support for physical interface rate shaping at the ingress.
- You cannot delete or deactivate the primary Ethernet interface on which the tunnel is established.

You can provide policing support for sessions with more than the maximum supported value on each IQ2 or IQ2E PIC. Each session can have four or eight different classes of traffic (queues). Each class needs its own policer; for example, one for voice and one for data traffic.

**Related
Documentation**

- [Configuring CoS for L2TP Tunnels on Ethernet Interfaces on page 536](#)
- [Configuring LNS CoS for Link Redundancy on page 537](#)
- [Example: L2TP LNS CoS Support for Link Redundancy on page 538](#)

Configuring CoS for L2TP Tunnels on Ethernet Interfaces

The Layer 2 Tunneling Protocol (L2TP) is often used to carry traffic securely between an L2TP Network Server (LNS) to an L2TP Access Concentrator (LAC). CoS is supported for L2TP session traffic to a LAC on platforms configured as an LNS that include egress IQ2 and IQ2E Ethernet PICs. The following routers support this feature:

- M7i and M10i routers
- M120 routers

To configure CoS for L2TP on Ethernet interfaces:

1. Configure L2TP services on the Ethernet interface.

```
[[edit interfaces interface-name unit logical-unit-number]  
user@host# set per-session-scheduler
```
3. Configure the traffic manager in the IQ2 or IQ2E PIC to enable per-session CoS support.

```
[edit chassis fpc slot-number pic pic-number]  
user@host# set traffic-manager mode-session-shaping
```
4. (Optional) To fine tune the system, you may also set the traffic-manager mode to session-shaping and configure the value of ingress-shaping-overhead parameter from 50 through 130 depending on your network requirement.

```
[edit chassis fpc slot-number pic pic-number]  
user@host# set traffic-manager ingress-shaping-overhead value mode-session-shaping
```



NOTE: If you deactivate or delete the primary Ethernet interface on which the L2TP tunnel is configured, the tunnel with sessions having CoS is torn down.

After CoS is enabled for L2TP tunnels on Ethernet interface, you can run the **show class-of-service l2tp-session** command to verify the mapping of CoS with the configured L2TP session.

Related Documentation

- L2TP Minimum Configuration
- [Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530](#)
- [CoS for L2TP Tunnels on Ethernet Interface Overview on page 535](#)
- [Example: Configuring CoS for L2TP Tunnels on Ethernet Interfaces](#)
- [Configuring LNS CoS for Link Redundancy on page 537](#)
- [Example: L2TP LNS CoS Support for Link Redundancy on page 538](#)
- `show class-of-service l2tp-session`

Configuring LNS CoS for Link Redundancy

You can configure multiple ports on the same IQ2 and IQ2E PICs to support link redundancy for CoS on L2TP tunnels configured on an Ethernet interface. Link redundancy is useful when the active port is unavailable due to events such as:

- Disconnection of the cable
- Rebooting of the remote end system
- Traffic re-routing through a different port due to network conditions

When link redundancy is enabled in such scenarios, the L2TP tunnels and its session are maintained by switching traffic to another port configured on the same IQ2 or IQ2E PIC.

To configure multiple ports (IQ and IQ2PE PIC) on an Ethernet interface for redundancy with CoS, configure per-session-scheduler for all Ethernet ports:

```
user@host#edit interfaces ge-2/0/0 unit 0 per-session-scheduler
user@host#edit interfaces ge-2/0/1 unit 0 per-session-scheduler
```

You can similarly configure all the ports on the IQ2 or IQ2E PIC to support link redundancy for CoS on L2TP tunnels.



NOTE:

- If one or more redundancy ports is removed from the configuration, the tunnels established through those redundancy ports also go down.
- You must configure per-session-scheduler for all the ports that are to be used for redundancy. If you do not do so, new tunnels or sessions with CoS do not get established.

Related Documentation • [per-session-scheduler on page 672](#)

Example: L2TP LNS CoS Support for Link Redundancy

This example shows how link redundancy is supported when CoS for L2TP is configured on Ethernet interfaces.



NOTE: In this example, support for link redundancy is demonstrated by manually disabling the interface. However, link redundancy is also supported when the interface goes down due to events such as disconnection of the cable or rebooting of the remote end system.

- [Requirements on page 538](#)
- [Overview on page 538](#)
- [Configuration on page 539](#)
- [Verification on page 540](#)

Requirements

Before you begin:

- Configure service and loopback interfaces.
- Configure CoS for L2TP.


This feature applies to M Series Multiservice Edge Router running Junos OS Release 12.1 or later.

Overview

Junos OS now supports link redundancy for CoS configured on an L2TP LNS. In this example, we verify that an L2TP tunnel does not go down when the Ethernet interface, through which the tunnels and its sessions with CoS are established, goes down.

[Figure 36 on page 539](#) shows a sample scenario in which L2TP access concentrator (LAC) devices operate on one side of an L2TP tunnel. LAC devices are configured with the address range of 192.168.100.0 with a subnet mask of 24. The LAC devices are connected to two backbone routers, P1 and P2. These two routers, P1 and P2, are connected over two Gigabit Ethernet ports on a single Ethernet IQ2 PIC to an L2TP network server (LNS). The LNS device is a router running Junos OS that supports redundancy for terminating L2TP sessions configured with CoS parameters. The CoS settings are applied on the interfaces using a RADIUS server when the L2TP session is set up. One of the Gigabit Ethernet interfaces on the IQ2 PIC present on the LNS device, ge-0/3/1, is connected to P1, while the other interface, ge-0/3/3, is linked to P2. Such a method of connection enables the subscriber sessions that reach the LAC devices to be forwarded to one of the two ports of the IQ2 PIC on the LNS device.

Figure 36: Topology to Verify Link Redundancy Support for L2TP LNS CoS

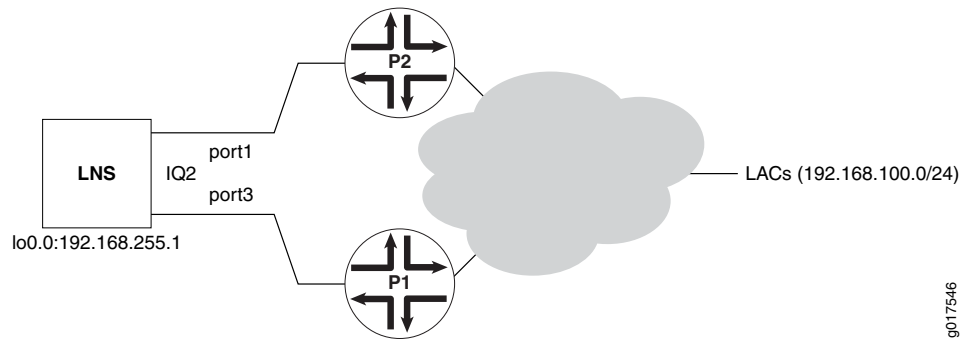

Configuration

Step-by-Step Procedure

To configure Ethernet interfaces for redundancy:

1. Configure Gigabit Ethernet interfaces.

```
[edit interfaces]
```

```
user@host# set ge-0/3/1 unit 0 family inet address 192.168.1.1/30
```

```
user@host# set ge-0/3/3 unit 0 family inet address 192.168.1.5/30
```

```
user@host# set ge-0/3/1 unit 0 per-session-scheduler
```

```
user@host# set ge-0/3/3 unit 0 per-session-scheduler
```

2. Configure static routing options.

```
[edit routing-options]
```

```
user@host# set static route 192.168.100.0/24 next-hop [ 192.168.1.2 192.168.1.6 ]
```

Step-by-Step Procedure

Verify that CoS is now implemented over L2TP on an Ethernet interface and the LAC is reachable.

1. Verify that LAC is reachable.

```
user@host> show route 192.168.100.1
```

```
inet.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

```
192.168.100.0/24    *[Static/5] 1d 02:09:09
                   to 192.168.1.2 via ge-0/3/1.0
                   > to 192.168.1.6 via ge-0/3/3.0
```

2. Bring up an L2TP session and verify that L2TP sessions come up.

```
user@host> show services l2tp session
```

```
Interface: sp-1/3/0, Tunnel group: GEN-TUN-GRP-BIO, Tunnel local ID: 44806
```

```
Local Remote Interface State Bundle Username
```

```
ID ID unit
```

```
12491 33795 1 Established - test1
```

3. Send a traffic stream towards the subscriber.

4. Verify that the shaping at the subscriber end is as per the shaping rate configured.

```
user@host# show class-of-service l2tp-session
```

```
L2TP Session Username: test1, Index: 12491
```

```
Physical interface: ge-0/3/3, Index: 131
```

```
Queues supported: 4, Queues in use: 4
```

```
Scheduler map: GEN-SCHED-MAP-EF-65%, Index: 5212
Shaping rate: 2162200 bps
Encapsulation Overhead: 6, Cell Overhead: Enabled
```

In the output of the **show class-of-service l2tp-session** command, ge-0/3/3, index 131 represents the port used to establish the L2TP tunnel to which the current L2TP session belongs. It does not represent the port that was active when the L2TP session came up.

Verification

Verify that, when CoS is configured on an L2TP tunnel, link redundancy works if one of the ports on which the L2TP tunnel is established goes down.

- [Bring Down ge-0/3/3 Interface Through Which the L2TP Tunnel Is Established on page 540](#)
- [Verify LAC Reachability and the Status of L2TP Sessions on page 540](#)

Bring Down ge-0/3/3 Interface Through Which the L2TP Tunnel Is Established

Purpose Bring down the interface through which the L2TP session and its tunnels are established.

Action [edit interfaces]
user@host# set ge-0/3/3 disable
user@host# commit

Verify LAC Reachability and the Status of L2TP Sessions

Purpose Verify that link redundancy works and the L2TP session does not go down when the active port on the IQ2 PIC is down. Verify that the traffic flow is unaffected after it is switched to another port configured on the same IQ2 or IQ2E PIC.

Action user@host> show route 192.168.100.1
inet.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.100.0/24 * [Static/5] 1d 02:35:09
to 192.168.1.2 via ge-0/3/1.0

user@host> show services l2tp session
Interface: sp-1/3/0, Tunnel group: GEN-TUN-GRP-BIO, Tunnel local ID: 44806
Local Remote Interface State Bundle Username
ID ID unit
12491 33795 1 Established - test1

Related Documentation • [Configuring LNS CoS for Link Redundancy on page 537](#)

CHAPTER 28

Configuring CoS for MPLS

This topic discusses the following:

- [CoS for MPLS Overview on page 541](#)
- [Configuring CoS for MPLS Traffic on page 542](#)

CoS for MPLS Overview

When IP traffic enters a label-switched path (LSP) tunnel, the ingress router marks all packets with a class-of-service (CoS) value, which is used to place the traffic into a transmission priority queue. On the router, each interface has up to eight transmit queues. The CoS value is encoded as part of the Multiprotocol Label Switching (MPLS) header and remains in the packets until the MPLS header is removed when the packets exit from the egress router. The routers within the LSP utilize the CoS value set at the ingress router. The CoS value is encoded by means of the CoS bits (also known as the EXP or experimental bits).

MPLS class of service works in conjunction with the router's general CoS functionality. If you do not configure any CoS features, the default general CoS settings are used. For MPLS class of service, you might want to prioritize how the transmit queues are serviced by configuring weighted round-robin, and to configure congestion avoidance using random early detection (RED).

The next-hop label-switching router (LSR) uses the default classification shown in [Table 125 on page 541](#).

Table 125: LSR Default Classification

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low

Table 125: LSR Default Classification (*continued*)

Code Point	Forwarding Class	Loss Priority
101	assured-forwarding	high
110	network-control	low
111	network-control	high

Configuring CoS for MPLS Traffic

To configure CoS for MPLS packets in an LSP, include the **class-of-service** statement with the appropriate CoS value:

```
class-of-service cos-value;
```

If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit protocols mpls interface *interface-name* label-map *label-value*]
- [edit protocols mpls label-switched-path *path-name*]
- [edit protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit protocols mpls static-path *prefix*]
- [edit protocols rsvp interface *interface-name* link-protection]
- [edit protocols rsvp interface *interface-name* link-protection bypass *destination*]
- [edit logical-systems *logical-system-name* protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls static-path *prefix*]
- [edit logical-systems *logical-system-name* protocols mpls interface *interface-name* label-map *label-value*]

- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection bypass *destination*]

The **class-of-service** statement at the [edit protocols mpls label-switched-path] hierarchy level assigns an initial EXP value for the MPLS shim header of packets in the LSP. This value is initialized at the ingress router only and overrides the rewrite configuration established for that forwarding class. However, the CoS processing (weighted round robin [WRR] and RED) of packets entering the ingress router is not changed by the **class-of-service** statement on an MPLS LSP. Classification is still based on the behavior aggregate (BA) classifier at the [edit class-of-service] hierarchy level or the multifield classifier at the [edit firewall] hierarchy level.

We recommend configuring all routers along the LSP to have the same input classifier for EXP, and, if a rewrite rule is configured, all routers should have the same rewrite configuration. Otherwise, traffic at the next LSR might be classified into a different forwarding class, resulting in a different EXP value being written to the EXP header.

For more information, see the Junos OS MPLS Applications Configuration Guide.

PART 5

CoS Configuration Examples and Statements

- [CoS Configuration Examples on page 547](#)
- [Summary of CoS Configuration Statements on page 553](#)

CoS Configuration Examples

This topic discusses the following:

- [Example: Configuring Classifiers, Rewrite Markers, and Schedulers on page 547](#)
- [Example: Configuring a CoS Policy for IPv6 Packets on page 552](#)

Example: Configuring Classifiers, Rewrite Markers, and Schedulers

1. Define a classifier that matches IP traffic arriving on the interface. The affected IP traffic has IP precedence bits with patterns matching those defined by aliases A or B. The loss priority of the matching packets is set to low, and the forwarding class is mapped to best effort (queue 0):

```
[edit]
class-of-service {
  classifiers {
    inet-precedence normal-traffic {
      forwarding-class best-effort {
        loss-priority low code-points [my1 my2];
      }
    }
  }
}
```

Following are the code-point alias and forwarding-class mappings referenced in the **normal-traffic** classifier:

```
[edit]
class-of-service {
  code-point-aliases {
    inet-precedence {
      my1 000;
      my2 001;
      ...
    }
  }
}

[edit]
class-of-service {
  forwarding-classes {
    queue 0 best-effort;
```

```

        queue 1 expedited-forwarding;
    }
}

```

2. Use rewrite markers to redefine the bit pattern of outgoing packets. Assign the new bit pattern based on specified forwarding classes, regardless of the loss priority of the packets:

```

[edit]
class-of-service {
  rewrite-rules {
    inet-precedence clear-prec {
      forwarding-class best-effort {
        loss-priority low code-point 000;
        loss-priority high code-point 000;
      }
      forwarding-class expedited-forwarding {
        loss-priority low code-point 100;
        loss-priority high code-point 100;
      }
    }
  }
}

```

3. Configure a scheduler map associating forwarding classes with schedulers and drop-profiles:

```

[edit]
class-of-service {
  scheduler-maps {
    one {
      forwarding-class expedited-forwarding scheduler special;
      forwarding-class best-effort scheduler normal;
    }
  }
}

```

Schedulers establish how to handle the traffic within the output queue for transmission onto the wire. Following is the scheduler referenced in scheduler map **one**:

```

[edit]
class-of-service {
  schedulers {
    special {
      transmit-rate percent 30;
      priority high;
    }
    normal {
      transmit-rate percent 70;
      priority low;
    }
  }
}

```

4. Apply the **normal-traffic** classifier to all SONET/SDH interfaces and all logical interfaces of SONET/SDH interfaces; apply the **clear-prec** rewrite marker to all Gigabit Ethernet

interfaces and all logical interfaces of Gigabit Ethernet interfaces; and apply the **one** scheduler map to all interfaces:

```
[edit]
class-of-service {
  interfaces {
    so-0/0/0 {
      scheduler-map one;
      unit 0 {
        classifiers {
          inet-precedence normal-traffic;
        }
      }
    }
    so-0/0/1 {
      scheduler-map one;
      unit 1 {
        classifiers {
          inet-precedence normal-traffic;
        }
      }
    }
    ge-1/0/0 {
      scheduler-map one;
      unit 0 {
        rewrite-rules {
          inet-precedence clear-prec;
        }
      }
      unit 1 {
        rewrite-rules {
          inet-precedence clear-prec;
        }
      }
    }
    ge-1/0/1 {
      scheduler-map one;
      unit 0 {
        rewrite-rules {
          inet-precedence clear-prec;
        }
      }
      unit 1 {
        rewrite-rules {
          inet-precedence clear-prec;
        }
      }
    }
  }
}
```

Following is the complete configuration:

```
[edit class-of-service]
classifiers {
  inet-precedence normal-traffic {
    forwarding-class best-effort {
```

```
        loss-priority low code-points [my1 my2];
    }
}
code-point-aliases {
  inet-precedence {
    my1 000;
    my2 001;
    cs1 010;
    cs2 011;
    cs3 100;
    cs4 101;
    cs5 110;
    cs6 111;
  }
}
drop-profiles {
  high-priority {
    fill-level 20 drop-probability 100;
  }
  low-priority {
    fill-level 90 drop-probability 95;
  }
  big-queue {
    fill-level 100 drop-probability 100;
  }
}
forwarding-classes {
  queue 0 best-effort;
  queue 1 expedited-forwarding;
}
interfaces {
  so-0/0/0 {
    scheduler-map one;
    unit 0 {
      classifiers {
        inet-precedence normal-traffic;
      }
    }
  }
  so-0/0/1 {
    scheduler-map one;
    unit 1 {
      classifiers {
        inet-precedence normal-traffic;
      }
    }
  }
  ge-1/0/0 {
    scheduler-map one;
    unit 0 {
      rewrite-rules {
        inet-precedence clear-prec;
      }
    }
    unit 1 {
```



```

        rewrite-rules {
            inet-precedence clear-prec;
        }
    }
}
ge-1/0/1 {
    scheduler-map one;
    unit 0 {
        rewrite-rules {
            inet-precedence clear-prec;
        }
    }
    unit 1 {
        rewrite-rules {
            inet-precedence clear-prec;
        }
    }
}
rewrite-rules {
    inet-precedence clear-prec {
        forwarding-class best-effort {
            loss-priority low code-point 000;
            loss-priority high code-point 000;
        }
        forwarding-class expedited-forwarding {
            loss-priority low code-point 100;
            loss-priority high code-point 100;
        }
    }
}
scheduler-maps {
    one {
        forwarding-class expedited-forwarding scheduler special;
        forwarding-class best-effort scheduler normal;
    }
}
schedulers {
    special {
        transmit-rate percent 30;
        priority high;
    }
    normal {
        transmit-rate percent 70;
        priority low;
    }
}

```

Example: Configuring a CoS Policy for IPv6 Packets

1. Define a new classifier of type DSCP IPv6.

```
[edit class-of-service]
classifiers {
  dscp-ipv6 core-dscp-map {
    forwarding-class best-effort {
      loss-priority low code-points 000000;
    }
    forwarding-class assured-forwarding {
      loss-priority low code-points 001010;
    }
    forwarding-class network-control {
      loss-priority low code-points 110000;
    }
  }
}
```

2. Define a new rewrite rule of type DSCP IPv6.

```
[edit class-of-service]
rewrite-rules {
  dscp-ipv6 core-dscp-rewrite {
    forwarding-class best-effort {
      loss-priority low code-point 000000;
    }
    forwarding-class assured-forwarding {
      loss-priority low code-point 001010;
    }
    forwarding-class network-control {
      loss-priority low code-point 110000;
    }
  }
}
```

3. Assign the classifier and rewrite rule to a logical interface.

```
[edit class-of-service]
interfaces {
  so-2/0/0 {
    unit 0 {
      classifiers { # Both dscp and dscp-ipv6 classifiers on this interface.
        dscp default;
        dscp-ipv6 core-dscp-map;
      }
      rewrite-rules { # Both dscp and dscp-ipv6 rewrite rules on this interface.
        dscp default;
        dscp-ipv6 core-dscp-rewrite;
      }
    }
  }
}
```

Summary of CoS Configuration Statements

action

Syntax action {
 loss-priority high then discard;
 }

Hierarchy Level [edit dynamic-profiles *profile-name* **firewall three-color-policer** *name*],
 [edit **firewall three-color-policer** *name*],
 [edit logical-systems *logical-system-name* **firewall three-color-policer** *name*]

Release Information Statement introduced in Junos OS Release 8.2.
 Logical systems support introduced in Junos OS Release 9.3.
 Support at the [edit dynamic-profiles ... **three-color-policer**] hierarchy level introduced in Junos OS Release 11.4.

Description Discard traffic on a logical interface using tricolor marking policing.



NOTE: This statement is supported only on IQ2 interfaces.

The remaining statement is explained separately.

Required Privilege Level firewall—To view this statement in the configuration.
 firewall-control—To add this statement to the configuration.

Related Documentation

- Three-Color Policer Configuration Overview
- Basic Single-Rate Three-Color Policers
- Basic Two-Rate Three-Color Policers
- Two-Color and Three-Color Logical Interface Policers
- Two-Color and Three-Color Physical Interface Policers
- Two-Color and Three-Color Policers at Layer 2
- loss-priority high then discard

address (CoS on ATM Interfaces)

Syntax	<code>address <i>address</i> { <i>destination address</i>; }</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family family</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For CoS on ATM interfaces, configure the interface address.
Options	<i>address</i> —Address of the interface. The remaining statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Example: Configuring CoS for ATM2 IQ VC Tunnels on page 529

adjust-minimum

Syntax	<code>adjust-minimum <i>rate</i>;</code>
Hierarchy Level	[edit class-of-service <i>schedulers scheduler-name</i>], [edit class-of-service <i>traffic-control-profiles traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	For adjustments performed by the ANCP or multicast applications on EQ DPCs and MPC/MIC interfaces, specify the minimum shaping rate for an adjusted scheduler node. The node is associated with a traffic-control profile. For adjustments performed by the multicast application on MPC/MIC interfaces, specify the minimum shaping rate for an adjusted queue. The queue is associated with a scheduler.
Options	<i>rate</i> —Minimum shaping rate for a node or a queue, in Mbps
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Minimum Adjusted Shaping Rate on Scheduler Nodes for Subscribers

adjust-percent

Syntax	adjust-percent <i>percentage</i> ;
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	For an MPC/MIC interface, determine the percentage of adjustment for the shaping rate of a queue.
Options	<i>percentage</i> —Percentage of the shaping rate to adjust. Range: 0 through 100 percent
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring Shaping-Rate Adjustments on Queues

application-profile

Syntax	<pre>application-profile <i>profile-name</i> { ftp { data { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; } } sip { video { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; } voice { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; } } }</pre>
Hierarchy Level	[edit services cos], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then (reflexive reverse)]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define or apply a CoS application profile. When you apply a CoS application profile in a CoS rule, terminate the profile name with a semicolon (;).
Options	<i>profile-name</i> —Identifier for the application profile. The remaining statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring CoS Rules

application-sets (Services CoS)

Syntax	<code>applications-sets <i>set-name</i>;</code>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> from]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define one or more target application sets.
Options	<i>set-name</i> —Name of the target application set.
Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring CoS Rules

applications (Services CoS)

Syntax	<code>applications [<i>application-name</i>];</code>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> from]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define one or more applications to which the CoS services apply.
Options	<i>application-name</i> —Name of the target application.
Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring Match Conditions in a CoS Rule on page 320 Configuring CoS Rules

atm-options

```

Syntax  atm-options {
            cell-bundle-size cells;
            ilmi;
            linear-red-profiles profile-name {
                high-plp-max-threshold percent;
                low-plp-max-threshold percent;
                queue-depth cells high-plp-threshold percent low-plp-threshold percent;
            }
            mpls {
                pop-all-labels {
                    required-depth number;
                }
            }
            pic-type (atm1 | atm2);
            plp-to-clp;
            promiscuous-mode {
                vpi vpi-identifier;
            }
            scheduler-maps map-name {
                forwarding-class class-name {
                    epd-threshold cells plp1 cells;
                    linear-red-profile profile-name;
                    priority (high | low);
                    transmit-weight (cells number | percent number);
                }
                vc-cos-mode (alternate | strict);
            }
            use-null-cw;
            vpi vpi-identifier {
                maximum-vcs maximum-vcs;
                oam-liveness {
                    up-count cells;
                    down-count cells;
                }
                oam-period (disable | seconds);
                shaping {
                    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
                     length);
                    queue-length number;
                }
            }
        }

```

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before Junos OS Release 7.4.
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.

Description Configure ATM-specific physical interface properties.

The statements are explained separately.



NOTE: Certain options apply only to specific platforms.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- Interface Encapsulations Overview
- multipoint-destination
- [shaping on page 705](#)
- [vci on page 740](#)

atm-policer

Syntax	<pre>atm-policer <i>policer-name</i> { atm-service (cbr rtvbr nrtvbr ubr) ; cdvt <i>rate</i>; logical-interface-policer; max-burst-size <i>max-burst-size</i>; peak-rate <i>rate</i>; policing-action (discard discard-tag count); sustained-rate <i>rate</i>; }</pre>
Hierarchy Level	[edit firewall], [edit interface <i>interface-name</i> unit <i>unit-number</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	<p>(MX Series routers) Create a policer for each cell in the ATM packet. A policer defines the maximum traffic that can flow through an interface and further determines the actions to be taken when the traffic exceeds the defined limits.</p> <p>When included at the [edit firewall] hierarchy level, the atm-policer statement creates a template, and you do not have to configure a policer individually for every ATM interface. To activate the ATM policer on an ATM interface, you must include the atm-policer statement in the [edit interface] hierarchy level.</p>
Options	<p><i>policer-name</i>—ATM policer name. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">Order of Policer and Firewall Filter Operationsshow class-of-service traffic-control-profileshow class-of-service interface


atm-scheduler-map

Syntax	<code>atm-scheduler-map (<i>map-name</i> default);</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Associate a scheduler map with a virtual circuit on a logical interface.
Options	<i>map-name</i> —Name of scheduler map that you define at the [edit interfaces <i>interface-name</i> atm-options scheduler-maps] hierarchy level. default —The default scheduler mapping.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring ATM2 IQ VC Tunnel CoS Components scheduler-maps

atm-service

Syntax	<code>atm-service (cbr rtvbr nrtvbr);</code> <code>atm-service (cbr</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>] [edit firewall atm-policer <i>atm-policer-name</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(MX Series routers) Configure the ATM service category on ATM MICs to define bandwidth shaping and utilization. Shaping is based on the ATM service category.
Default	If the ATM service category is not specified, bandwidth utilization is unlimited.
Options	cbr —Use the constant bit rate. nrtvbr —Use the non real-time variable bit rate. rtvbr —Use the real-time variable bit rate.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> show class-of-service traffic-control-profile

buffer-size (Schedulers)

Syntax	buffer-size (percent <i>percentage</i> remainder temporal <i>microseconds</i>);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify buffer size.
	<div>  <p>NOTE: On PTX Series Packet Transport Switches, buffer-size cannot be configured on rate-limited queues.</p> </div>
Default	If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.
Options	<p>percent <i>percentage</i>—Buffer size as a percentage of the total buffer. Range: 0 through 100</p> <p>remainder—Remaining buffer available.</p> <p>temporal <i>microseconds</i>—Buffer size as a temporal value. The queuing algorithm starts dropping packets when it queues more than a computed number of bytes. This maximum is computed by multiplying the logical interface speed by the configured temporal value. Range: The ranges vary by platform. See Table 21 on page 161.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring the Scheduler Buffer Size on page 160 • Example: Configuring CoS for a PBB Network on MX Series Routers

cbr

Syntax	<code>cbr rate;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options vpi <i>vpi-identifier</i> shaping], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit interfaces at- <i>fpc/pic/ port</i> unit <i>logical-unit-number</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM encapsulation only, define a constant bit rate bandwidth utilization in the traffic-shaping profile.
Default	Unspecified bit rate (UBR); that is, bandwidth utilization is unlimited.
Options	rate —Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation c ; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps. For ATM1 and ATM2 OC3 interfaces, the maximum available rate is 100 percent of <i>line-rate</i> , or 135,600,000 bps. For ATM1 OC12 interfaces, the maximum available rate is 50 percent of <i>line-rate</i> , or 271,263,396 bps. For ATM2 IQ interfaces, the maximum available rate is 542,526,792 bps.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Defining the ATM Traffic-Shaping Profile rtvbr on page 694 shaping on page 705 vbr on page 738

cdvt

Syntax	<code>cdvt rate;</code>
Hierarchy Level	[edit firewall atm-policer <i>atm-policer-name</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(MX Series routers) Define the Cell Delay/Variation Tolerance (CDVT) rate on a clear-channel multirate circuit emulation MIC.
Options	<i>rate</i> —CDVT rate in microseconds. Range: 1 through 1,800,000,000
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• <code>cbr rate</code>• <code>show class-of-service traffic-control-profile</code>

class

See the following sections:

- [class \(CoS-Based Forwarding\) on page 565](#)
- [class \(Forwarding Classes\) on page 566](#)

class (CoS-Based Forwarding)

Syntax `class class-name {
 classification-override {
 forwarding-class class-name;
 }
 }`

Hierarchy Level [edit class-of-service forwarding-policy]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure CoS-based forwarding class.

Options *class-name*—Name of the routing policy class.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • [Overriding the Input Classification on page 144](#)

class (Forwarding Classes)

Syntax	<code>class <i>class-name</i> queue-num <i>queue-number</i> <i>priority</i> (high low);</code>
Hierarchy Level	[edit class-of-service forwarding-classes]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	<p>On M120 , M320, MX Series routers, and T Series routers only, specify the output transmission queue to which to map all input from an associated forwarding class.</p> <p>This statement enables you to configure up to 16 forwarding classes with multiple forwarding classes mapped to single queues. If you want to configure up to eight forwarding classes with one-to-one mapping to output queues, use the queue statement instead of the class statement at the [edit class-of-service forwarding-classes] hierarchy level.</p>
Options	<p><i>class-name</i>—Name of forwarding class.</p> <p><i>queue-number</i>—Output queue number.</p> <p>Range: 0 through 15. Some T Series router PICs are restricted to 0 through 3.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Forwarding Classes on page 128• queue (Global Queues) on page 686

class-of-service

Syntax	<code>class-of-service { ... }</code>
Hierarchy Level	[edit]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure Junos CoS features.
Default	If you do not configure any CoS features, all packets are transmitted from output transmission queue 0.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• CoS Overview on page 3

classification-override

Syntax	<code>classification-override { forwarding-class <i>class-name</i>; }</code>
Hierarchy Level	[edit class-of-service forwarding-policy <i>class</i> <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IPv4 packets, override the incoming packet classification, assigning all packets sent to a destination prefix to the same output transmission queue.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Overriding the Input Classification on page 144• policy-statement in the Junos OS Routing Protocols Configuration Guide

classifiers

See the following sections:

- [classifiers \(Application\) on page 568](#)
- [classifiers \(Application for Routing Instances\) on page 569](#)
- [classifiers \(Definition\) on page 570](#)
- [classifiers \(Physical Interface\) on page 571](#)

classifiers (Application)

Syntax classifiers {
 type (*classifier-name* | default) family (mpls | inet);
 }

Hierarchy Level [edit class-of-service interfaces *interface-name* **unit** *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.

Description Apply a CoS aggregate behavior classifier to a logical interface. You can apply a default classifier or one that is previously defined.

Options *classifier-name*—Name of the aggregate behavior classifier.

type—Traffic type.

Values: dscp, dscp-ipv6, exp, ieee-802.1, inet-precedence



NOTE: You can only specify a family for the dscp and dscp-ipv6 types.

Required Privilege interface—To view this statement in the configuration.


Level interface-control—To add this statement to the configuration.

Related Documentation • [Applying Classifiers to Logical Interfaces on page 52](#)

classifiers (Application for Routing Instances)

Syntax	<pre> classifiers { exp (classifier-name default); dscp (classifier-name default); dscp-ipv6 (classifier-name default); } </pre>
Hierarchy Level	[edit class-of-service routing-instances <i>routing-instance-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>dscp and dscp-ipv6 support introduced in Junos OS Release 9.6.</p>
Description	For routing instances with VRF table labels enabled, apply a custom Multiprotocol Label Switching (MPLS) EXP classifier or DSCP classifier to the routing instance. You can apply the default classifier or one that is previously defined.
Options	classifier-name —Name of the behavior aggregate MPLS EXP or DSCP classifier.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Applying MPLS EXP Classifiers to Routing Instances on page 59 • Applying Classifiers to Logical Interfaces on page 52

classifiers (Definition)

Syntax	<pre> classifiers { type classifier-name { import (classifier-name default); forwarding-class class-name { loss-priority level code-points [aliases] [bit-patterns]; } } } </pre>
Hierarchy Level	[edit class-of-service], [edit class-of-service routing-instances <i>routing-instance-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. ieee-802.1ad option introduced in Junos OS Release 9.2.
Description	Define a CoS behavior aggregate (BA) classifier for classifying packets. You can associate the classifier with a forwarding class or code-point mapping, and import a default classifier or one that is previously defined.
	<div>  <p>NOTE: The [edit class-of-service routing-instances <i>routing-instance-name</i>] hierarchy level and the dscp-ipv6 and ieee-802.1ad classifier types are not supported on ACX Series routers.</p> </div>
Options	<p>classifier-name—Name of the aggregate behavior classifier.</p> <p>type—Traffic type: dscp, dscp-ipv6, exp, ieee-802.1, ieee-802.1ad, inet-precedence.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Overview of BA Classifier Types on page 44 • Example: Configuring CoS for a PBB Network on MX Series Routers • Configuring CoS on ACX Series Universal Access Routers

classifiers (Physical Interface)

Syntax	<code>classifiers { type (classifier-name default) ; }</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	Apply a CoS aggregate behavior classifier to a physical interface. You can apply a default classifier or one that is previously defined.
Options	<p><i>classifier-name</i>—Name of the aggregate behavior classifier.</p> <p><i>type</i>—Traffic type.</p> <p>Values: <code>dscp</code>, <code>ieee-802.1</code>, and <code>inet-precedence</code></p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

code-point

Syntax	<code>code-point [<i>aliases</i>] [<i>bit-patterns</i>];</code>
Hierarchy Level	[edit class-of-service rewrite-rules type <i>rewrite-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify one or more code-point aliases or bit sets for association with a forwarding class.
Options	<p><i>aliases</i>—Name of each alias.</p> <p><i>bit-patterns</i>—Value of the code-point bits, in decimal form.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264

code-point-aliases

Syntax	<pre>code-point-aliases { type { alias-name bits; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define an alias for a CoS marker.
Options	<p><i>alias-name</i>—Name of the code-point alias.</p> <p><i>bits</i>—6-bit value of the code-point bits, in decimal form.</p> <p><i>type</i>—CoS marker type.</p> <p>Values: dscp, dscp-ipv6, exp, ieee-802.1, inet-precedence</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Defining Code Point Aliases for Bit Patterns on page 72

code-points

Syntax	<code>code-points ([<i>aliases</i>] [<i>bit-patterns</i>]);</code>
Hierarchy Level	<code>[edit class-of-service classifiers <i>type classifier-name</i> forwarding-class <i>class-name</i> loss-priority <i>level</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 8.5 for J Series devices. Statement introduced in Junos OS Release 9.2 for SRX Series devices.
Description	Specify one or more DSCP code-point aliases or bit sets for association with a forwarding class.
Options	<i>aliases</i> —Name of the DSCP alias. <i>bit-patterns</i> —Value of the code-point bits, in six-bit binary form.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Overview of BA Classifier Types on page 44 • Example: Configuring CoS for a PBB Network on MX Series Routers • Example: Configuring Behavior Aggregate Classifiers • Example: Configuring Forwarding Classes

copy-plp-all

Syntax	<code>copy-plp-all;</code>
Hierarchy Level	<code>[edit class-of-service]</code>
Release Information	Statement introduced in Junos OS Release 10.3 on T series platforms.
Description	Enable PLP bit copying for ingress and egress for unicast and multicast traffic when traffic is ingressing one FPC and egressing the other.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Classifying Packets by Behavior Aggregate • Packet Loss Priority Configuration Overview on page 256 • Setting Packet Loss Priority on page 64

copy-tos-to-outer-ip-header

Syntax	<code>copy-tos-to-outer-ip-header;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	For GRE tunnel interfaces only, enables the inner IP header's ToS bits to be copied to the outer IP packet header.
Default	If you omit this statement, the ToS bits in the outer IP header are set to 0.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Example: Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header on page 315

data (FTP)

Syntax	<pre>data { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; }</pre>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> ftp]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the appropriate dscp and forwarding-class value for FTP data.
Default	By default, the system will not alter the DSCP or forwarding class for FTP data traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Application Profiles on page 321• video (Application Profile) on page 741• voice (Application Profile) on page 742

default (CoS Host Outbound Traffic)

Syntax	default <i>value</i> ;
Hierarchy Level	[edit class-of-service host-outbound-traffic ieee-802.1]
Release Information	Statement introduced in Junos OS Release 12.3.
Description	Apply a global default value to the IEEE 802.1p—priority code point (PCP)—field in the Ethernet frame header for all host outbound traffic.
Options	value —Three-bit binary number. Range: 000 through 111
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic on page 282• Rewriting Packet Header Information Overview on page 262

delay-buffer-rate

Syntax	<code>delay-buffer-rate (percent <i>percentage</i> <i>rate</i>);</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ, Channelized IQ PICs, and FRF.15 and FRF.16 LSQ interfaces only, base the delay-buffer calculation on a delay-buffer rate.
Default	If you do not include this statement, the delay-buffer calculation is based on the guaranteed rate if one is configured, or the shaping rate if no guaranteed rate is configured. For more information, see Table 29 on page 202 .
Options	<p>percent <i>percentage</i>—For LSQ interfaces, delay-buffer rate as a percentage of the available interface bandwidth. Range: 1 through 100 percent</p> <p><i>rate</i>—For IQ and IQ2 interfaces, delay-buffer rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 1000 through 160,000,000,000 bps</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Oversubscribing Interface Bandwidth on page 199• Providing a Guaranteed Minimum Rate on page 207• Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374• output-traffic-control-profile on page 669

destination (Interfaces)

Syntax	<code>destination <i>address</i>;</code>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel] [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet <i>address address</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet <i>address address</i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For CoS on ATM interfaces, specify the remote address of the connection.</p> <p>For point-to-point interfaces only, specify the address of the interface at the remote end of the connection.</p> <p>For tunnel and encryption interfaces, specify the remote address of the tunnel.</p>
Options	<i>address</i> —Address of the remote side of the connection.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Linear RED Profiles on ATM Interfaces on page 516 • Multilink and Link Services Logical Interface Configuration Overview • Configuring Encryption Interfaces • Configuring Traffic Sampling • Configuring Flow Monitoring • Configuring Unicast Tunnels

destination-address (CoS)

Syntax	<code>destination-address (<i>address</i> any-unicast) <except>;</code>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> from]
Release Information	Statement introduced in Junos OS Release 8.1. <i>address</i> option enhanced to support IPv4 and IPv6 addresses in Junos OS Release 8.5.
Description	Specify the destination address for rule matching.
Options	<i>address</i> —Destination IPv4 or IPv6 address or prefix value.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Match Conditions in a CoS Rule on page 320• Configuring CoS Rules

discard (Forwarding Class)

Syntax	<code>discard;</code>
Hierarchy Level	[edit class-of-service forwarding-policy next-hop-map <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 9.1.
Description	Discard traffic sent to this forwarding class for the next-hop map referenced by this forwarding policy.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS-Based Forwarding on page 142• non-lsp-next-hop on page 665

drop-probability

See the following sections:

- [drop-probability \(Interpolated Value\) on page 579](#)
- [drop-probability \(Percentage\) on page 579](#)

drop-probability (Interpolated Value)

Syntax	<code>drop-probability [values];</code>
Hierarchy Level	[edit class-of-service drop-profiles <i>profile-name</i> interpolate]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	Define up to 64 values for interpolating drop probabilities. On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.
Options	percentage —The probability (expressed in percentage) for a packet to be dropped from the queue. Range: 0 through 100
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Default Drop Profile on page 255 • Configuring CoS Tail Drop Profiles (CLI Procedure)

drop-probability (Percentage)

Syntax	<code>drop-probability <i>percentage</i>;</code>
Hierarchy Level	[edit class-of-service drop-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define drop probability percentage.
Options	percentage —Probability that a packet is dropped, expressed as a percentage. A value of 0 means that a packet is never dropped, and a value of 100 means that all packets are dropped. Range: 0 through 100 percent
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Default Drop Profile on page 255

drop-profile (Schedulers)

Syntax	<code>drop-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map loss-priority (any low medium-low medium-high high) protocol (any non-tcp tcp)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Define drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
Options	<i>profile-name</i> —Name of the drop profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Drop Profile Maps for Schedulers on page 171• RED Drop Profiles Overview on page 253

drop-profile-map (Schedulers)

Syntax	<code>drop-profile-map loss-priority (any low medium-low medium-high high) protocol(any non-tcp tcp) drop-profile (Schedulers) <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Define the loss-priority value for a drop profile. The statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Default Schedulers Overview on page 159• Configuring Drop Profile Maps for Schedulers on page 171

drop-profiles (Class-of-Service)

Syntax	<pre> drop-profiles { profile-name { fill-level percentage drop-probability percentage; interpolate { drop-probability [values]; fill-level [values] } } } </pre>
Hierarchy Level	[edit class-of-service]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced before Junos OS 11.4 for EX Series switches.</p>
Description	<p>Define drop profiles for RED.</p> <p>For a packet to be dropped, it must match the drop profile. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the packet.</p>
Options	<p><i>profile-name</i>—Name of the drop profile.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring RED Drop Profiles on page 255 • Understanding CoS Tail Drop Profiles • Example: Configuring CoS on EX Series Switches • Configuring CoS Tail Drop Profiles (CLI Procedure)

drop-timeout (Forwarding Class)

Syntax	<code>drop-timeout <i>milliseconds</i>;</code>
Hierarchy Level	[edit class-of-service fragmentation-map <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Disable or set the resequencing timeout interval for each forwarding class of a multiclass MLPPP.
Default	If you do not include this statement, the default sequencing timeouts for T1 speeds (500 ms) or lower (1500 ms) apply.
Options	<p><i>milliseconds</i>—Time to wait for fragments. A value of 0 disables the resequencing logic for that forwarding class.</p> <p>Range: 0 through 500 milliseconds for bundles with bandwidths or T1 speeds or higher or 1500 ms for bundles with bandwidths of less than T1 speeds.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Example: Configuring Drop Timeout Interval by Forwarding Class on page 154

dscp

See the following sections:

- [dscp \(AS PIC Classifiers\) on page 583](#)
- [dscp \(Classifier on Physical Interface\) on page 584](#)
- [dscp \(Multifield Classifier\) on page 584](#)
- [dscp \(Rewrite Rules\) on page 585](#)
- [dscp \(Rewrite Rules on Physical Interface\) on page 585](#)

dscp (AS PIC Classifiers)

Syntax	<code>dscp (<i>alias</i> <i>bits</i>);</code>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> (ftp sip) (data video voice)], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then (reflexive reverse)]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define the Differentiated Services code point (DSCP) mapping that is applied to the packets.
Options	<i>alias</i> —Name assigned to a set of CoS markers. <i>bits</i> —Mapping value in the packet header.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Actions in a CoS Rule on page 321

dscp (Classifier on Physical Interface)

Syntax	<code>dscp (<i>classifier-name</i> default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> classifiers]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	For ACX Series Universal Access routers, map the DSCP field of the incoming packet to the forwarding class and packet loss priority based on the specified DSCP classifier.
Options	<i>classifier-name</i> —Name of the previously defined DSCP behavior aggregate classifier. default —Default DSCP behavior aggregate classifier.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.

dscp (Multifield Classifier)

Syntax	<code>dscp [0 <i>value</i>];</code>
Hierarchy Level	[edit firewall family <i>family-name</i> filter <i>filter-name</i> term <i>term-name</i> then]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	<p>For M320 and T Series routers, set the DSCP field of incoming or outgoing packets to 000000. On the same packets, you can use a behavior aggregate (BA) classifier and a rewrite rule to rewrite the MPLS EXP field.</p> <p>For MX Series routers with MPCs, the DSCP field can be set from a numeric range.</p> <p>For MX Series routers, if you configure a firewall filter with a DSCP action or traffic-class action on a DPC, the commit does not fail, but the filter is not applied to the interface, a warning displays, and an entry is made in the syslog.</p>
Options	<i>value</i> —For MX Series routers with MPCs, specify the field of incoming or outgoing packets in the range from 0 through 63 .
Required Privilege Level	firewall —To view this statement in the configuration. firewall-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Applying Tricolor Marking Policers to Firewall Filters on page 110

dscp (Rewrite Rules)

Syntax	<code>dscp (rewrite-name default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IPv4 traffic, apply a Differentiated Services (DiffServ) code point (DSCP) rewrite rule.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules dscp] hierarchy level.</p> <p>default—The default mapping.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264 • dscp-ipv6 (Class-of-Service) on page 587 • exp on page 595 • exp-push-push-push on page 596 • exp-swap-push-push on page 597 • ieee-802.1 (Rewrite Rules on Logical Interface) on page 627 • ieee-802.1ad on page 629 • inet-precedence on page 632 • rewrite-rules (Definition) on page 690

dscp (Rewrite Rules on Physical Interface)

Syntax	<code>dscp (rewrite-name default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> rewrite-rules]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	Associate a rewrite-rules configuration or default mapping with a specific interface.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules] hierarchy level.</p> <p>default—The default mapping.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

dscp-code-point (Class-of-Service)

Syntax	dscp-code-point <i>value</i> ;
Hierarchy Level	[edit class-of-service host-outbound-traffic]
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	Set the value of the DSCP code point in the ToS field of the packet generated by the Routing Engine (host).
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Changing the Routing Engine Outbound Traffic Defaults on page 303.

dscp-ipv6 (Class-of-Service)

Syntax	<code>dscp-ipv6 (<i>rewrite-name</i> <default>) { protocol mpls }</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IPv6 traffic, apply a DSCP rewrite rule.
Options	<p><i>rewrite-name</i>—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules dscp-ipv6] hierarchy level.</p> <p><i>default</i>— Default mapping.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264 • dscp (Rewrite Rules) on page 585 • exp on page 595 • exp-push-push-push on page 596 • exp-swap-push-push on page 597 • ieee-802.1 (Rewrite Rules on Logical Interface) on page 627 • ieee-802.1ad on page 629 • inet-precedence on page 632 • rewrite-rules (Definition) on page 690

egress-policer-overhead

Syntax	<code>egress-policer-overhead bytes;</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number]</code>
Release Information	Statement introduced before Junos OS Release 11.1.
Description	Add the configured number of bytes to the length of a packet exiting the interface.
Options	bytes —Number of bytes added to a packet exiting an interface. Range: 0–255 bytes Default: 0
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Policer Overhead on page 379• ingress-policer-overhead on page 634• CoS on Enhanced IQ2 PICs Overview on page 363

egress-shaping-overhead

Syntax	<code>egress-shaping-overhead <i>number</i>;</code>
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager], [edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Number of bytes to add to packet to determine shaped session packet length.



NOTE: For Trio MPCs/MICs, by default the value of `egress-shaping-overhead` is configured to 24, which means that the number of class-of-service (CoS) shaping overhead bytes to be added to the packets is 24. The default value for DPCs is zero. For PICs other than the 10-port 10-Gigabit Oversubscribed Ethernet (OSE) Type 4, you should configure `egress-shaping-overhead` to a minimum of 20 bytes to add a shaping overhead of 20 bytes to the packets.



NOTE: When you change the `egress-shaping-overhead` value, the FPC on which it is changed is restarted.

Options	<i>number</i> —Number of bytes added to shaped packets. Range: –63 through 192.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530 • mode (Layer 2 Tunneling Protocol Shaping) on page 662, ingress-shaping-overhead on page 634

epd-threshold

Syntax	<code>epd-threshold <i>cells</i> plp1 <i>cells</i>;</code>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	<p>cells—Maximum number of cells.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 1 through 425,984 cells. For 1-port OC48 interfaces, 1 through 425,984 cells. For 2-port OC3, DS3, and E3 interfaces, 1 through 212,992 cells. For 4-port DS3 and E3 interfaces, 1 through 106,496 cells.</p> <p>plp1 cells—Early packet drop threshold value for PLP 1.</p> <p>Range: For 1-port and 2-port OC12 interfaces, 1 through 425,984 cells. For 1-port OC48 interfaces, 1 through 425,984 cells. For 2-port OC3, DS3, and E3 interfaces, 1 through 212,992 cells. For 4-port DS3 and E3 interfaces, 1 through 106,496 cells.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Scheduler Maps on ATM Interfaces on page 520• linear-red-profile on page 649

excess-bandwidth-share

Syntax	<code>excess-bandwidth-share (proportional <i>value</i> equal);</code>
Hierarchy Level	[edit class-of-service interfaces interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	Determines the method of sharing excess bandwidth in a hierarchical scheduler environment. If you do not include this statement, the node shares excess bandwidth proportionally at 32.64 Mbps.
Options	proportional <i>value</i> —(Default) Share excess bandwidth proportionally (default value is 32.64 Mbps). equal —Share excess bandwidth equally.
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring MDRR on Enhanced Queuing DPCs on page 438• Configuring Hierarchical Schedulers for CoS on page 225• Configuring Interface Sets on page 226

excess-priority

Syntax	<code>excess-priority [low medium-low medium-high high none];</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Option none introduced in Junos OS Release 11.4.
Description	Determine the priority of excess bandwidth traffic on a scheduler.



NOTE: For Link Services IQ (LSQ) PICs or Multiservices PIC (MS-PICs), the **excess-priority** statement is allowed for consistency, but ignored. If an explicit priority is not configured for these interfaces, a default low priority is used. This default priority is also used in the excess region.

Options	<p>low—Excess traffic for this scheduler has low priority.</p> <p>medium-low—Excess traffic for this scheduler has medium-low priority.</p> <p>medium-high—Excess traffic for this scheduler has medium-high priority.</p> <p>high—Excess traffic for this scheduler has high priority.</p> <p>none—System does not demote the priority of guaranteed traffic when the bandwidth exceeds the shaping rate or the guaranteed rate.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Excess Bandwidth Sharing on IQE PICs on page 332• Bandwidth Sharing on Nonqueueing Packet Forwarding Engines Overview on page 245• Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462

excess-rate

Syntax	<code>excess-rate (percent <i>percentage</i> proportion <i>value</i>);</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>], [edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 9.3. Application to the Multiservices PIC added in Junos OS Release 9.5. Application to the Trio MPC/MIC interfaces added in Junos OS Release 10.1. Statement introduced in Junos OS Release 12.1X48R2 for PTX Series Packet Transport Switches.
Description	For an Enhanced IQ PIC, Multiservices PIC, or MX Series routers with MPC/MIC interface, and T4000 routers with Type 5 FPCs, determine the percentage or proportion of excess bandwidth traffic to share.



NOTE: The **proportion** option provides a greater range of values over the **percent** option and hence influences the priorities assigned to the queues.

Options	<p><i>percentage</i>—Percentage of the excess bandwidth to share. Range: 0 through 100 percent Default: Excess bandwidth is shared in proportion to the configured transmit rate of each queue.</p> <p><i>value</i>—(M Series, MX Series, and T Series routers only) Proportion of the excess bandwidth to share. Option available at the [edit class-of-service traffic-class-profiles <i>traffic-control-profile-name</i>] hierarchy level only. Range: 0 through 1000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Scheduler Transmission Rate on page 172 • Configuring Excess Bandwidth Sharing on IQE PICs on page 332 • Allocating Excess Bandwidth Among Frame Relay DLCIs on Multiservices PICs on page 323 • Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462

excess-rate-high

Syntax	<code>excess-rate-high (percent <i>percentage</i> proportion <i>value</i>);</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	For an MPC/MIC interface, determine the percentage of excess bandwidth from high-priority traffic to share.
Options	<p><i>percentage</i>—Percentage of the excess bandwidth to share. Range: 0 through 100 percent</p> <p><i>proportion</i>—Proportion of the excess bandwidth to share. Range: 0 through 1000</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462

excess-rate-low

Syntax	<code>excess-rate-low (percent <i>percentage</i> proportion <i>value</i>);</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	For an MPC/MIC interface, determine the percentage of excess bandwidth from low-priority traffic to share.
Options	<p><i>percentage</i>—Percentage of the excess bandwidth to share. Range: 0 through 100 percent</p> <p><i>value</i>—Proportion of the excess bandwidth to share. Range: 0 through 1000</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Managing Excess Bandwidth Distribution on Static Interfaces on MICs and MPCs on page 462

exp

Syntax	<code>exp (rewrite-name default) protocol protocol-types;</code>
Hierarchy Level	<code>[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]</code>
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS Release 12.2. for ACX series
Description	Apply an MPLS experimental (EXP) rewrite rule.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the <code>[edit class-of-service rewrite-rules exp]</code> hierarchy level.</p> <p>default—The default mapping.</p> <p>By default, IP precedence rewrite rules alter the first three bits on the type-of-service (ToS) byte while leaving the last three bits unchanged. This default behavior applies to rewrite rules you configure for MPLS packets with IPv4 payloads. You configure these types of rewrite rules by including the mpls-inet-both or mpls-inet-both-non-vpn option at the <code>[edit class-of-service interfaces interface interface-name unit logical-unit-number rewrite-rules exp rewrite-rule-name protocol]</code> hierarchy level. The IP precedence rewrite rules explanation does not apply to ACX Series Universal Access routers.</p> <p>On interfaces configured on Modular Port Concentrators (MPCs) and Modular Interface Cards (MICs) on MX Series Ethernet Services Routers, we highly recommend that you configure the default option when you configure a behavior aggregate (BA) classifier that does not include a specific rewrite rule for MPLS packets. Doing so ensures that MPLS exp value is rewritten according to the BA classifier rules configured for forwarding or packet loss priority. This does not apply to ACX Series Universal Access routers.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Rewriting the EXP Bits of All Three Labels of an Outgoing Packet on page 278 • dscp (Rewrite Rules) on page 585 • dscp-ipv6 (Class-of-Service) on page 587 • exp-push-push-push on page 596 • exp-swap-push-push on page 597 • ieee-802.1 (Rewrite Rules on Logical Interface) on page 627 • ieee-802.1ad on page 629 • inet-precedence on page 632

- [rewrite-rules \(Definition\) on page 690](#)

exp-push-push-push

Syntax	exp-push-push-push default;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For M Series routers, rewrite the EXP bits of all three labels of an outgoing packet, thereby maintaining CoS of an incoming non-MPLS packet.
Options	default —Apply the default MPLS EXP rewrite table.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Rewriting the EXP Bits of All Three Labels of an Outgoing Packet on page 278• dscp (Rewrite Rules) on page 585• dscp-ipv6 (Class-of-Service) on page 587• exp on page 595• exp-swap-push-push on page 597• ieee-802.1 (Rewrite Rules on Logical Interface) on page 627• ieee-802.1ad on page 629• inet-precedence on page 632• rewrite-rules (Definition) on page 690

exp-swap-push-push

Syntax	exp-swap-push-push default;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For M Series routers, rewrite the EXP bits of all three labels of an outgoing packet, thereby maintaining CoS of an incoming MPLS packet.
Options	default —Apply the default MPLS EXP rewrite table.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Rewriting the EXP Bits of All Three Labels of an Outgoing Packet on page 278 • dscp (Rewrite Rules) on page 585 • dscp-ipv6 (Class-of-Service) on page 587 • exp on page 595 • exp-push-push-push on page 596 • ieee-802.1 (Rewrite Rules on Logical Interface) on page 627 • ieee-802.1ad on page 629 • inet-precedence on page 632 • rewrite-rules (Definition) on page 690

fabric (Class-of-Service)

Syntax	<pre>fabric { scheduler-map { priority (high low) scheduler scheduler-name; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	<p>Define CoS parameters of the switch fabric. For M320 and T Series routers only, associate a scheduler with a fabric priority.</p> <p>On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">See Associating Schedulers with Fabric Priorities on page 217.

family

See the following sections:

- [family \(CoS on ATM Interfaces\) on page 599](#)
- [family \(Multifield Classifier\) on page 600](#)

family (CoS on ATM Interfaces)

Syntax	<pre>family <i>family</i> { address <i>address</i> { destination <i>address</i>; } }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For CoS on ATM interfaces, configure the protocol family.
Options	<p><i>family</i>—Protocol family:</p> <ul style="list-style-type: none"> • ccc—Circuit cross-connect parameters • inet—IPv4 parameters • inet6—IPv6 protocol parameters • iso—OSI ISO protocol parameters • mlppp—Multilink PPP protocol parameters • mpls—MPLS protocol parameters • tcc—Translational cross-connect parameters • vpls—Virtual private LAN service parameters. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • CoS on ATM Interfaces Overview on page 515

family (Multifield Classifier)

Syntax `family family-name {
 filter filter-name {
 term term-name {
 from {
 match-conditions;
 }
 then {
 dscp 0;
 forwarding-class class-name;
 loss-priority (high | low);
 three-color-policer {
 (single-rate | two-rate) policer-name;
 }
 }
 }
 }
 }`

Hierarchy Level [edit [firewall](#)]

Release Information Statement introduced before Junos OS Release 7.4.

Description Configure a firewall filter for IP version 4 (IPv4) or IP version 6 (IPv6) traffic.

Options *family-name*—Protocol family:

- **ccc**—Circuit cross-connect parameters
- **inet**—IPv4 parameters
- **inet6**—IPv6 protocol parameters
- **iso**—OSI ISO protocol parameters
- **mlppp**—Multilink PPP protocol parameters
- **mpls**—MPLS protocol parameters
- **tcc**—Translational cross-connect parameters
- **vpls**—Virtual private LAN service parameters.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • [Configuring Multifield Classifiers on page 76](#)

fill-level

See the following sections:

- [fill-level \(Drop Profiles\) on page 601](#)
- [fill-level \(Interpolated Value\) on page 602](#)

fill-level (Drop Profiles)

Syntax	<code>fill-level <i>percentage</i>;</code>
Hierarchy Level	[edit class-of-service drop-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	When configuring RED, map the fullness of a queue to a drop probability.
Options	<i>percentage</i> —How full the queue is, expressed as a percentage. You configure the fill-level and drop-probability statements in pairs. To specify multiple fill levels, include multiple fill-level and drop-probability statements. The values you assign to each statement pair must increase relative to the previous pair's values. This is shown in the segmented graph in " RED Drop Profiles Overview " on page 253. Range: 0 through 100 percent
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • RED Drop Profiles Overview on page 253 • Configuring RED Drop Profiles on page 255 • Understanding CoS Tail Drop Profiles • Configuring CoS Tail Drop Profiles (CLI Procedure)

fill-level (Interpolated Value)

Syntax	fill-level [<i>values</i>];
Hierarchy Level	[edit class-of-service drop-profiles <i>profile-name</i> interpolate]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	Define up to 64 values for interpolating queue fill level. On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.
Options	values —Data points for mapping queue fill percentage. Range: 0 through 100 Default: In the default tail drop profile, when the fill level is 0 percent, the drop probability is 0 percent. When the fill level is 100 percent, the drop probability is 100 percent.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• RED Drop Profiles Overview on page 253• Configuring RED Drop Profiles on page 255.• Understanding CoS Tail Drop Profiles• Configuring CoS Tail Drop Profiles (CLI Procedure)

filter

See the following sections:

- [filter \(Applying to an Interface\) on page 603](#)
- [filter \(Configuring\) on page 604](#)

filter (Applying to an Interface)

Syntax	<pre>filter { input <i>filter-name</i>; output <i>filter-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure the family inet , inet6 , mpls , or vpls only.
Options	<p>input <i>filter-name</i>—Name of one filter to evaluate when packets are received on the interface.</p> <p>output <i>filter-name</i>—Name of one filter to evaluate when packets are transmitted on the interface.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • simple-filter on page 718 • Applying Firewall Filter Tricolor Marking Policers to Interfaces on page 111 • Example: Classifying Packets Based on Their Destination Address on page 78 • Example: Configuring and Verifying a Complex Multifield Filter on page 78 • Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets on page 81 • Example: Configuring a Simple Filter on page 85 • Example: Configuring a Logical Bandwidth Policer on page 86 • Example: Two-Color Policers and Shaping Rate Changes on page 88

filter (Configuring)

Syntax	<pre>filter <i>filter-name</i> { accounting-profile <i>name</i>; enhanced-mode; interface-shared; interface-specific; physical-interface-filter; term <i>term-name</i> { filter <i>filter-name</i>; from { match-conditions; } then { actions; } } }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> firewall family <i>family-name</i>], [edit firewall family <i>family-name</i>], [edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Logical systems support introduced in Junos OS Release 9.3. physical-interface-filter statement introduced in Junos OS Release 9.6. Support at the [edit dynamic-profiles ... family <i>family-name</i>] hierarchy level introduced in Junos OS Release 11.4. Support for the interface-shared > statement introduced in Junos OS Release 12.2.
Description	Configure firewall filters.
Options	<i>filter-name</i> —Name that identifies the filter. This must be a non-reserved string of not more than 64 characters. To include spaces in the name, enclose it in quotation marks (" "). In Junos OS Release 9.0 and later, you can no longer use special characters within the name of a firewall filter. Firewall filter names are restricted from having the form __.*__ (beginning and ending with underscores) or __.* (beginning with an underscore). The remaining statements are explained separately.
Required Privilege Level	firewall —To view this statement in the configuration. firewall-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Guidelines for Configuring Standard Firewall FiltersGuidelines for Applying Standard Firewall FiltersConfiguring Multifield Classifiers on page 76Using Multifield Classifiers to Set PLP on page 113simple-filter

firewall

Syntax	firewall { ... }
Hierarchy Level	[edit], [edit logical-systems <i>logical-system-name</i>] [edit dynamic-profiles <i>profile-name</i>],
Release Information	Statement introduced before Junos OS Release 7.4. Logical systems support introduced in Junos OS Release 9.3.
Description	Configure firewall filters. The statements are explained separately.
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Guidelines for Configuring Standard Firewall Filters Guidelines for Configuring Service Filters Guidelines for Configuring Simple Filters Configuring Multifield Classifiers on page 76 Using Multifield Classifiers to Set PLP on page 113

forwarding-class

See the following sections:

- [forwarding-class \(AS PIC Classifiers\) on page 606](#)
- [forwarding-class \(ATM2 IQ Scheduler Maps\) on page 607](#)
- [forwarding-class \(BA Classifiers\) on page 607](#)
- [forwarding-class \(Forwarding Policy\) on page 608](#)
- [forwarding-class \(Fragmentation\) on page 609](#)
- [forwarding-class \(Interfaces\) on page 609](#)
- [forwarding-class \(Multifield Classifiers\) on page 610](#)
- [forwarding-class \(Restricted Queues\) on page 610](#)

forwarding-class (AS PIC Classifiers)

Syntax	<code>forwarding-class <i>class-name</i>;</code>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> (ftp sip) (data video voice)], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then (reflexive reverse)]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define the forwarding class to which packets are assigned.
Options	<i>class-name</i> —Name of the target application.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Actions in a CoS Rule on page 321

forwarding-class (ATM2 IQ Scheduler Maps)

Syntax	<pre>forwarding-class <i>class-name</i> { epd-threshold <i>cells</i> plp1 <i>cells</i>; linear-red-profile <i>profile-name</i>; priority (high low); transmit-weight (cells <i>number</i> percent <i>number</i>); }</pre>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define forwarding class name and option values.
Options	<p><i>class-name</i>—Name of forwarding class.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring ATM2 IQ VC Tunnel CoS Components Configuring Scheduler Maps on ATM Interfaces on page 520

forwarding-class (BA Classifiers)

Syntax	<pre>forwarding-class <i>class-name</i> { loss-priority <i>level</i> code-points [<i>aliases</i>] [<i>bit-patterns</i>]; }</pre>
Hierarchy Level	[edit class-of-service classifiers <i>type classifier-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define forwarding class name and option values.
Options	<p><i>class-name</i>—Name of the forwarding class.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Defining Classifiers on page 50 Example: Configuring CoS for a PBB Network on MX Series Routers

forwarding-class (Forwarding Policy)

Syntax	<pre>forwarding-class class-name { next-hop [next-hop-name]; lsp-next-hop [lsp-regular-expression]; non-lsp-next-hop; discard; }</pre>
Hierarchy Level	[edit class-of-service forwarding-policy next-hop-map map-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define forwarding class name and associated next hops.
Options	<p><i>class-name</i>—Name of the forwarding class.</p> <p>The remaining statement is explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Overriding the Input Classification on page 144

forwarding-class (Fragmentation)

Syntax	<pre>forwarding-class <i>class-name</i> { drop-timeout <i>milliseconds</i>; fragment-threshold <i>bytes</i>; multilink-class <i>number</i>; no-fragmentation; }</pre>
Hierarchy Level	[edit class-of-service fragmentation-maps <i>map-name</i>];
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For AS PIC link services IQ interfaces (lsq) only, define a forwarding class name and associated fragmentation properties within a fragmentation map.</p> <p>The fragment-threshold and no-fragmentation statements are mutually exclusive.</p>
Default	If you do not include this statement, the traffic in forwarding class <i>class-name</i> is fragmented.
Options	<p><i>class-name</i>—Name of the forwarding class.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Fragmentation by Forwarding Class on page 152

forwarding-class (Interfaces)

Syntax	forwarding-class <i>class-name</i> ;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series routers.</p>
Description	Associate a forwarding class configuration or default mapping with a specific interface.
Options	<i>class-name</i> —Name of the forwarding class.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Applying Forwarding Classes to Interfaces on page 129 • Configuring Fixed Classification on an ATM IMA Pseudowire • Example: Configuring Fixed Classification on an ATM IMA Pseudowire


forwarding-class (Multifield Classifiers)

Syntax	<code>forwarding-class class-name;</code>
Hierarchy Level	[edit firewall family <i>family-name</i> filter <i>filter-name</i> term <i>term-name</i> then]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set the forwarding class of incoming packets.
Options	<i>class-name</i> —Name of the forwarding class.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multifield Classifiers on page 76

forwarding-class (Restricted Queues)

Syntax	<code>forwarding-class class-name queue queue-number;</code>
Hierarchy Level	[edit class-of-service restricted-queues]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For M320 and T Series routers only, map forwarding classes to restricted queues. You can map up to eight forwarding classes to restricted queues.
Options	<i>class-name</i> —Name of the forwarding class. The remaining statement is explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

forwarding-classes (Class-of-Service)

Syntax	<pre>forwarding-classes { class queue-num queue-number priority (high low); queue queue-number class-name priority (high low) [policing-priority (premium normal)]; }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>policing-priority option introduced in Junos OS Release 9.5.</p> <p>Statement introduced on PTX Series Packet Transport Switches in Junos OS Release 12.1.</p>
Description	<p>Associate the forwarding class with a queue name and number. For M320, MX Series, and T Series routers only, you can configure fabric priority queuing by including the priority statement. For Enhanced IQ PICs, you can include the policing-priority option.</p>
	<div>  <p>NOTE: The priority add policing-priority options are not supported on PTX Series Packet Transport Switches.</p> </div>
	<p>The statements are explained separately.</p> <p>See “Configuring Forwarding Classes” on page 128, “Overriding Fabric Priority Queuing” on page 133, and Example: Configuring CoS for a PBB Network on MX Series Routers. For the policing-priority option, see “Configuring Layer 2 Policers on IQE PICs” on page 358. For classification by egress interface, see “Classifying Packets by Egress Interface” on page 129.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

forwarding-classes-interface-specific

Syntax	<code>forwarding-classes-interface-specific forwarding-class-map-name { class class-name queue-num queue-number [restricted-queue queue-number]; }</code>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	For the IQ, IQE, LSQ and ATM2 PICs in the T Series routers only, configure a forwarding class map for unicast and multicast traffic and a user-configured queue number for an egress interface.
Options	<p><i>class-name</i>—Name of the forwarding class.</p> <p><i>forwarding-class-map-name</i>—Name of the forwarding class map for traffic.</p> <p><i>queue-number</i>—Number of the egress queue.</p> <p>Range: 0 through 3 or 7, depending on chassis and configuration</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Forwarding Classes on page 128• Classifying Packets by Egress Interface on page 129• output-forwarding-class-map on page 666

forwarding-policy

```
Syntax forwarding-policy {
    next-hop-map map-name {
        forwarding-class class-name {
            next-hop [ next-hop-name ];
            lsp-next-hop [ lsp-regular-expression ];
            non-lsp-next-hop;
            discard;
        }
    }
    class class-name {
        classification-override {
            forwarding-class class-name;
        }
    }
}
```

Hierarchy Level [edit class-of-service]

Release Information Statement introduced before Junos OS Release 7.4.

Description Define CoS-based forwarding policy options.

The statements are explained separately.

Required Privilege interface—To view this statement in the configuration.

Level interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring CoS-Based Forwarding on page 142](#)

fragment-threshold

Syntax	<code>fragment-threshold <i>bytes</i>;</code>
Hierarchy Level	<code>[edit class-of-service fragmentation-maps forwarding-class <i>class-name</i>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services IQ (lsq) interfaces only, set the fragmentation threshold for an individual forwarding class.
Default	If you do not include this statement, the fragmentation threshold you set at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code> or <code>[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]</code> hierarchy level is the default for all forwarding classes. If you do not set a maximum fragment size anywhere in the configuration, packets are fragmented if they exceed the smallest maximum transmission unit (MTU) of all the links in the bundle.
Options	bytes —Maximum size, in bytes, for multilink packet fragments. Any nonzero value must be a multiple of 64 bytes. Range: 128 through 16,320 bytes
Required Privilege Level	interface —To view this statement in the configuration. interface-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">Configuring CoS Fragmentation by Forwarding Class on LSQ Interfaces

fragmentation-map

Syntax	<code>fragmentation-map <i>map-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For AS PIC link services IQ (lsq) and virtual LSQ redundancy (rlsq) interfaces, associate a fragmentation map with a multilink PPP interface or MLFR FRF.16 DLCI.
Default	If you do not include this statement, traffic in all forwarding classes is fragmented.
Options	<i>map-name</i> —Name of the fragmentation map.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Fragmentation by Forwarding Class Overview on page 151 • Configuring Fragmentation by Forwarding Class on page 152 • Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI on page 153 • Example: Configuring Fragmentation by Forwarding Class on page 153 • Example: Configuring Drop Timeout Interval by Forwarding Class on page 154 • fragmentation-maps on page 616

fragmentation-maps

Syntax	<pre>fragmentation-maps { map-name { forwarding-class class-name { drop-timeout milliseconds; fragment-threshold bytes; multilink-class number; no-fragmentation; } } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For AS PIC link services IQ (lsq) and virtual LSQ redundancy (rlsq) interfaces, define fragmentation properties for individual forwarding classes.
Default	If you do not include this statement, traffic in all forwarding classes is fragmented.
Options	<p>map-name—Name of the fragmentation map.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Fragmentation by Forwarding Class Overview on page 151• Configuring Fragmentation by Forwarding Class on page 152• Associating a Fragmentation Map with an MLPPP Interface or MLFR FRF.16 DLCI on page 153• Example: Configuring Fragmentation by Forwarding Class on page 153• Example: Configuring Drop Timeout Interval by Forwarding Class on page 154• fragmentation-map on page 615

frame-relay-de (Assigning to an Interface)

Syntax	<code>frame-relay-de (name default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> loss-priority-maps], [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> loss-priority-rewrites]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Assign the loss priority map or the rewrite rule to a logical interface.
Options	<p>name—Name of the loss priority map or the rewrite rule to be applied.</p> <p>default—Apply the default loss priority map or the default rewrite rule. The default loss priority map contains the following settings:</p> <pre>loss-priority low code-point 0; loss-priority high code-point 1;</pre> <p>The default rewrite rule contains the following settings:</p> <pre>loss-priority low code-point 0; loss-priority medium-low code-point 0; loss-priority medium-high code-point 1; loss-priority high code-point 1;</pre>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Assigning Default Frame Relay Rewrite Rule to IQE PICs on page 360 • Defining Custom Frame Relay Rewrite Rule on IQE PICs on page 361 • Assigning the Default Frame Relay DE Loss Priority Map to an Interface on page 270 • Defining a Custom Frame Relay Loss Priority Map on page 271

frame-relay-de (Defining Loss Priority Maps)

Syntax	<pre>frame-relay-de <i>name</i> { loss-priority <i>level</i> code-points [<i>alias</i> <i>bits</i>]; }</pre>
Hierarchy Level	[edit class-of-service loss-priority-maps]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Define a Frame Relay discard eligibility (DE) bit loss priority map.
Options	<p><i>name</i>—Name of the loss priority map.</p> <p>loss-priority <i>level</i>—Level of the loss priority to be applied based on the specified CoS values. The loss priority level can be one of the following:</p> <ul style="list-style-type: none">• high—Packet has high loss priority.• low—Packet has low loss priority.• medium-high—Packet has medium-high loss priority.• medium-low—Packet has medium-low loss priority. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Defining a Custom Frame Relay Loss Priority Map on page 271

frame-relay-de (Defining Loss Priority Rewrites)

Syntax	<pre>frame-relay-de <i>name</i> { loss-priority <i>level</i> <i>code-point</i> [<i>alias</i> <i>bits</i>]; }</pre>
Hierarchy Level	[edit class-of-service loss-priority-rewrites]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Define a Frame Relay discard eligibility (DE) bit loss priority rewrite.
Options	<p><i>name</i>—Name of the loss priority rewrite.</p> <p>loss-priority <i>level</i>—Level of the loss priority to be applied based on the specified CoS values. The loss priority level can be one of the following:</p> <ul style="list-style-type: none"> • high—Packet has high loss priority. • low—Packet has low loss priority. • medium-high—Packet has medium-high loss priority. • medium-low—Packet has medium-low loss priority. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Defining Custom Frame Relay Rewrite Rule on IQE PICs on page 361

from

Syntax	<pre>from { applications [<i>application-name</i>]; application-sets [<i>set-name</i>]; destination-address (CoS) <i>address</i>; source-address <i>address</i>; }</pre>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i>]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Specify input conditions for a CoS term.
Options	The remaining statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS Rule Sets on page 323


ftp (Class-Of-Service)

Syntax	<pre>ftp { data { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; } }</pre>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> ftp]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the appropriate dscp and forwarding-class value for FTP.
Default	By default, the system does not alter the DSCP or forwarding class for FTP traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Application Profiles on page 321• sip (Application Profile) on page 720

guaranteed-rate

Syntax	<code>guaranteed-rate (percent <i>percentage</i> <i>rate</i>) <burst-size <i>bytes</i>>;</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 7.6.</p> <p>Option burst-size introduced for Enhanced Queuing (EQ) DPCs in Junos OS Release 9.4.</p> <p>Option burst-size introduced for MPC/MIC modules in Junos OS Release 11.4.</p> <p>Option burst-size introduced for IQ2 and IQ2E interfaces in Junos OS Release 12.3</p>
Description	For Gigabit Ethernet IQ, Channelized IQ PICs, AS PIC FRF.16 LSQ interfaces, and EQ DPCs only, configure a guaranteed minimum rate. You can also configure an optional burst size for a logical interface on EQ DPCs and on IQ2 and IQ2E PICs. This can help to ensure that higher priority services do not starve lower priority services.
Default	If you do not include this statement and you do not include the delay-buffer-rate statement, the logical interface receives a minimal delay-buffer rate and minimal bandwidth equal to 2 MTU-sized packets.
Options	<p>percent <i>percentage</i>—For LSQ interfaces, guaranteed rate as a percentage of the available interface bandwidth.</p> <p>Range: 1 through 100 percent</p> <p><i>rate</i>—For IQ and IQ2 interfaces, guaranteed rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000 bps</p> <p>burst-size <i>bytes</i>—(Optional) Maximum burst size, in bytes.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Providing a Guaranteed Minimum Rate on page 207 • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • output-traffic-control-profile on page 669

hierarchical-scheduler

Syntax	hierarchical-scheduler;
Hierarchy Level	[edit class-of-service interfaces]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	On MX Series, M Series, and T Series routers with IQ2E PIC, enables the use of hierarchical schedulers.
	<div><p>NOTE: To enable hierarchical scheduling on MX80 routers, configure the <code>hierarchical-scheduler</code> statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.</p></div>
Default	If you do not include this statement, the interfaces on the MX Series router cannot use hierarchical interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Hierarchical Schedulers for CoS on page 225

high-plp-max-threshold

Syntax	<code>high-plp-max-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-optionslinear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the high PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	<i>percent</i> —Fill-level percentage when linear random early detection (RED) is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Linear RED Profiles on ATM Interfaces on page 516 • low-plp-max-threshold on page 658 • low-plp-threshold on page 659 • queue-depth on page 687

high-plp-threshold

Syntax	<code>high-plp-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-optionslinear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Linear RED Profiles on ATM Interfaces on page 516 • high-plp-max-threshold on page 623 • low-plp-max-threshold on page 658 • low-plp-threshold on page 659 • queue-depth on page 687

host-outbound-traffic

Syntax	<pre>host-outbound-traffic { forwarding-class <i>class-name</i>; dscp-code-point <i>value</i>; ieee-802.1 { default <i>value</i>; rewrite-rules; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 8.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	<p>Allow queue selection for all traffic generated by the Routing Engine (host). The selected queue must be configured properly. The configuration of specific DSCP code point bits for the ToS field of the generated packets is also allowed. Transit packets are not affected; only packets originating on the Routing Engine are affected. By default, the forwarding class (queue) and DSCP bits are set according to those given in “Default Routing Engine Protocol Queue Assignments” on page 301. This feature is not available on J Series routers.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• See Changing the Routing Engine Outbound Traffic Defaults on page 303.• Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic on page 282• Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface on page 283• Understanding Junos OS CoS Components for EX Series Switches

ieee-802.1 (Classifier on Physical Interface)

Syntax	ieee-802.1 (<i>classifier-name</i> default) vlan-tag (inner outer);
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> classifiers]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	For ACX Series Universal Access routers, map the ieee-802.1p field of the incoming packet to the forwarding class and packet loss priority based on the specified 802.1p classifier. In the case of double tagged packets, you can configure whether to use the 802.1p of the outer or inner VLAN tag.
Options	<p>vlan-tag inner—In the case of double tagged packets, classify based on the 802.1p of the inner VLAN tag.</p> <p>vlan-tag outer—Classify based on the 802.1p of the outermost VLAN tag.</p> <p>classifier-name—Name of the previously defined ieee-802.1p behavior aggregate classifier.</p> <p>default—Default ieee-802.1p behavior aggregate classifier.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

ieee-802.1 (Host Outbound Traffic)

Syntax	<pre>ieee-802.1 { default <i>value</i>; rewrite-rules; }</pre>
Hierarchy Level	[edit class-of-service host-outbound-traffic]
Release Information	Statement introduced in Junos OS Release 12.3.
Description	<p>Apply the IEEE 802.1p rewrite rules associated with the egress logical interface to the IEEE 802.1p PCP field for all host outbound traffic on that interface.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic on page 282• Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface on page 283• Rewriting Packet Header Information Overview on page 262• Configuring Rewrite Rules on page 264

ieee-802.1 (Rewrite Rules on Logical Interface)

Syntax	ieee-802.1 (<i>rewrite-name</i> default) vlan-tag (outer outer-and-inner);
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4. vlan-tag statement introduced in Junos OS Release 8.1.
Description	Apply an IEEE-802.1 rewrite rule. For IQ PICs, you can only configure one IEEE 802.1 rewrite rule on a physical port. All logical ports (units) on that physical port should apply the same IEEE 802.1 rewrite rule.
Options	rewrite-name —Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules ieee-802.1] hierarchy level. default —The default mapping.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264 • Example: Configuring CoS for a PBB Network on MX Series Routers • dscp (Rewrite Rules) on page 585 • dscp-ipv6 (Class-of-Service) on page 587 • exp on page 595 • exp-push-push-push on page 596 • exp-swap-push-push on page 597 • ieee-802.1ad on page 629 • inet-precedence on page 632 • rewrite-rules (Definition) on page 690


ieee-802.1 (Rewrite Rules on Physical Interface)

Syntax	ieee-802.1 (<i>rewrite-name</i> default) ;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>] rewrite-rules
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	Apply an IEEE-802.1 rewrite rule.
Options	<i>rewrite-name</i> —Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules ieee-802.1] hierarchy level. default —The default mapping.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

ieee-802.1ad

Syntax	ieee-802.1ad (<i>rewrite-name</i> default) vlan-tag (outer outer-and-inner);
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced in Junos OS Release 9.2.
Description	Apply a IEEE-802.1ad rewrite rule.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules ieee-802.1ad] hierarchy level.</p> <p>default—The default rewrite bit mapping.</p> <p>vlan-tag—The rewrite rule is applied to the outer or outer-and-inner VLAN tag.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264 • Example: Configuring CoS for a PBB Network on MX Series Routers • dscp (Rewrite Rules) on page 585 • dscp-ipv6 (Class-of-Service) on page 587 • exp on page 595 • exp-push-push-push on page 596 • exp-swap-push-push on page 597 • ieee-802.1 (Rewrite Rules on Logical Interface) on page 627 • inet-precedence on page 632 • rewrite-rules (Definition) on page 690

if-exceeding

Syntax	<pre>if-exceeding { bandwidth-limit <i>rate</i>; bandwidth-percent <i>number</i>; burst-size-limit <i>bytes</i>; }</pre>
Hierarchy Level	[edit firewall policer <i>policer-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure policer rate limits.
Options	<p>bandwidth-limit <i>bps</i>—Traffic rate, in bits per second (bps). There is no minimum value, but any value below 61,040 bps results in an effective rate of 30,520 bps.</p> <p>Range: 8,000 through 50,000,000,000 bps (on the MX Series, M7i, M10i, M120, M320, T640, T1600, and TX-Matrix routers)</p> <p>Range: 32,000 through 50,000,000,000 bps (on any platform except for the MX Series, M7i, M10i, M120, M320, T640, T1600, and TX-Matrix routers)</p> <p>Default: None</p> <p>bandwidth-percent <i>number</i>—Port speed, in decimal percentage number.</p> <p>Range: 1 through 100</p> <p>Default: None</p> <p>burst-size-limit <i>bytes</i>—Maximum burst size, in bytes. The minimum recommended value is the maximum transmission unit (MTU) of the IP packets being policed.</p> <p>Range: 1500 through 100,000,000 bytes</p> <p>Default: None</p>
	<div>  <p>NOTE: On M120, M320, and T Series routers, you can specify a minimum bandwidth limit of 8k (8000 bps). On the MX Series routers, you can specify a minimum bandwidth limit of 65,535 bps. Values below 65,535, even if allowed, will generate a commit error.</p> </div>
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Multifield Classifiers on page 76 • Using Multifield Classifiers to Set PLP on page 113 • Configuring Schedulers for Priority Scheduling on page 177 • filter (Configuring) on page 604 • priority (Schedulers) on page 682

import

See the following sections:

- [import \(Classifiers\) on page 631](#)
- [import \(Rewrite Rules\) on page 631](#)

import (Classifiers)

Syntax	<code>import (classifier-name default);</code>
Hierarchy Level	<code>[edit class-of-service classifiers type classifier-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify a default or previously defined classifier.
Options	<p>classifier-name—Name of the classifier mapping configured at the <code>[edit class-of-service classifiers]</code> hierarchy level.</p> <p>default—The default classifier mapping.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Overview of BA Classifier Types on page 44

import (Rewrite Rules)

Syntax	<code>import (rewrite-name default);</code>
Hierarchy Level	<code>[edit class-of-service rewrite-rules type rewrite-name]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify a default or previously defined rewrite-rules mapping to import.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the <code>[edit class-of-service rewrite-rules]</code> hierarchy level.</p> <p>default—The default rewrite-rules mapping.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264

inet-precedence

Syntax	<code>inet-precedence (<i>rewrite-name</i> default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a IPv4 precedence rewrite rule.
Options	<p><i>rewrite-name</i>—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules inet-precedence] hierarchy level.</p> <p>default—The default mapping. By default, IP precedence rewrite rules alter the first three bits on the type of service (ToS) byte while leaving the last three bits unchanged.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Rewrite Rules on page 264• dscp (Rewrite Rules) on page 585• dscp-ipv6 (Class-of-Service) on page 587• exp on page 595• exp-push-push-push on page 596• exp-swap-push-push on page 597• ieee-802.1 (Rewrite Rules on Logical Interface) on page 627• ieee-802.1ad on page 629• rewrite-rules (Definition) on page 690

inet-precedence (Classifier on Physical Interface)

Syntax	<code>inet-precedence (<i>classifier-name</i> default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> classifiers]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	On ACX Series Universal Access routers, map the inet-precedence field of the incoming packet to the forwarding class and packet loss priority, based on the specified inet-precedence classifier. When no classifier is configured on the physical interface, the default ipprec-compatibility inet-precedence classifier is applied on the physical interface.
Options	<p><i>classifier-name</i>—Name of the previously defined inet-precedence behavior aggregate classifier.</p> <p>default—Default inet-precedence behavior aggregate classifier.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

inet-precedence (Rewrite Rules on Physical Interface)

Syntax	<code>inet-precedence (<i>rewrite-name</i> default);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> rewrite-rules]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	Apply a IPv4 precedence rewrite rule.
Options	<p><i>rewrite-name</i>—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules inet-precedence] hierarchy level.</p> <p>default—The default mapping. By default, IP precedence rewrite rules alter the first three bits on the type of service (ToS) byte while leaving the last three bits unchanged.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

ingress-policer-overhead

Syntax	<code>ingress-policer-overhead bytes;</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number]</code>
Release Information	Statement introduced before Junos OS Release 11.1
Description	Add the configured number of bytes to the length of a packet entering the interface.
Options	bytes —Number of bytes added to a packet entering an interface. Range: 0–255 bytes Default: 0
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Policer Overhead on page 379• egress-policer-overhead on page 588• CoS on Enhanced IQ2 PICs Overview on page 363

ingress-shaping-overhead

Syntax	<code>ingress-shaping-overhead number;</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number traffic-manager],</code> <code>[edit chassis lcc number fpc slot-number pic pic-number traffic-manager]</code>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Number of bytes to add to packet to determine shaped session packet length.
Options	number —Number of bytes added to shaped packets. Range: –63 through 192
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530• egress-shaping-overhead on page 589• mode (Layer 2 Tunneling Protocol Shaping) on page 662

input-excess-bandwidth-share

Syntax	input-excess-bandwidth-share (proportional <i>value</i> equal);
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 9.0.
Description	Determines the method of sharing excess bandwidth on the ingress interface in a hierarchical scheduler environment. If you do not include this statement, the node shares excess bandwidth proportionally at 32.64 Mbps.
Options	proportional <i>value</i> —(Default) Share ingress excess bandwidth proportionally (default value is 32.64 Mbps). equal —Share ingress excess bandwidth equally.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445

input-policer

Syntax	<code>input-policer <i>policer-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Apply a single-rate two-color policer to the Layer 2 input traffic at the logical interface. The input-policer and input-three-color statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate two-color policer that you define at the [edit firewall] hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Two-Color and Three-Color Policers at Layer 2• Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112• Configuring a Gigabit Ethernet Policer• input-three-color on page 640• layer2-policer on page 648• logical-interface-policer on page 651• output-policer on page 667• output-three-color on page 668

input-scheduler-map

Syntax	<code>input-scheduler-map <i>map-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Associate a scheduler map with a physical or logical interface. The input-scheduler-map and input-traffic-control-profile statements are mutually exclusive.
Options	<i>map-name</i> —Name of scheduler map that you define at the [edit interfaces <i>interface-name</i> atm-options scheduler-maps] hierarchy level. default —The default scheduler mapping.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring a Separate Input Scheduler for Each Interface on page 376• Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445• input-traffic-control-profile on page 641

input-shaping-rate

See the following sections:

- [input-shaping-rate \(Logical Interface\) on page 638](#)
- [input-shaping-rate \(Physical Interface\) on page 639](#)

input-shaping-rate (Logical Interface)

Syntax	<code>input-shaping-rate (percent <i>percentage</i> <i>rate</i>);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ2 interfaces, Enhanced Queuing DPCs, and MPC/MIC interfaces, configure input traffic shaping by specifying the amount of bandwidth to be allocated to the logical interface. You can configure hierarchical shaping, meaning you can apply an input shaping rate to both the physical interface and the logical interface.
Default	If you do not include this statement, logical interfaces share a default scheduler. This scheduler has a committed information rate (CIR) that equals 0. (The CIR is the guaranteed rate.) The default scheduler has a peak information rate (PIR) that equals the physical interface shaping rate.
Options	<p>percent <i>percentage</i>—Shaping rate as a percentage of the available interface bandwidth. Range: 0 through 100 percent</p> <p><i>rate</i>—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 1000 through 160,000,000,000 bps</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Ingress Hierarchical CoS on MPC and MIC Interfaces on page 491• Configuring Hierarchical Input Shapers on page 379• Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445• input-traffic-control-profile on page 641


input-shaping-rate (Physical Interface)

Syntax	<code>input-shaping-rate <i>rate</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ2 interfaces, Enhanced Queuing DPCs, and MPC/MIC interfaces, configure input traffic shaping by specifying the amount of bandwidth to be allocated to the physical interface. You can configure hierarchical shaping, meaning you can apply an input shaping rate to both the physical interface and the logical interface.
Options	rate —Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 1000 through 160,000,000,000 bps
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Hierarchical Input Shapers on page 379• Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445• input-traffic-control-profile on page 641

input-three-color

Syntax	<code>input-three-color <i>policer-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Apply a single-rate or two-rate three-color policer to the Layer 2 input traffic at the logical interface. The input-three-color and input-policer statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate or two-rate three-color policer.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Two-Color and Three-Color Policers at Layer 2• Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112• Configuring a Gigabit Ethernet Policer• input-policer on page 636• layer2-policer on page 648• logical-interface-policer on page 651• output-policer on page 667• output-three-color on page 668

input-traffic-control-profile

Syntax	<code>input-traffic-control-profile <i>profile-name</i> shared-instance <i>instance-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ2 and IQ2E PICs, Enhanced Queuing DPCs, and MPC/MIC interfaces on MX Series routers, apply an input traffic scheduling and shaping profile to the logical interface.
<div>  <p>NOTE: The <code>shared-instance</code> statement applies only to Gigabit Ethernet IQ2 and IQ2E PICs.</p> </div>	
Options	<p><i>profile-name</i>—Name of the traffic-control profile to be applied to this interface.</p> <p><i>instance-name</i>—Name of the shared scheduler and shaper to be applied to this interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445 • input-shaping-rate (Logical Interface) on page 638 • traffic-control-profiles on page 729

input-traffic-control-profile-remaining

Syntax	<code>input-traffic-control-profile-remaining <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces <i>interface-name</i> interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 9.0.
Description	For Enhanced Queuing DPCs and MIC/MPC interfaces on MX Series routers and M Series and T Series routers with IQ2E PIC, apply an input traffic scheduling and shaping profile for the remaining traffic to the logical interface or interface set.
Options	<i>profile-name</i> —Name of the traffic-control profile for the remaining traffic to be applied to this interface or interface set.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Ingress Hierarchical CoS on Enhanced Queuing DPCs on page 445• input-traffic-control-profile on page 641

interfaces

```
Syntax  interfaces {
    interface-name {
        classifiers{
            dscp(classifier-name | default) {
            }
            ieee-802.1 (classifier-name | default) vlan-tag (inner | outer | classifier-name);
            inet-precedence (rewrite-name | default);
        }
        input-scheduler-map map-name;
        input-shaping-rate rate;
        irb {
            unit logical-unit-number {
                classifiers {
                    type (classifier-name | default);
                }
                rewrite-rules {
                    dscp (rewrite-name | default);
                    dscp-ipv6 (rewrite-name | default);
                    exp (rewrite-name | default) protocol protocol-types;
                    ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
                    inet-precedence (rewrite-name | default);
                }
            }
        }
        member-link-scheduler (replicate | scale);
        rewrite-rules {
            dscp (rewrite-name | default);
            ieee-802.1 (rewrite-name | default) vlan-tag (outer);
            inet-precedence (rewrite-name | default);
        }
        scheduler-map map-name;
        scheduler-map-chassis map-name;
        shaping-rate rate;
        unit logical-unit-number {
            classifiers {
                type (classifier-name | default) family (mpls | inet);
            }
            forwarding-class class-name;
            fragmentation-map map-name;
            input-shaping-rate (percent percentage | rate);
            input-traffic-control-profile profile-name shared-instance instance-name;
            output-traffic-control-profile profile-name shared-instance instance-name;
            per-session-scheduler;
            rewrite-rules {
                dscp (rewrite-name | default);
                dscp-ipv6 (rewrite-name | default);
                exp (rewrite-name | default) protocol protocol-types;
                exp-push-push-push default;
                exp-swap-push-push default;
                ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
                inet-precedence (rewrite-name | default);
            }
        }
    }
}
```

```

    }
    scheduler-map map-name;
    shaping-rate rate;
    translation-table (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp
    | to-inet-precedence-from-inet-precedence) table-name;
  }
}
interface-set interface-set-name {
  excess-bandwidth-share;
  internal-node;
  output-traffic-control-profile profile-name;
  output-traffic-control-profile-remaining profile-name;
}
}

```

Hierarchy Level [edit class-of-service]

Release Information Statement introduced before Junos OS Release 7.4.
Interface-set level added in Junos OS Release 8.5.

Description Configure interface-specific CoS properties for incoming packets.



NOTE: The `dscp-ipv6` and `ieee-802.1ad` classifier types are not supported on ACX Series routers. For further information about support on ACX Series routers, see [Understanding CoS CLI Configuration Statements on ACX Series Universal Access Routers](#).

Options The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Overview of BA Classifier Types on page 44](#)
- [Configuring Rewrite Rules on page 264](#)
- [Understanding CoS CLI Configuration Statements on ACX Series Universal Access Routers](#)

interface-set (Hierarchical Schedulers)

Syntax	<pre>interface-set <i>interface-set-name</i> { excess-bandwidth-share (proportional <i>value</i> equal); internal-node; output-traffic-control-profile <i>profile-name</i>; output-traffic-control-profile-remaining <i>profile-name</i>; }</pre>
Hierarchy Level	[edit class-of-service interfaces]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	For MX Series routers with Enhanced Queuing DPCs or MPC/MIC interfaces and M Series and T Series routers with IQ2E PIC, configure hierarchical schedulers for an interface set.
Options	<p><i>interface-set-name</i>—Name of the interface set.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Interface Sets on page 226 • Configuring Hierarchical Schedulers for CoS on page 225

internal-node

Syntax	internal-node;
Hierarchy Level	[edit class-of-service interfaces interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	The statement is used to raise the interface set without children to the same level as the other configured interface sets with children, allowing them to compete for the same set of resources.
Default	If you do not include this statement, the node is internal only if its children have a traffic control profile configured.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Internal Scheduler Nodes on page 240

interpolate

Syntax	<pre>interpolate { drop-probability [values]; fill-level [values]; }</pre>
Hierarchy Level	[edit class-of-service drop-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	<p>Specify values for interpolating relationship between queue fill level and drop probability.</p> <p>On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• See Configuring RED Drop Profiles on page 255.• Understanding Junos OS CoS Components for EX Series Switches

irb

```
Syntax  irb {
          unit logical-unit-number {
            classifiers {
              type (classifier-name | default);
            }
            rewrite-rules {
              dscp (rewrite-name | default);
              dscp-ipv6 (rewrite-name | default);
              exp (rewrite-name | default) protocol protocol-types;
              ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
              inet-precedence (rewrite-name | default);
            }
          }
        }
```

Hierarchy Level [edit class-of-service [interfaces](#)]

Release Information Statement introduced in Junos OS Release 8.4.

Description On the MX Series routers, you can apply classifiers or rewrite rules to an integrated bridging and routing (IRB) interface. All types of classifiers and rewrite rules are allowed. These classifiers and rewrite rules are independent of others configured on the MX Series router.

The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [MX Series Router CoS Hardware Capabilities and Limitations on page 300](#)

layer2-policer

Syntax	<pre>layer2-policer { input-policer <i>policer-name</i>; input-three-color <i>policer-name</i>; output-policer <i>policer-name</i>; output-three-color <i>policer-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],
Release Information	Statement introduced in Junos OS Release 8.2.
Description	<p>For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series, MX Series, and T Series routers, apply Layer 2 logical interface policers. The following policers are supported:</p> <ul style="list-style-type: none">• Two-color• Single-rate tricolor marking (srTCM)• Two-rate tricolor marking (trTCM) <p>Two-color and tricolor policers are configured at the [edit firewall] hierarchy level.</p>
Options	<p>input-policer <i>policer-name</i>—Two-color input policer to associate with the interface. This statement is mutually exclusive with the input-three-color statement.</p> <p>input-three-color <i>policer-name</i>—Tricolor input policer to associate with the interface. This statement is mutually exclusive with the input-policer statement.</p> <p>output-policer <i>policer-name</i>—Two-color output policer to associate with the interface. This statement is mutually exclusive with the output-three-color statement.</p> <p>output-three-color <i>policer-name</i>—Tricolor output policer to associate with the interface. This statement is mutually exclusive with the output-policer statement.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112• Configuring Gigabit Ethernet Two-Color and Tricolor Policers


linear-red-profile

Syntax	<code>linear-red-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a linear RED profile to a specified forwarding class. To define the linear RED profiles, include the linear-red-profiles statement at the [edit interfaces at- <i>fpc/pic/port</i> atm-options] hierarchy level.
Default	If you do not include either the epd-threshold or the linear-red-profile statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
Options	<i>profile-name</i> —Name of the linear RED profile.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring an ATM Scheduler Map linear-red-profiles on page 650 Configuring Scheduler Maps on ATM Interfaces on page 520 epd-threshold on page 590

linear-red-profiles

Syntax	<pre>linear-red-profiles <i>profile-name</i> { high-plp-threshold <i>percent</i>; low-plp-threshold <i>percent</i>; queue-depth <i>cells</i>; }</pre>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS virtual circuit drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
Options	<p><i>profile-name</i>—Name of the drop profile.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">Configuring ATM2 IQ VC Tunnel CoS ComponentsConfiguring Linear RED Profiles on ATM Interfaces on page 516

logical-interface-policer

Syntax	logical-interface-policer;
Hierarchy Level	<p>[edit dynamic-profiles <i>profile-name</i> firewall policer <i>policer-name</i>],</p> <p>[edit dynamic-profiles <i>profile-name</i> firewall three-color-policer <i>name</i>],</p> <p>[edit firewall atm-policer <i>atm-policer-name</i>]</p> <p>[edit firewall policer <i>policer-name</i>],</p> <p>[edit firewall policer <i>policer-template-name</i>],</p> <p>[edit firewall three-color-policer <i>policer-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> firewall policer <i>policer-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> firewall three-color-policer <i>name</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support at the [edit firewall three-color-policer <i>policer-name</i>] hierarchy level introduced in Junos OS Release 8.2.</p> <p>Logical systems support introduced in Junos OS Release 9.3.</p> <p>Support at the [edit dynamic-profiles ... policer <i>policer-name</i>] and [edit dynamic-profiles ... three-color-policer <i>name</i>] hierarchy levels introduced in Junos OS Release 11.4.</p>
Description	Configure a logical interface policer.
	<div>  <p>NOTE: Starting in Junos OS Release 12.2R2, on T Series Core Routers only, you can configure an MPLS LSP policer for a specific LSP to be shared across different protocol family types. You must include the logical-interface-policer statement to do so.</p> </div>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Two-Color and Three-Color Logical Interface Policers Traffic Policer Types Configuring Tricolor Marking Policers on page 108 action on page 553 Configuring Gigabit Ethernet Two-Color and Tricolor Policers action

loss-priority

See the following sections:

- [loss-priority \(BA Classifiers\) on page 652](#)
- [loss-priority \(Normal Filter\) on page 653](#)
- [loss-priority \(Rewrite Rules\) on page 653](#)
- [loss-priority \(Scheduler Drop Profiles\) on page 654](#)
- [loss-priority \(Simple Filter\) on page 655](#)

loss-priority (BA Classifiers)

Syntax	<code>loss-priority <i>level</i>;</code>
Hierarchy Level	[edit class-of-service classifiers <i>type classifier-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify packet loss priority value for a specific set of code-point aliases and bit patterns.
Options	<i>level</i> can be one of the following: <ul style="list-style-type: none">• high—Packet has high loss priority.• medium-high—Packet has medium-high loss priority.• medium-low—Packet has medium-low loss priority.• low—Packet has low loss priority.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Overview of BA Classifier Types on page 44• Example: Configuring CoS for a PBB Network on MX Series Routers• Configuring Tricolor Marking on page 100


loss-priority (Normal Filter)

Syntax	<code>loss-priority (high low);</code>
Hierarchy Level	[edit firewall family <i>family-name</i> filter <i>filter-name</i> term <i>term-name</i> then]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Set the loss priority of incoming packets.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Multifield Classifiers on page 76

loss-priority (Rewrite Rules)

Syntax	<code>loss-priority <i>level</i>;</code>
Hierarchy Level	[edit class-of-service rewrite-rules <i>type</i> <i>rewrite-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify a loss priority to which to apply a rewrite rule. The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and packet loss priority (PLP). The inputs for the map are the forwarding class and the PLP. The output of the map is the code-point alias or bit pattern.
Options	<p><i>level</i> can be one of the following:</p> <ul style="list-style-type: none"> • high—The rewrite rule applies to packets with high loss priority. • low—The rewrite rule applies to packets with low loss priority. • medium-high—(For J Series routers only) The rewrite rule applies to packets with medium-high loss priority. • medium-low—(For J Series routers only) The rewrite rule applies to packets with medium-low loss priority. <p>See “Configuring Rewrite Rules” on page 264, “Overview of BA Classifier Types” on page 44, “Configuring Tricolor Marking” on page 100, and Example: Configuring CoS for a PBB Network on MX Series Routers.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

loss-priority (Scheduler Drop Profiles)

Syntax	loss-priority (any high low medium-high medium-low);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify a loss priority to which to apply a drop profile. The drop profile map sets the drop profile for a specific PLP and protocol type. The inputs for the map are the PLP designation and the protocol type. The output is the drop profile.
Options	any —The drop profile applies to packets with any PLP.  NOTE: On ACX Series Routers, only the any option is supported when you configure the non-tcp option for protocol . high —The drop profile applies to packets with high PLP. low —The drop profile applies to packets with low PLP. medium-high —The drop profile applies to packets with medium-high PLP. medium-low —The drop profile applies to packets with medium-low PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Default Schedulers Overview on page 159• Configuring Drop Profile Maps for Schedulers on page 171• Configuring Schedulers for Priority Scheduling on page 177• Configuring Tricolor Marking on page 100• protocol (Schedulers) on page 684

loss-priority (Simple Filter)

Syntax	<code>loss-priority (high low medium);</code>
Hierarchy Level	<code>[edit firewall family <i>family-name</i> simple-filter <i>filter-name</i> term <i>term-name</i> then]</code>
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Set the loss priority of incoming packets.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Multifield Classifiers on page 76

loss-priority-maps

Syntax	<pre> loss-priority-maps { frame-relay-de <i>rewrite-name</i> { loss-priority <i>level</i> { code-points [<i>aliases</i>] [<i>bit-patterns</i>]; } } } </pre>
Hierarchy Level	<code>[edit class-of-service]</code>
Release Information	Statement introduced in JUNOS Release 11.4.
Description	Map the loss priority of incoming packets based on the CoS values.
Options	<p>frame-relay-de <i>rewrite-name</i>—Name of the Frame Relay DE bit loss priority map.</p> <p>loss-priority <i>level</i>—The loss priority level can be one of the following:</p> <ul style="list-style-type: none"> • high—Packet has high loss priority. • low—Packet has low loss priority. • medium-high—Packet has medium-high loss priority. • medium-low—Packet has medium-low loss priority. <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Assigning the Default Frame Relay DE Loss Priority Map to an Interface on page 270

loss-priority-maps (Assigning to an Interface)

Syntax	<pre>loss-priority-maps { frame-relay-de (<i>loss-priority-rewrite-name</i> default); }</pre>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in JUNOS Release 11.4.
Description	Assign the loss priority map to a logical interface.
Options	<p>default—Apply the default loss priority map. The default map includes the following configuration:</p> <pre>loss-priority low code-point 0; loss-priority high code-point 1;</pre> <p>map-name—Name of loss priority map to be applied.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Assigning the Default Frame Relay DE Loss Priority Map to an Interface on page 270• unit on page 737

loss-priority-rewrites

Syntax	<pre> loss-priority-rewrites { frame-relay-de <i>rewrite-name</i> { loss-priority <i>level</i> { code-points [<i>bit-patterns</i>]; } } } </pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Specify the Frame Relay discard eligibility (DE) bit rewrite rule on the enhanced IQ PIC.
Options	<p>frame-relay-de <i>rewrite-name</i>—Name of the Frame Relay DE bit loss priority rewrite rule.</p> <p>loss-priority <i>level</i>—The loss priority level can be one of the following:</p> <ul style="list-style-type: none"> • high—Packet has high loss priority. • low—Packet has low loss priority. • medium-high—Packet has medium-high loss priority. • medium-low—Packet has medium-low loss priority. <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Defining Custom Frame Relay Rewrite Rule on IQE PICs on page 361

loss-priority-rewrites (Assigning to an Interface)

Syntax	<code>loss-priority-rewrites { frame-relay-de (<i>loss-priority-rewrite-name</i> default); }</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 11.4.
Description	Associate the loss priority rewrites to an outgoing packet.
Options	<i>loss-priority-rewrite-name</i> —Name of the loss priority rewrite to be applied to an interface. default —Default loss priority rewrite to be applied to an interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Defining Custom Frame Relay Rewrite Rule on IQE PICs on page 361• Assigning Default Frame Relay Rewrite Rule to IQE PICs on page 360

low-plp-max-threshold

Syntax	<code>low-plp-max-threshold <i>percent</i>;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the drop profile fill-level for the low PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring ATM2 IQ VC Tunnel CoS Components• high-plp-max-threshold• low-plp-threshold on page 659• Configuring Linear RED Profiles on ATM Interfaces on page 516• high-plp-max-threshold on page 623• queue-depth on page 687

low-plp-threshold

Syntax	<code>low-plp-threshold percent;</code>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options linear-red-profiles profile-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define the CoS VC drop profile fill-level percentage when linear RED is applied to cells with low PLP. When the fill level exceeds the defined percentage, packets with low PLP are randomly dropped by RED. This statement is mandatory.
Options	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with low PLP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring ATM2 IQ VC Tunnel CoS Components • high-plp-max-threshold • high-plp-threshold • Configuring Linear RED Profiles on ATM Interfaces on page 516 • high-plp-max-threshold on page 623 • high-plp-threshold on page 623 • low-plp-max-threshold on page 658 • queue-depth on page 687

lsp-next-hop (CoS-Based Forwarding)

Syntax	<code>lsp-next-hop [<i>lsp-regular-expression</i>];</code>
Hierarchy Level	[edit class-of-service forwarding-policy next-hop-map <i>map-name</i> forwarding-class class-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the LSP regular expression to which to map forwarded traffic.
Options	<i>lsp-regular-expression</i> —Next-hop LSP label.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring CoS-Based Forwarding on page 142

match-direction

Syntax	match-direction (input output input-output);
Hierarchy Level	[edit services cos rule <i>rule-name</i>]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Specify the direction in which the rule match is applied.
Options	input —Apply the rule match on the input side of the interface. output —Apply the rule match on the output side of the interface. input-output —Apply the rule match bidirectionally.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS Rules on page 318

max-burst-size

Syntax	max-burst-size <i>max-burst-size</i> ;
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>], [edit firewall atm-policer <i>atm-policer-name</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(MX Series routers) Define ATM maximum burst size on ATM MICs in cells.
Options	cells —ATM maximum burst size in cells. Range: 1 through 4000 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• show class-of-service traffic-control-profile

max-queues-per-interface

Syntax	max-queues-per-interface (8 4);
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i>], [edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i>] (Routing Matrix)
Release Information	Statement introduced before Junos OS Release 7.4. Support for TX Matrix and TX Matrix Plus added in Junos OS Release 9.6. On MX Series routers, configure eight egress queues on Trio MPC/MIC interfaces.
Description	On M320, T320, T640 , TX Matrix, and TX Matrix Plus routers, configure eight egress queues on IQ interfaces. On MX Series routers, configure eight egress queues on Trio MPC/MIC interfaces.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring the Junos OS to Support Eight Queues on IQ Interfaces for T Series and M320 Routers Configuring Up to 16 Forwarding Classes on page 134 Enabling Eight Queues on ATM Interfaces on page 522 Configuring the Maximum Number of Queues for Trio MPC/MIC Interfaces on page 460

member-link-scheduler

Syntax	<code>member-link-scheduler (replicate scale);</code>
Hierarchy Level	[edit class-of-service interfaces], [edit logical-systems <i>logical-system-name</i> class-of-service interfaces <i>interface-name</i>], [edit routing-instances <i>routing-instance-name</i> class-of-service interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Determines whether scheduler parameters for aggregated interface member links are applied in a replicated or scaled manner.
Default	By default, scheduler parameters are scaled (in “equal division mode”) among aggregated interface member links.
Options	replicate —Scheduler parameters are copied to each level of the aggregated interface member links. scale —Scheduler parameters are scaled based on number of member links and applied each level of the aggregated interface member links.
Required Privilege Level	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Hierarchical Schedulers for CoS on page 225

mode (Layer 2 Tunneling Protocol Shaping)

Syntax	<code>mode session-shaping;</code>
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager], [edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i> traffic-manager]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Enable shaping on an L2TP session.
Options	session-shaping —Perform shaping instead of policing on this interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530• ingress-shaping-overhead on page 634

multilink-class

Syntax	<code>multilink-class <i>number</i>;</code>
Hierarchy Level	[edit class-of-service fragmentation-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For link services IQ (lsq) interfaces only, map a forwarding class into a multiclass MLPPP (MCML). The multilink-class statement and no-fragmentation statements are mutually exclusive.
Options	<i>number</i> —The multilink class assigned to this forwarding class. Range: 0 through 7 Default: None
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring CoS Fragmentation by Forwarding Class on LSQ Interfaces Configuring Multiclass MLPPP on LSQ Interfaces Configuring Fragmentation by Forwarding Class on page 152 Junos Services Interfaces Configuration Release 11.2 multilink-max-classes on page 306

next-hop (Class-Of-Service)

Syntax	<code>next-hop [<i>next-hop-name</i>];</code>
Hierarchy Level	[edit class-of-service forwarding-policy next-hop-map <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify the next-hop name or address to which to map forwarded traffic.
Options	<i>next-hop-name</i> —Next-hop alias or IP address.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring CoS-Based Forwarding on page 142

next-hop-map

Syntax `next-hop-map map-name {
 forwarding-class class-name {
 next-hop next-hop-name;
 lsp-next-hop [lsp-regular-expression];
 non-lsp-next-hop;
 discard;
 }
 }`

Hierarchy Level [edit class-of-service forwarding-policy]

Release Information Statement introduced before Junos OS Release 7.4.

Description Specify the map for CoS forwarding routes.

Options *map-name*—Map that defines next-hop routes.

Required Privilege interface—To view this statement in the configuration.

Level interface-control—To add this statement to the configuration.

Related Documentation • [Configuring CoS-Based Forwarding on page 142](#)

no-fragmentation

Syntax	no-fragmentation;
Hierarchy Level	[edit class-of-service fragmentation-maps forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For link services IQ (lsq) interfaces only, set traffic on a particular forwarding class to be interleaved, rather than fragmented. This statement specifies that no extra fragmentation header is prepended to the packets received on this queue and that static-link load balancing is used to ensure in-order packet delivery.</p> <p>Static-link load balancing is done based on packet payload. For IP version 4 (IPv4) and IP version 6 (IPv6) traffic, the link is chosen based on a hash computed from the source address, destination address, and protocol. If the IP payload is Transmission Control Protocol (TCP) or User Datagram Protocol (UDP) traffic, the hash also includes source port and destination port. For MPLS traffic, the hash includes all MPLS labels and fields in the payload, whether the MPLS payload is IPv4 or IPv6.</p>
Default	If you do not include this statement, the traffic in forwarding class <i>class-name</i> is fragmented.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring CoS Fragmentation by Forwarding Class on LSQ Interfaces

non-lsp-next-hop

Syntax	non-lsp-next-hop;
Hierarchy Level	[edit class-of-service forwarding-policy next-hop-map <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 9.0.
Description	Use a non-LSP next hop for traffic sent to this forwarding class next-hop map of this forwarding policy.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring CoS-Based Forwarding on page 142

no-per-unit-scheduler

Syntax	no-per-unit-scheduler;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 11.4.
Description	To enable traffic control profiles to be applied at FRF.16 bundle (physical) interface level, disable the per-unit scheduler, which is enabled by default. This statement and the shared-scheduler statement are mutually exclusive.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Oversubscribing Interface Bandwidth on page 199

output-forwarding-class-map

Syntax	output-forwarding-class-map <i>forwarding-class-map-name</i> ;
Hierarchy Level	[edit class-of-service forwarding-classes-interface-specific]
Release Information	Statement introduced in Junos OS Release 9.6.
Description	Apply a configured forwarding class map to a logical interface.
Options	<i>forwarding-class-map-name</i> —Name of a forwarding class mapping configured at the [edit class-of-service forwarding-classes-interface-specific] hierarchy level.
Required Privilege Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Classifying Packets by Egress Interface on page 129• forwarding-classes-interface-specific on page 612

output-policer

Syntax	<code>output-policer <i>policer-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Apply a single-rate two-color policer to the Layer 2 output traffic at the logical interface. The output-policer and output-three-color statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate two-color policer that you define at the [edit firewall] hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Two-Color and Three-Color Policers at Layer 2 Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112 Configuring a Gigabit Ethernet Policer input-policer on page 636 input-three-color on page 640 layer2-policer on page 648 logical-interface-policer on page 651 output-three-color on page 668

output-three-color

Syntax	<code>output-three-color <i>policer-name</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> layer2-policer]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Apply a single-rate or two-rate three-color policer to the Layer 2 output traffic at the logical interface. The output-three-color and output-policer statements are mutually exclusive.
Options	<i>policer-name</i> —Name of the single-rate or two-rate three-color policer.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Two-Color and Three-Color Policers at Layer 2• Applying Layer 2 Policers to Gigabit Ethernet Interfaces on page 112• Configuring a Gigabit Ethernet Policer• input-three-color on page 640• input-policer on page 636• layer2-policer on page 648• logical-interface-policer on page 651• output-policer on page 667

output-traffic-control-profile

Syntax	<code>output-traffic-control-profile <i>profile-name</i> shared-instance <i>instance-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit class-of-service interfaces <i>interface-name</i> interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6. interface-set option added for Enhanced Queuing DPCs on MX Series routers in Junos OS Release 8.5. interface-set option added for MPC/MIC interfaces on MX Series routers in Junos OS Release 10.2.
Description	For Channelized IQ PICs, Gigabit Ethernet IQ, Gigabit Ethernet IQ2, and IQ2E PICs, link services IQ (LSQ) interfaces on AS PICs, and Enhanced Queuing DPCs and MPC/MIC interfaces on MX Series routers, apply an output traffic scheduling and shaping profile to the logical interface. The shared-instance statement is supported on Gigabit Ethernet IQ2 PICs only.
Options	<i>profile-name</i> —Name of the traffic-control profile to be applied to this interface
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Oversubscribing Interface Bandwidth on page 199 • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • Example: Configuring CoS for a PBB Network on MX Series Routers • Configuring Hierarchical Schedulers for CoS on page 225 (Enhanced Queuing DPCs and MPC/MIC interfaces on MX Series routers) • Configuring Interface Sets on page 226 (Enhanced Queuing DPCs and MPC/MIC interfaces on MX Series routers) • output-traffic-control-profile-remaining on page 670 • traffic-control-profiles on page 729


output-traffic-control-profile-remaining

Syntax	<code>output-traffic-control-profile-remaining <i>profile-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces <i>interface-name</i> interface-set <i>interface-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.5.
Description	<p>For MPC/MIC interfaces and Enhanced Queuing DPCs on MX Series routers and IQ2E PIC on M Series and T Series routers, apply an output traffic scheduling and shaping profile for remaining traffic to the logical interface or interface set. The remaining traffic is transmitted by the default interface or interface set.</p> <p>You can map the TCP to the interface or interface set by using the output-traffic-control-profile-remaining statement to explicitly configure the queues of the default interface or interface set scheduler that transmits the remaining traffic.</p>
Options	<i>profile-name</i> —Name of the traffic-control profile for remaining traffic to be applied to this interface or interface set.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Hierarchical Schedulers for CoS on page 225• Configuring Remaining Common Queues on MIC and MPC Interfaces on page 460• output-traffic-control-profile on page 669

peak-rate

Syntax	<code>peak-rate <i>rate</i>;</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(MX Series routers) Define ATM peak cell rate on ATM MICs in cells per second by entering a decimal number followed by the abbreviation c; where 1 cps = 384 bps.
Options	<i>rate</i> —ATM peak rate in cells per second. Range: 61 cps through 353,206 cps.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• show class-of-service traffic-control-profile



overhead-accounting

Syntax	overhead-accounting (frame-mode cell-mode) <bytes <i>byte-value</i> >;
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 10.2.
Description	Configure the mode to shape downstream ATM traffic based on either frames or cells.
Default	The default is frame-mode .
Options	<p>byte-value—Byte adjustment value for frame or cell shaping mode. Range: –120 through 124 bytes</p> <p>cell-mode—Shaping based on the number of bytes in cells, and accounts for the ATM cell encapsulation and padding overhead. The resulting traffic stream conforms to the policing rates configured in downstream ATM switches, reducing the number of packet drops in the Ethernet network</p>
	<div>  <p>NOTE: Cell mode is supported only on logical interfaces and interface sets. It is not supported on physical interfaces (ifd or ifd-remaining).</p> </div>
	<p>frame-mode—Shaping based on the number of bytes in the frame, without regard to cell encapsulation or padding overhead.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Static Shaping Parameters to Account for Overhead in Downstream Traffic Rates on page 482 • Bandwidth Management for Downstream Traffic in Edge Networks Overview on page 480 • egress-shaping-overhead on page 589

per-session-scheduler

Syntax	per-session-scheduler;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Enable session-aware CoS shaping on this L2TP interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS for L2TP Tunnels on ATM Interfaces on page 530• ingress-shaping-overhead on page 634• mode (Layer 2 Tunneling Protocol Shaping) on page 662

per-unit-scheduler

Syntax	per-unit-scheduler;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For channelized OC3 IQ, channelized OC12 IQ, channelized STM1 IQ, channelized T3 IQ, channelized E1 IQ, E3 IQ, link services IQ interfaces (lsq-), link services (ls-) on J Series routers, Gigabit Ethernet IQ, Gigabit Ethernet IQ2 and IQ2-E, and 10-Gigabit Ethernet interfaces only, enable association of scheduler map names with logical interfaces.
	<div>  <p>NOTE: Per-unit scheduling is not supported on T1 interfaces configured on the Channelized OC12 IQ PIC.</p> </div>
	<div>  <p>NOTE: On Gigabit Ethernet IQ2 and IQ2-E PICs without the per-unit-scheduler statement, the entire PIC supports 4071 VLANs and the user can configure all the VLANs on the same port.</p> <p>On Gigabit Ethernet IQ2 and IQ2-E PICs with the per-unit-scheduler statement, the entire PIC supports $1024 - 2 * \text{number of ports}$ (1024 minus two times the number of ports), because each port is allocated two default schedulers.</p> </div>
	<p>When including the per-unit-scheduler statement for interfaces on the IQ2 and IQ2-E PIC, you must also include the vlan-tagging statement at the [edit interfaces <i>interface-name</i>] hierarchy level.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> vlan-tagging

plp-copy-all

Syntax	plp-copy-all;
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 10.3
Description	On T Series routers with different Packet Forwarding Engines (non-Enhanced Scaling and Enhanced Scaling FPCs), enables PLP bit copying for ingress and egress unicast and multicast traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Packet Loss Priority Configuration Overview on page 256• Setting Packet Loss Priority on page 64

plp-to-clp

Syntax	plp-to-clp;
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, enable the PLP setting to be copied to the cell-loss priority (CLP) bit.
Default	If you omit this statement, the Junos OS does not copy the PLP setting to the CLP bit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Enabling the PLP Setting to Be Copied to the CLP Bit• Copying the PLP Setting to the CLP Bit on ATM Interfaces on page 528

policer

See the following sections:

- [policer \(Applying to an Interface\) on page 675](#)
- [policer \(Configuring\) on page 676](#)

policer (Applying to an Interface)

Syntax	<pre> policer { input <i>policer-name</i>; output <i>policer-name</i>; } </pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a rate policer to an interface.
Options	<p>input <i>policer-name</i>—Name of one policer to evaluate when packets are received on the interface.</p> <p>output <i>policer-name</i>—Name of one policer to evaluate when packets are transmitted on the interface.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Multifield Classification • Using Multifield Classifiers to Set PLP on page 113 • Default Schedulers Overview on page 159 • simple-filter

policer (Configuring)

Syntax	<pre>policer <i>policer-name</i> { filter-specific; if-exceeding { bandwidth-limit <i>bps</i>; bandwidth-percent <i>number</i>; burst-size-limit <i>bytes</i>; } logical-bandwidth-policer; logical-interface-policer; physical-interface-policer; shared-bandwidth-policer; then { <i>policer-action</i>; } }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> firewall], [edit firewall], [edit logical-systems <i>logical-system-name</i> firewall]
Release Information	Statement introduced before Junos OS Release 7.4. The out-of-profile policer action added in Junos OS Release 8.1. The logical-bandwidth-policer statement added in Junos OS Release 8.2. Logical systems support introduced in Junos OS Release 9.3. The physical-interface-policer statement introduced in Junos OS Release 9.6. The shared-bandwidth-policer statement added in Junos OS Release 11.2 Support at the [edit dynamic-profiles ... firewall] hierarchy level introduced in Junos OS Release 11.4.
Description	Configure policer rate limits and actions. When included at the [edit firewall] hierarchy level, the policer statement creates a template, and you do not have to configure a policer individually for every firewall filter or interface. To activate a policer, you must include the policer-action modifier in the then statement in a firewall filter term or on an interface.
Options	<p><i>policer-action</i>—One or more actions to take:</p> <ul style="list-style-type: none">• discard—Discard traffic that exceeds the rate limits.• forwarding-class <i>class-name</i>—Specify the particular forwarding class.• loss-priority—Set the packet loss priority (PLP) to low, medium-low, medium-high, or high.• out-of-profile—On J Series routers with strict priority queuing, prevent starvation of other queues by rate limiting the data stream entering the strict priority queue, marking the packets that exceed the rate limit as out-of-profile, and dropping the out-of-profile packets if the physical interface is congested. <p><i>policer-name</i>—Name that identifies the policer. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the</p>

name, enclose it in quotation marks (" "). Policer names cannot begin with an underscore in the form `_*`.

then—Actions to take on matching packets.

The remaining statements are explained separately.

Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
---------------------------------	---

Related Documentation	<ul style="list-style-type: none">• Bandwidth Policer Overview• Configuring Multifield Classifiers on page 76• Logical Interface (Aggregate) Policer Overview• Physical Interface Policer Overview• Statement Hierarchy for Configuring Policers• Single-Rate Two-Color Policer Overview• Using Multifield Classifiers to Set PLP on page 113• filter (Configuring) on page 604• priority (Schedulers) on page 682
------------------------------	--

policing-action

Syntax	<code>policing-action (discard discard-tag count);</code>
Hierarchy Level	<code>[edit firewall atm-policer <i>policer-name</i>]</code>
Release Information	Statement introduced in Junos OS Release 12.1.
Description	<p>Configure the policing action to be taken when the traffic exceeds the limits set for the policer.</p> <p>This action is associated with the ATM policer only if policing is enabled on the ATM interface.</p>
Options	<p>discard—Discard traffic at ingress that exceeds the rate limit. These packets are discarded but not counted.</p> <p>discard-tag—Discard and tag packets at ingress that exceed the rate limit. These packets are discarded and counted.</p> <p>count—Count all the packets that are received at ingress.</p>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• show class-of-service traffic-control-profile

priority

See the following sections:

- [priority \(ATM2 IQ Schedulers\) on page 679](#)
- [priority \(Fabric Queues, Schedulers\) on page 680](#)
- [priority \(Fabric Priority\) on page 681](#)
- [priority \(Schedulers\) on page 682](#)

priority (ATM2 IQ Schedulers)

Syntax	<code>priority (high low);</code>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign queuing priority to a forwarding class.
Options	<p>low—Forwarding class has low priority.</p> <p>high—Forwarding class has high priority.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Scheduler Maps on ATM Interfaces on page 520


priority (Fabric Queues, Schedulers)

Syntax	<code>priority (high low)scheduler scheduler-name;</code>
Hierarchy Level	[edit class-of-service fabric scheduler-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	<p>Define Fabric traffic priority. For M320, MX Series, and T Series routers only, specify the fabric priority with which a scheduler is associated.</p> <p>For a scheduler that you associate with a fabric priority, you cannot include the buffer-size, transmit-rate, or priority statements at the [edit class-of-service schedulers scheduler-name] hierarchy level.</p> <p>On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.</p>
Options	<p>high—Scheduler has high priority.</p> <p>low—Scheduler has low priority.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• See Associating Schedulers with Fabric Priorities on page 217.• Understanding Junos OS CoS Components for EX Series Switches

priority (Fabric Priority)

Syntax	priority (high low);
Hierarchy Level	[edit class-of-service forwarding-classes class <i>class-name</i> queue-num <i>queue-number</i>], [edit class-of-service forwarding-classes queue <i>queue-number</i> class-name]
Release Information	Statement introduced before Junos OS Release 7.4. [edit class-of-service forwarding-classes class <i>class-name</i> queue-num <i>queue-number</i>] hierarchy level added in Junos OS Release 8.1.
Description	For M320 routers, MX Series routers, and T Series routers only, specify a fabric priority value. The two hierarchy levels are mutually exclusive. To configure up to eight forwarding classes with one-to-one mapping between forwarding classes and output queues, include this statement at the [edit class-of-service forwarding-classes queue <i>queue-number</i> class-name] hierarchy level. To configure up to 16 forwarding classes with multiple forwarding classes mapped to single queues, include this statement at the [edit class-of-service forwarding-classes class <i>class-name</i> queue-num <i>queue-number</i>] hierarchy level.
Options	low —Forwarding class's fabric queuing has low priority. high —Forwarding class's fabric queuing has high priority.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Overriding Fabric Priority Queuing on page 133 • Configuring Up to 16 Forwarding Classes on page 134

priority (Schedulers)

Syntax	<code>priority <i>priority-level</i>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify the packet-scheduling priority value.
Options	<p><i>priority-level</i> can be one of the following:</p> <ul style="list-style-type: none">• low—Scheduler has low priority.• medium-low—Scheduler has medium-low priority.• medium-high—Scheduler has medium-high priority.• high—Scheduler has high priority. Assigning high priority to a queue prevents the queue from being underserved.• strict-high—Scheduler has strictly high priority. Configure a high priority queue with unlimited transmission bandwidth available to it. As long as it has traffic to send, the strict-high priority queue receives precedence over low, medium-low, and medium-high priority queues, but not high priority queues. You can configure strict-high priority on only one queue per interface.
<div> NOTE: The strict-high priority level is the only priority level supported on ACX Series Routers. However, multiple strict-high priority queues can be configured per interface on ACX Series Routers.</div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Schedulers for Priority Scheduling on page 177

protocol

See the following sections:

- [protocol \(Rewrite Rules\) on page 683](#)
- [protocol \(Schedulers\) on page 684](#)

protocol (Rewrite Rules)

Syntax	<code>protocol</code> <i>protocol-types</i> ;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules exp <i>rewrite-name</i>], [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules dscp <i>rewrite-name</i>], [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules inet-prec <i>rewrite-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Option for dscp and inet-prec introduced in Junos OS Release 8.4.
Description	Apply a rewrite rule to MPLS packets only, and write the CoS value to MPLS headers only; or apply a rewrite rule to MPLS and IPv4 packets, and write the CoS value to MPLS and IPv4 headers.
Options	<i>protocol-types</i> can be one of the following: <ul style="list-style-type: none"> • mpls—Apply a rewrite rule to MPLS packets and write the CoS value to MPLS headers. • mpls-inet-both—Apply a rewrite rule to VPN MPLS packets with IPv4 payloads. On M120, M320, MX Series, and T Series routers (except T4000 routers), write the CoS value to the MPLS and IPv4 headers. On M Series routers, initialize all ingress MPLS LSP packets with IPv4 payloads with 000 code points for the MPLS EXP value, and the configured rewrite code point for IP precedence. • mpls-inet-both-non-vpn—Apply a rewrite rule to non-VPN MPLS packets with IPv4 payloads. On M120, M320, MX Series, and T Series routers, write the CoS value to the MPLS and IPv4 headers. On M Series routers, initialize all ingress MPLS LSP packets with IPv4 payloads with 000 code points for the MPLS EXP value, and the configured rewrite code point for IP precedence.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Rewriting MPLS and IPv4 Packet Headers on page 275

protocol (Schedulers)

Syntax	protocol (any non-tcp tcp);
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i> drop-profile-map]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Specify the protocol type for the specified scheduler.
Options	any —Accept any protocol type. non-tcp —(ACX Series Routers, M Series and T Series (except T4000) routers only) Accept any protocol type other than TCP/IP.



.....
NOTE: On ACX Series Routers, when you configure the non-tcp option, only the any option is supported for [loss-priority](#).
.....

	tcp —(ACX Series Routers, M Series and T Series (except T4000) routers only) Accept TCP/IP protocol type.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Schedulers on page 160

q-pic-large-buffer

Syntax	<code>q-pic-large-buffer (large-scale small-scale);</code>
Hierarchy Level	<code>[edit chassis fpc slot-number pic pic-number]</code> <code>[edit chassis lcc number fpc slot-number pic pic-number (Routing Matrix)]</code>
Release Information	Statement introduced in Junos OS Release 7.4. Support for TX Matrix and TX Matrix Plus hierarchy added in Junos OS Release 9.6.
Description	Configure delay buffers.



NOTE: When you commit the configuration after including the `q-pic-large-buffer` statement for a PIC, the Junos OS temporarily takes the PIC offline and brings it back online before the new configuration is activated and becomes the current operational configuration.

Default `small-scale`

Options `large-scale`—(Optional) Set the average packet size used to calculate the number of notification queue entries in the IQ PIC to 256 bytes. Useful for slower interfaces (T1, E1, and NxDS0 interfaces configured on Channelized IQ PICs and Gigabit Ethernet VLANs configured on Gigabit Ethernet IQ PICs).

`small-scale`—(Optional) Set the average packet size used to calculate the number of notification queue entries in the IQ PIC to 40 bytes.



NOTE: You cannot configure the `large-scale` and the `small-scale` options on MX Series routers. Include only the `q-pic-large-buffer` statement to enable the large delay buffer size on Enhanced Queuing DPCs on MX Series routers.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- Configuring the Junos OS to Enable Larger Delay Buffers for T1, E1, and DS0 Interfaces Configured on Channelized IQ PICs
- [Configuring Schedulers on page 160](#)

queue

See the following sections:

- [queue \(Global Queues\) on page 686](#)
- [queue \(Restricted Queues\) on page 687](#)

queue (Global Queues)

Syntax	<code>queue <i>queue-number</i> <i>class-name</i>;</code>
Hierarchy Level	[edit class-of-service forwarding-classes]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Specify the output transmission queue to which to map all input from an associated forwarding class.</p> <p>On M120, M320, MX Series, and T Series routers, this statement enables you to configure up to eight forwarding classes with one-to-one mapping to output queues. If you want to configure up to 16 forwarding classes with multiple forwarding classes mapped to single output queues, include the class statement instead of the queue statement at the [edit class-of-service forwarding-classes] hierarchy level.</p>
Options	<p><i>class-name</i>—Name of forwarding class.</p> <p><i>queue-number</i>—Output queue number.</p> <p>Range: For M Series routers, 0 through 3. For M120, M320, MX Series, and T Series routers, 0 through 7. Some T Series router PICs are restricted to 0 through 3.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Forwarding Classes on page 128• class (Forwarding Classes) on page 566


queue (Restricted Queues)

Syntax	<code>queue <i>queue-number</i>;</code>
Hierarchy Level	[edit class-of-service restricted-queues forwarding-class <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For M320, MX Series, and T Series routers only, map forwarding classes to restricted queues.
Options	<i>queue-number</i> —Output queue number. Range: 0 through 3.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

queue-depth

Syntax	<code>queue-depth <i>cells</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options linear-red-profiles <i>profile-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define maximum queue depth in the CoS VC drop profile. Packets are always dropped beyond the defined maximum. This statement is mandatory; there is no default configuration.
Default	Buffer usage is unregulated.
Options	<i>cells</i> —Maximum number of cells the queue can contain. Range: 1 through 64,000 cells
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> Configuring ATM2 IQ VC Tunnel CoS Components Configuring Linear RED Profiles on ATM Interfaces on page 516 high-plp-threshold low-plp-threshold on page 659

red-buffer-occupancy

Syntax	<pre>red-buffer-occupancy { weighted-averaged [instant-usage-weight-exponent <i>exponent-value</i>]; }</pre>
Hierarchy Level	<pre>[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i>], [edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i>]</pre>
Release Information	Statement introduced in Junos OS Release 8.3.
Description	<p>Configure the IQ PIC to base random early detection (RED) queue management on a <i>simple moving average</i> buffer occupancy calculation. If you do not include this statement, the IQ PIC bases RED on an <i>instantaneous</i> buffer occupancy value. As an option, you can specify that the IQ PIC bases RED on a <i>weighted moving average</i> of buffer occupancy values.</p>
Options	<p>weighted-averaged—Configure the IQ PIC to base RED processing on a simple moving average of instantaneous buffer occupancy values instead of an instantaneous buffer occupancy.</p> <p>instant-usage-weight-exponent <i>exponent-value</i>—(Optional) Specify the integer to be used as the negative exponent of 2 to express a weight value. The PIC performs weighted RED (WRED) by based on a calculation of average buffer occupancy that applies the specified weight value to the instantaneous buffer occupancy and then factors the weighted value into the calculation of average buffer occupancy. Valid exponent range is from 1 through 31 (weight values from 2^{-1} through 2^{-31}). If you do not specify this option, the default exponent value is 0, which results in a weight value of $2^0 = 1$. With a weight value of 1, the calculation of weighted average buffer occupancy yields the same value as the simple average buffer occupancy.</p>
<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p>NOTE: You can specify an exponent value greater than 31, and the value displays in the output of show commands. However, the PIC replaces the out-of-range value with the <i>operational</i> value of 31, which results in a weight value of $2^{-31} = 1 / 2^{31} = 0.0000000004656612873077392578125$.</p> </div> </div>	
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Weighted RED Buffer Occupancy on page 258 • Example: Configuring Weighted RED Buffer Occupancy on page 259

(reflexive | reverse)

Syntax	(reflexive reverse) { application-profile <i>profile-name</i> ; dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i> ; syslog ; }
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> then]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	<p>reflexive—Applies the equivalent opposing CoS action to flows in the opposite direction.</p> <p>reverse—Allows you to define CoS behavior for flows in the reverse direction.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring CoS Rules on page 318 • Configuring Reflexive and Reverse CoS Rule Actions

restricted-queues

Syntax	restricted-queues { forwarding-class <i>class-name</i> queue <i>queue-number</i> ; }
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For M320, MX Series, and T Series routers only, map forwarding classes to restricted queues.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

rewrite-rules

See the following sections:

- [rewrite-rules \(Definition\) on page 690](#)
- [rewrite-rules \(Interfaces\) on page 691](#)
- [rewrite-rules \(Physical Interfaces\) on page 692](#)

rewrite-rules (Definition)

Syntax

```
rewrite-rules {  
  type rewrite-name {  
    import (rewrite-name | default);  
    forwarding-class class-name {  
      loss-priority level code-point [ aliases ] [ bit-patterns ];  
    }  
  }  
}
```

Hierarchy Level [edit class-of-service]

Release Information Statement introduced before Junos OS Release 7.4.
ieee-802.1ad option introduced in Junos OS Release 9.2.

Description Specify a rewrite-rules mapping for the traffic that passes through all queues on the interface.

Options *rewrite-name*—Name of a rewrite-rules mapping.

type—Traffic type.
Values: dscp, dscp-ipv6, exp, frame-relay-de (J Series routers only), ieee-802.1, ieee-802.1ad, inet-precedence

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Rewrite Rules on page 264](#)
- Example: Configuring CoS for a PBB Network on MX Series Routers
- J Series router documentation

rewrite-rules (Interfaces)

Syntax	<pre>rewrite-rules { dscp (rewrite-name default); dscp-ipv6 (rewrite-name default); exp (rewrite-name default) protocol protocol-types; exp-push-push-push default; exp-swap-push-push default; ieee-802.1 (rewrite-name default) vlan-tag (outer outer-and-inner); ieee-802.1ad (rewrite-name default) vlan-tag (outer outer-and-inner); inet-precedence (rewrite-name default); }</pre>
Hierarchy Level	<p>[edit class-of-service interfaces <i>interface-name</i>],</p> <p>[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>Associate a rewrite-rules configuration or default mapping with a specific interface.</p> <p>The [edit class-of-service interfaces <i>interface-name</i>] hierarchy level is not supported on M Series routers.</p> <p>The [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level is not supported on ACX Series routers.</p> <p>On an MX Series router, exp-push-push-push, exp-swap-push-push, and frame-relay-de are not supported on an integrated routing and bridging (IRB) interface.</p> <p>On an ACX Series router, only the outer tag is supported for dscp, inet-precedence, and ieee802.1.</p>
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules] hierarchy level.</p> <p>default—The default mapping.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Rewrite Rules on page 264

rewrite-rules (Physical Interfaces)

Syntax	<pre>rewrite-rules { dscp (rewrite-name default); ieee-802.1 (rewrite-name default); inet-precedence (rewrite-name default); }</pre>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.
Description	Associate a rewrite-rules configuration or default mapping with a specific interface.
Options	<p>rewrite-name—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules] hierarchy level.</p> <p>default—The default mapping.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

rewrite-rules (CoS Host Outbound Traffic)

Syntax	<pre>rewrite-rules;</pre>
Hierarchy Level	[edit class-of-service host-outbound-traffic ieee-802.1]
Release Information	Statement introduced in Junos OS Release 12.3.
Description	Apply the IEEE 802.1p rewrite rules associated with the egress logical interface to the IEEE 802.1p PCP field for all host outbound traffic on that interface.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface on page 283• Rewriting Packet Header Information Overview on page 262• Configuring Rewrite Rules on page 264

routing-instances (Class of Service)

Syntax	<pre> routing-instances <i>routing-instance-name</i> { classifiers { dscp (<i>classifier-name</i> default); dscp-ipv6 (<i>classifier-name</i> default); exp (<i>classifier-name</i> default); } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For routing instances with VRF table labels enabled, apply a custom MPLS EXP classifier or DSCP classifier to the routing instance. You can apply the default MPLS EXP classifier or one that is previously defined.
Default	If you do not include this statement, the default MPLS EXP classifier is applied to the routing instance. When no DSCP classifier is configured, the default MPLS EXP classifier is applied.
Options	<p><i>routing-instance-name</i>—Name of a routing instance.</p> <p><i>classifier-name</i>—Name of the behavior aggregate MPLS EXP classifier or DSCP classifier.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Forwarding Classes on page 128 • Applying Custom MPLS EXP Classifiers to Routing Instances in Layer 3 VPNs

rtvbr

Syntax	<code>rtvbr peak rate sustained rate burst length;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM2 IQ PICs only, define the real-time variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the real-time bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps.</p>
Default	If the rtvbr statement is not included, bandwidth utilization is unlimited.
Options	<p>burst length—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak rate—Peak rate, in bits per second or cells per second. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure..</p> <p>sustained rate—Sustained rate, in bps or cps. Range: For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring ATM CBR Configuring ATM2 IQ Real-Time VBR Applying Scheduler Maps to Logical ATM Interfaces on page 528

- [cbr on page 563](#)
- [vbr on page 738](#)

rule

Syntax	<pre> rule <i>rule-name</i> { match-direction (input output input-output); term <i>term-name</i> { from { applications [<i>application-names</i>]; application-sets [<i>set-names</i>]; destination-address (CoS) <i>address</i>; source-address <i>address</i>; } then { application-profile <i>profile-name</i>; dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; syslog; (reflexive reverse) { application-profile <i>profile-name</i>; dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; syslog; } } } } </pre>
Hierarchy Level	[edit services cos], [edit services cos rule-set <i>rule-set-name</i>]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Specify the rule the router uses when applying this service.
Options	<p><i>rule-name</i>—Identifier for the collection of terms that constitute this rule.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring CoS Rules on page 318

rule-set (Services CoS)

Syntax	<code>rule-set <i>rule-set-name</i> { [rule <i>rule-name</i>]; }</code>
Hierarchy Level	[edit services cos]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Specify the rule set the router uses when applying this service.
Options	<i>rule-set-name</i> —Identifier for the collection of rules that constitute this rule set.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS Rule Sets on page 323

scheduler

See the following sections:

- [scheduler \(Fabric Queues\) on page 697](#)
- [scheduler \(Scheduler Map\) on page 697](#)

scheduler (Fabric Queues)

Syntax	<code>scheduler <i>scheduler-name</i>;</code>
Hierarchy Level	[edit class-of-service fabric scheduler-map <i>priority</i> (high low)]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	Define scheduler name. For M320, MX Series, and T Series routers only, specify a scheduler to associate with a fabric queue. For fabric CoS configuration, schedulers are restricted to transmit rates and drop profiles.
Options	<i>scheduler-name</i> —Name of the scheduler configuration block.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • See Associating Schedulers with Fabric Priorities on page 217. • Understanding Junos OS CoS Components for EX Series Switches

scheduler (Scheduler Map)

Syntax	<code>scheduler <i>scheduler-name</i>;</code>
Hierarchy Level	[edit class-of-service scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	Associate a scheduler with a scheduler map.
Options	<i>scheduler-name</i> —Name of the scheduler configuration block.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Schedulers on page 160 • Example: Configuring CoS for a PBB Network on MX Series Routers

scheduler-map

See the following sections:

- [scheduler-map \(Fabric Queues\) on page 698](#)
- [scheduler-map \(Interfaces and Traffic-Control Profiles\) on page 699](#)

scheduler-map (Fabric Queues)

Syntax	<code>scheduler-map</code> priority (high low) scheduler <i>scheduler-name</i> ;
Hierarchy Level	[edit class-of-service fabric]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced before Junos OS 11.4 for EX Series switches.
Description	<p>Mapping of fabric traffic to packet schedulers. For M320, MX Series, and T Series routers only, associate a scheduler with a fabric priority.</p> <p>On EX Series switches, this statement is supported only on EX8200 standalone switches and EX8200 Virtual Chassis.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• See Associating Schedulers with Fabric Priorities on page 217.• Understanding Junos OS CoS Components for EX Series Switches

scheduler-map (Interfaces and Traffic-Control Profiles)

Syntax	<code>scheduler-map <i>map-name</i>;</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i>], [edit class-of-service interfaces <i>interface-name</i> <i>unit logical-unit-number</i>], [edit class-of-service traffic-control-profiles]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For Gigabit Ethernet IQ, Channelized IQ PICs, and FRF.15 and FRF.16 LSQ interfaces only, associate a scheduler map name with an interface or with a traffic-control profile.</p> <p>For channelized OC12 intelligent queuing (IQ), channelized T3 IQ, channelized E1 IQ, and Gigabit Ethernet IQ interfaces only, you can associate a scheduler map name with a logical interface.</p>
Options	<i>map-name</i> —Name of the scheduler map.
Required Privilege Level	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Schedulers on page 160• Oversubscribing Interface Bandwidth on page 199• output-traffic-control-profile on page 669

scheduler-map-chassis

Syntax	<code>scheduler-map-chassis (derived <i>map-name</i>);</code>
Hierarchy Level	[edit class-of-service interfaces <i>interface-type-fpc/pic/*</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For IQ and IQ2 interfaces, assign a custom scheduler to the packet forwarding component queues that control the aggregated traffic transmitted into the entire PIC.
Default	On Intelligent Queuing (IQ) and Intelligent Queuing 2 (IQ2) interfaces, the traffic that is fed from the packet forwarding components into the PIC uses low packet loss priority (PLP) by default and is distributed evenly across the four chassis queues (not PIC queues), regardless of the scheduling configuration for each logical interface. This default behavior can cause traffic congestion.
Options	derived —Sets the chassis queues to derive their scheduling configuration from the associated logical interface scheduling configuration. <i>map-name</i> —Name of the scheduler map configured at the [edit class-of-service scheduler-maps] hierarchy level.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Applying Scheduler Maps to Packet Forwarding Component Queues on page 211• scheduler-map (Fabric Queues) on page 698

scheduler-maps

See the following sections:

- [scheduler-maps \(For ATM2 IQ Interfaces\) on page 701](#)
- [scheduler-maps \(For Most Interface Types\) on page 702](#)

scheduler-maps (For ATM2 IQ Interfaces)

Syntax	<pre> scheduler-maps <i>map-name</i> { forwarding-class (<i>class-name</i> assured-forwarding best-effort expedited-forwarding network-control); vc-cos-mode (alternate strict); }</pre>
Hierarchy Level	[edit interfaces at- <i>fpc/pic/port</i> atm-options]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, define CoS parameters assigned to forwarding classes.
Options	<p><i>map-name</i>—Name of the scheduler map.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Scheduler Maps on ATM Interfaces on page 520 • atm-scheduler-map on page 561

scheduler-maps (For Most Interface Types)

Syntax	<pre>scheduler-maps { map-name { forwarding-class class-name scheduler scheduler-name; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Specify a scheduler map name and associate it with the scheduler configuration and forwarding class.
Options	<p><i>map-name</i>—Name of the scheduler map.</p> <p>The remaining statements are explained separately.</p> <p>See “Configuring Schedulers” on page 160 and Example: Configuring CoS for a PBB Network on MX Series Routers.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

schedulers

See the following sections:

- [schedulers \(Class of Service\) on page 703](#)
- [schedulers \(Interfaces\) on page 704](#)

schedulers (Class of Service)

Syntax	<pre> schedulers { scheduler-name { adjust-minimum <i>rate</i>; adjust-percent <i>percentage</i>; buffer-size (<i>seconds</i> percent <i>percentage</i> remainder temporal <i>microseconds</i>); drop-profile-map <i>loss-priority</i> (any low medium-low medium-high high) <i>protocol</i> (any non-tcp tcp) <i>drop-profile profile-name</i>; excess-priority [low medium-low medium-high high none]; excess-rate (percent <i>percentage</i> proportion <i>value</i>); priority <i>priority-level</i>; shaping-rate (percent <i>percentage</i> <i>rate</i>); transmit-rate (percent <i>percentage</i> <i>rate</i> remainder) <exact rate-limit>; } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series switches.
Description	Specify the scheduler name and parameter values.
Options	<p><i>scheduler-name</i>—Name of the scheduler to be configured.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Schedulers Overview on page 158 • Default Schedulers Overview on page 159 • Configuring Schedulers on page 160 • Configuring a Scheduler • Example: Configuring CoS for a PBB Network on MX Series Routers

schedulers (Interfaces)

Syntax	<code>schedulers <i>number</i>;</code>
Hierarchy Level	[edit interfaces]
Release Information	Statement introduced in Junos OS Release 8.2.
Description	Specify number of schedulers for Ethernet IQ2 PIC port interfaces.
Default	If you omit this statement, the 1024 schedulers are distributed equally over all ports in multiples of 4.
Options	<i>number</i> —Number of schedulers to configure on the port. Range: 1 through 1024
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring the Number of Schedulers for Ethernet IQ2 PICs on page 218

services (Class-Of-Service)

Syntax	<code>services cos { ... }</code>
Hierarchy Level	[edit]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Define the service rules to be applied to traffic.
Options	<i>cos</i> —Identifies the class-of-service set of rules statements.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring CoS Rule Sets on page 323

shaping

Syntax	<pre>shaping { (cbr rate rtvbr peak rate sustained rate burst length vbr peak rate sustained rate burst length); queue-length number; }</pre>
Hierarchy Level	<pre>[edit interfaces interface-name atm-options vpi vpi-identifier], [edit interfaces interface-name unit logical-unit-number], [edit interfaces interface-name unit logical-unit-number address address family family multipoint-destination address], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number address address family family multipoint-destination address]</pre>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the traffic-shaping profile.</p> <p>For Circuit Emulation PICs, specify traffic shaping in the ingress and egress directions.</p> <p>For ATM2 IQ interfaces, changing or deleting VP tunnel traffic shaping causes all logical interfaces on a VP to be deleted and then re-added.</p> <p>VP tunnels are not supported on multipoint interfaces.</p> <p>The statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Defining Virtual Path Tunnels Defining the ATM Traffic-Shaping Profile Configuring ATM QoS or Shaping Applying Scheduler Maps to Logical ATM Interfaces on page 528

shaping-rate

See the following sections:

- [shaping-rate \(Applying to an Interface\) on page 707](#)
- [shaping-rate \(Limiting Excess Bandwidth Usage\) on page 709](#)
- [shaping-rate \(Oversubscribing an Interface\) on page 710](#)

shaping-rate (Applying to an Interface)

Syntax `shaping-rate rate;`

Hierarchy Level `[edit class-of-service interfaces interface-name],`
`[edit class-of-service interfaces interface-name unit logical-unit-number]`

Release Information Statement introduced before Junos OS Release 7.4.
`[edit class-of-service interfaces interface-name]` hierarchy level added in Junos OS Release 7.5.

Description For logical interfaces on which you configure packet scheduling, configure traffic shaping by specifying the amount of bandwidth to be allocated to the logical interface.

For physical interfaces on IQ PICs and T4000 routers with Type 5 FPCs, configure traffic shaping based on the rate-limited bandwidth of the total interface bandwidth.



NOTE: The `shaping-rate` statement cannot be applied to a physical interface on J Series routers.

Logical and physical interface traffic shaping rates are mutually exclusive. This means you can include the `shaping-rate` statement at the `[edit class-of-service interfaces interface-name]` hierarchy level or the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level, but not both.



NOTE: For MX Series routers, the shaping rate value for the physical interface at the `[edit class-of-service interfaces interface-name]` hierarchy level must be a minimum of 160 Kbps. If the value is less than the sum of the logical interface guaranteed rates, the user is not allowed to apply the shaping rate to a physical interface.

For T4000 routers with Type 5 FPCs, the shaping rate value for the physical interface must be a minimum of 292 Kbps. The maximum value of `shaping-rate` is limited by the maximum transmission rate of the interface.

Alternatively, you can configure a shaping rate for a logical interface and oversubscribe the physical interface by including the `shaping-rate` statement at the `[edit class-of-service traffic-control-profiles]` hierarchy level. With this configuration approach, you can independently control the delay-buffer rate, as described in “[Oversubscribing Interface Bandwidth](#)” on page 199.

For FRF.15 and FRF.16 bundles on link services interfaces, only shaping rates based on percentage are supported.

Default If you do not include this statement at the `[edit class-of-service interfaces interface-name unit logical-unit-number]` hierarchy level, the default logical interface bandwidth is the

average of unused bandwidth for the number of logical interfaces that require default bandwidth treatment. If you do not include this statement at the **[edit class-of-service interfaces *interface-name*]** hierarchy level, the default physical interface bandwidth is the average of unused bandwidth for the number of physical interfaces that require default bandwidth treatment.

Options *rate*—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Range: For logical interfaces, 1000 through 32,000,000,000 bps. For physical interfaces, 1000 through 160,000,000,000 bps.



.....
NOTE: For all MX Series interfaces, the rate can be from 65,535 through 160,000,000,000 bps.
.....



.....
NOTE: For T4000 physical interfaces, the rate can be from 1000 through 160,000,000,000 bps.
.....

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • [Applying Scheduler Maps Overview on page 180](#)

shaping-rate (Limiting Excess Bandwidth Usage)

Syntax	<code>shaping-rate (percent <i>percentage</i> <i>rate</i>) <burst-size <i>bytes</i>>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4. The burst-size option added for Trio MPC/MIC modules in Junos OS Release 11.4. Statement introduced in Junos OS Release 12.2 for ACX Series Routers.
Description	<p>Define a limit on excess bandwidth usage for J Series routers and Trio MPC/MIC interfaces on MX Series routers.</p> <p>The transmit-rate statement at the [edit class-of-service schedulers <i>scheduler-name</i>] hierarchy level configures the minimum bandwidth allocated to a queue. The transmission bandwidth can be configured as an exact value or allowed to exceed the configured rate if additional bandwidth is available from other queues. For J Series routers only, you limit the excess bandwidth usage with this statement.</p> <p>You should configure the shaping rate as an absolute maximum usage and not the additional usage beyond the configured transmit rate.</p>
Default	If you do not include this statement, the default shaping rate is 100 percent, which is the same as no shaping at all.
Options	<p>percent <i>percentage</i>—Shaping rate as a percentage of the available interface bandwidth. Range: 0 through 100 percent</p> <p><i>rate</i>—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). Range: 3200 through 32,000,000,000 bps</p> <p>burst-size <i>bytes</i>—Maximum burst size, in bytes. The burst value determines the number of rate credits that can accrue when the queue or scheduler node is held in the inactive round robin. Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Applying Scheduler Maps Overview on page 180

shaping-rate (Oversubscribing an Interface)

Syntax	<code>shaping-rate (percent <i>percentage</i> <i>rate</i>) <burst-size <i>bytes</i>>;</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	<p>Statement introduced in Junos OS Release 7.6.</p> <p>Option burst-size introduced for Enhanced Queuing (EQ) DPCs in Junos OS Release 9.4.</p> <p>Option burst-size option introduced for MPC/MIC modules in Junos OS Release 11.4.</p> <p>Option burst-size introduced for IQ2 and IQ2E interfaces in Junos OS Release 12.3.</p>
Description	<p>For Gigabit Ethernet IQ, Channelized IQ PICs, FRF.15 and FRF.16 LSQ interfaces, EQ DPCs, and MPC/MIC modules only, configure a shaping rate for a logical interface. You can also configure an optional burst size for a logical interface on EQ DPCs and on IQ2 and IQ2E PICs. This can help to ensure that higher-priority services do not starve lower-priority services.</p> <p>For physical interfaces on T4000 routers with Type 5 FPCs, configure traffic shaping rate.</p> <p>The sum of the shaping rates for all logical interfaces on the physical interface can exceed the physical interface bandwidth. This practice is known as oversubscription of the peak information rate (PIR).</p>
Default	The default behavior depends on various factors. For more information, see Table 29 on page 202 .
Options	<p>percent <i>percentage</i>—For LSQ interfaces, shaping rate as a percentage of the available interface bandwidth.</p> <p>Range: 1 through 100 percent</p> <p><i>rate</i>—For IQ and IQ2 interfaces, and T4000 routers with Type 5 FPCs, peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: IQ and IQ2 interfaces—1000 through 160,000,000,000 bps</p> <p>Range: T4000 routers with Type 5 FPCs—the shaping rate value for the physical interface must be a minimum of 292 Kbps. The maximum value of shaping-rate is limited by the maximum transmission rate of the interface.</p> <p>burst-size <i>bytes</i>—(Optional) Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374• Oversubscribing Interface Bandwidth on page 199

- [output-traffic-control-profile on page 669](#)

shaping-rate-excess-high

Syntax	<code>shaping-rate-excess-high <i>rate</i> [<i>burst-size bytes</i>];</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	For Trio MPC/MIC interfaces only, configure a shaping rate and optional burst size for high-priority excess traffic. This can help to make sure higher priority services do not starve lower priority services.
Default	If you do not include this statement, the default shaping rate for this priority is determined by the shaping-rate statement in the traffic control profile.
Options	<p>rate—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000</p> <p>Default: None</p> <p>burst-size <i>bytes</i>—Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464 • Oversubscribing Interface Bandwidth on page 199 • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • shaping-rate-excess-low on page 712 • shaping-rate-priority-high on page 713 • shaping-rate-priority-low on page 714 • shaping-rate-priority-medium on page 715

shaping-rate-excess-low

Syntax	<code>shaping-rate-excess-low rate [burst-size <i>bytes</i>];</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	For Trio MPC/MIC interfaces only, configure a shaping rate and optional burst size for low-priority excess traffic. This can help to make sure higher priority services do not starve lower priority services.
Default	If you do not include this statement, the default shaping rate for this priority is determined by the shaping-rate statement in the traffic control profile.
Options	<p>rate—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000</p> <p>Default: None</p> <p>burst-size <i>bytes</i>—Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464• Oversubscribing Interface Bandwidth on page 199• Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374• shaping-rate-excess-high on page 711• shaping-rate-priority-high on page 713• shaping-rate-priority-low on page 714• shaping-rate-priority-medium on page 715

shaping-rate-priority-high

Syntax	<code>shaping-rate-priority-high rate [burst-size bytes];</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles profile-name]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	For Trio MPC/MIC interfaces only, configure a shaping rate and optional burst size for high priority traffic. This can help to make sure higher priority services do not starve lower priority services.
Default	If you do not include this statement, the default shaping rate for this priority is determined by the shaping-rate statement in the traffic control profile.
Options	<p>rate—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000</p> <p>Default: None</p> <p>burst-size bytes—Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464 • Oversubscribing Interface Bandwidth on page 199 • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • shaping-rate-excess-high on page 711 • shaping-rate-excess-low on page 712 • shaping-rate-priority-low on page 714 • shaping-rate-priority-medium on page 715


shaping-rate-priority-low

Syntax	<code>shaping-rate-priority-low rate [burst-size <i>bytes</i>];</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	For Trio MPC/MIC interfaces only, configure a shaping rate and optional burst size for low priority traffic. This can help to make sure higher priority services do not starve lower priority services.
Default	If you do not include this statement, the default shaping rate for this priority is determined by the shaping-rate statement in the traffic control profile.
Options	<p>rate—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000</p> <p>Default: None</p> <p>burst-size <i>bytes</i>—Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none">• Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464• Oversubscribing Interface Bandwidth on page 199• Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374• shaping-rate-excess-high on page 711• shaping-rate-excess-low on page 712• shaping-rate-priority-high on page 713• shaping-rate-priority-medium on page 715

shaping-rate-priority-medium

Syntax	<code>shaping-rate-priority-medium <i>rate</i> [<i>burst-size bytes</i>];</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 10.1.
Description	For Trio MPC/MIC interfaces only, configure a shaping rate and optional burst size for medium priority traffic. This can help to make sure higher priority services do not starve lower priority services.
Default	If you do not include this statement, the default shaping rate for this priority is determined by the shaping-rate statement in the traffic control profile.
Options	<p>rate—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p>Range: 1000 through 160,000,000,000</p> <p>Default: None</p> <p>burst-size <i>bytes</i>—Maximum burst size, in bytes.</p> <p>Range: 0 through 1,000,000,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Per-Priority Shaping on MIC and MPC Interfaces Overview on page 464 • Oversubscribing Interface Bandwidth on page 199 • Configuring Traffic Control Profiles for Shared Scheduling and Shaping on page 374 • shaping-rate-excess-high on page 711 • shaping-rate-excess-low on page 712 • shaping-rate-priority-high on page 713 • shaping-rate-priority-low on page 714

shared-bandwidth-policer

Syntax	shared-bandwidth-policer;
Hierarchy Level	[edit firewall policer <i>policer-name</i>] [edit firewall three-color-policer <i>policer-name</i>]
Release Information	Statement introduced in Junos OS Release 11.2. Support for MX Series MPC and MIC interfaces added in Junos OS Release 12.1.
Description	Policer instances share bandwidth. This enables configuration of interface-specific policers applied on an aggregated Ethernet bundle or an aggregated SONET bundle to match the effective bandwidth and burst-size to user-configured values. This feature is supported on the following platforms: T Series routers, M120, M10i, M7i (CFEB-E only), M320 (SFPC only), MX240, MX480, and MX960 with DPC, MPC, and MIC interfaces.
<div style="display: flex; align-items: center;">  <div> <p>NOTE: This statement is not supported on T4000 Type 5 FPCs.</p> </div> </div>	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Policer Support for Aggregated Ethernet and SONET Bundles Overview on page 120

shared-instance

Syntax	shared-instance <i>instance-name</i> ;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> input-traffic-control-profile], [edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> output-traffic-control-profile]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ2 and IQ2E PICs only, apply a shared traffic scheduling and shaping profile to the logical interface.
Options	<i>instance-name</i> —Name of the shared scheduler and shaper to be applied to this interface
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Shaping on 10-Gigabit Ethernet IQ2 PICs on page 367 • traffic-control-profiles on page 729

shared-scheduler

Syntax	shared-scheduler;
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ2 PICs only, enable shared schedulers and shapers on this interface. This statement and the per-unit-scheduler statement are mutually exclusive. Even so, you can configure one logical interface for each shared instance. This effectively provides the functionality of per-unit scheduling.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Shaping on 10-Gigabit Ethernet IQ2 PICs on page 367• traffic-control-profiles on page 729

simple-filter

See the following sections:

- [simple-filter \(Applying to an Interface\) on page 718](#)
- [simple-filter \(Configuring\) on page 719](#)

simple-filter (Applying to an Interface)

Syntax	<pre>simple-filter { input <i>filter-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Apply a simple filter to an interface. You can apply simple filters to the family inet only, and only in the input direction.
Options	input <i>filter-name</i> —Name of one filter to evaluate when packets are received on the interface.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multifield Classifiers on page 76• filter on page 603

simple-filter (Configuring)

Syntax	<pre> simple-filter <i>filter-name</i> { term <i>term-name</i> { from { match-conditions; } then { forwarding-class <i>class-name</i>; loss-priority (high low medium); } } } </pre>
Hierarchy Level	[edit firewall family inet filter <i>filter-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Define a simple filter. Simple filters are recommended for metropolitan Ethernet applications.
Options	<p>from—Match packet fields to values. If the from option is not included, all packets are considered to match and the actions and action modifiers in the then statement are taken.</p> <p>match-conditions—One or more conditions to use to make a match.</p> <p>term-name—Name that identifies the term. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p>then—Actions to take on matching packets. If the then option is not included and a packet matches all the conditions in the from statement, the packet is accepted.</p> <p>The remaining statements are explained separately. Only forwarding-class and loss-priority are valid in a simple filter configuration.</p>
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Multifield Classifiers on page 76 • filter (Applying to an Interface) on page 603 • simple-filter (Applying to an Interface) on page 718

sip (Application Profile)

Syntax	<pre>sip { video { dscp (alias bits); forwarding-class class-name; } voice { dscp (alias bits); forwarding-class class-name; } }</pre>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the appropriate dscp and forwarding-class value for SIP traffic.
Default	By default, the system will not alter the DSCP or forwarding class for SIP traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Application Profiles on page 321• ftp (Class-Of-Service) on page 620

source-address (Services CoS)

Syntax	<pre>source-address address;</pre>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> from]
Release Information	Statement introduced in Junos OS Release 8.1. address option enhanced to support IPv4 and IPv6 addresses in Junos OS Release 8.5.
Description	Source address for rule matching.
Options	address —Source IPv4 or IPv6 address or prefix value.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Match Conditions in a CoS Rule on page 320• Configuring Match Conditions In CoS Rules

sustained-rate

Syntax	<code>sustained-rate rate;</code>
Hierarchy Level	[edit class-of-service traffic-control-profiles <i>traffic-control-profile-name</i>] [edit firewall atm-policer <i>atm-policer-name</i>]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(MX Series routers) Define ATM sustained cell rate on ATM MICs in cells per second by entering a decimal number followed by the abbreviation c; where 1 cps = 384 bps.
Options	<i>rate</i> —ATM sustained rate in cells per second. Range: 61 cps through 353,206 cps.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • show class-of-service traffic-control-profile

syslog (Services CoS)

Syntax	<code>syslog;</code>
Hierarchy Level	[edit services cos rule <i>rule-name</i> term <i>term-name</i> then], [edit services cos rule <i>rule-name</i> term <i>term-name</i> then (reflexive reverse)]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	Enable system logging. The system log information from the Adaptive Services or Multiservices PIC is passed to the kernel for logging in the <code>/var/log</code> directory. This setting overrides any syslog statement setting included in the service set or interface default configuration.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Actions in a CoS Rule on page 321 • Configuring Actions in CoS Rules

system-defaults

Syntax `system-defaults {
 classifiers{
 type classifier-name;
 }
 }`

Hierarchy Level [edit class-of-service]

Release Information Statement introduced in Junos OS release 12.2

Description Define a CoS classifier to support global classifiers.

Options *classifier-name*—Name of the behavior aggregate (BA) classifier.

type—Traffic type: dscp, dscp-ipv6, or exp.



.....
NOTE: The `dscp` and `dscp-ipv6` classifier types are not supported on ACX Series routers.
.....

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation • Configuring CoS on ACX Series Universal Access Routers

term

See the following sections:

- [term \(AS PIC Classifiers\) on page 723](#)
- [term \(Normal Filter\) on page 724](#)
- [term \(Simple Filter\) on page 725](#)

term (AS PIC Classifiers)

```
Syntax  term term-name {
        from {
            applications [ application-names ];
            application-sets [ set-names ];
            destination-address (CoS) address;
            source-address address;
        }
        then {
            application-profile profile-name;
            dscp (alias | bits);
            forwarding-class class-name;
            syslog;
            (reflexive | reverse) {
                application-profile profile-name;
                dscp (alias | bits);
                forwarding-class class-name;
                syslog;
            }
        }
    }
```

Hierarchy Level [edit [services](#) cos [rule](#) *rule-name*]

Release Information Statement introduced in Junos OS Release 8.1.

Description Define the CoS term properties.

Options *term-name*—Identifier for the term.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation • [Configuring CoS Rules on page 318](#)

term (Normal Filter)

Syntax	<pre>term <i>term-name</i> { from { <i>match-conditions</i>; } then { forwarding-class <i>class-name</i>; loss-priority (high low); three-color-policer { (single-rate two-rate) <i>policer-name</i>; } } }</pre>
Hierarchy Level	[edit firewall family <i>family-name</i> filter <i>filter-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a firewall filter term.
Options	<p>from—Match packet fields to values. If not included, all packets are considered to match and the actions and action modifiers in the then statement are taken.</p> <p>match-conditions—One or more conditions to use to make a match.</p> <p>term-name—Name that identifies the term. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p>then—Actions to take on matching packets. If not included and a packet matches all the conditions in the from statement, the packet is accepted. For CoS, only the actions listed are allowed. These statements are explained separately.</p>
Required Privilege Level	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Multifield Classifiers on page 76

term (Simple Filter)

Syntax	<pre> term <i>term-name</i> { from { <i>match-conditions</i>; } then { forwarding-class <i>class-name</i>; loss-priority (high low medium); } } </pre>
Hierarchy Level	[edit firewall family inet simple-filter <i>filter-name</i>]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	Define a simple filter term.
Options	<p>from—Match packet fields to values. If the from option is not included, all packets are considered to match and the actions and action modifiers in the then statement are taken.</p> <p>match-conditions—One or more conditions to use to make a match.</p> <p>term-name—Name that identifies the term. The name can contain letters, numbers, and hyphens (-), and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").</p> <p>then—Actions to take on matching packets. If the then option is not included and a packet matches all the conditions in the from statement, the packet is accepted. For CoS, only the actions listed are allowed. These statements are explained separately.</p>
Required Privilege Level	<p>firewall—To view this statement in the configuration.</p> <p>firewall-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Multifield Classification • Simple Filter Overview • Standard Firewall Filter Match Conditions for IPv4 Traffic • Standard Firewall Filter Match Conditions for IPv6 Traffic

then

Syntax then {
 [application-profile](#) *profile-name*;
 dscp (*alias* | *bits*);
 forwarding-class *class-name*;
 [syslog](#);
 ([reflexive](#) | [reverse](#)) {
 [application-profile](#) *profile-name*;
 dscp (*alias* | *bits*);
 forwarding-class *class-name*;
 [syslog](#);
 }
 }

Hierarchy Level [edit services cos rule *rule-name* term *term-name*]

Release Information Statement introduced in Junos OS Release 8.1.

Description Define the CoS term actions.

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Actions in a CoS Rule on page 321](#)
- Configuring Actions in CoS Rules

three-color-policer

See the following sections:

- [three-color-policer \(Applying\) on page 727](#)
- [three-color-policer \(Configuring\) on page 728](#)

three-color-policer (Applying)

Syntax	<code>three-color-policer { (single-rate two-rate) <i>policer-name</i>; }</code>
Hierarchy Level	[edit firewall family <i>family-name</i> filter <i>filter-name</i> term <i>term-name</i> then] [edit logical-systems <i>logical-system-name</i> firewall family <i>family-name</i> filter <i>filter-name</i> term <i>term-name</i> then]
Release Information	Statement introduced in Junos OS Release 7.4. single-rate statement added in Junos OS Release 8.2. Logical systems support introduced in Junos OS Release 9.3.
Description	For M320 and T Series routers with Enhanced II Flexible PIC Concentrators (FPCs) and the T640 router with Enhanced Scaling FPC4, apply a tricolor marking policer.
Options	single-rate —Named tricolor policer is a single-rate policer. two-rate —Named tricolor policer is a two-rate policer. <i>policer-name</i> —Name of a tricolor policer.
Required Privilege Level	firewall —To view this statement in the configuration. firewall-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Applying Tricolor Marking Policers to Firewall Filters on page 110 • Standard Firewall Filter Nonterminating Actions • Three-Color Policer Configuration Overview

three-color-policer (Configuring)



Syntax	<pre>three-color-policer <i>policer-name</i> { action { loss-priority high then discard; } filter-specific; logical-interface-policer; physical-interface-policer; shared-bandwidth-policer; single-rate { (color-aware color-blind); committed-burst-size <i>bytes</i>; committed-information-rate <i>bps</i>; excess-burst-size <i>bytes</i>; } two-rate { (color-aware color-blind); committed-burst-size <i>bytes</i>; committed-information-rate <i>bps</i>; peak-burst-size <i>bytes</i>; peak-information-rate <i>bps</i>; } }</pre>
Hierarchy Level	[edit dynamic-profiles <i>profile-name</i> firewall], [edit firewall], [edit logical-systems <i>logical-system-name</i> firewall]
Release Information	Statement introduced before Junos OS Release 7.4. The action and single-rate statements added in Junos OS Release 8.2. Logical systems support introduced in Junos OS Release 9.3. Support at the [edit dynamic-profiles ... firewall] hierarchy level introduced in Junos OS Release 11.4.
Description	Configure a three-color policer.
Options	<i>policer-name</i> —Name of the three-color policer. Reference this name when you apply the policer to an interface. The remaining statements are explained separately.
Required Privilege Level	firewall —To view this statement in the configuration. firewall-control —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Statement Hierarchy for Configuring Policers• Configuring Tricolor Marking Policers on page 108• Three-Color Policer Configuration Guidelines• Basic Single-Rate Three-Color Policers• Basic Two-Rate Three-Color Policers

- Two-Color and Three-Color Logical Interface Policers
- Two-Color and Three-Color Physical Interface Policers
- Two-Color and Three-Color Policers at Layer 2

traffic-control-profiles

Syntax	<pre> traffic-control-profiles <i>profile-name</i> { adjust-minimum <i>rate</i>; atm-service (cbr rtvbr nrtvbr); delay-buffer-rate (percent <i>percentage</i> <i>rate</i>); peak-rate <i>rate</i>; sustained-rate <i>rate</i>; max-burst-size <i>cells</i>; excess-rate (percent <i>percentage</i> proportion <i>value</i>); excess-rate-high (percent <i>percentage</i> proportion <i>value</i>); excess-rate-low (percent <i>percentage</i> proportion <i>value</i>); guaranteed-rate (percent <i>percentage</i> <i>rate</i>) <burst-size <i>bytes</i>>; overhead-accounting (frame-mode cell-mode) <bytes <i>byte-value</i>>; scheduler-map <i>map-name</i>; shaping-rate (percent <i>percentage</i> <i>rate</i>) <burst-size <i>bytes</i>>; shaping-rate-excess-high <i>rate</i> [burst-size <i>bytes</i>]; shaping-rate-excess-low <i>rate</i> [burst-size <i>bytes</i>]; shaping-rate-priority-high <i>rate</i> [burst-size <i>bytes</i>]; shaping-rate-priority-low <i>rate</i> [burst-size <i>bytes</i>]; shaping-rate-priority-medium <i>rate</i> [burst-size <i>bytes</i>]; } </pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 7.6.
Description	For Gigabit Ethernet IQ, Channelized IQ PICs, FRF.15 and FRF.16 LSQ interfaces, and Enhanced Queuing (EQ) DPCs only, configure traffic shaping and scheduling profiles. For Enhanced EQ PICs and EQ DPCs only, you can include the excess-rate statement.
Options	<p>profile-name—Name of the traffic-control profile.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Oversubscribing Interface Bandwidth on page 199 • Example: Configuring CoS for a PBB Network on MX Series Routers • output-traffic-control-profile on page 669

traffic-manager

Syntax	<pre> traffic-manager { egress-shaping-overhead <i>number</i>; ingress-shaping-overhead <i>number</i>; mode { egress-only; ingress-and-egress; session-shaping; } } </pre>
Hierarchy Level	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i>], [edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i>] (Routing Matrix)
Release Information	Statement introduced in Junos OS Release 8.3.
Description	Enable CoS queueing, scheduling, and shaping.
<div>  <p>NOTE: Junos OS does not support ingress-and-egress mode on label-switched interfaces (LSI) configured with VPLS .</p> </div>	
Options	<p>egress-shaping-overhead <i>number</i>—When traffic management (queueing and scheduling) is configured on the egress side, the number of CoS shaping overhead bytes to add to the packets on the egress interface.</p> <p>Replace <i>number</i> with a value from -63 through 192 bytes.</p> <div>  <p>NOTE: The L2 headers (DA/SA + VLAN tags) are automatically a part of the shaping calculation.</p> </div> <p>ingress-shaping-overhead <i>number</i>—When L2TP session shaping is configured, the number of CoS shaping overhead bytes to add to the packets on the ingress side of the L2TP tunnel to determine the shaped session packet length.</p> <p>When session shaping is not configured and traffic management (queueing and scheduling) is configured on the ingress side, the number of CoS shaping overhead bytes to add to the packets on the ingress interface.</p> <p>Replace <i>number</i> with a value from -63 through 192 bytes.</p> <p>mode—Configure CoS traffic manager mode of operation. This option has the following suboptions:</p>

- **egress-only**—Enable CoS queuing and scheduling on the egress side for the PIC that houses the interface. This is the default mode for an Enhanced Queueing (EQ) DPC on MX Series routers.



NOTE: If ingress packet drops are observed at a high rate for an IQ2 or IQ2E PIC, configure the **traffic-manager** statement to work in the **egress-only** mode.

- **ingress-and-egress**—Enable CoS queuing and scheduling on both the egress and ingress sides for the PIC. This is the default mode for IQ2 and IQ2E PICs on M Series and T Series routers.



NOTE:

- For EQ DPCs, you must configure the **traffic-manager** statement with **ingress-and-egress** mode to enable ingress CoS on the EQ DPC.
 - EQ DPCs have 250 ms of buffering, with only egress queuing (default mode). When **ingress-and-egress** is configured, the buffer is partitioned as 50 ms for the ingress direction and 200 ms for the egress direction.
- **session-shaping**—(M10i and M120 routers only) Configure the IQ2 PIC mode for session-aware traffic shaping to enable L2TP session shaping.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.

translation-table

Syntax	<pre>translation-table { (to-dscp-from-dscp to-dscp-ipv6-from-dscp-ipv6 to-exp-from-exp to-inet-precedence-from-inet-precedence) <i>table-name</i> { to-code-point <i>value</i> from-code-points (* [<i>values</i>]); } }</pre>
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 9.3. Support on Multiservices PIC added in Junos OS Release 9.5.
Description	For an Enhanced IQ PIC or Multiservices PIC, specify the input translation tables. You must also apply the translation table to a logical interface on the Enhanced IQ PIC or Multiservices PIC.
Default	If you do not include this statement, the ToS bit values in received packet headers are not changed by the PIC.
Options	<p>to-dscp-from-dscp—(Optional) Translate incoming IPv4 DSCP values to new values. You must also configure and apply a DSCP classifier.</p> <p>to-dscp-ipv6-from-dscp-ipv6—(Optional) Translate incoming IPv6 DSCP values to new values. You must also configure and apply an IPv6 DSCP classifier.</p> <p>to-inet-precedence-from-inet-precedence—(Optional) Translate incoming INET precedence values to new values.</p> <p>to-exp-from-exp—(Optional) Translate incoming MPLS EXP values to new values.</p> <p><i>table-name</i>—The name of the translation table.</p> <p><i>value</i>—The bit string to which to translate the incoming bit value.</p> <p><i>value(s)</i>—The bit string(s) from which the incoming bit value(s) are translated.</p> <p>*—(Optional) This translation matches all bit patterns not explicitly listed.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring ToS Translation Tables on page 328 • Multiservices PIC ToS Translation on page 325

transmit-rate (Schedulers)

Syntax	<code>transmit-rate (rate percent <i>percentage</i> remainder) <exact rate-limit>;</code>
Hierarchy Level	[edit class-of-service schedulers <i>scheduler-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>rate-limit option introduced in Junos OS Release 8.3. Applied to the Multiservices PICs in Junos OS Release 9.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Routers.</p>
Description	Specify the transmit rate or percentage for a scheduler.
Default	If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.
Options	<p>exact—(Optional) Enforce the exact transmission rate. Under sustained congestion, a rate-controlled queue that goes into negative credit fills up and eventually drops packets. This value should never exceed the rate-controlled amount. For PTX Series Packet Transport Switches, this option is allowed only on the non-strict-high (high, medium-high, medium-low, or low) queues.</p> <p>percent <i>percentage</i>—Percentage of transmission capacity. A percentage of zero drops all packets in the queue.</p> <p>Range: 0 through 100 percent for M, MX and T Series routers; 1 through 100 percent for PTX Series Packet Transport Switches; 0 through 200 percent for the SONET/SDH OC48/STM16 IQE PIC</p>



NOTE:

- On M Series Multiservice Edge Routers, for interfaces configured on 4-port E1 and 4-port T1 PICs only, you can configure a *percentage* value only from 11 through 100. These two PICs do not support transmission rates less than 11 percent.
- The configuration of the `transmit-rate percent 0 exact` statement at the [edit class-of-service `schedulers` *scheduler-name*] hierarchy is ineffective on T4000 routers with Type 5 FPC.
- On Trio MPC/MIC interfaces, when the transmit rate is configured as a percentage and `exact` or `rate-limit` is enabled on a queue, the shaping rate of the parent node is used to compute the transmit rate. If `exact` or `rate-limit` is not configured, the guaranteed rate of the parent node is used to compute the transmit rate.

rate—Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Range: 3200 through 160,000,000,000 bps



NOTE: For all MX Series interfaces, the rate can be from 65,535 through 160,000,000,000 bps.

rate-limit—(Optional) Limit the transmission rate to the rate-controlled amount. In contrast to the **exact** option, the scheduler with the **rate-limit** option shares unused bandwidth above the rate-controlled amount.



NOTE: For PTX Series Packet Transport Switches, this option is allowed only on the strict-high queue. We recommend that you configure rate limit on strict-high queues because the other queues may not meet their guaranteed bandwidths.



NOTE: The configuration of the **rate-limit** statement is supported on T4000 routers only with a Type 5 FPC.

remainder—Use the remaining rate available.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- [Configuring Schedulers on page 160](#)
- [Configuring Scheduler Transmission Rate on page 172](#)
- [Example: Configuring CoS for a PBB Network on MX Series Routers](#)

transmit-weight

Syntax	transmit-weight (cells <i>number</i> percent <i>number</i>);
Hierarchy Level	[edit interfaces at- <i>fpc</i> / <i>pic</i> / <i>port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class) <i>class-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a transmission weight to a forwarding class.
Default	95 percent for queue 0, 5 percent for queue 3.
Options	<p>percent <i>percentage</i>—Transmission weight of the forwarding class as a percentage of the total bandwidth.</p> <p>Range: 5 through 100</p> <p>cells <i>number</i>—Transmission weight of the forwarding class as a number of cells.</p> <p>Range: 0 through 32,000</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring Scheduler Maps on ATM Interfaces on page 520

transparent

Syntax	transparent;
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> classifiers ieee802.1 <i>vlan-tag</i>]
Release Information	Statement introduced in Junos OS Release 11.2
Description	Packet classification based on the transparent VLAN tag.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

tri-color

Syntax	tri-color;
Hierarchy Level	[edit class-of-service]
Release Information	Statement introduced in Junos OS Release 7.4.
Description	For IPv4 packets on M320, MX Series, and T Series routers with Enhanced II Flexible PIC Concentrators (FPCs), enable two-rate tricolor marking (TCM), as defined in RFC 2698.
Default	If you do not include this statement, tricolor marking is not enabled and the medium packet loss priority (PLP) is not configurable.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Tricolor Marking on page 100

unit

Syntax	<pre> unit logical-unit-number { classifiers { type (classifier-name default) family (mpls all); } forwarding-class class-name; fragmentation-map map-name; input-traffic-control-profile profile-name shared-instance instance-name; output-traffic-control-profile profile-name shared-instance instance-name; per-session-scheduler; rewrite-rules { dscp (rewrite-name default); dscp-ipv6 (rewrite-name default); exp (rewrite-name default) protocol protocol-types; exp-push-push-push default; exp-swap-push-push default; ieee-802.1 (rewrite-name default) vlan-tag (outer outer-and-inner); inet-precedence (rewrite-name default); } scheduler-map map-name; shaping-rate rate; } </pre>
Hierarchy Level	[edit class-of-service interfaces interface-name]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.
Options	<p>logical-unit-number—Number of the logical unit.</p> <p>Range: 0 through 16,384</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Overview of BA Classifier Types on page 44 • Configuring Rewrite Rules on page 264

vbr

Syntax	<code>vbr peak <i>rate</i> sustained <i>rate</i> burst <i>length</i>;</code>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping]</p>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For ATM encapsulation only, define the variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the variable bandwidth utilization, you must specify all three options (burst, peak, and sustained). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation c; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p>
Default	If the vbr statement is not specified, bandwidth utilization is unlimited.
Options	<p>burst <i>length</i>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. Range: 1 through 4000 cells</p> <p>peak <i>rate</i>—Peak rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p> <p>sustained <i>rate</i>—Sustained rate, in bits per second or cells per second. Range: For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring ATM CBR Applying Scheduler Maps to Logical ATM Interfaces on page 528

- [cbr on page 563](#)
- [rtvbr on page 694](#)
- [shaping on page 705](#)

vc-cos-mode

Syntax	vc-cos-mode (alternate strict);
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options scheduler-maps <i>map-name</i>]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For ATM2 IQ interfaces only, specify packet-scheduling priority value for ATM2 IQ VC tunnels.
Options	<p>alternate—VC CoS queue has high priority. The scheduling of the queues alternates between the high-priority queue and the remaining queues, so every other scheduled packet is from the high-priority queue.</p> <p>strict—VC CoS queue has strictly high priority. A queue with strict high priority is always scheduled before the remaining queues. The remaining queues are scheduled in round-robin fashion.</p> <p>Default: alternate</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> • Configuring ATM2 IQ VC Tunnel CoS Components • Configuring Scheduler Maps on ATM Interfaces on page 520

vci

Syntax	<code>vci vpi-identifier.vci-identifier;</code>
Hierarchy Level	<p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</p> <p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.</p>
Description	<p>For ATM point-to-point logical interfaces only, configure the virtual circuit identifier (VCI) and virtual path identifier (VPI).</p> <p>To configure a VPI for a point-to-multipoint interface, specify the VPI in the multipoint-destination statement.</p> <p>VCIs 0 through 31 are reserved for specific ATM values designated by the ATM Forum.</p>
Options	<p>vci-identifier—ATM virtual circuit identifier. Unless you configure the interface to use promiscuous mode, this value cannot exceed the highest-numbered VC configured for the interface with the maximum-vcs option of the vpi statement.</p> <p>Range: 0 through 4089 or 0 through 65,535 with promiscuous mode, with VCIs 0 through 31 reserved.</p> <p>vpi-identifier—ATM virtual path identifier.</p> <p>Range: 0 through 255</p> <p>Default: 0</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> Configuring a Point-to-Point ATM1 or ATM2 IQ Connection Applying Scheduler Maps to Logical ATM Interfaces on page 528 multipoint-destination promiscuous-mode vpi (ATM CCC Cell-Relay Promiscuous Mode)

video (Application Profile)

Syntax	video { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i> ; }
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> sip]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the appropriate dscp and forwarding-class values for SIP video traffic.
Default	By default, the system will not alter the DSCP or forwarding class for SIP video traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Configuring Application Profiles on page 321 • voice (Application Profile) on page 742

vlan-tag

Syntax	vlan-tag (outer outer-and-inner);
Hierarchy Level	[edit class-of-service interfaces <i>interface-name</i> unit <i>logical-unit-number</i> rewrite-rules ieee-802.1 (<i>rewrite-name</i> default)]
Release Information	Statement introduced in Junos OS Release 8.1.
Description	For Gigabit Ethernet IQ2 PICs only, apply this IEEE-802.1 rewrite rule to the outer or outer and inner VLAN tags.
Default	If you do not include this statement, the rewrite rule applies to the outer VLAN tag only.
Options	outer —Apply the rewrite rule to the outer VLAN tag only. outer-and-inner —Apply the rewrite rule to both the outer and inner VLAN tags.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Applying IEEE 802.1p Rewrite Rules to Dual VLAN Tags on page 271

voice (Application Profile)

Syntax	<pre>voice { dscp (<i>alias</i> <i>bits</i>); forwarding-class <i>class-name</i>; }</pre>
Hierarchy Level	[edit services cos application-profile <i>profile-name</i> sip]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Set the appropriate dscp and forwarding-class values for SIP voice traffic.
Default	By default, the system will not alter the DSCP or forwarding class for SIP voice traffic.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Configuring Application Profiles on page 321• video (Application Profile) on page 741

PART 6

Index

- [Index on page 745](#)
- [Index of Statements and Commands on page 759](#)

Index

Symbols

#, comments in configuration statements.....	xxxii
(), in syntax descriptions.....	xxxii
10-Gigabit Ethernet LAN/WAN PICs	
BA classification.....	426
CoS overview.....	421
fixed classification.....	427
IEEE 802.1p BA classifier.....	427
mapping forwarding classes to CoS	
queues.....	428
multifield classification.....	427
queuing properties.....	428
scheduling and shaping.....	429
shaping overhead.....	430
< >, in syntax descriptions.....	xxxii
[], in configuration statements.....	xxxii
{ }, in configuration statements.....	xxxii
(pipe), in syntax descriptions.....	xxxii

A

across-the-network applications.....	23
action statement.....	553
usage guidelines.....	108
address statement.....	554
usage guidelines.....	520
adjust-minimum statement.....	554
adjust-percent statement.....	555
aggregate (logical interface) policer	
configuration statement for.....	651
aggregated Ethernet interfaces	
CoS and.....	504
CoS example.....	506
aggregated interfaces	
scheduler modes.....	508
aggregated SONET/SDH interfaces	
CoS and.....	504
CoS example.....	506
aliases, forwarding-class.....	134
application-profile statement.....	556
usage guidelines.....	321

application-sets statement	
CoS.....	557
usage guidelines.....	320
applications statement	
CoS.....	557
usage guidelines.....	320
architecture	
tricolor marking.....	99
AS PIC	
CoS.....	317
assigning frame relay de loss priority	
CoS.....	270
ATM	
classifiers example.....	532
scheduler for VPLS.....	517, 519
ATM interfaces	
CoS and	
egress queues.....	522
eight forwarding classes.....	522
atm-options statement.....	558
usage guidelines.....	515
atm-policer statement.....	560
atm-scheduler-map statement.....	561
usage guidelines.....	528
atm-service statement.....	561
ATM2 IQ interfaces	
CoS and.....	515
copying the PLP to the CLP bit.....	528
example configuration.....	523
linear RED profiles.....	516
scheduler maps.....	520
scheduling on the logical interface.....	528
scheduling priority.....	527
CoS example.....	529
eight forwarding classes	
example configuration.....	523

B

BA classification	
SONET/SDH OC48/STM16 IQE PIC.....	390
SONET/SDH OC48/STM16 IQE PICs.....	387
VPLS over ATM.....	531
BA classifiers	
bridging.....	57
inner VLAN tag.....	57
bandwidth	
and delay buffer allocation.....	199
guaranteed.....	199, 207, 380

oversubscribing.....	199
sharing excess.....	380
bandwidth sharing	
for queue-level interfaces.....	245
nonqueuing interfaces examples.....	247
nonqueuing interfaces overview.....	245
nonqueuing interfaces rate limits.....	246
braces, in configuration statements.....	xxxii
brackets	
angle, in syntax descriptions.....	xxxii
square, in configuration statements.....	xxxii
bridging	
BA classifiers.....	57
buffer size.....	160
for slower interfaces.....	162
example configuration.....	167
buffer-size statement.....	562
usage guidelines.....	160
burst size configuration.....	371
burst-size	
configuring for MPC/MIC interfaces.....	475
C	
cbr statement.....	563
usage guidelines.....	528
cdvt statement.....	564
channelized IQ interfaces	
CoS.....	188
per-unit scheduling.....	195
CIR.....	207
configuring with PIR.....	380
class statement.....	565
usage guidelines.....	134, 144
class-of-service statement.....	566
usage guidelines.....	29
classification	
AS PIC.....	317
behavior aggregate.....	41
applying DSCP IPv6 to an interface.....	59
applying MPLS EXP to routing	
instances.....	59
applying to an interface.....	52
default forwarding classes and loss	
priorities.....	44
defining custom.....	50
example configuration.....	61, 64
global classifiers.....	61
overriding the default PLP.....	64
types of BA classifiers.....	44
wildcard routing instances.....	61
by egress interface.....	129
fixed.....	129
for IEEE 802.1ad traffic.....	65
multifield	
example configuration.....	64, 78, 81
Layer 3 VPN.....	81
VoIP.....	78
VRF.....	81
classification and rewrite	
at global and physical interface levels, example	
configuration.....	92
at global and physical interface levels,	
overview.....	91
classification-override statement.....	567
usage guidelines.....	142
classifiers	
default for VPLS.....	26
for ATM interfaces example.....	532
classifiers statement.....	568
usage guidelines.....	44, 59
code-point aliases.....	69, 70
code-point statement.....	571
usage guidelines.....	263
code-point-aliases statement.....	572
usage guidelines.....	70
code-points statement.....	573
usage guidelines.....	44
color-aware	
single-rate.....	102
two-rate.....	105
color-blind	
single-rate.....	102
two-rate.....	105
comments, in configuration statements.....	xxxii
components	
CoS.....	5
configuring burst size for shapers.....	372
conventions	
text and syntax.....	xxxii
copy-plp-all statement.....	573
copy-tos-to-outer-ip-header statement.....	574
usage guidelines.....	315
CoS	
10-Gigabit Ethernet LAN/WAN PICs.....	421
action statements.....	321
additional examples.....	547
aggregated Ethernet interfaces.....	504

aggregated Ethernet interfaces example.....	506
aggregated SONET/SDH interfaces.....	504
aggregated SONET/SDH interfaces example.....	506
applications.....	320
applications of.....	23
applying traffic control profile examples.....	235
AS PIC.....	317
assigning frame relay de loss priority.....	270
ATM and VPLS.....	531
ATM interfaces egress queues.....	522
atm mic.....	497
ATM2 IQ interfaces.....	515
linear RED profiles.....	516
scheduler maps.....	520
scheduling on the logical interface.....	528
scheduling priority.....	527
ATM2 IQ interfaces example.....	529
buffer size.....	160
changing protocol queue assignments.....	303
channelized IQ interfaces.....	188
CIR mode.....	241
components.....	5
default protocol queue assignments.....	301
default scheduler.....	159
default settings.....	7
defining frame relay de loss priority map.....	271
drop profile.....	170, 171, 253
drop profile examples.....	234
eight forwarding classes.....	522
example configuration.....	523
Enhanced IQ interfaces.....	327, 328, 356
Enhanced Queuing DPC hardware.....	431
EQ DPC interfaces.....	434
example classifiers configuration.....	547
example interfaces configuration.....	547
example IPv6 configuration.....	552
example policy configuration.....	552
example rewrite configuration.....	547
example schedulers configuration.....	547
for aggregated interfaces.....	503
for aggregated interfaces example.....	506
for IEEE 802.1ad.....	65
for IPsec tunnels.....	311
for IQ2 PICs hierarchical schedulers.....	223
for MPLS.....	541
for Multiservices PIC tunnels.....	311
for tunnels.....	311, 312
GRE ToS bits.....	315
forwarding, next-hop selection.....	141
defining and applying the policy.....	142
forwarding-class aliases.....	134
Gigabit Ethernet IQ interfaces.....	188
hardware capabilities and limitations.....	289
hierarchical scheduler interface set.....	226, 228
hierarchical scheduler introduction.....	230
hierarchical scheduler terms.....	223
hierarchy examples.....	231
host outbound traffic configuring IEEE 802.1p field.....	282
ingress CoS on Enhanced Queuing DPC.....	445
ingress CoS on MPC/MIC Interfaces.....	491
inputs and outputs examples.....	9
inputs and outputs overview.....	9
interface examples.....	232
interface set examples.....	232
interfaces sample configuration.....	547
interfaces without support.....	25
internal scheduler nodes.....	240
IQ2 interfaces.....	365
IQ2 PICs.....	365
IQ2E interfaces.....	365
IQ2E PICs.....	363
IQE default rates.....	341
IQE excess bandwidth.....	343
IQE interfaces.....	332, 359
IQE modes.....	337
IQE terminology.....	335
IQE traffic.....	335
J Series router packet flow.....	11
limitations for aggregated interfaces.....	504
low latency static policer.....	359
M Series router packet flow.....	11
match conditions.....	320
MDRR on Enhanced Queuing DPC.....	438
mdrr on SONET/SDH OC48/STM16 IQE PIC.....	410
MPC and MIC interfaces overview.....	450
multifield classifier.....	76
Multiservices PIC.....	317
MX Series router packet flow.....	14
MX Series router packet flow example.....	16
network packet flow.....	4
on Enhanced Queuing DPC.....	440
on M320 router and FPCs.....	298

on MX Series routers.....	300	SONET/SDH OC48/STM16 IQE PIC.....	388
output shaping		SONET/SDH OC48/STM16 IQE PIC	
for DLCI or VLAN interface.....	188	interfaces.....	397
for physical interface.....	181	SONET/SDH OC48/STM16 IQE PICs.....	387
overriding input classification.....	144	T Series router packet flow.....	17
overview.....	3	traffic control profile examples.....	233
packet flow within routers.....	10	transmission rate.....	172
per-priority shaping on Trio MPC/MIC		Trio MPC/MIC interfaces.....	449
interfaces.....	468	unclassified traffic.....	237
PIR-only mode.....	241	WRED on Enhanced Queuing DPC.....	437
priority propagation.....	242	WRED on SONET/SDH OC48/STM16 IQE	
process packet flow.....	20	PIC.....	411
process packet flow example.....	22	CoS features	
rate limit.....	365, 409, 434	PICs compared.....	304
RED.....	253	CoS forwarding	
rewrite rules.....	261, 262	example configuration.....	145, 147
applying a default.....	263	next-hop selection.....	141
applying to VLAN tags.....	271, 272, 273	next-hop selection example.....	145
assigning to interface.....	266	next-hop selection for IPv6.....	148
defining custom.....	264	next-hop selection policy.....	141
EXP bits, rewriting three labels.....	278	CoS IEEE 802.1p statements	
IEEE bits, rewriting with MPLS value.....	280	default.....	575
MPLS EXP and IEEE 802.1p.....	280	host-outbound-traffic.....	624
MPLS EXP and IPv4.....	275, 276	ieee-802.1.....	626
rules.....	323	rewrite-rules.....	692
scheduler examples.....	233	CoS queues	
scheduler map examples.....	234	packet forwarding component.....	211
scheduler priority.....	175	CoS rules	
configuration example.....	178	example.....	325
scheduling.....	158	CoS scheduling	
associating with an interface.....	181	platform support.....	176
associating with DLCI or VLAN.....	188, 193	priority queuing.....	175
associating with fabric priority.....	217	CoS scheduling policy.....	479
associating with physical interface.....	181	CoS services PICs	
buffer size.....	160, 162, 165, 167	output packet rewriting.....	323
chassis.....	211	CoS values.....	541
configuration example.....	193	CoS-based forwarding See CoS forwarding	
configuring a map.....	179	curly braces, in configuration statements.....	xxxii
default settings.....	159	customer support.....	xxxiii
drop profile.....	171	contacting JTAC.....	xxxiii
maximum delay per queue.....	170		
output interface.....	181	D	
packet forwarding		data statement.....	574
component.....	211, 212, 213	usage guidelines.....	321
priority.....	177, 178	default	
strict-high priority.....	178	drop profiles.....	255
transmission rate.....	172	default setting	
simple filter on Enhanced Queuing DPC.....	435	CoS.....	7
simple filter rules.....	84	default traffic statement.....	575

defaults	
priority queuing.....	217
defining frame relay de loss priority map	
CoS.....	271
delay buffer.....	160
calculating.....	162, 199, 207
maximum delay per queue.....	170
shaping rate.....	162, 199, 207
delay-buffer-rate statement.....	576
usage guidelines.....	199, 374
destination address classification.....	374
destination statement.....	577
usage guidelines.....	515
destination-address statement	
CoS.....	578
usage guidelines.....	320
DiffServ.....	23, 69, 70
discard statement.....	578
usage guidelines.....	142
DLCIs	
excess bandwidth.....	323
documentation	
comments on.....	xxxii
DPCs	
applying traffic control profile examples.....	235
drop profile examples.....	234
hierarchical CoS introduction.....	230
hierarchy examples.....	231
interface examples.....	232
interface set examples.....	232
internal scheduler nodes.....	240
scheduler examples.....	233
scheduler map examples.....	234
traffic control profile examples.....	233
drop profiles	
default.....	255
example.....	257
drop-probability statement.....	579
usage guidelines.....	255
<i>See also</i> RED	
drop-profile statement.....	580
RED.....	580
<i>See also</i> RED	
usage guidelines.....	158
drop-profile-map statement.....	580
usage guidelines.....	170, 171
drop-profiles statement.....	581
usage guidelines.....	255
drop-timeout by forwarding class	
example configuration.....	154
drop-timeout statement.....	582
usage guidelines.....	154
DSCP.....	69, 70
for routing engine traffic.....	132
for VPLS.....	66
for VPLS, example.....	66
over Layer 3 VPNs.....	284
DSCP IPv6	
rewrites and forwarding class maps.....	131
dscp statement.....	583
usage guidelines.....	44, 50, 81, 263, 264, 321
dscp-code-point statement.....	586
dscp-ipv6 statement.....	587
usage guidelines.....	44, 50, 263, 264
E	
egress-policer-overhead statement.....	588
usage guidelines.....	379
egress-shaping-overhead statement.....	589
eight forwarding classes.....	134
example configuration.....	139
Enhanced IQ interfaces	
CoS and.....	327
Enhanced IQ PICs	
interface speeds.....	327
ToS translation.....	328
epd-threshold statement.....	590
usage guidelines.....	520
EQ DPCs	
rate limit.....	434
Ethernet	
ATM scheduler for VPLS.....	517, 519
Ethernet IQ2 PIC	
schedulers.....	218
Ethernet IQ2 PICs	
RTT delay buffer values.....	220
example	
classifiers for ATM.....	532
CoS classifiers configuration.....	547
CoS configuration.....	547
CoS inputs and outputs.....	9
CoS IPv6 configuration.....	552
CoS on aggregated interfaces.....	506
CoS per-priority shaping on Trio MPC/MIC	
interfaces.....	468
CoS policy configuration.....	552
CoS rewrite configuration.....	547

CoS schedulers configuration.....	547	filter statement.....	603
drop profiles.....	257	firewall.....	604
multifield classifier for destination		usage guidelines.....	111
address.....	78	firewall statement.....	605
policers and shaping rate changes.....	88	usage guidelines.....	95, 96
weighted RED.....	259	fixed classification.....	129
excess bandwidth		font conventions.....	xxxi
DLCIs.....	323	forwarding class	
MS-PIC.....	220	for routing engine traffic.....	132
excess bandwidth distribution		forwarding class maps	
MPC/MIC interfaces.....	461, 462	DSCP IPv6 rewrites.....	131
excess bandwidth sharing		forwarding classes.....	123
SONET/SDH OC48/STM16 IQE PIC.....	396	assigning multiple to a queue.....	134
SONET/SDH OC48/STM16 IQE PICs.....	387	assigning multiple to single queue.....	138
excess-bandwidth statement		assigning to an interface.....	129
configuration guidelines.....	333	classifying packets by egress interface.....	129
excess-bandwidth-share statement.....	591	configuring up to 16.....	134
usage guidelines.....	440	example configuration.....	139
excess-priority statement	592	default settings.....	126
usage guidelines.....	332	defining custom.....	128
excess-rate statement	593	fragmentation.....	151
usage guidelines.....	332	overriding fabric priority queuing.....	133
excess-rate-high statement.....	594	overview.....	123
excess-rate-low statement.....	594	forwarding policy options.....	141
EXP bits.....	261, 541	CoS-based forwarding.....	141
rewriting.....	262	forwarding, next-hop selection.....	141
exp statement.....	595	overriding the input classification.....	144
usage guidelines.....	44, 50, 263, 264	forwarding-class aliases.....	134
exp-push-push-push statement.....	596	forwarding-class statement.....	606, 609
usage guidelines.....	278	usage guidelines.....	133, 134, 152, 321, 520
exp-swap-push-push statement.....	597	forwarding-classes statement.....	611
usage guidelines.....	278	usage guidelines.....	128, 134
explicit-null statement		forwarding-classes-interface-specific	
with MPLS EXP classifiers.....	63	statement.....	612
F		usage guidelines.....	129
fabric priority queuing.....	217	forwarding-policy statement.....	613
overriding.....	133	usage guidelines.....	142
fabric statement.....	598	four loss priorities.....	95, 96
usage guidelines.....	217	fragment-threshold statement	
family statement		LSQ.....	614
ATM interfaces.....	599	usage guidelines.....	152
usage guidelines.....	515	fragmentation	
multifield classifier		example configuration.....	153
usage guidelines.....	76	forwarding classes.....	151
multifield classifiers.....	600	fragmentation-map statement.....	615
fill-level statement.....	601	usage guidelines.....	153
usage guidelines.....	255	fragmentation-maps statement.....	616
		usage guidelines.....	152

frame relay custom rewrite rule	
IQE PIC.....	361
frame relay default rewrite rule	
IQE PIC.....	360
frame-relay-de statement	
assigning to an interface.....	617
defining loss priority maps.....	618
defining loss priority rewrites.....	619
from statement	
CoS.....	620
usage guidelines.....	318
stateful firewall	
usage guidelines.....	319
ftp statement.....	620
usage guidelines.....	321
G	
Gigabit Ethernet IQ interfaces	
CoS.....	188
buffer sizes.....	160, 211
guaranteed rate.....	207
configuring with a shaping rate.....	380
guaranteed-rate statement.....	621
usage guidelines.....	207, 374
H	
hardware	
CoS capabilities and limitations.....	289
Enhanced Queuing DPC.....	431
hierarchical scheduling	
aggregated Ethernet interfaces.....	236, 237
Enhanced IQ interfaces.....	327
Trio MPC/MIC interfaces.....	449
hierarchical-scheduler statement.....	622
high-plp-max-threshold statement.....	623
usage guidelines.....	516
high-plp-threshold statement.....	623
usage guidelines.....	516
host outbound traffic	
configuring IEEE 802.1p field.....	282
egress rewrite rules for IEEE 802.1p field.....	283
global default IEEE 802.1p value.....	282
host-outbound traffic statement.....	624
I	
IEEE 802.1ad	
CoS classification of traffic.....	65
IEEE 802.1p inheritance	
swap-by-poppush statement.....	89
transparent statement.....	89
transparent tag.....	89
IEEE 802p.1 field	
configuring host outbound traffic.....	282
egress rewrite rules.....	283
global default value.....	282
ieee-802.1 statement.....	626
classifier on physical interface.....	625
rewrite rules on logical interface.....	627
rewrite rules on physical interface.....	628
usage guidelines.....	263
ieee-802.1ad statement.....	629
if-exceeding statement.....	630
import statement.....	631
usage guidelines.....	44
in-the-box applications.....	23
inet-precedence statement.....	632
usage guidelines.....	44, 50, 263, 264
ingress CoS	
on Enhanced Queuing DPC.....	445
on MPC/MIC Interfaces.....	491
ingress-policer-overhead statement.....	634
usage guidelines.....	379
ingress-shaping-overhead statement.....	634
usage guidelines.....	530
input-excess-bandwidth-share statement.....	635
usage guidelines.....	445
input-policer statement.....	636
input-scheduler-map statement.....	637
usage guidelines.....	376
input-shaping-rate statement.....	638
usage guidelines.....	379
input-three-color statement.....	640
input-traffic-control-profile statement.....	641
usage guidelines.....	374
input-traffic-control-profile-remaining	
statement.....	642
usage guidelines.....	445
intelligent oversubscription	
Trio MPC/MIC interfaces.....	489
interface-set statement.....	645
interfaces	
aggregated Ethernet and SONET/SDH.....	503
aggregated Ethernet and SONET/SDH	
example.....	506

ATM, VC tunnel CoS.....	515	IRB statement	
egress queues.....	522	usage guidelines.....	300
linear RED profiles.....	516	irb statement	
scheduler maps.....	520	CoS.....	647
scheduling on the logical interface.....	528		
scheduling priority.....	527	L	
CoS classifiers on.....	44	Layer 2 policer	
CoS limitations.....	504	applying to interface.....	112
Enhanced IQ CoS.....	327	example configurations.....	112
link services.....	152	Layer 3 VPN	
Trio MPC/MIC CoS.....	449	multifield classification.....	81
without CoS support.....	25	layer2-policer statement.....	648
interfaces statement		usage guidelines.....	112
CoS.....	643	limitations	
usage guidelines.....	263	tricolor marking.....	101
internal-node statement.....	645	linear-red-profile statement.....	649
usage guidelines.....	240	usage guidelines.....	520
interpolate statement.....	646	linear-red-profiles statement.....	650
usage guidelines.....	255	usage guidelines.....	516
introduction		link services interfaces.....	152
hierarchical schedulers.....	230	CoS components.....	152
IPsec		logical bandwidth policer	
and CoS.....	311	example.....	86
IPv4 or IPv6 packets		logical interface (aggregate) policer	
overriding input classification.....	144	configuration statement for.....	651
IPv6		logical interface-policer statement.....	651
DSCP rewrites and forwarding class maps.....	131	logical tunnel interfaces.....	479
Ipv6		logical-bandwidth-policer statement	
CoS configuration example.....	552	usage guidelines.....	86
IQ2 interfaces		logical-interface-policer statement	
shared resources example.....	382	usage guidelines.....	108
IQ2 PICs		loss-priority statement.....	652
enhanced.....	363	usage guidelines.....	44
rate limit.....	365	loss-priority-maps statement.....	655
IQ2E PICs		assigning to Interface.....	656
rate limit.....	365	loss-priority-rewrites statement.....	657
IQE PIC		assigning to Interface.....	658
excess bandwidth.....	343	low-plp-max-threshold statement.....	658
frame relay custom rewrite rule.....	361	usage guidelines.....	516
frame relay default rewrite rule.....	360	low-plp-threshold statement.....	659
interface modes.....	337	usage guidelines.....	516
queue default rates.....	341	lsp-next-hop statement.....	659
traffic calculation.....	335	usage guidelines.....	142
Traffic calculation.....	335	LSPs	
traffic terminology.....	335	CoS values.....	541
IQE PICs		M	
excess bandwidth sharing.....	332	M320 router	
L2 policing.....	356	FPCs and CoS.....	298
low latency static policer.....	359		

manually	
comments on.....	xxxii
match-direction statement	
CoS.....	660
usage guidelines.....	320
max-burst-size statement.....	660
max-queues-per-interface statement.....	661
usage guidelines.....	136
maximum delay per queue.....	170
MDRR	
on Enhanced Queuing DPC.....	438
member-link-scheduler	
usage guidelines.....	508
member-link-scheduler statement.....	662
mode statement.....	662
usage guidelines.....	530
MPC and MIC interfaces	
CoS overview.....	450
MPC interfaces	
shaping granularities.....	451
MPC/MIC interfaces	
burst-size.....	475
excess bandwidth distribution.....	461, 462
per-priority scheduling.....	464
MPLS	
CoS values.....	541
EXP bits.....	541
with CoS.....	541
MPLS EXP classifiers	
for explicit-null labels.....	63
routing instances.....	59
example configuration.....	61
MS-PIC	
excess bandwidth.....	220
transmit rate limiting.....	220
multifield classifier	
CoS.....	76
example configuration for destination	
address.....	78
multilink-class statement.....	663
usage guidelines.....	152
Multiservices PIC	
CoS.....	317
DLCI excess bandwidth.....	323
Multiservices PICs	
CoS and.....	311
ToS translation.....	325
MX Series QoS FAQs.....	494
MX Series routers	
CoS.....	431, 435, 437, 438, 440
CoS capabilities and limits.....	300
IRB statement.....	300
N	
NAT	
CoS configuration.....	317
network packet flow	
CoS.....	4
next-hop selection	
CoS forwarding example configuration.....	147
CoS forwarding for IPv6.....	148
example configuration.....	145
next-hop statement.....	663
usage guidelines.....	142
next-hop-map statement.....	664
usage guidelines.....	142
no-fragmentation statement.....	665
usage guidelines.....	152
no-per-unit-scheduler statement.....	666
non-lsp-next-hop statement.....	665
usage guidelines.....	142
nonqueuing	
bandwidth sharing examples.....	247
bandwidth sharing overview.....	245
bandwidth sharing rate limits.....	246
O	
one-rate four-color marking.....	95, 96
output-forwarding-class-map statement.....	666
usage guidelines.....	129
output-policer statement.....	667
output-three-color statement.....	668
output-traffic-control-profile statement.....	669
usage guidelines.....	223, 374
output-traffic-control-profile-remaining	
statement.....	670
usage guidelines.....	237
overhead-accounting statement.....	671
oversubscription.....	199, 363
overview	
CoS.....	3
CoS inputs and outputs.....	9
forwarding classes.....	123
packet loss priority.....	256

P

packet flow	
CoS on J Series router.....	11
CoS on M Series router.....	11
CoS on MX Series router.....	14
CoS on MX Series router example.....	16
CoS on T Series router.....	17
CoS process.....	20
CoS within routers.....	10
packet flow example	
CoS process.....	22
packet forwarding component	
CoS queues.....	211
packet header bits	
rewritten.....	265
packet loss priority	
overview.....	256
parentheses, in syntax descriptions.....	xxxii
peak-rate statement.....	670
per-priority scheduling	
MPC/MIC interfaces.....	464
per-session-scheduler statement.....	672
per-unit scheduling.....	188
on channelized IQ interfaces.....	195
per-unit scheduling for GRE tunnels using IQ2 and IQ2E PICs.....	377
per-unit-scheduler statement.....	673
usage guidelines.....	188
PICs	
and hierarchical schedulers.....	223
and hierarchical terms.....	223
CoS features compared.....	304
IQ2 unclassified traffic	237
queuing compared.....	306
schedulers compared.....	305
ToS translation.....	68
PIR.....	199
configuring with CIR.....	380
platform support	
priority scheduling.....	176
tricolor marking.....	98
PLP See packet loss priority	
plp-copy-all.....	674
plp-to-clp statement.....	674
usage guidelines.....	528
plp1 statement	
usage guidelines.....	520

policer	
IQE interfaces.....	359
Layer 2	
applying to interface.....	112
example configurations.....	112
overview.....	96
policer overhead	
configuring.....	379
policer statement	
configuring.....	676
policers	
and shaping rate changes.....	87, 88
policing action statement.....	678
priority	
CoS propagation.....	242
priority mapping	
SONET/SDH OC48/STM16 IQE PIC.....	394
priority queuing	
CoS scheduling.....	175
defaults.....	217
priority statement.....	679
usage guidelines.....	175
ATM scheduler map.....	520
fabric priority queuing.....	133, 217
priority, CoS	
configuration example.....	178
protocol statement.....	683
usage guidelines.....	275
protocols	
changing CoS queue assignments.....	303
default CoS queue assignments.....	301
pseudowires.....	479

Q

q-pic-large-buffer statement.....	685
usage guidelines.....	162
queue level	
bandwidth sharing.....	245
queue statement.....	686
usage guidelines.....	128, 134
queue-depth statement.....	687
usage guidelines.....	516
queue-num statement	
usage guidelines.....	134
queues	
default CoS protocol assignments.....	301
queuing	
PICs compared.....	306
queuing priority, CoS.....	175

R

random early detection mechanism See RED

rate limit

EQ DPC interfaces.....	434
IQ2 interfaces.....	365
IQ2E interfaces.....	365
SONET/SDH OC48/STM16 IQE interfaces.....	409

RED

drop-probability statement usage guidelines.....	255
drop-profiles statement usage guidelines.....	255
dropping packets.....	170, 171
weighted configuring.....	258

RED buffer occupancy weight

configuring.....	258
------------------	-----

RED, weighted

example.....	259
--------------	-----

red-buffer-occupancy statement.....688

usage guidelines.....	258
-----------------------	-----

reflexive | reverse statement.....689

usage guidelines.....	322
-----------------------	-----

replicate

scheduler mode.....	662
---------------------	-----

restricted-queues statement.....689

usage guidelines.....	138
-----------------------	-----

reverse statement

usage guidelines.....	322
-----------------------	-----

rewrite rules.....261

applying a default.....	263
-------------------------	-----

applying to VLAN tags.....	271, 273
----------------------------	----------

example configuration.....	272, 273
----------------------------	----------

assigning to interface.....	266
-----------------------------	-----

CoS.....	262
----------	-----

defining custom.....	264
----------------------	-----

EXP bits.....	274
---------------	-----

rewriting three labels.....	278
-----------------------------	-----

 IEEE bits

applying to VLAN tags.....	271, 273
----------------------------	----------

example configuration.....	272, 273
----------------------------	----------

rewriting with MPLS value.....	280
--------------------------------	-----

IPv6 packets.....	263
-------------------	-----

MPLS EXP and IPv4.....	275
------------------------	-----

example configuration.....	276
----------------------------	-----

rewrite-rules statement.....690, 692

usage guidelines.....	263
-----------------------	-----

rewrites

DSCP IPv6 and forwarding class maps.....	131
--	-----

rewriting

CoS services PICs.....	323
------------------------	-----

packet header bits.....	262, 265
-------------------------	----------

RFC 2698.....95, 96

routing engine traffic

assigning forwarding class.....	132
---------------------------------	-----

DSCP.....	132
-----------	-----

routing instances

MPLS EXP classifier.....	59
--------------------------	----

example configuration.....	61
----------------------------	----

routing-instance statement

usage guidelines.....	59
-----------------------	----

routing-instances statement.....693

usage guidelines.....	59
-----------------------	----

rtvbr statement.....694

usage guidelines.....	528
-----------------------	-----

rule statement

CoS.....	695
----------	-----

usage guidelines.....	318
-----------------------	-----

rule-set statement

CoS.....	696
----------	-----

usage guidelines.....	323
-----------------------	-----

S

scale

scheduler mode.....	662
---------------------	-----

scheduler

shared input.....	374
-------------------	-----

scheduler maps

applying to physical interfaces.....	180
--------------------------------------	-----

scheduler modes

on aggregated interfaces.....	508
-------------------------------	-----

replicate or scale.....	508
-------------------------	-----

scheduler node scaling

Trio MPC/MIC interfaces.....	454
------------------------------	-----

scheduler statement.....697

usage guidelines.....	217
-----------------------	-----

scheduler-map statement.....698

usage guidelines.....	181, 188, 217, 374
-----------------------	--------------------

scheduler-map-chassis statement.....700

usage guidelines.....	211
-----------------------	-----

scheduler-maps statement

for ATM2 IQ interfaces.....	701
-----------------------------	-----

usage guidelines.....	520
-----------------------	-----

for most non-ATM2 IQ interfaces.....	702
--------------------------------------	-----

usage guidelines.....	179
-----------------------	-----

schedulers	
applying traffic control profile examples.....	235
drop profile examples.....	234
Ethernet IQ2 PIC.....	218
for ATM and VPLS.....	517, 519
hierarchical.....	223
hierarchical examples.....	233
hierarchical introduction.....	230
hierarchical terms.....	223
hierarchy examples.....	231
interface	
configuration example.....	219
interface examples.....	232
interface set application.....	228
interface set caveats.....	228
interface set configuration.....	226
interface set examples.....	232
internal nodes.....	240
PICs compared.....	305
PIR-only and CIR mode.....	241
priority propagation.....	242
scheduler map examples.....	234
traffic control profile examples.....	233
unclassified traffic and.....	237
schedulers statement.....	703
usage guidelines.....	158, 218
scheduling.....	158
associating with an interface.....	181
associating with DLCI or VLAN.....	188
example configuration.....	193
associating with fabric priority.....	217
example configuration.....	217
associating with physical interface.....	181
buffer size.....	160
for NxDS0 interfaces.....	165
for slower interfaces.....	162, 167
configuration example.....	193
configuring a map.....	179
default settings.....	159
drop profile.....	171
maximum delay per queue.....	170
packet forwarding component.....	211
assigning custom.....	212
example configuration.....	213
priority	
example configuration.....	178
hardware mappings.....	177
priority queuing.....	175
strict-high priority.....	178
transmission rate.....	172
scheduling and shaping	
SONET/SDH OC48/STM16 IQE PICs.....	387
services	
AS PIC	
CoS configuration.....	317
AS PIC CoS.....	317
Multiservices PIC	
CoS configuration.....	317
Multiservices PIC CoS.....	317
services statement	
CoS.....	704
usage guidelines.....	317
shaping	
calculations.....	182
Gigabit Ethernet IQ2 PICs and.....	373
input and output.....	363
output	
example configuration.....	183
for DLCI or VLAN.....	188
for physical interface.....	181
shared.....	363
with a guaranteed rate.....	380
shaping rate	
applying to physical interfaces on T4000	
routers explained.....	197
changes and policers.....	87, 88
configuring for physical interfaces on T4000	
routers	198
shaping statement.....	705
usage guidelines.....	528
shaping-rate statement.....	706
usage guidelines.....	181, 188, 374
shaping-rate-excess-high statement.....	711
usage guidelines.....	464
shaping-rate-excess-low statement.....	712
usage guidelines.....	464
shaping-rate-priority-high statement.....	713
usage guidelines.....	464
shaping-rate-priority-low statement.....	714
usage guidelines.....	464
shaping-rate-priority-medium statement.....	715
usage guidelines.....	464
shared resources	
IQ2 interfaces example.....	382
shared scheduling.....	363
shared-bandwidth-policer statement.....	716
shared-instance statement.....	716

- shared-scheduler statement.....717
 - usage guidelines.....374
 - signaled LSPs
 - CoS values.....541
 - simple filter
 - on Enhanced Queuing DPC.....435
 - rules.....84
 - simple-filter statement
 - interfaces.....718
 - usage guidelines.....85
 - sip statement.....720
 - usage guidelines.....321
 - SONET/SDH OC48/STM16 IQE PIC
 - configuring CIR.....419
 - configuring PIR.....419
 - configuring rate limits.....418
 - configuring transmit rate.....398, 402
 - configuring WRED.....420
 - forwarding class to queue mapping.....397
 - ingress rewrite.....396
 - MDRR.....396, 420
 - priority mapping.....409, 413
 - scheduling.....409
 - scheduling and shaping.....391
 - shaping.....409
 - translation tables.....397
 - transmit-rate.....412
 - SONET/SDH OC48/STM16 IQE PICs
 - egress rewrite.....396
 - fixed classification.....390
 - source-address statement
 - CoS.....720
 - usage guidelines.....320
 - stateful firewall
 - CoS configuration.....317
 - strict-high priority, explained.....178
 - support, technical See technical support
 - sustained-rate statement.....721
 - swap-by-poppush statement.....88, 89
 - syntax conventions.....xxxi
 - syslog statement
 - CoS.....721
 - usage guidelines.....321
 - system-defaults statement.....722
- T**
- technical support
 - contacting JTAC.....xxxiii
 - term statement
 - CoS.....723
 - usage guidelines.....318
 - firewall
 - normal filter.....724
 - simple filter.....725
 - usage guidelines.....110
 - then statement
 - CoS.....726
 - usage guidelines.....318
 - stateful firewall
 - usage guidelines.....319
 - three-color-policer statement.....727, 728
 - usage guidelines.....108
 - ToS translation
 - Multiservices PICs.....325
 - ToS translation table
 - SONET/SDH OC48/STM16 IQE PIC.....394
 - traffic-control-profiles statement.....729
 - usage guidelines.....199, 207, 374
 - traffic-manager statement.....730
 - translation-table statement.....732
 - usage guidelines.....328, 397
 - transmission rate, CoS.....172
 - transmit rate limiting
 - MS-PIC.....220
 - transmit-rate statement.....733
 - usage guidelines.....172
 - transmit-weight statement.....735
 - usage guidelines.....520
 - transparent statement.....88, 89
 - CoS.....735
 - tri-color statement.....736
 - usage guidelines.....108
 - tricolor marking
 - architecture.....99
 - filter, applying to.....110
 - limitations.....101
 - platform support.....98
 - single-rate
 - color-aware mode.....102
 - color-blind mode.....102
 - two-rate
 - color-aware mode.....105
 - color-blind mode.....105
 - tricolor marking policer.....95, 96
 - configuring.....108
 - enabling.....108
 - example configuration.....110, 111, 116

filter, applying to.....	110
interface, applying to.....	111
verifying your configuration.....	116
with BA classifier.....	113
with drop-profile map.....	115
with multifield classifier.....	113
with rewrite rule.....	115
Trio chipset FAQs.....	307
Trio MPC/MIC interfaces	
CoS and.....	449
CoS per-priority shaping.....	468
intelligent oversubscription.....	489
scheduler node scaling.....	454
VLAN shaping on aggregated interfaces.....	187
tunnel interfaces	
CoS for.....	312
tunnels	
CoS and.....	311
CoS and IPsec.....	311
two-rate tricolor marking.....	95, 96
configuring the policer.....	108
enabling.....	108
example configuration.....	110, 111, 116
interface, applying to.....	111
verifying your configuration.....	116
with BA classifier.....	113
with drop-profile map.....	115
with multifield classifier.....	113
with rewrite rule.....	115

U

unit statement	
CoS.....	737
usage guidelines.....	263
usage guidelines.....	44

V

vbr statement.....	738
usage guidelines.....	528
VC tunnel CoS	
ATM2 IQ interfaces.....	515
vc-cos-mode statement.....	739
usage guidelines.....	527
vci statement.....	740
usage guidelines.....	529
video statement.....	741
usage guidelines.....	321
VLAN shaping on aggregated interfaces	
Trio MPC/MIC interfaces.....	187

VLAN tag	
BA classifiers.....	57
VLAN tagging	
swap-by-poppush statement.....	88
transparent statement.....	88
VLAN tags	
application of rewrite rules to.....	271, 273
example configuration.....	272, 273
vlan-tag statement.....	741
usage guidelines.....	271, 273
voice statement.....	742
usage guidelines.....	321
VoIP traffic classification.....	78
VPLS	
ATM scheduler.....	517, 519
BA classifiers.....	57
default classifiers for.....	26
with DSCP.....	66
with DSCP, example.....	66

W

weighted RED	
configuring.....	258
example.....	259
WRED	
on Enhanced Queuing DPC.....	437
on SONET/SDH OC48/STM16 IQE PIC.....	411
SONET/SDH OC48/STM16 IQE PIC.....	396

Index of Statements and Commands

A

action statement.....	553
address statement.....	554
adjust-minimum statement.....	554
adjust-percent statement.....	555
application-profile statement.....	556
application-sets statement	
CoS.....	557
applications statement	
CoS.....	557
atm-options statement.....	558
atm-policer statement.....	560
atm-scheduler-map statement	561
atm-service statement.....	561

B

buffer-size statement.....	562
----------------------------	-----

C

cbr statement.....	563
cdvt statement.....	564
class statement.....	565
class-of-service statement.....	566
classification-override statement.....	567
classifiers statement.....	568
code-point statement.....	571
code-point-aliases statement.....	572
code-points statement.....	573
copy-plp-all statement.....	573
copy-tos-to-outer-ip-header statement.....	574
CoS IEEE 802.1p statements	
default.....	575
host-outbound-traffic.....	624
ieee-802.1.....	626
rewrite-rules.....	692

D

data statement.....	574
default traffic statement.....	575
delay-buffer-rate statement.....	576
destination statement.....	577
destination-address statement	
CoS.....	578
discard statement.....	578
drop-probability statement.....	579
drop-profile statement.....	580
drop-profile-map statement.....	580
drop-profiles statement.....	581
drop-timeout statement.....	582
dscp statement.....	583
dscp-code-point statement.....	586
dscp-ipv6 statement.....	587

E

egress-policer-overhead statement.....	588
egress-shaping-overhead statement.....	589
epd-threshold statement.....	590
excess-bandwidth-share statement.....	591
excess-priority statement.....	592
excess-rate statement.....	593
excess-rate-high statement.....	594
excess-rate-low statement.....	594
exp statement.....	595
exp-push-push-push statement.....	596
exp-swap-push-push statement.....	597

F

fabric statement.....	598
family statement	
ATM interfaces.....	599
multifield classifiers.....	600
fill-level statement.....	601
filter statement.....	603
firewall.....	604
firewall statement.....	605
forwarding-class statement.....	606, 609
forwarding-classes statement.....	611
forwarding-classes-interface-specific	
statement.....	612
forwarding-policy statement.....	613
fragment-threshold statement	
LSQ.....	614
fragmentation-map statement.....	615
fragmentation-maps statement.....	616

frame-relay-de statement	
assigning to an interface.....	617
defining loss priority maps.....	618
defining loss priority rewrites.....	619
from statement	
CoS.....	620
ftp statement.....	620

G

guaranteed-rate statement.....	621
--------------------------------	-----

H

hierarchical-scheduler statement.....	622
high-plp-max-threshold statement.....	623
high-plp-threshold statement.....	623
host-outbound traffic statement.....	624

I

ieee-802.1 statement.....	626
classifier on physical interface.....	625
rewrite rules on logical interface.....	627
rewrite rules on physical interface.....	628
ieee-802.1ad statement.....	629
if-exceeding statement.....	630
import statement.....	631
inet-precedence statement.....	632
ingress-policer-overhead statement.....	634
ingress-shaping-overhead statement.....	634
input-excess-bandwidth-share statement.....	635
input-policer statement.....	636
input-scheduler-map statement.....	637
input-shaping-rate statement.....	638
input-three-color statement.....	640
input-traffic-control-profile statement.....	641
input-traffic-control-profile-remaining	
statement.....	642
interface-set statement.....	645
interfaces statement	
CoS.....	643
internal-node statement.....	645
interpolate statement.....	646
irb statement	
CoS.....	647

L

layer2-policer statement.....	648
linear-red-profile statement.....	649
linear-red-profiles statement.....	650
logical interface-policer statement.....	651

loss-priority statement.....	652
loss-priority-rewrites statement.....	657
assigning to interface.....	658
low-plp-max-threshold statement.....	658
low-plp-threshold statement.....	659
lsp-next-hop statement.....	659

M

match-direction statement	
CoS.....	660
max-burst-size statement.....	660
max-queues-per-interface statement.....	661
member-link-scheduler statement.....	662
mode statement.....	662
multilink-class statement.....	663

N

next-hop statement.....	663
next-hop-map statement.....	664
no-fragmentation statement.....	665
no-per-unit-scheduler statement.....	666
non-lsp-next-hop statement.....	665

O

output-forwarding-class-map statement.....	666
output-policer statement.....	667
output-three-color statement.....	668
output-traffic-control-profile statement.....	669
output-traffic-control-profile-remaining	
statement.....	670
overhead-accounting statement.....	671

P

peak-rate statement.....	670
per-session-scheduler statement.....	672
per-unit-scheduler statement.....	673
plp-copy-all.....	674
plp-to-clp statement.....	674
policer statement	
configuring.....	676
policing action statement.....	678
priority statement.....	679
protocol statement.....	683

Q

q-pic-large-buffer statement.....	685
queue statement.....	686
queue-depth statement.....	687

R

red-buffer-occupancy statement.....	688
reflexive reverse statement.....	689
restricted-queues statement.....	689
rewrite-rules statement.....	690, 692
routing-instances statement.....	693
rtvbr statement.....	694
rule statement	
CoS.....	695
rule-set statement	
CoS.....	696

S

scheduler statement.....	697
scheduler-map statement.....	698
scheduler-map-chassis statement.....	700
scheduler-maps statement	
for ATM2 IQ interfaces.....	701
for most non-ATM2 IQ interfaces.....	702
schedulers statement.....	703
services statement	
CoS.....	704
shaping statement.....	705
shaping-rate statement.....	706
shaping-rate-excess-high statement.....	711
shaping-rate-excess-low statement.....	712
shaping-rate-priority-high statement.....	713
shaping-rate-priority-low statement.....	714
shaping-rate-priority-medium statement.....	715
shared-bandwidth-policer statement.....	716
shared-instance statement.....	716
shared-scheduler statement.....	717
simple-filter statement	
interfaces.....	718
sip statement.....	720
source-address statement	
CoS.....	720
sustained-rate statement.....	721
syslog statement	
CoS.....	721
system-defaults statement.....	722

T

term statement	
CoS.....	723
firewall	
normal filter.....	724
simple filter.....	725

then statement	
CoS.....	726
three-color-policer statement.....	727, 728
traffic-control-profiles statement.....	729
traffic-manager statement.....	730
translation-table statement.....	732
transmit-rate statement.....	733
transmit-weight statement.....	735
transparent statement	
CoS.....	735
tri-color statement.....	736

U

unit statement	
CoS.....	737

V

vbr statement.....	738
vc-cos-mode statement.....	739
vci statement.....	740
video statement.....	741
vlan-tag statement.....	741
voice statement.....	742

