

Tracing Interface Operations



Published: 2013-02-14

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Tracing Interface Operations
Copyright © 2013, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	vii
	Documentation and Release Notes	vii
	Supported Platforms	vii
	Using the Examples in This Manual	viii
	Merging a Full Example	viii
	Merging a Snippet	ix
	Documentation Conventions	ix
	Documentation Feedback	xi
	Requesting Technical Support	xi
	Self-Help Online Tools and Resources	xi
	Opening a Case with JTAC	xii
Part 1	Overview	
Chapter 1	Tracing Interface Operations	3
	Tracing Interface Operations Overview	3
Part 2	Configuration	
Chapter 2	Tracing Interface Operations	7
	Monitoring a PPP Session	7
	Tracing Operations of the pppd Process	7
	Tracing Operations of an Individual Router Interface	9
	Tracing Operations of the Interface Process	9
Chapter 3	Network Interfaces Configuration Statements and Hierarchy	11
	[edit interfaces] Hierarchy Level	11
Chapter 4	Statement Summary	29
	fast-aps-switch	29
	traceoptions (Individual Interfaces)	30
	traceoptions (Interface Process)	32
Part 3	Administration	
Chapter 5	Monitoring Commands	37
	show interfaces (PPPoE)	38

Chapter 6	Command Summary	51
Part 4	Troubleshooting	
Chapter 7	Interface Diagnostics	55
	Interface Diagnostics	55
	Configuring Loopback Testing	55
	Interface Diagnostics	57
	Starting and Stopping a BERT Test	61
	Example: Configuring Bit Error Rate Testing	61
Part 5	Index	
	Index	65

List of Tables

	About the Documentation	vii
	Table 1: Notice Icons	ix
	Table 2: Text and Syntax Conventions	x
Part 3	Administration	
Chapter 5	Monitoring Commands	37
	Table 3: show interfaces (PPPoE) Output Fields	38
Part 4	Troubleshooting	
Chapter 7	Interface Diagnostics	55
	Table 4: Loopback Modes by Interface Type	56
	Table 5: BERT Capabilities by Interface Type	60

About the Documentation

- Documentation and Release Notes on page vii
- Supported Platforms on page vii
- Using the Examples in This Manual on page viii
- Documentation Conventions on page ix
- Documentation Feedback on page xi
- Requesting Technical Support on page xi

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- ACX Series
- M Series
- MX Series
- T Series
- J Series
- PTX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```


Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the CLI User Guide.

Documentation Conventions

Table 1 on page ix defines notice icons used in this guide.

Table 1: Notice Icons





Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page x defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies book names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

J-Web GUI Conventions

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Bold text like this	Represents J-Web graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of J-Web selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>

- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Tracing Interface Operations on page 3](#)

CHAPTER 1

Tracing Interface Operations

- [Tracing Interface Operations Overview on page 3](#)

Tracing Interface Operations Overview

You can trace the operations of individual router interfaces and those of the interface process (dcd). For a general discussion of tracing and of the precedence of multiple tracing operations, see the Junos OS System Basics Configuration Guide.

For information about the operations of Virtual Router Resolution Protocol (VRRP)-enabled interfaces, see the Junos OS High Availability Configuration Guide.

Related Documentation

- [Tracing Operations of an Individual Router Interface on page 9](#)
- [Tracing Operations of the Interface Process on page 9](#)

PART 2

Configuration

- [Tracing Interface Operations on page 7](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 11](#)
- [Statement Summary on page 29](#)

CHAPTER 2

Tracing Interface Operations

- [Monitoring a PPP Session on page 7](#)
- [Tracing Operations of the pppd Process on page 7](#)
- [Tracing Operations of an Individual Router Interface on page 9](#)
- [Tracing Operations of the Interface Process on page 9](#)

Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **monitor-session** statement.

```
[edit protocols ppp]
user@host# monitor-session (interface-name | all);
```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

Related Documentation [monitor-session](#)

Tracing Operations of the pppd Process

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code
- **mlppp**—Trace multilink point-to-point protocol code
- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code
- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related Documentation [traceoptions](#)

Tracing Operations of an Individual Router Interface

To trace the operations of individual router interfaces, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **traceoptions** option.

```
[edit interfaces interface-name]
user@host# edit traceoptions
```

3. Configure the tracing flag.

```
[edit interfaces interface-name traceoptions]
user@host# set flag flag-option
```

You can specify the following interface tracing flags:

- **all**—Trace all interface operations.
- **event**—Trace all interface events.
- **ipc**—Trace all interface interprocess communication (IPC) messages.
- **media**—Trace all interface media changes.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** files.

For more information about trace operations, see [“Tracing Operations of the Interface Process” on page 9](#).

Related Documentation

- [traceoptions on page 30](#)

Tracing Operations of the Interface Process

To trace the operations of the router or switch interface process, dcd, perform the following steps:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the **traceoptions** statement.

```
[edit interfaces]
user@host# edit traceoptions
```

3. Configure the **no-remote-trace** option to disable remote tracing.

```
[edit interfaces traceoptions]
user@host# set no-remote-trace
```

4. Configure the **file filename** option.

```
[edit interfaces traceoptions]  
user@host# edit file
```

5. Configure the **files number** option, **match regular-expression** option, **size size** option, and **world-readable | no-world-readable** option.

```
[edit interfaces traceoptions file]  
user@host# set files number  
user@host# set match regular-expression  
user@host# set size size  
user@host# set word-readable | no-world-readable
```

6. Configure the tracing flag.

```
[edit interfaces traceoptions]  
user@host# set flag flag-option
```

7. Configure the **disable** option in **flag flag-option** statement to disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

```
[edit interfaces traceoptions]  
user@host# set flag flag-option disable
```

You can specify the following flags in the **interfaces traceoptions** statement:

- **all**—Enable all configuration logging.
- **change-events**—Log changes that produce configuration events.
- **gres-events**—Log the events related to GRES.
- **resource-usage**—Log the resource usage for different states.
- **config-states**—Log the configuration state machine changes.
- **kernel**—Log configuration IPC messages to kernel.
- **kernel-detail**—Log details of configuration messages to kernel.
- **select-events**—Log the events on select state machine.

By default, interface process operations are placed in the file named `dcd` and three 1-MB files of tracing information are maintained.

For general information about tracing, see the tracing and logging information in the Junos OS System Basics Configuration Guide.

Related Documentation

- [Tracing Interface Operations Overview on page 3](#)
- [Tracing Operations of an Individual Router or Switch Interface](#)
- [traceoptions on page 32](#)

CHAPTER 3

Network Interfaces Configuration Statements and Hierarchy

- [\[edit interfaces\] Hierarchy Level](#) on page 11

[\[edit interfaces\] Hierarchy Level](#)

The statements at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level can also be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.



NOTE: The accounting-profile statement is an exception to this rule. The accounting-profile statement can be configured at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level, but it cannot be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
        }
        (revertive | non-revertive);
        periodic interval;
        system-priority priority;
      }
      link-protection;
      link-speed speed;
      (loopback | no-loopback);
      mc-ae{
```

```
chassis-id chassis-id;  
mc-ae-id mc-ae-id;  
mode (active-active | active-standby);  
redundancy-group group-id;  
status-control (active | standby);  
}  
minimum-links number;  
source-address-filter {  
    mac-address;  
}  
(source-filtering | no-source-filtering);  
}  
aggregated-sonet-options {  
    link-speed speed | mixed;  
    minimum-links number;  
}  
atm-options {  
    cell-bundle-size cells;  
    ilmi;  
    linear-red-profiles profile-name {  
        high-plp-max-threshold percent;  
        low-plp-max-threshold percent;  
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;  
    }  
    mpls {  
        pop-all-labels {  
            required-depth number;  
        }  
    }  
    pic-type (atm1 | atm2);  
    plp-to-clp;  
    promiscuous-mode {  
        vpi vpi-identifier;  
    }  
    scheduler-maps map-name {  
        forwarding-class class-name {  
            epd-threshold cells plp1 cells;  
            linear-red-profile profile-name;  
            priority (high | low);  
            transmit-weight (cells number | percent number);  
        }  
        vc-cos-mode (alternate | strict);  
    }  
    use-null-cw;  
    vpi vpi-identifier {  
        maximum-vcs maximum-vcs;  
        oam-liveness {  
            down-count cells;  
            up-count cells;  
        }  
        oam-period (seconds | disable);  
        shaping {  
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate  
                burst length);  
            queue-length number;  
        }  
    }
```



```

    }
  }
  clocking clock-source;
  data-input (system | interface interface-name);
  dce;
  serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
      control-signal (assert | de-assert | normal);
      cts (ignore | normal | require);
      dcd (ignore | normal | require);
      dsr (ignore | normal | require);
      dtr signal-handling-option;
      ignore-all;
      indication (ignore | normal | require);
      rts (assert | de-assert | normal);
      tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
      control-signal (assert | de-assert | normal);
      cts (ignore | normal | require);
      dcd (ignore | normal | require);
      dsr (ignore | normal | require);
      dtr signal-handling-option;
      ignore-all;
      indication (ignore | normal | require);
      rts (assert | de-assert | normal);
      tm (ignore | normal | require);
    }
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
  }
  description text;
  dialer-options {
    pool pool-name <priority priority>;
  }
  disable;
  ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
  }

```

```
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
}
flexible-vlan-tagging;
gigether-options {
    802.3ad aex;
    (asynchronous-notification | no-asynchronous-notification);
```

15

```
symmetry (symmetrical-config-and-operation |
symmetrical-config-asymmetrical-operation);
test-procedure {
    ima-test-start;
    ima-test-stop;
    interface name;
    pattern number;
    period number;
}
transmit-clock (common | independent);
version (1.0 |1.1);
}
ima-link-options group-id group-id;
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit unit-number | vlan-tags-outer vlan-tag);
    }
    interface interface-name {
        (unit unit-number);
    }
}
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    drop-timeout milliseconds;
    fragment-threshold bytes;
    cisco-interoperability send-lip-remove-link-for-link-reject;
```

```

hello-timer milliseconds;
link-layer-overhead percent;
lmi-type (ansi | itu | c-lmi);
minimum-links number;
mrru bytes;
n391 number;
n392 number;
n393 number;
red-differential-delay milliseconds;
t391 seconds;
t392 seconds;
yellow-differential-delay milliseconds;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multi-chassis-protection {
    peer a.b.c.d {
        interface interface-name;
    }
}
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
no-vpivci-swapping;
otn-options {
    fec (efec | gfec | none);
    (laser-enable | no-laser-enable);
    (line-loopback | no-line-loopback);
    pass-thru;
    rate (fixed-stuff-bytes | no-fixed-stuff-bytes | pass-thru);
    transmit-payload-type number;
    trigger (oc-lof | oc-lom | oc-los | oc-wavelength-lock | odu-ais | odu-bbe-th | odu-bdi
        | odu-es-th | odu-lck | odu-oci | odu-sd | odu-ses-th | odu-ttim | odu-uas-th |
        opu-ptm | otu-ais | otu-bbe-th | otu-bdi | otu-es-th | otu-fec-deg | otu-fec-exe |
        otu-iae | otu-sd | otu-ses-th | otu-ttim | otu-uas-th);
    tti;
}
optics-options {
    wavelength nm;
    alarm alarm-name {
        (syslog | link-down);
    }
    warning warning-name {
        (syslog | link-down);
    }
}
}

```

```
partition partition-number oc-slice oc-slice-range interface-type type;  
timeslots time-slot-range;  
passive-monitor-mode;  
per-unit-scheduler;  
ppp-options {  
    chap {  
        access-profile name;  
        default-chap-secret name;  
        local-name name;  
        passive;  
    }  
    compression {  
        acfc;  
        pfc;  
    }  
    dynamic-profile profile-name;  
    no-termination-request;  
    pap {  
        access-profile name;  
        local-name name;  
        local-password password;  
        compression;  
    }  
}  
psn-vcip psn-vci-identifier;  
psn-vpip psn-vpi-identifier;  
receive-bucket {  
    overflow (discard | tag);  
    rate percentage;  
    threshold bytes;  
}  
redundancy-options {  
    priority sp-fpc/pic/port;  
    secondary sp-fpc/pic/port;  
    hot-standby;  
}  
satop-options {  
    payload-size n;  
}  
schedulers number;  
serial-options {  
    clock-rate rate;  
    clocking-mode (dce | internal | loop);  
    control-polarity (negative | positive);  
    cts-polarity (negative | positive);  
    dcd-polarity (negative | positive);  
    dce-options {  
        control-signal (assert | de-assert | normal);  
        cts (ignore | normal | require);  
        dcd (ignore | normal | require);  
        dsr (ignore | normal | require);  
        dtr signal-handling-option;  
        ignore-all;  
        indication (ignore | normal | require);  
        rts (assert | de-assert | normal);  
        tm (ignore | normal | require);
```

```

}
dsr-polarity (negative | positive);
dte-options {
  control-signal (assert | de-assert | normal);
  cts (ignore | normal | require);
  dcd (ignore | normal | require);
  dsr (ignore | normal | require);
  dtr signal-handling-option;
  ignore-all;
  indication (ignore | normal | require);
  rts (assert | de-assert | normal);
  tm (ignore | normal | require);
}
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
services-options {
  inactivity-timeout seconds;
  open-timeout seconds;
  session-limit {
    maximum number;
    rate new-sessions-per-second;
  }
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}
shdsl-options {
  annex (annex-a | annex-b);
  line-rate line-rate;
  loopback (local | remote);
  snr-margin {
    current margin;
    snext margin;
  }
}
sonet-options {
  aggregate asx;
  aps {
    advertise-interval milliseconds;
    annex-b;
    authentication-key key;
    fast-aps-switch;
    force;
    hold-time milliseconds;
  }
}

```

```
    lockout;
    neighbor address;
    paired-group group-name;
    preserve-interface;
    protect-circuit group-name;
    request;
    revert-time seconds;
    switching-mode (bidirectional | unidirectional);
    working-circuit group-name;
}
bytes {
    c2 value;
    e1-quiet value;
    f1 value;
    f2 value;
    s1 value;
    z3 value;
    z4 value;
}
fcs (16 | 32);
loopback (local | remote);
mpls {
    pop-all-labels {
        required-depth number;
    }
}
path-trace trace-string;
(payload-scrambler | no-payload-scrambler);
rfc-2615;
trigger {
    defect ignore;
    hold-time up milliseconds down milliseconds;
}
vtmapping (itu-t | klm);
(z0-increment | no-z0-increment);
}
speed (10m | 100m | 1g | oc3 | oc12 | oc48);
stacked-vlan-tagging;
switch-options {
    switch-port port-number {
        (auto-negotiation | no-auto-negotiation);
        speed (10m | 100m | 1g);
        link-mode (full-duplex | half-duplex);
    }
}
}
t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
```



```

invert-data;
line-encoding (ami | b8zs);
loopback (local | payload | remote);
remote-loopback-respond;
start-end-flag (filler | shared);
timeslots time-slot-range;
}
t3-options {
  atm-encapsulation (direct | plcp);
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
  buildout feet;
  (cbit-parity | no-cbit-parity);
  compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
    value>;
  fcs (16 | 32);
  (feac-loop-respond | no-feac-loop-respond);
  idle-cycle-flag value;
  (long-buildout | no-long-buildout);
  (loop-timing | no-loop-timing);
  loopback (local | payload | remote);
  (mac | no-mac);
  (payload-scrambler | no-payload-scrambler);
  start-end-flag (filler | shared);
}
traceoptions {
  flag flag <flag-modifier> <disable>;
}
transmit-bucket {
  overflow discard;
  rate percentage;
  threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
  accept-source-mac {
    mac-address mac-address {
      policer {
        input cos-policer-name;
        output cos-policer-name;
      }
    }
  }
}
accounting-profile name;
advisory-options {
  downstream-rate rate;
  upstream-rate rate;
}
allow-any-vci;
atm-scheduler-map (map-name | default);
backup-options {
  interface interface-name;
}

```

```
}
bandwidth rate;
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
  rtp {
    f-max-period number;
    maximum-contexts number <force>;
    queues [ queue-numbers ];
    port {
      minimum port-number;
      maximum port-number;
    }
  }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
  underlying-interface interface-name;
}
description text;
interface {
  l2tp-interface-id name;
  (dedicated | shared);
}
dialer-options {
  activation-delay seconds;
  callback;
  callback-wait-period time;
  deactivation-delay seconds;
  dial-string [ dial-string-numbers ];
  idle-timeout seconds;
  incoming-map {
    caller (caller-id | accept-all);
    initial-route-check seconds;
    load-interval seconds;
    load-threshold percent;
    pool pool-name;
    redial-delay time;
    watch-list {
      [ routes ];
    }
  }
}
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
  activation-priority priority;
  bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
```

```

fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    down-count cells;
    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
        pap;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}

```

```
dynamic-profile profile-name;  
lcp-max-conf-req number;  
lcp-restart-timer milliseconds;  
loopback-clear-timer seconds;  
ncp-max-conf-req number;  
ncp-restart-timer milliseconds;  
}  
pppoe-options {  
    access-concentrator name;  
    auto-reconnect seconds;  
    (client | server);  
    service-name name;  
    underlying-interface interface-name;  
}  
proxy-arp;  
service-domain (inside | outside);  
shaping {  
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate  
    burst length);  
    queue-length number;  
}  
short-sequence;  
transmit-weight number;  
(traps | no-traps);  
trunk-bandwidth rate;  
trunk-id number;  
tunnel {  
    backup-destination address;  
    destination address;  
    key number;  
    routing-instance {  
        destination routing-instance-name;  
    }  
    source source-address;  
    ttl number;  
}  
vci vpi-identifier.vci-identifier;  
vci-range start start-vci end end-vci;  
vpi vpi-identifier;  
vlan-id number;  
vlan-id-list [vlan-id vlan-id-vlan-id];  
vlan-id-range number-number;  
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;  
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];  
family family {  
    accounting {  
        destination-class-usage;  
        source-class-usage {  
            direction;  
        }  
    }  
}  
access-concentrator name;  
address address {  
    destination address;  
}  
bundle ml-fpc/pic/port | ls-fpc/pic/port);
```

```

duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [ filter-names ];
        output filter-name;
    }
    output-list {
        [ filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
max-sessions number;
max-sessions-vs-a-ignore;
mtu bytes;
multicast-only;
negotiate-address;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name;
    mode loose;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-names <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);

```

```

translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
  profile-name | preferred-source-address address>;
address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
  multipoint-destination address {
    epd-threshold cells plp1 cells;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (seconds | disable);
    shaping {
      (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
        rate burst length);
      queue-length number;
    }
    vci vpi-identifier.vci-identifier;
  }
  preferred;
  primary;
  (vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
      hold-time seconds;
    }
    priority-number number;
    track {
      priority-cost seconds;
      priority-hold-time interface-name {
        bandwidth-threshold bits-per-second {
          priority;
        }
        interface priority;
      }
      route ip-address/mask routing-instance instance-name priority-cost cost;
    }
    virtual-address [ addresses ];
  }
}
}
}
}
}
}
}

```

- Related Documentation**
- *Junos OS Hierarchy and RFC Reference*
 - Junos® OS Ethernet Interfaces
 - Junos® OS Network Interfaces

CHAPTER 4

Statement Summary

fast-aps-switch

Syntax	fast-aps-switch;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.



NOTE:

- Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.
 - When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.
 - To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.
 - The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.
 - The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.
-

Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Reducing APS Switchover Time in Layer 2 Circuits

traceoptions (Individual Interfaces)

Syntax	<pre>traceoptions { file <i>filename</i> <files <i>name</i>> <size <i>size</i>> <world-readable no-world-readable>; flag <i>flag</i>; match; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i>]
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Access Routers.</p>
Description	<p>Define tracing operations for individual interfaces.</p> <p>To specify more than one tracing operation, include multiple flag statements.</p> <p>The interfaces traceoptions statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system syslog file in the directory /var/log.</p>
Default	If you do not include this statement, no interface-specific tracing operations are performed.
Options	<p>file name—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log. By default, interface process tracing output is placed in the file files number—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.dcd.</p> <p>match—(Optional) Regular expression for lines to be traced.</p> <p>no-world-readable—(Optional) Prevent any user from reading the log file.</p> <p>world-readable—(Optional) Allow any user to read the log file.</p> <p>size size—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches its maximum size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The following are the interface-specific tracing options.</p> <ul style="list-style-type: none">• all—All interface tracing operations• event—Interface events

- **ipc**—Interface interprocess communication (IPC) messages
- **media**—Interface media changes
- **q921**—Trace ISDN Q.921 frames
- **q931**—Trace ISDN Q.931 frames

Required Privilege Level	interface—To view this statement in the configuration.
	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• Tracing Operations of an Individual Router or Switch Interface

traceoptions (Interface Process)

Syntax	<pre>traceoptions { file <filename> <files number> <match regular-expression> <size size> <world-readable no-world-readable>; flag flag <disable>; no-remote-trace; }</pre>
Hierarchy Level	[edit interfaces]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
Description	Define tracing operations for the interface process (dcd).
Default	If you do not include this statement, no interface-specific tracing operations are performed.
Options	<p>disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as all.</p> <p>filename—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log. By default, interface process tracing output is placed in the file dcd.</p> <p>files number—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the size option.</p> <p>Range: 2 through 1000</p> <p>Default: 3 files</p> <p>flag—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. You can include the following flags:</p> <ul style="list-style-type: none">• all• change-events—Log changes that produce configuration events• config-states—Log the configuration state machine changes• kernel—Log configuration IPC messages to kernel• kernel-detail—Log details of configuration messages to kernel <p>no-world-readable—(Optional) Disallow any user to read the log file.</p>

size *size*—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

Syntax: **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

Range: 10 KB through the maximum file size supported on your router

Default: 1 MB

world-readable—(Optional) Allow any user to read the log file.

match *regex*—(Optional) Refine the output to include only those lines that match the given regular expression.

Required Privilege	interface—To view this statement in the configuration.
Level	interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"> • Tracing Operations of the Interface Process on page 9

PART 3

Administration

- [Monitoring Commands on page 37](#)
- [Command Summary on page 51](#)

CHAPTER 5

Monitoring Commands

show interfaces (PPPoE)

Syntax	<pre>show interfaces pp0.logical <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced before Junos OS Release 7.4.
Description	(J Series Services Routers, M120 routers, M320 routers, and MX Series routers only) Display status information about the PPPoE interface.
Options	<p>pp0.logical—Display standard status information about the PPPoE interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about PPPoE interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display PPPoE interface statistics.</p>
Required Privilege Level	view
List of Sample Output	<p>show interfaces (PPPoE) on page 45</p> <p>show interfaces (PPPoE over Aggregated Ethernet) on page 45</p> <p>show interfaces brief (PPPoE) on page 45</p> <p>show interfaces detail (PPPoE) on page 46</p> <p>show interfaces detail (PPPoE on J Series Services Routers) on page 46</p> <p>show interfaces extensive (PPPoE on M120 and M320 Routers) on page 47</p>
Output Fields	Table 3 on page 38 lists the output fields for the show interfaces (PPPoE) command. Output fields are listed in the approximate order in which they appear.

Table 3: show interfaces (PPPoE) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under Common Output Fields Description.	All levels
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Physical interface type (PPPoE).	All levels
Link-level type	Encapsulation on the physical interface (PPPoE).	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source. It can be Internal or External .	All levels
Speed	Speed at which the interface is running.	All levels
Device flags	Information about the physical device. Possible values are described in the "Device Flags" section under Common Output Fields Description.	All levels
Interface flags	Information about the interface. Possible values are described in the "Interface Flags" section under Common Output Fields Description.	All levels
Link type	Physical interface link type: full duplex or half duplex .	All levels
Link flags	Information about the interface. Possible values are described in the "Link Flags" section under Common Output Fields Description.	All levels
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Physical Info	Physical interface information.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	MAC address of the hardware.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> • Errors—Sum of incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of B chip Tx drops and IXP Tx net transmit drops. 	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions —Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then the cable, the far-end system, or the PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of B chip Tx drops and IXP Tx net transmit drops. 	extensive

Logical Interface

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under Common Output Fields Description.	All levels
Encapsulation	Type of encapsulation configured on the logical interface.	All levels
PPP parameters	PPP status: <ul style="list-style-type: none"> • LCP restart timer—Length of time (in milliseconds) between successive Link Control Protocol (LCP) configuration requests. • NCP restart timer—Length of time (in milliseconds) between successive Network Control Protocol (NCP) configuration requests. 	detail
PPPoE	PPPoE status: <ul style="list-style-type: none"> • State—State of the logical interface (up or down). • Session ID—PPPoE session ID. • Service name—Type of service required. Can be used to indicate an Internet service provider (ISP) name or a class or quality of service. • Configured AC name—Configured access concentrator name. • Auto-reconnect timeout—Time after which to try to reconnect after a PPPoE session is terminated, in seconds. • Idle Timeout—Length of time (in seconds) that a connection can be idle before disconnecting. • Underlying interface—Interface on which PPPoE is running. 	All levels
Link	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	All levels
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.	detail extensive

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	<p>Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p>	detail extensive
Transit statistics	<p>Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p>	detail extensive
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> • interval seconds—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds. • down-count number—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3. • up-count number—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1. 	detail extensive
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> • Input—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time the last keepalive packet was received, in the format <i>hh:mm:ss</i>. • Output—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> • (last seen 00:00:00 ago)—Time the last keepalive packet was sent, in the format <i>hh:mm:ss</i>. <p>(MX Series routers with MPCs/MICs) When an MX Series router with MPCs/MICs is using PPP fast keepalive for a PPP link, the display does not include the number of keepalive packets received or sent, or the amount of time since the router received or sent the last keepalive packet.</p>	detail extensive
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—LCP negotiation is incomplete (not yet completed or has failed). • Not-configured—LCP is not configured on the interface. • Opened—LCP negotiation is successful. 	none detail extensive
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> • Conf-ack-received—Acknowledgement was received. • Conf-ack-sent—Acknowledgement was sent. • Conf-req-sent—Request was sent. • Down—NCP negotiation is incomplete (not yet completed or has failed). • Not-configured—NCP is not configured on the interface. • Opened—NCP negotiation is successful. 	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> • Chap-Chal-received—Challenge was received but response not yet sent. • Chap-Chal-sent—Challenge was sent. • Chap-Resp-received—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.) • Chap-Resp-sent—Response was sent for the challenge received. • Closed—CHAP authentication is incomplete. • Failure—CHAP authentication failed. • Not-configured—CHAP is not configured on the interface. • Success—CHAP authentication was successful. 	none detail extensive
Protocol	Protocol family configured on the logical interface.	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive none
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under Common Output Fields Description.	detail extensive none

Table 3: show interfaces (PPPoE) Output Fields (*continued*)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the addresses configured for the protocol family. Possible values are described in the "Addresses Flags" section under Common Output Fields Description.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none

Sample Output

show interfaces (PPPoE)

```
user@host> show interfaces pp0
Physical interface: pp0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 24
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

Logical interface pp0.0 (Index 72) (SNMP ifIndex 72)
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  Input packets : 0
  Output packets: 0
  LCP state: Not-configured
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
    Protocol inet, MTU: 100
    Flags: User-MTU, Negotiate-Address
```

show interfaces (PPPoE over Aggregated Ethernet)

```
user@host> show interfaces pp0.1073773821
Logical interface pp0.1073773821 (Index 80) (SNMP ifIndex 32584)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionUp, Session ID: 1,
    Session AC name: alcor, Remote MAC address: 00:10:94:00:00:01,
    Underlying interface: demux0.100 (Index 88)
  Link:
    ge-1/0/0.32767
    ge-1/0/1.32767
  Input packets : 6
  Output packets: 6
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  PAP state: Success
    Protocol inet, MTU: 1500
    Flags: Sendbcast-pkt-to-re
    Addresses, Flags: Is-Primary
    Local: 45.63.24.1
```

show interfaces brief (PPPoE)

```
user@host> show interfaces pp0 brief
Physical interface: pp0, Enabled, Physical link is Up
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

Logical interface pp0.0
```

```

Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:
  State: SessionDown, Session ID: None,
  Service name: None, Configured AC name: sapphire,
  Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
  Underlying interface: at-5/0/0.0 (Index 70)
inet

```

show interfaces detail (PPPoE)

```

user@host> show interfaces pp0 detail
Physical interface: pp0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 24, Generation: 9
Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Logical interface pp0.0 (Index 72) (SNMP ifIndex 72) (Generation 14)
Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:
  State: SessionDown, Session ID: None,
  Service name: None, Configured AC name: sapphire,
  Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
  Underlying interface: at-5/0/0.0 (Index 70)
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
LCP state: Not-configured
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
Protocol inet, MTU: 100, Generation: 14, Route table: 0
Flags: User-MTU, Negotiate-Address

```

show interfaces detail (PPPoE on J Series Services Routers)

```

user@host> show interfaces pp0 detail
Physical interface: pp0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 24, Generation: 9
Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
Device flags : Present Running

```

```

Interface flags: Point-To-Point SNMP-Traps
Link type      : Full-Duplex
Link flags     : None
Physical info  : Unspecified
Hold-times    : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Statistics last cleared: Never
Traffic statistics:
  Input bytes  :                0                0 bps
  Output bytes :                0                0 bps
  Input packets:                0                0 pps
  Output packets:              0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface pp0.0 (Index 72) (SNMP ifIndex 72) (Generation 14)
Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:
  State: SessionDown, Session ID: None,
  Service name: None, Configured AC name: sapphire,
  Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
  Underlying interface: at-5/0/0.0 (Index 70)
Traffic statistics:
  Input bytes  :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Local statistics:
  Input bytes  :                0
  Output bytes :                0
  Input packets:                0
  Output packets:              0
Transit statistics:
  Input bytes  :                0                0 bps
  Output bytes :                0                0 bps
  Input packets:                0                0 pps
  Output packets:              0                0 pps
LCP state: Not-configured
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
  Protocol inet, MTU: 100, Generation: 14, Route table: 0
  Flags: User-MTU, Negotiate-Address

```

show interfaces
extensive (PPPoE on

```

user@host> show interfaces pp0 extensive
Physical interface: pp0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 93, Generation: 129

```

M120 and M320
Routers)

```

Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Statistics last cleared: Never
Traffic statistics:
Input bytes : 972192 0 bps
Output bytes : 975010 0 bps
Input packets: 1338 0 pps
Output packets: 1473 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface pp0.0 (Index 69) (SNMP ifIndex 96) (Generation 194)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:
State: SessionUp, Session ID: 26,
Session AC name: None, AC MAC address: 00:17:cb:48:c8:12,
Service name: None, Configured AC name: None,
Auto-reconnect timeout: Never, Idle timeout: Never,
Underlying interface: ge-3/0/1.0 (Index 67)
Traffic statistics:
Input bytes : 252
Output bytes : 296
Input packets: 7
Output packets: 8
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 252
Output bytes : 296
Input packets: 7
Output packets: 8
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

```
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 1 (last seen 00:00:00 ago)
  Output: 1 (last sent 00:00:03 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
  Protocol inet, MTU: 1492, Generation: 171, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 12.12.12.2, Local: 12.12.12.1, Broadcast: Unspecified,
Generation: 206
```


CHAPTER 6

Command Summary

PART 4

Troubleshooting

- [Interface Diagnostics on page 55](#)

CHAPTER 7

Interface Diagnostics

- [Interface Diagnostics on page 55](#)

Interface Diagnostics

You can use two diagnostic tools to test the physical layer connections of interfaces: loopback testing and bit error rate test (BERT) testing. Loopback testing enables you to verify the connectivity of a circuit. BERT testing enables you to identify poor signal quality on a circuit. This section contains the following topics:

- [Configuring Loopback Testing on page 55](#)
- [Interface Diagnostics on page 57](#)

Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDS0, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own data link layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own data link layer packets, you can assume the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

There are several types of loopback testing supported by the Junos OS, as follows:

- DCE local—Loops packets back on the local DCE.
- DCE remote—Loops packets back on the remote DCE.

- **Local**—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- **Payload**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- **Remote**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 4 on page 56 shows the loopback modes supported on the various interface types.

Table 4: Loopback Modes by Interface Type

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	Configuring Ethernet Loopback Capability
Circuit Emulation E1	Local and remote	Configuring E1 Loopback Capability
Circuit Emulation T1	Local and remote	Configuring T1 Loopback Capability
E1 and E3	Local and remote	Configuring E1 Loopback Capability and Configuring E3 Loopback Capability
NxDSO	Payload	Configuring Channelized E1 IQ and IQE Interfaces, Configuring T1 and NxDSO Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Channelized STM1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces
Serial (V.35 and X.21)	Local and remote	Configuring Serial Loopback Capability
Serial (EIA-530)	DCE local, DCE remote, local, and remote	Configuring Serial Loopback Capability
SONET/SDH	Local and remote	Configuring SONET/SDH Loopback Capability

Table 4: Loopback Modes by Interface Type (*continued*)

Interface	Loopback Modes	Usage Guidelines
T1 and T3	Local, payload, and remote	Configuring T1 Loopback Capability and Configuring T3 Loopback Capability See also Configuring the T1 Remote Loopback Response

To configure loopback testing, include the **loopback** statement:

loopback mode;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ds0-options]
- [edit interfaces *interface-name* e1-options]
- [edit interfaces *interface-name* e3-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* gigether-options]
- [edit interfaces *interface-name* serial-options]
- [edit interfaces *interface-name* sonet-options]
- [edit interfaces *interface-name* t1-options]
- [edit interfaces *interface-name* t3-options]

Interface Diagnostics

BERT allows you to troubleshoot problems by checking the quality of links. You can configure any of the following interfaces to execute a BERT when the interface receives a request to run this test: E1, E3, T1, T3; the channelized DS3, OC3, OC12, and STM1 interfaces; and the channelized DS3 IQ, E1 IQ, and OC12 IQ interfaces.

A BERT test requires a line loop to be in place on either the transmission devices or the far-end router. The local router generates a known bit pattern and sends it out the transmit path. The received pattern is then verified against the sent pattern. The higher the bit error rate of the received pattern, the worse the noise is on the physical circuit. As you move the position of the line loop increasingly downstream toward the far-end router, you can isolate the troubled portion of the link.

To configure BERT, you must configure the duration of the test, the bit pattern to send on the transmit path, and the error rate to monitor when the inbound pattern is received.

To configure the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream, include the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements, respectively, at the [edit interfaces *interface-name* *interface-type*-options] hierarchy level:

```
[edit interfaces interface-name interface-type-options]  
bert-algorithm algorithm;  
bert-error-rate rate;  
bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

rate is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from 10^{-0} (1 error per bit) to 10^{-7} (1 error per 10 million bits).

algorithm is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]  
  
user@host# set bert-algorithm ?  
Possible completions:  
pseudo-2e11-o152    Pattern is 2^11 - 1 (per 0.152 standard)  
pseudo-2e15-o151    Pattern is 2^15 - 1 (per 0.152 standard)  
pseudo-2e20-o151    Pattern is 2^20 - 1 (per 0.151 standard)  
pseudo-2e20-o153    Pattern is 2^20 - 1 (per 0.153 standard)  
...
```

For specific hierarchy information, see the individual interface types.



NOTE: The 4-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7            Pattern is 2^7 - 1
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The IQE PICs support only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 - 1 (per 0.151 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is $2^{23} - 1$ (per 0.151 standard)

Table 5 on page 60 shows the BERT capabilities for various interface types.

Table 5: BERT Capabilities by Interface Type

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)		<ul style="list-style-type: none"> Limited algorithms
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)		<ul style="list-style-type: none"> Limited algorithms
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time Limited algorithms
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time
Channelized OC12	N/A	Yes (channel 0–11)	<ul style="list-style-type: none"> Single channel at a time Limited algorithms No bit count
Channelized STM1	Yes (channel 0–62)	N/A	<ul style="list-style-type: none"> Multiple channels Only one algorithm No error insert No bit count
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> Multiple ports and channels Limited algorithms for T1 No error insert for T1 No bit count for T1

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see Channelized IQ and IQE Interfaces Properties.

Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name interface-type-bert-start*** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you wish to terminate the test sooner, issue the **test interface *interface-name interface-type-bert-stop*** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the Junos OS Operational Mode Commands.



NOTE: To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

Example: Configuring Bit Error Rate Testing

Configure a BERT test on a T3 interface. In this example, the run duration lasts for 120 seconds. The configured error rate is 0, which corresponds to a bit error rate of 10^{-0} (1 error per bit). The configured bit pattern of **all-ones-repeating** means that every bit the interface sends is a set to a value of 1.

```
[edit interfaces]
t3-1/2/0 {
  t3-options {
    bert algorithm all-ones-repeating;
    bert-error-rate 0;
    bert-period 120;
```

```
}  
}
```

PART 5

Index

- [Index on page 65](#)

Index

Symbols

#, comments in configuration statements.....	x
(), in syntax descriptions.....	x
< >, in syntax descriptions.....	x
[], in configuration statements.....	x
{ }, in configuration statements.....	x
(pipe), in syntax descriptions.....	x

A

all (tracing flag)	
interfaces.....	9

B

BERT	
configuring interface diagnostics.....	57
bert-algorithm statement	
usage guidelines.....	57
bert-error-rate statement	
usage guidelines.....	57
bert-period statement	
usage guidelines.....	57
bit error rate test See BERT	
braces, in configuration statements.....	x
brackets	
angle, in syntax descriptions.....	x
square, in configuration statements.....	x

C

comments, in configuration statements.....	x
conventions	
text and syntax.....	ix
curly braces, in configuration statements.....	x
customer support.....	xi
contacting JTAC.....	xi

D

documentation	
comments on.....	xi

E

event (tracing flag).....	9
---------------------------	---

F

fast-aps-switch statement.....	29
font conventions.....	ix

I

interfaces	
configuration statements.....	11
ipc (tracing flag).....	9

L

loopback testing.....	55
-----------------------	----

M

manuals	
comments on.....	xi
media (tracing flag).....	9
monitor-session statement	
usage guidelines.....	7

P

parentheses, in syntax descriptions.....	x
PPPD processes, trace operations.....	7
PPPoE	
interfaces, displaying.....	38

R

receive (tracing flag modifier).....	9
--------------------------------------	---

S

send (tracing flag modifier).....	9
show interfaces (PPPoE) command.....	38
support, technical See technical support	
syntax conventions.....	ix

T

technical support	
contacting JTAC.....	xi
traceoptions statement	
interface processes.....	32
interfaces.....	30
PPPD processes.....	7
tracing flags	
all.....	9
event.....	9
ipc.....	9
media.....	9
tracing operations	
PPPD.....	7

