



Junos[®] OS

Flow Monitoring

Release

13.1



Published: 2013-02-12

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Junos® OS Flow Monitoring

Release 13.1

Copyright © 2013, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

| | | |
|------------------|---|-----------|
| | About the Documentation | xi |
| | Documentation and Release Notes | xi |
| | Supported Platforms | xi |
| | Using the Examples in This Manual | xi |
| | Merging a Full Example | xii |
| | Merging a Snippet | xii |
| | Documentation Conventions | xiii |
| | Documentation Feedback | xv |
| | Requesting Technical Support | xv |
| | Self-Help Online Tools and Resources | xv |
| | Opening a Case with JTAC | xvi |
| Part 1 | Overview | |
| Chapter 1 | Product Overview | 3 |
| | Flow Monitoring Overview | 3 |
| | Passive Flow Monitoring Overview | 4 |
| | Hardware and Software Considerations | 5 |
| | Active Flow Monitoring Overview | 6 |
| | Active Flow Monitoring Applications | 7 |
| | Flow-Tap Architecture | 9 |
| Chapter 2 | System Requirements | 11 |
| | Passive Flow Monitoring System Requirements | 11 |
| | Active Flow Monitoring System Requirements | 12 |
| | Active Flow Monitoring PIC Specifications | 13 |
| | Flow-Tap Application Restrictions | 17 |
| Chapter 3 | Flow Monitoring Output Formats | 19 |
| | Flow Monitoring Output Formats | 19 |
| | Version 5 Formats and Fields | 20 |
| | Version 8 Formats and Fields | 23 |
| | Version 9 Formats and Fields | 29 |
| | More Information About Passive and Active Flow Monitoring | 36 |
| Chapter 4 | Glossary | 37 |
| | Terms and Acronyms | 37 |

Part 2**Chapter 5****Configuration****Passive Flow Monitoring Configuration 41**

| | |
|---|----|
| Configuring Passive Flow Monitoring | 42 |
| Applying the Firewall Filter to a Tunnel PIC Interface | 43 |
| Configuring the Capture Group | 43 |
| Configuring the Content Destination | 44 |
| Configuring the Control Source | 44 |
| Configuring the Dynamic Flow Capture Interface | 45 |
| Configuring a Monitoring Group to Send Traffic to the Flow Server | 46 |
| Configuring Input Interfaces, Monitoring Services Interfaces, and Export Interfaces | 47 |
| Configuring Policy Options | 51 |
| Configuring a Routing Table Group to Add Interface Routes into the Forwarding Instance | 51 |
| Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding | 52 |
| Creating a Firewall Filter to Split the Port-Mirrored Traffic into Different Instances | 53 |
| Establishing a VRF Instance for the Monitored Traffic | 53 |
| Monitoring Traffic with a VRF Instance and a Monitoring Group | 54 |
| Specifying a Firewall Filter to Select Traffic to Monitor | 54 |
| Specifying Port Mirroring Input and Output | 55 |
| Using a Dynamic Flow Capture Interface to Monitor Traffic On Demand | 56 |
| Using Filter-Based Forwarding to Export Monitored Traffic to Multiple Destinations | 57 |
| Using a Flow Collector Interface to Process and Export Multiple Flow Records | 58 |
| Option: Applying a Firewall Filter to an Output Interface | 63 |
| Option: Configuring System Logging | 64 |
| Option: Configuring Thresholds | 64 |
| Option: Monitoring Dynamic Flow Capture by Using SNMP | 64 |
| Option: Stripping MPLS Labels on ATM, Ethernet-Based, and SONET/SDH Interfaces | 64 |
| Option: Using an ES PIC to Send Traffic to a Packet Analyzer | 65 |

Chapter 6**Active Flow Monitoring Configuration 69**

| | |
|--|----|
| Configuring Active Flow Monitoring | 69 |
| Configuring Flow-Tap Security Properties | 72 |
| Configuring the Flow-Tap Interface | 73 |
| Configuring the Interfaces That Will Be Actively Monitored | 73 |
| Collecting Flow Records | 74 |
| Collecting Flow Records with an Accounting Group | 75 |
| Collecting Flow Records with a Sampling Group | 75 |
| Collecting Flow Records with a Template | 77 |
| Defining a Firewall Filter to Select Traffic for Active Flow Monitoring | 78 |
| Enabling the Monitoring Services, Adaptive Services, or Multiservices Interfaces and the Export Interface | 79 |
| Replicating Routing Engine-Based Sampling to Multiple Flow Servers | 79 |
| Option: Configuring an Aggregate Export Timer | 80 |

| | | |
|------------------|--|------------|
| | Option: Configuring Port Mirroring | 81 |
| | Option: Configuring Port Mirroring with Filter-Based Forwarding and a Monitoring Group | 81 |
| | Option: Sending Traffic to Multiple Export Interfaces by Using Next-Hop Groups | 82 |
| | Option: Using the Flow-Tap Application to Send Packets to a Mediation Device | 83 |
| Part 3 | Examples | |
| Chapter 7 | Passive Flow Monitoring Configuration Examples | 87 |
| | Example: Passive Flow Monitoring Configuration | 87 |
| | Verifying Your Work | 94 |
| | Example: Flow Collector Interface Configuration | 101 |
| | Verifying Your Work | 106 |
| | Example: Dynamic Flow Capture Configuration | 111 |
| | Verifying Your Work | 113 |
| | Router 1 | 114 |
| Chapter 8 | Active Flow Monitoring Configuration Examples | 115 |
| | Example: Sampling Configuration | 115 |
| | Verifying Your Work | 117 |
| | Example: Sampling and Discard Accounting Configuration | 119 |
| | Verifying Your Work | 122 |
| | Example: Sampling Instance Configuration | 123 |
| | Example Network Details | 124 |
| | Example Router Configuration | 125 |
| | Configuration Commands Used for the Configuration Example | 126 |
| | Verifying Your Work | 127 |
| | Example: Multiple Port Mirroring with Next-Hop Groups Configuration | 128 |
| | Routing Engine-Based Sampling to Multiple Flow Servers | 131 |
| | Example: Flow-Tap Configuration | 131 |
| | Example: IPv6 Support for FlowTapLite | 132 |
| | Example: VRF Routing Engine-Based Sampling | 139 |
| Part 4 | Administration | |
| Chapter 9 | Active Flow Monitoring Commands | 161 |
| | show forwarding-options next-hop-group | 162 |
| | show forwarding-options port-mirroring | 166 |
| | show services accounting aggregation | 168 |
| | show services accounting aggregation template | 172 |
| | show services accounting errors | 173 |
| | show services accounting flow | 177 |
| | show services accounting flow-detail | 182 |
| | show services accounting memory | 187 |
| | show services accounting packet-size-distribution | 189 |
| | show services accounting status | 191 |
| | show services accounting usage | 194 |

| | | |
|-------------------|--|------------|
| Chapter 10 | Dynamic Flow Capture Commands | 197 |
| | clear services dynamic-flow-capture | 198 |
| | show services dynamic-flow-capture content-destination | 199 |
| | show services dynamic-flow-capture control-source | 201 |
| | show services dynamic-flow-capture statistics | 203 |
| Chapter 11 | Flow Collection Commands | 207 |
| | clear services flow-collector statistics | 208 |
| | request services flow-collector change-destination primary interface | 209 |
| | request services flow-collector change-destination secondary interface | 210 |
| | request services flow-collector test-file-transfer | 211 |
| | show services flow-collector file interface | 212 |
| | show services flow-collector input interface | 214 |
| | show services flow-collector interface | 216 |
| Chapter 12 | Passive Flow Monitoring Commands | 223 |
| | clear passive-monitoring statistics | 224 |
| | show passive-monitoring error | 225 |
| | show passive-monitoring flow | 227 |
| | show passive-monitoring memory | 229 |
| | show passive-monitoring status | 231 |
| | show passive-monitoring usage | 233 |
| Part 5 | Index | |
| | Index | 237 |

List of Figures

| | | |
|------------------|---|------------|
| Part 1 | Overview | |
| Chapter 1 | Product Overview | 3 |
| | Figure 1: Passive Flow Monitoring Application Topology | 4 |
| | Figure 2: Nice title | 8 |
| | Figure 3: Flow-Tap Topology Diagram | 10 |
| Chapter 3 | Flow Monitoring Output Formats | 19 |
| | Figure 4: Version 5 Packet Header Format | 20 |
| | Figure 5: Version 5 Flow-Export Flow Header Format | 21 |
| | Figure 6: Version 8 Template Flow Format | 23 |
| | Figure 7: Version 8 AS Aggregation Flow Entry Format | 24 |
| | Figure 8: Version 8 Protocol/Port Aggregation Flow Entry Format | 25 |
| | Figure 9: Version 8 Prefix Aggregation Flow Entry Format | 26 |
| | Figure 10: Version 8 Source Prefix Aggregation Flow Entry Format | 27 |
| | Figure 11: Version 8 Destination Prefix Aggregation Flow Entry Format | 28 |
| | Figure 12: Version 9 Flow Header Format | 31 |
| | Figure 13: Version 9 Template FlowSet Format | 32 |
| | Figure 14: Version 9 Data FlowSet Format | 34 |
| | Figure 15: Version 9 Options Template Format | 35 |
| | Figure 16: Active Flow Monitoring Version 9 Options Data Record Format | 35 |
| Part 2 | Configuration | |
| Chapter 5 | Passive Flow Monitoring Configuration | 41 |
| | Figure 17: Dynamic Flow Capture Topology | 57 |
| Part 3 | Examples | |
| Chapter 7 | Passive Flow Monitoring Configuration Examples | 87 |
| | Figure 18: Passive Flow Monitoring—Topology Diagram | 87 |
| | Figure 19: Flow Collector Interface Topology Diagram | 101 |
| Chapter 8 | Active Flow Monitoring Configuration Examples | 115 |
| | Figure 20: Active Flow Monitoring—Sampling Configuration Topology Diagram | 115 |
| | Figure 21: Active Flow Monitoring—Sampling and Discard Accounting Topology Diagram | 119 |
| | Figure 22: Active Flow Monitoring—Sampling Instance Configuration Topology Diagram | 124 |
| | Figure 23: Active Flow Monitoring—Multiple Port Mirroring with Next-Hop Groups Topology Diagram | 128 |

| | |
|---|-----|
| Figure 24: FlowTapLite Topology | 134 |
| Figure 25: Routing Engine-Based Sampling Network Topology | 141 |

List of Tables

| | | |
|------------------|---|-----------|
| | About the Documentation | xi |
| | Table 1: Notice Icons | xiii |
| | Table 2: Text and Syntax Conventions | xiii |
| Part 1 | Overview | |
| Chapter 2 | System Requirements | 11 |
| | Table 3: Monitoring Services PIC Specifications | 13 |
| | Table 4: Monitoring Services II PIC Specifications | 14 |
| | Table 5: Adaptive Services PIC Specifications | 14 |
| | Table 6: MultiServices 100 PIC | 15 |
| | Table 7: MultiServices 400 PIC | 15 |
| | Table 8: MultiServices 500 PIC | 16 |
| Chapter 3 | Flow Monitoring Output Formats | 19 |
| | Table 9: Export Version 5 Packet Header Fields | 20 |
| | Table 10: Export Version 5 Flow-Export Flow Header Fields | 21 |
| | Table 11: Version 8 Flow Template Fields | 24 |
| | Table 12: Version 8 AS Aggregation Flow Entry Fields | 24 |
| | Table 13: Version 8 Protocol/Port Aggregation Flow Entry Fields | 25 |
| | Table 14: Version 8 Prefix Aggregation Flow Entry Fields | 26 |
| | Table 15: Version 8 Source Prefix Aggregation Flow Entry Fields | 27 |
| | Table 16: Version 8 Destination Prefix Aggregation Flow Entry Fields | 28 |
| | Table 17: Flow Monitoring Version 9 Template Formats | 29 |
| | Table 18: Version 9 Flow Header Fields | 31 |
| | Table 19: Version 9 Template FlowSet Fields | 32 |
| | Table 20: Field Type Definitions Supported in the Junos OS | 32 |
| | Table 21: Version 9 Data FlowSet Format | 34 |
| | Table 22: Version 9 Options Template Format | 35 |
| | Table 23: Active Flow Monitoring Version 9 Options Data Record Format | 36 |
| Part 2 | Configuration | |
| Chapter 5 | Passive Flow Monitoring Configuration | 41 |
| | Table 24: Passive Flow Monitoring PIC Support | 42 |
| | Table 25: Name Format Macros | 59 |
| Chapter 6 | Active Flow Monitoring Configuration | 69 |
| | Table 26: Passive and Active Flow Monitoring PIC Support | 70 |

| | |
|-------------------|--|
| Part 3 | Examples |
| Chapter 7 | Passive Flow Monitoring Configuration Examples 87 |
| | Table 27: Output Fields for the show passive-monitoring error Command 95 |
| | Table 28: Output Fields for the show passive-monitoring flow Command 96 |
| | Table 29: Output Fields for the show passive-monitoring memory Command . . . 98 |
| | Table 30: Output Fields for the show passive-monitoring status Command . . . 99 |
| | Table 31: Output Fields for the show passive-monitoring usage Command . . . 100 |
| | Table 32: Flow Collector Interface Transfer Log Fields 109 |
| | Table 33: Flow Collector Interface File Fields in Order of Appearance 110 |
| Part 4 | Administration |
| Chapter 9 | Active Flow Monitoring Commands 161 |
| | Table 34: show forwarding-options next-hop-group Output Fields 162 |
| | Table 35: show forwarding-options port-mirroring Output Fields 166 |
| | Table 36: show services accounting aggregation Output Fields 169 |
| | Table 37: show services accounting aggregation template Output Fields 172 |
| | Table 38: show services accounting errors Output Fields 173 |
| | Table 39: show services accounting flow Output Fields 177 |
| | Table 40: show services accounting flow-detail Output Fields 183 |
| | Table 41: show services accounting memory Output Fields 187 |
| | Table 42: show services accounting packet-size-distribution Output Fields . . . 189 |
| | Table 43: show services accounting status Output Fields 191 |
| | Table 44: show services accounting usage Output Fields 194 |
| Chapter 10 | Dynamic Flow Capture Commands 197 |
| | Table 45: show services dynamic-flow-capture content-destination Output Fields 199 |
| | Table 46: show services dynamic-flow-capture control-source Output Fields 201 |
| | Table 47: show services dynamic-flow-capture statistics Output Fields 203 |
| Chapter 11 | Flow Collection Commands 207 |
| | Table 48: show services flow-collector file interface Output Fields 212 |
| | Table 49: show services flow-collector input interface Output Fields 214 |
| | Table 50: show services flow-collector interface Output Fields 216 |
| Chapter 12 | Passive Flow Monitoring Commands 223 |
| | Table 51: show passive-monitoring error Output Fields 225 |
| | Table 52: show passive-monitoring flow Output Fields 227 |
| | Table 53: show passive-monitoring memory Output Fields 229 |
| | Table 54: show passive-monitoring status Output Fields 231 |
| | Table 55: show passive-monitoring usage Output Fields 233 |

About the Documentation

- Documentation and Release Notes on page xi
- Supported Platforms on page xi
- Using the Examples in This Manual on page xi
- Documentation Conventions on page xiii
- Documentation Feedback on page xv
- Requesting Technical Support on page xv

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX Series
- T Series
- M Series
- PTX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the CLI User Guide.

Documentation Conventions

Table 1 on page xiii defines notice icons used in this guide.

Table 1: Notice Icons

| Icon | Meaning | Description |
|---|--------------------|---|
|  | Informational note | Indicates important features or instructions. |
|  | Caution | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning | Alerts you to the risk of personal injury or death. |
|  | Laser warning | Alerts you to the risk of personal injury from a laser. |

Table 2 on page xiii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

| Convention | Description | Examples |
|----------------------------|--|--|
| Bold text like this | Represents text that you type. | To enter configuration mode, type the configure command: user@host> configure |
| Fixed-width text like this | Represents output that appears on the terminal screen. | user@host> show chassis alarms No alarms currently active |

Table 2: Text and Syntax Conventions (*continued*)

| Convention | Description | Examples |
|--------------------------------|--|---|
| <i>Italic text like this</i> | <ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies book names. Identifies RFC and Internet draft titles. | <ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i> |
| <i>Italic text like this</i> | Represents variables (options for which you substitute a value) in commands or configuration statements. | Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i> |
| Text like this | Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components. | <ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE. |
| < > (angle brackets) | Enclose optional keywords or variables. | stub <default-metric metric>; |
| (pipe symbol) | Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity. | broadcast multicast (string1 string2 string3) |
| # (pound sign) | Indicates a comment specified on the same line as the configuration statement to which it applies. | rsvp { # Required for dynamic MPLS only |
| [] (square brackets) | Enclose a variable for which you can substitute one or more values. | community name members [community-ids] |
| Indentation and braces ({ }) | Identify a level in the configuration hierarchy. | [edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } } |
| ;(semicolon) | Identifies a leaf statement at a configuration hierarchy level. | |
| J-Web GUI Conventions | | |
| Bold text like this | Represents J-Web graphical user interface (GUI) items you click or select. | <ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel. |
| > (bold right angle bracket) | Separates levels in a hierarchy of J-Web selections. | In the configuration editor hierarchy, select Protocols>Ospf . |

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>

- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [Product Overview on page 3](#)
- [System Requirements on page 11](#)
- [Flow Monitoring Output Formats on page 19](#)
- [Glossary on page 37](#)

CHAPTER 1

Product Overview

- [Flow Monitoring Overview on page 3](#)
- [Passive Flow Monitoring Overview on page 4](#)
- [Hardware and Software Considerations on page 5](#)
- [Active Flow Monitoring Overview on page 6](#)
- [Active Flow Monitoring Applications on page 7](#)
- [Flow-Tap Architecture on page 9](#)

Flow Monitoring Overview

The flow monitoring application performs traffic flow monitoring and enables lawful interception of packets transiting between two routers. Traffic flows can either be passively monitored by an offline router or actively monitored by a router participating in the network.

Using a Juniper Networks router, a selection of PICs for M Series and T Series routers—including the Monitoring Services PIC, Monitoring Services II PIC, Adaptive Services PIC, and MultiServices PICs—and other networking hardware, you can monitor traffic flow and export the monitored traffic. Monitoring traffic allows you to do the following:

- Gather and export detailed information about traffic flows between source and destination routers in your network.
- Sample all incoming traffic on the monitoring interface and present the data in record format.
- Encrypt or tunnel outgoing records, intercepted traffic, or both.
- Direct filtered traffic to different packet analyzers and present the data in its original format.
- Intercept unwanted traffic, discard it, and perform accounting on the discarded packets.

There are two main types of flow monitoring:

- Active Flow Monitoring
- Passive Flow Monitoring


- Related Documentation**
- [Active Flow Monitoring Overview on page 6](#)
 - [Passive Flow Monitoring Overview on page 4](#)
 - Active Flow Monitoring Overview
 - Passive Flow Monitoring Overview

Passive Flow Monitoring Overview

Flow monitoring version 5 supports passive flow monitoring. Versions 8 and 9 do not support passive flow monitoring.

The M40e, M160, M320, MX Series, or T Series router that is used for passive flow monitoring does not route packets from monitored interfaces, nor does it run any routing protocols related to those interfaces; it only passes along intercepted traffic and receives traffic flows. [Figure 1 on page 4](#) shows a typical topology for the passive flow monitoring application.

Figure 1: Passive Flow Monitoring Application Topology

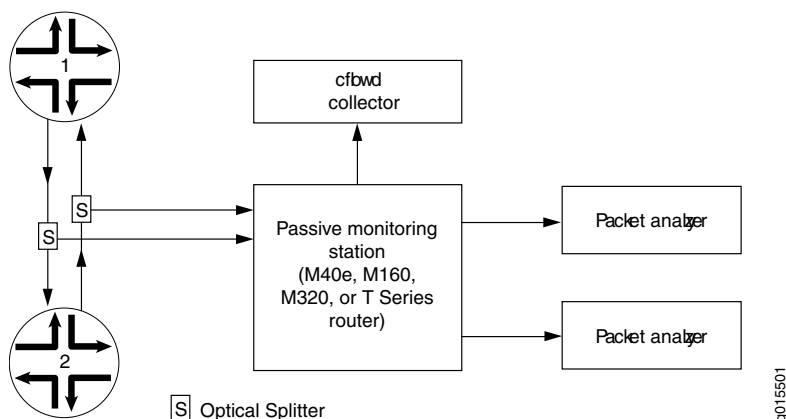

Traffic travels normally between Router 1 and Router 2. To redirect IPv4 traffic, you insert an optical splitter on the interface between these two routers. The optical splitter copies and redirects the traffic to the monitoring station. The optical cable connects only the receive port on the monitoring station, never the transmit port. This configuration allows the monitoring station to receive traffic only from the router being monitored but never to transmit it back.

If you are monitoring traffic flow, the Internet Processor II ASIC in the router forwards a copy of the traffic to the Monitoring Services or Monitoring Services II PIC in the monitoring station. If there is more than one Monitoring Services PIC installed, the monitoring station distributes the load of the incoming traffic across the multiple PICs. The Monitoring Services PICs generate flow records in version 5 format, and the records are exported to the flow collector.

When you are performing lawful interception of packets, the Internet Processor II ASIC filters the incoming traffic and forwards it to the Tunnel Services PIC. Filter-based forwarding is then applied to direct the traffic to the packet analyzers. Optionally, the

intercepted traffic or the flow records can be encrypted by the ES PIC and then sent to their destination. With additional configuration, flow records can be processed by a flow collector and flows can be captured dynamically.

With MPLS passive monitoring, the router can process MPLS packets with label values that do not have corresponding entries in the **mpls.0** routing table. You can divert these unrecognized MPLS packets, remove the MPLS labels, and redirect the underlying IPv4 packets. This is equivalent to a default route for MPLS packets or a promiscuous label. Because this application does not use a Monitoring Services PIC, see the *Junos MPLS Applications Configuration Guide* for more information about MPLS passive monitoring.

**Related
Documentation**

- [Flow Monitoring Overview on page 3](#)
- [Active Flow Monitoring Overview on page 6](#)

Hardware and Software Considerations

There are several hardware and software considerations when you implement passive flow monitoring. When defining the hardware requirements of the monitoring station, keep in mind the following:

- The input interfaces on the monitoring station must be SONET/SDH interfaces (OC3, OC12, or OC48), ATM2 IQ interfaces (OC3 or OC12), 4-port Fast Ethernet interfaces, Gigabit Ethernet interfaces with SFP (4-port or 10-port), or 1-port 10-Gigabit Ethernet interfaces with XENPAK.
- To monitor the flows in both directions for a single interface, the monitoring station must have two SONET/SDH, ATM2 IQ, or Ethernet-based receive ports, one for each direction of flow. In [Figure 1 on page 4](#), the monitoring station needs one port to monitor the traffic flowing from Router 1 to Router 2, and a second port to monitor the traffic flowing from Router 2 to Router 1.
- The Monitoring Services PICs must be installed in a Type 1 enhanced FPC slot.
- Type 1 and Type 2 Tunnel Services PICs are supported.
- Use an ES PIC to encrypt the flow export.

When defining a traffic monitoring strategy, keep in mind the following:

- The monitoring station collects only IPv4 packets. All other packet formats are discarded and not counted.
- You can set the amount of time a data flow can be inactive before the monitoring station terminates the flow and exports the flow data. To set the timer, include the **flow-inactive-timeout** statement at the **[edit forwarding-options monitoring group-name family inet output]** hierarchy level. The timer value can be from 15 seconds through 1800 seconds, with a default value of 60 seconds.

You can also configure the monitoring station to collect periodic flow reports for flows that last longer than the configured active timeout. To set this activity timer, include the **flow-active-timeout** statement at the **[edit forwarding-options monitoring group-name**

family inet output] hierarchy level. The timer value can be from 60 seconds through 1800 seconds, with a default value of 180 seconds.

- Multiple expired flows are exported together, if possible. A UDP packet is sent when one of the following conditions is met:
 - When 30 flows are contained in the current packet, the flows are exported.
 - If there are fewer than 30 flows but the export timer expires, the flows are exported one second after the timer expires.
- TCP and UDP flows are considered differently:
 - TCP flows watch for a segment containing the **FIN** bit and a subsequent acknowledgement (**ACK**) to detect the end of a flow. Alternately, a TCP reset (**RST**) can also indicate the end of a flow. When these TCP combinations are detected, the flow expires. The **FIN+ACK** and **RST** cases cover most TCP stream closures. For all other flows, an inactive timeout is needed.
 - All non-TCP flows, such as UDP, depend on timeout mechanisms for export.
- The default MTU value for SONET/SDH interfaces is 4474 bytes; for Gigabit Ethernet and Fast Ethernet interfaces, it is 1500 bytes. If the monitoring station receives packets exceeding 4474 bytes, they are discarded; no fragmentation is performed. Note that the supported MTU size on the Gigabit Ethernet or Fast Ethernet PICs might exceed 1500 bytes, depending on the type of PIC.
- Any incoming traffic that is discarded is not forwarded to packet analyzers.
- The interfaces on the monitoring station that collect intercepted traffic must be configured with Cisco HDLC or PPP encapsulation.
- You must always use a standard interface (for example, one that follows the usual *interface-name-fpc/pic/slot* format) to send flow records to a flow server. Flow data generated by the Monitoring Services or Monitoring Services II PICs will not be delivered to the server across the **fxp0** interface.
- You can send version 5 records to multiple flow servers. You can configure up to eight servers and flow traffic is load-balanced between the servers in a round-robin fashion. If one of the servers ceases operation, flow traffic load-balances automatically between the remaining active servers. To configure, include up to eight **flow-server** statements at the **[edit forwarding-options monitoring group-name output]** hierarchy level.

Active Flow Monitoring Overview

Flow monitoring versions 5, 8, and 9 support active flow monitoring. For active flow monitoring, the monitoring station participates in the network as an active router. The major actions the router can perform during active flow monitoring are as follows:

- Sampling—The router selects and analyzes only a portion of the traffic.
- Sampling with templates—The router selects, analyzes, and arranges a portion of the traffic into templates.

- Sampling per sampling instance—The router selects, analyzes, and arranges a portion of the traffic according to the configuration and binding of a sampling instance.
- Port mirroring—The router copies entire packets and sends the copies to another interface.
- Multiple port mirroring—The router sends multiple copies of monitored packets to multiple export interfaces with the **next-hop-group** statement at the **[edit forwarding-options]** hierarchy level.
- Discard accounting—The router accounts for selected traffic before discarding it. Such traffic is not forwarded out of the router. Instead, the traffic is quarantined and deleted.
- Flow-tap processing—The router processes requests for active flow monitoring dynamically by using the Dynamic Tasking Control Protocol (DTCP).

**Related
Documentation**

- [Flow Monitoring Overview on page 3](#)
- [Passive Flow Monitoring Overview on page 4](#)

Active Flow Monitoring Applications

Flow monitoring can be used for many different reasons such as network planning, accounting, usage-based network billing, security, and monitoring for Denial-of-Service attacks.

Some examples of the types of things you can use flow monitoring for are:

- Tracking what kind of traffic is entering or exiting an ISP or corporate network.
- Tracking traffic flows between BGP autonomous systems.
- Tracking traffic flows between enterprise network regions.
- Taking a snapshot of the existing quality-of-service (QoS) policy results prior to making changes in QoS policy in case you need to roll back changes later in the process.
- Verifying that load balancing techniques are performing as intended.
- Capturing a base line of current network performance prior to making changes intended to improve performance so that you know if the changes are helping.
- Discovering if network users at an enterprise are using bandwidth for work-related activities or for non work-related activities.


Examples of how flow monitoring helps with network administration include the following:

- A large service provider uses active flow monitoring on its core uplinks as a way to collect data on the protocols in use, packet sizes, and flow durations to better understand the usage of its Internet service offering. This helps the provider understand where network growth is coming from.
- Service providers bill customers for the data sent or bandwidth used by sending captured flow data to third-party billing software.

- At a large enterprise, VoIP users at a remote site complained of poor voice quality. The flow monitoring reports showed that the VoIP traffic did not have the correct type of service settings.
- Users on an enterprise network, reported network slowdowns. The flow monitoring reports showed that one user's PC was generating a large portion of the network traffic. The PC was infected with malware.
- A growing enterprise planned to deploy new business management software and needed to know what type of network bandwidth demand the new software would create. During the software trial period, flow monitoring reports were used to identify the expected increase in traffic.

Thus, while flow monitoring is traditionally associated with traffic analysis, it also has a role in accounting and security.

Figure 2: Nice title

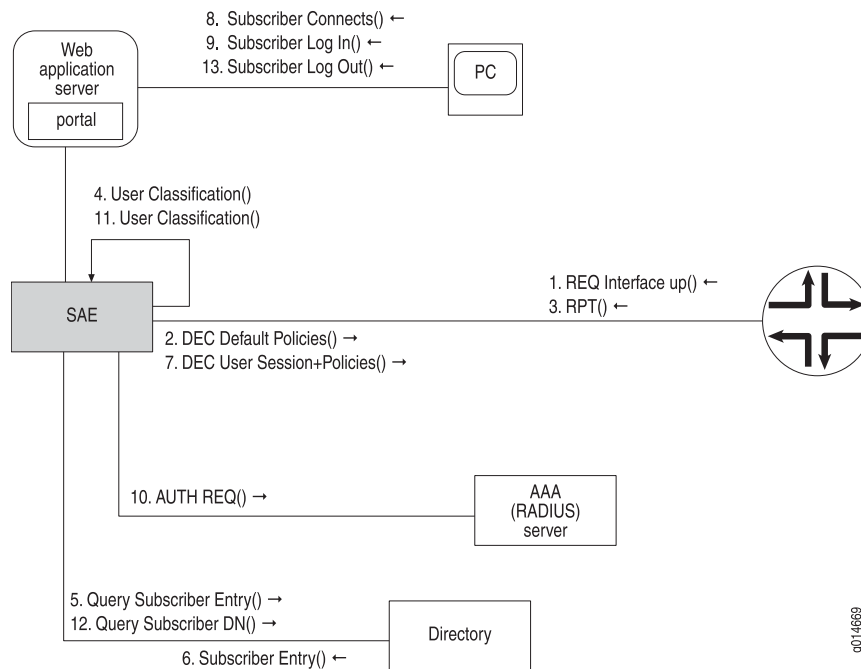

Related Documentation

- [Flow Monitoring Overview on page 3](#)
- [Active Flow Monitoring Overview on page 6](#)

Flow-Tap Architecture

The flow-tap architecture consists of one or more *mediation devices* that send requests to a Juniper Networks router to monitor incoming data. Any packets that match specific filter criteria are forwarded to a set of one or more *content destinations*:

- **Mediation device**—A client that monitors electronic data or voice transfer over the network. The mediation device sends filter requests to the Juniper Networks router using the DTCP. The clients are not identified for security reasons, but have permissions defined by a set of special login classes.
- **Monitoring platform**—A Juniper Networks M Series or T Series router containing one or more Adaptive Services (AS) PICs, which are configured to support the flow-tap application. The monitoring platform processes the requests from the mediation devices, applies the dynamic filters, monitors incoming data flows, and sends the matched packets to the appropriate content destinations.
- **Content destination**—Recipient of the matched packets from the monitoring platform. Typically the matched packets are sent using an IP Security (IPSec) tunnel from the monitoring platform to another router connected to the content destination. The content destination and the mediation device can be physically located on the same host.
- **Dynamic filters**—The Packet Forwarding Engine automatically generates a firewall filter that is applied to all IPv4 routing instances. Each term in the filter includes a **flow-tap** action that is similar to the existing **sample** or **port-mirroring** actions. As long as one of the filter terms matches an incoming packet, the router copies the packet and forwards it to the AS PIC that is configured for flow-tap service. The AS PIC runs the packet through the client filters and sends a copy to each matching content destination. For security, filters installed by one client are not visible to others and the CLI configuration does not reveal the identity of the monitored target.

Following is a sample filter configuration; note that it is dynamically generated by the router (no user configuration is required):

```
filter combined_LEA_filter {
  term LEA1_filter {
    from {
      source-address 1.2.3.4;
      destination-address 3.4.5.6;
    }
    then {
      flow-tap;
    }
  }
  term LEA2_filter {
    from {
      source-address 10.1.1.1;
      source-port 23;
    }
    then {
      flow-tap;
    }
  }
}
```


```

    }
  }

```

Figure 3 on page 10 shows a sample topology that uses two mediation devices and two content destinations.

Figure 3: Flow-Tap Topology Diagram

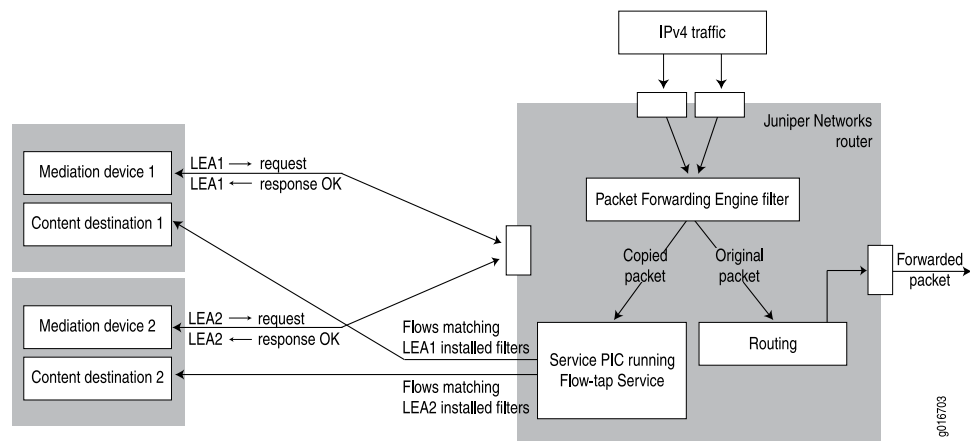

Related Documentation

- [Configuring the Flow-Tap Interface on page 73](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Flow-Tap Application Restrictions on page 17](#)
- [Example: Flow-Tap Configuration on page 131](#)

CHAPTER 2

System Requirements

- [Passive Flow Monitoring System Requirements on page 11](#)
- [Active Flow Monitoring System Requirements on page 12](#)
- [Active Flow Monitoring PIC Specifications on page 13](#)
- [Flow-Tap Application Restrictions on page 17](#)

Passive Flow Monitoring System Requirements

To perform passive flow monitoring, your system must meet these minimum requirements:

- Junos OS Release 9.2 or later for passive flow monitoring support for IQ2 interfaces only on M10i router with enhanced SCB, M120, M320, T320, T640, T1600 and MX-series routers.
- Junos OS Release 8.5 or later for passive flow monitoring support on the MX Series MultiServices routers
- Junos OS Release 8.4 or later for passive flow monitoring support on the MultiServices 400 PIC (Type 2)
- Junos OS Release 7.6 or later to clear error and flow statistics with the **clear passive-monitoring statistics** command
- Junos OS Release 7.5 or later for support of the dynamic flow capture (DFC) Management Information Base (MIB)
- Junos OS Release 7.4 or later for dynamic flow capture on Monitoring Services III PICs installed in T Series and M320 routers, and port mirroring of IPv6 packets
- Junos OS Release 7.3 or later for passive flow monitoring on selected Ethernet-based interfaces and filter-based forwarding on output interfaces
- Junos OS Release 7.1 or later for passive flow monitoring and flow collection services on Monitoring Services II PICs installed in T Series and M320 routers
- Junos OS Release 6.4 or later for support of the next-hop IP address field in flow monitoring version 5 records
- Junos OS Release 6.2 or later for ATM2 intelligent queuing (IQ) interface passive monitoring, flow collection services, and MPLS label stripping
- Junos OS Release 6.1 or later for MPLS passive monitoring

- Junos OS Release 6.0 or later for the Monitoring Services II PIC
- Junos OS Release 5.7 or later for the automatic insertion of autonomous system (AS) numbers and SNMP index values for interfaces into flow records
- Junos OS Release 5.4 or later for the Monitoring Services PIC
- M40e, M160, M320, MX Series, or T Series router with an Internet Processor II ASIC or later
- Type 1 enhanced FPCs
- Two optical splitters
- A Tunnel Services PIC (required if you wish to send traffic to more than one analyzer)
- An input interface from the following list:
 - SONET/SDH PIC—OC3, OC12, or OC48
 - ATM2 IQ PIC—OC3 or OC12
 - 4-port Fast Ethernet PIC
 - Gigabit Ethernet PIC—4-port with small form-factor pluggable transceiver (SFP) or 10-port with SFP
 - 1-port 10-Gigabit Ethernet PIC with XENPAK
- Outgoing PICs to connect to the flow collector or packet analyzer
- Flow monitoring version 5 collector
- ES PIC and packet analyzers (optional)

**Related
Documentation**

- [Active Flow Monitoring System Requirements on page 12](#)
- [Active Flow Monitoring PIC Specifications on page 13](#)

Active Flow Monitoring System Requirements

To implement active flow monitoring, your system must meet these minimum requirements:

- Junos 10.4 or later for peer AS billing support on flow monitoring version 9
- Junos 9.3R2 or later for IPv6 support on flow monitoring version 9
- Junos 9.3R2 or later for multiple flows for flow monitoring version 9
- Junos OS Release 9.0 or later for version 9 flow aggregation to multiple flow servers
- Junos OS Release 8.5 or later for active flow monitoring support on MultiServices 500 PICs
- Junos OS Release 8.3 or later for flow monitoring version 9 support, MPLS support, and active flow monitoring support on MultiServices 100 and 400 PICs

- Junos OS Release 8.2 or later for M120 router support and for flow monitoring version 5 and 8 support on MultiServices 100 and 400 PICs
- Junos OS Release 8.1 or later for the flow-tap services application on Adaptive Services II PICs installed in M7i, M10i, M20, M40e, M320, and T Series routers
- Junos OS Release 7.4 or later for port mirroring of IPv6 packets
- Junos OS Release 7.3 or later for active flow monitoring on Adaptive Services II PICs installed in TX Matrix platforms
- Junos OS Release 7.0 or later for active flow monitoring on Adaptive Services II PICs installed in T Series and M320 routers
- Junos OS Release 7.0 or later for active flow monitoring on J Series Services Routers
- Junos OS Release 6.0 or later for the Adaptive Services PIC
- Junos OS Release 5.7 or later for the automatic insertion of AS numbers and SNMP index values for input and output interfaces into records, port mirroring to multiple ports, and discard accounting
- Junos OS Release 5.6 or later for the Monitoring Services PIC
- M5, M7i, M10, M10i, M20, M40e, M120, M160, M320, or T Series router with an Internet Processor II ASIC or later; or a J Series Services Router
- Type 1 enhanced FPCs
- Two M Series or T Series PICs or J Series Physical Interface Modules (PIMs) of your choice: One to receive incoming traffic and one to forward outgoing traffic (the second PIC or PIM is not necessary for discard accounting)
- Export PICs to connect to the collector or packet analyzer
- Tunnel Services PIC (required for multiple port mirroring or **mo**- interface load balancing)
- Flow collector version 5, 8, or 9
- ES PIC and packet analyzers (optional)

**Related
Documentation**

- [Passive Flow Monitoring System Requirements on page 11](#)
- [Active Flow Monitoring PIC Specifications on page 13](#)

Active Flow Monitoring PIC Specifications

For Monitoring Services PIC specifications, see [Table 3 on page 13](#) and [Table 4 on page 14](#). For Adaptive Services PIC specifications, see [Table 5 on page 14](#). For MultiServices PIC specifications, see [Table 6 on page 15](#) and [Table 7 on page 15](#).

Table 3: Monitoring Services PIC Specifications

| Specification | Description |
|---------------------|--|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |

Table 3: Monitoring Services PIC Specifications (*continued*)

| Specification | Description |
|-----------------|--|
| Connectors | DB-9 diagnostic serial console port |
| Status LED | One tricolor: <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | One tricolor: <ul style="list-style-type: none"> • Off—The service is not running. • Green—The service is running under acceptable load. • Amber—The service is overloaded. |

Table 4: Monitoring Services II PIC Specifications

| Specification | Description |
|---------------------|--|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |
| Connectors | N/A |
| Status LED | One tricolor: <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | One tricolor: <ul style="list-style-type: none"> • Off—The flow collector is not running. • Green—The flow collector is running under acceptable load. • Amber—The flow collector is overloaded. |

Table 5: Adaptive Services PIC Specifications

| Specification | Description |
|---------------------|--|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |
| Connectors | N/A |

Table 5: Adaptive Services PIC Specifications (*continued*)

| Specification | Description |
|-----------------|---|
| Status LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The flow collector is not running. • Green—The flow collector is running under acceptable load. • Amber—The flow collector is overloaded. |

Table 6: MultiServices 100 PIC

| Specification | Description |
|---------------------|---|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |
| Connectors | N/A |
| Status LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The service is not running. • Green—The service is running under acceptable load. • Amber—The service is overloaded. |

Table 7: MultiServices 400 PIC

| Specification | Description |
|---------------------|--|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |
| Connectors | N/A |

Table 7: MultiServices 400 PIC (*continued*)

| Specification | Description |
|-----------------|---|
| Status LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The service is not running. • Green—The service is running under acceptable load. • Amber—The service is overloaded. |

Table 8: MultiServices 500 PIC

| Specification | Description |
|---------------------|---|
| Physical dimensions | Single-wide PIC that occupies one PIC slot |
| Connectors | N/A |
| Status LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The PIC is offline; it is safe to remove it from the chassis. • Green—The PIC is operating normally. • Amber—The PIC is initializing. • Red—The PIC has an error or failure; no further harm can be done by removing it from the chassis. |
| Application LED | <p>One tricolor:</p> <ul style="list-style-type: none"> • Off—The service is not running. • Green—The service is running under acceptable load. • Amber—The service is overloaded. |

**Related
Documentation**

- [Passive Flow Monitoring System Requirements on page 11](#)
- [Active Flow Monitoring System Requirements on page 12](#)

Flow-Tap Application Restrictions

The following restrictions apply to flow-tap services:

- You cannot configure dynamic flow capture and flow-tap services on the same router simultaneously.
- When the dynamic flow capture process or an AS PIC configured for flow-tap processing restarts, all filters are deleted and the mediation devices are disconnected.
- Only the first fragment of an IPv4 fragmented packet stream is sent to the content destination.
- Port mirroring might not work in conjunction with flow-tap processing.
- If the flow-tap application is configured, you cannot configure the filter action **then syslog** for any firewall filter running on the same platform.
- Running the flow-tap application over an IPsec tunnel on the same router can cause packet loops and is not supported.

Related Documentation

- [Flow-Tap Architecture on page 9](#)
- [Configuring the Flow-Tap Interface on page 73](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Example: Flow-Tap Configuration on page 131](#)

CHAPTER 3

Flow Monitoring Output Formats

- [Flow Monitoring Output Formats on page 19](#)
- [Version 5 Formats and Fields on page 20](#)
- [Version 8 Formats and Fields on page 23](#)
- [Version 9 Formats and Fields on page 29](#)
- [More Information About Passive and Active Flow Monitoring on page 36](#)

Flow Monitoring Output Formats

When you implement passive flow monitoring and active flow monitoring, you should be familiar with flow monitoring formats and fields. Version 5 and version 8 export data into specified fields. Version 9 exports data into templates.

The flow monitoring station monitors the traffic flow and exports the data in flow format to an external server. The Junos OS collects information about the following fields:

- Source and destination IP address
- Total number of bytes and packets sent
- Start and end times of the data flow
- Source and destination port numbers
- TCP flags
- IP protocol and IP type of service
- Originating AS of source and destination address
- Source and destination address prefix mask lengths
- Next-hop router's IP address
- MPLS label (version 9 only)
- ICMP (version 9 only)

Detailed descriptions of the formats are available as follows:

- [Version 5 Formats and Fields on page 20](#)
- [Version 8 Formats and Fields on page 23](#)

- [Version 9 Formats and Fields on page 29](#)

Version 5 Formats and Fields

A detailed explanation of version 5 packet formats and fields is shown in the following figures and tables:

- [Figure 4 on page 20](#)
- [Table 9 on page 20](#)
- [Figure 5 on page 21](#)
- [Table 10 on page 21](#)

Figure 4: Version 5 Packet Header Format

| | | | |
|----------------------|-----------|----------|--------|
| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| Version | | Count | |
| sysUptime | | | |
| UNIX seconds | | | |
| UNIX nanoseconds | | | |
| Flow sequence number | | | |
| Engine type | Engine ID | Reserved | |

0003132

g003132

Table 9: Export Version 5 Packet Header Fields

| Field | Description | Comments |
|-----------------------------|---|--|
| Version | 5 | — |
| Count | The number of records in the Protocol Data Unit (PDU) or packet | — |
| sysUptime | Current time elapsed, in milliseconds, since the router started | — |
| UNIX seconds | Current seconds since 0000 UTC 1970 | NTP synchronized time; the clock on each services PIC is autonomous (200–400 msec jitter) across PICs in a chassis |
| UNIX nanoseconds | Residual nanoseconds since 0000 UTC 1970 | See Comments above for UNIX seconds |
| Flow sequence number | Sequence number of total flows received | — |
| Engine type | User-configured 8-bit value | Also known as VIP type on other vendors' equipment |
| Engine ID | User-configured 8-bit value | — |

Figure 5: Version 5 Flow-Export Flow Header Format

| | | | |
|------------------------|-------------------|------------------|--------|
| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| Source IP address | | | |
| Destination IP address | | | |
| Next-hop IP address | | | |
| Input ifIndex | | Output ifIndex | |
| Packets | | | |
| Bytes | | | |
| Start time of flow | | | |
| End time of flow | | | |
| Source port | | Destination port | |
| Padding | TCP flags | IP protocol | TOS |
| Source AS | | Destination AS | |
| Source mask length | Dest. mask length | Padding | |

9003133

Table 10: Export Version 5 Flow-Export Flow Header Fields

| Field | Description | Comments |
|------------------------|---|--|
| Source IP address | Source IP address of the flow | — |
| Destination IP address | Destination IP address of the flow | — |
| Next-hop IP address | IP address of the router where flows are forwarded | — |
| Input ifIndex | SNMP index value for the input interface where the router receives flows | Junos OS Release 5.7 and later—Dynamically inserted, but overridden by manual configuration Junos OS Release 5.5—Manually set Junos OS Release 5.4—Set to zero |
| Output ifIndex | SNMP index value for the output interface where the router forwards flows | Junos OS Release 5.7 and later—Dynamically inserted, but overridden by manual configuration Junos OS Release 5.5—Manually set Junos OS Release 5.4—Set to zero |
| Packets | Total number of packets received in a flow | — |
| Bytes | Total number of bytes received in a flow | — |
| Start time of flow | System up time, in seconds, at the start of the flow | System up time for the services PIC accepting flows |

Table 10: Export Version 5 Flow-Export Flow Header Fields (*continued*)

| Field | Description | Comments |
|--------------------|--|---|
| End time of flow | System up time, in seconds, at the end of the flow | System up time for the services PIC accepting flows |
| Source port | Source application port | – |
| Destination port | Destination application port | The ICMP type is placed in the high-order byte and the ICMP type code is placed in the low-order byte of this field |
| TCP flags | TCP flags set in the flow | – |
| IP protocol | IP protocol number | – |
| TOS | IP type of service | – |
| Source AS | AS number of the source address | Junos OS Release 5.7 and later—Dynamically inserted if AS information is available |
| Destination AS | AS number of the destination address | Junos OS Release 5.7 and later—Dynamically inserted if AS information is available |
| Source mask length | Source address network mask length | – |
| Dest. mask length | Destination address network mask length | – |
| Padding | Bytes available to ensure a minimum packet length | – |

Useful formulas for flow monitoring are:

- start flow timestamp absolute = $unixTime \times 1000 - (sysUptime - \text{start flow timestamp})$
- end flow timestamp absolute = $unixTime \times 1000 - (sysUptime - \text{end flow timestamp})$



NOTE: In the 2-byte destination port field of the export version 5 flow-export flow format, the following information can be derived:

- High-order byte—ICMP type
- Low-order byte—ICMP type code

For example, if the ICMP type is 3 (00000011 in binary) and the ICMP type code is network unreachable (Type Code 0, or 00000000 in binary), the resulting destination port field value is 00000011 00000000 (768 in decimal).

For more information on ICMP type and type code, see RFC 792 at <http://www.ietf.org>.

Version 8 Formats and Fields

A detailed explanation of version 8 packet formats and fields is shown as follows:

- [Figure 6 on page 23](#)
- [Table 11 on page 24](#)
- [Figure 7 on page 24](#)
- [Table 12 on page 24](#)
- [Figure 8 on page 25](#)
- [Table 13 on page 25](#)
- [Figure 9 on page 26](#)
- [Table 14 on page 26](#)
- [Figure 10 on page 27](#)
- [Table 15 on page 27](#)
- [Figure 11 on page 28](#)
- [Table 16 on page 28](#)

Figure 6: Version 8 Template Flow Format

| | | | |
|----------------------|-----------|--------------------|---------------------|
| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| Version | | Count | |
| sysUptime | | | |
| UNIX seconds | | | |
| UNIX nanoseconds | | | |
| Flow Sequence Number | | | |
| Engine type | Engine ID | Aggregation method | Aggregation version |
| Reserved | | | |

0003076

| | | | |
|----------------------|-----------|--------------------|---------------------|
| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| Version | | Count | |
| sysUptime | | | |
| UNIX seconds | | | |
| UNIX nanoseconds | | | |
| Flow Sequence Number | | | |
| Engine type | Engine ID | Aggregation method | Aggregation version |
| Reserved | | | |

0003076

9003076

9003076

Table 11: Version 8 Flow Template Fields

| Field | Description |
|----------------------|---|
| Version | 8 |
| Count | The number of records in the protocol data unit (PDU) or packet |
| sysUptime | Current time elapsed, in milliseconds, since the router started |
| UNIX seconds | Current seconds since 0000 UTC 1970 |
| UNIX nanoseconds | Residual nanoseconds since 0000 UTC 1970 |
| Flow sequence number | Sequence counter of total flows received |
| Engine type | Type of flow switching engine |
| Engine ID | ID number of the flow switching engine |
| Aggregation method | Aggregation method used |
| Aggregation version | Version of the aggregation export |
| Reserved | Empty field reserved for future usage |

Figure 7: Version 8 AS Aggregation Flow Entry Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|--------|------------------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| Source AS | | Destination AS | |
| Input interface | | Output interface | |

g003077

Table 12: Version 8 AS Aggregation Flow Entry Fields

| Field | Description |
|--------------------|--|
| Flows | Total number of flows |
| Packets | Total number of packets received in a flow |
| Bytes | Total number of bytes received in a flow |
| Start time of flow | System up time, in seconds, at the start of the flow |

Table 12: Version 8 AS Aggregation Flow Entry Fields (*continued*)

| Field | Description |
|------------------|---|
| End time of flow | System up time, in seconds, at the end of the flow |
| Source AS | AS number of the source address |
| Destination AS | AS number of the destination address |
| Input interface | SNMP index value for the input interface where the router receives flows |
| Output interface | SNMP index value for the output interface where the router forwards flows |

Figure 8: Version 8 Protocol/Port Aggregation Flow Entry Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|---------|------------------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| IP Protocol | Padding | Reserved | |
| Source port | | Destination port | |

800309

Table 13: Version 8 Protocol/Port Aggregation Flow Entry Fields

| Field | Description |
|--------------------|--|
| Flows | Total number of flows |
| Packets | Total number of packets received in a flow |
| Bytes | Total number of bytes received in a flow |
| Start time of flow | System up time, in seconds, at the start of the flow |
| End time of flow | System up time, in seconds, at the end of the flow |
| IP protocol | IP protocol number |
| Padding | Bytes available to ensure a minimum packet length |
| Reserved | Empty field reserved for future usage |
| Source port | Source application port |
| Destination port | Destination application port |

Figure 9: Version 8 Prefix Aggregation Flow Entry Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|-------------------|------------------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| Source prefix | | | |
| Destination prefix | | | |
| Source Mask Length | Dest. Mask Length | Reserved | |
| Source AS | | Destination AS | |
| Input interface | | Output interface | |

9003079

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|-------------------|------------------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| Source prefix | | | |
| Destination prefix | | | |
| Source Mask Length | Dest. Mask Length | Reserved | |
| Source AS | | Destination AS | |
| Input interface | | Output interface | |

9003079

Table 14: Version 8 Prefix Aggregation Flow Entry Fields

| Field | Description |
|---------------------------|--|
| Flows | Total number of flows |
| Packets | Total number of packets received in a flow |
| Bytes | Total number of bytes received in a flow |
| Start time of flow | System up time, in seconds, at the start of the flow |
| End time of flow | System up time, in seconds, at the end of the flow |
| Source prefix | Source IP address prefix |
| Destination prefix | Destination IP address prefix |
| Source mask length | Source address network mask length |

Table 14: Version 8 Prefix Aggregation Flow Entry Fields (*continued*)

| Field | Description |
|-------------------|---|
| Dest. mask length | Destination address network mask length |
| Reserved | Empty field reserved for future usage |
| Source AS | AS number of the source address |
| Destination AS | AS number of the destination address |
| Input interface | SNMP index value for the input interface where the router receives flows |
| Output interface | SNMP index value for the output interface where the router forwards flows |

Figure 10: Version 8 Source Prefix Aggregation Flow Entry Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|---------|-----------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| Source prefix | | | |
| Source Mask Length | Padding | Source AS | |
| Input interface | | Reserved | |

9003080

Table 15: Version 8 Source Prefix Aggregation Flow Entry Fields

| Field | Description |
|--------------------|--|
| Flows | Total number of flows |
| Packets | Total number of packets received in a flow |
| Bytes | Total number of bytes received in a flow |
| Start time of flow | System up time, in seconds, at the start of the flow |
| End time of flow | System up time, in seconds, at the end of the flow |
| Source prefix | Source IP address prefix |
| Source mask length | Source address network mask length |
| Padding | Bytes available to ensure a minimum packet length |

Table 15: Version 8 Source Prefix Aggregation Flow Entry Fields (*continued*)

| Field | Description |
|-----------------|--|
| Source AS | AS number of the source address |
| Input interface | SNMP index value for the input interface where the router receives flows |
| Reserved | Empty field reserved for future usage |

Figure 11: Version 8 Destination Prefix Aggregation Flow Entry Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------|---------|----------------|--------|
| Flows | | | |
| Packets | | | |
| Bytes | | | |
| Start Time of Flow | | | |
| End Time of Flow | | | |
| Destination prefix | | | |
| Dest. Mask Length | Padding | Destination AS | |
| Output interface | | Reserved | |

1803009

Table 16: Version 8 Destination Prefix Aggregation Flow Entry Fields

| Field | Description |
|--------------------|---|
| Flows | Total number of flows |
| Packets | Total number of packets received in a flow |
| Bytes | Total number of bytes received in a flow |
| Start time of flow | System up time, in seconds, at the start of the flow |
| End time of flow | System up time, in seconds, at the end of the flow |
| Destination prefix | Destination IP address prefix |
| Dest. mask length | Destination address network mask length |
| Padding | Bytes available to ensure a minimum packet length |
| Destination AS | AS number of the destination address |
| Output interface | SNMP index value for the output interface where the router forwards flows |
| Reserved | Empty field reserved for future usage |

For more information about version 5 and version 8 packet formats and fields, see <http://www.caida.org>.

Version 9 Formats and Fields

A detailed explanation of active flow monitoring version 9 packet formats and fields is shown as follows:

- [Table 17 on page 29](#)
- [Figure 12 on page 31](#)
- [Table 18 on page 31](#)
- [Figure 14 on page 34](#)
- [Table 18 on page 31](#)
- [Figure 15 on page 35](#)
- [Table 22 on page 35](#)
- [Figure 16 on page 35](#)
- [Table 23 on page 36](#)

The Junos OS supports the version 9 template formats:

Table 17: Flow Monitoring Version 9 Template Formats

| Template | Fields |
|----------|---|
| IPv4 | <p>Flow selectors:</p> <ul style="list-style-type: none"> • Source and destination IP address • Source and destination address prefix mask lengths • Source and destination port numbers • IP protocol and IP type of service • ICMP type <p>Flow nonselectors:</p> <ul style="list-style-type: none"> • TCP flags • Input and output SNMP • Input bytes • Input packets • Start time • End time |

Table 17: Flow Monitoring Version 9 Template Formats (*continued*)

| Template | Fields |
|-----------|--|
| MPLS | <p>Flow selectors:</p> <ul style="list-style-type: none"> • MPLS label 1 • MPLS label 2 • MPLS label 3 <p>Flow nonselectors:</p> <ul style="list-style-type: none"> • Input and output SNMP • Input bytes • Input packets • Start time • End time |
| MPLS_IPv4 | <p>Flow selectors:</p> <ul style="list-style-type: none"> • MPLS label 1 • MPLS label 2 • MPLS label 3 • MPLS top-level FEC address <p>Flow nonselectors:</p> <ul style="list-style-type: none"> • Input and output SNMP • Input bytes • Input packets • Start time • End time |
| IPv6 | <p>Flow selectors:</p> <ul style="list-style-type: none"> • IP protocol and IP type of service • Source and destination port numbers • Input SNMP • Source and destination IPv6 address • ICMP type <p>Flow nonselectors:</p> <ul style="list-style-type: none"> • Input bytes • Input packets • TCP flags • Output SNMP • Source and destination autonomous system • Last and first switched • IPv6 source and destination mask • IP protocol version • IPv6 next hop |

Table 17: Flow Monitoring Version 9 Template Formats (*continued*)

| Template | Fields |
|-----------------|--|
| Peer AS billing | <p>Flow selectors:</p> <ul style="list-style-type: none"> IPv4 class of service Ingress interface information BGP peer destination AS number BGP IPv4 next hop address <p>Flow nonselectors</p> <ul style="list-style-type: none"> Input and output SNMP Input bytes Input packets First switch Last switched |

Figure 12: Version 9 Flow Header Format

| | | | |
|----------------------|--------|--------|--------|
| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
| | | | |
| Version | | Count | |
| sysUptime | | | |
| UNIX seconds | | | |
| Flow Sequence Number | | | |
| Source ID | | | |

9016785

Table 18: Version 9 Flow Header Fields

| Field | Description |
|----------------------|--|
| Version | 9 |
| Count | Total number of records in the protocol data unit (PDU) or packet. This number includes all of the options FlowSet records, template FlowSet records, and data FlowSet records. |
| sysUptime | Current time elapsed, in milliseconds, since the router started. |
| UNIX seconds | Current seconds since 0000 UTC 1970. |
| Flow sequence number | Sequence counter of total flows received. |
| Source ID | 32-bit value that identifies the data exporter. Version 9 uses the integrated field diagnostics (IFD) SNMP index of the PIC or device that is exporting the data flow. This field is equivalent to engine type and engine ID fields found in versions 5 and 8. |

Figure 13: Version 9 Template FlowSet Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|-----------------|--------|----------------|--------|
| Flowset ID = 0 | | Length | |
| Template ID 256 | | Field Count | |
| Field Type 1 | | Field Length 1 | |
| Field Type 2 | | Field Length 2 | |
| ... | | ... | |
| Field Type N | | Field Type N | |
| Template ID 257 | | Field Count | |
| Field Type 1 | | Field Length 1 | |

9016786

Table 19: Version 9 Template FlowSet Fields

| Field | Description |
|---------------------|---|
| FlowSet ID | FlowSet type. FlowSet ID 0 is reserved for the Template FlowSet. |
| Length | FlowSet length. Individual template FlowSets might contain multiple template records, which means that the length of template FlowSets varies. |
| Template ID | Unique template ID assigned to each newly generated template. Templates numbered 256 and higher define data formats. Templates numbered 0 through 255 define FlowSet IDs. |
| Field Count | Fields in the template record. This field allows the collector to determine the end of the current template record and the start of the next. |
| Field Type | Field type. These are defined in Table 20 on page 32 . |
| Field Length | Length, in bytes, of the corresponding field type. |

Table 20: Field Type Definitions Supported in the Junos OS

| Field Type | Description |
|------------|---|
| 1 | IN_BYTES: The number of bytes associated with an IP flow. By default, the length is 4 bytes. |
| 2 | IN_PKTS: The number of packets associated with an IP flow. By default, the length is 4 packets. |
| 4 | PROTOCOL: The IP protocol byte. |
| 5 | TOS: The type-of-service byte setting of an incoming packet. |

Table 20: Field Type Definitions Supported in the Junos OS (*continued*)

| Field Type | Description |
|------------|---|
| 6 | TCP_FLAGS: The cumulative TCP flags associated with a flow. |
| 7 | L4_SRC_PORT: The TCP/UDP source port. |
| 8 | IPv4_SRC_ADDR: The IPv4 source address. |
| 9 | SRC_MASK: The number of contiguous bits in the source subnet mask. |
| 10 | INPUT_SNMP: The IFD SNMP input interface index. By default, the length is 2. |
| 11 | L4_DST_PORT: The TCP/UDP destination port number. |
| 12 | IPv4_DST_ADDR: The IPv4 destination address. |
| 13 | DST_MASK: The number of contiguous bits in the destination subnet mask. |
| 14 | OUTPUT_SNMP: The IFD SNMP output interface index. By default, the length is 2. |
| 16 | SRC_AS: The source autonomous system number. This is always set to zero. |
| 17 | DST_AS: The destination autonomous system number. This is always set to zero. |
| 18 | BGP_IPV4_NEXT_HOP: The BGP IPv4 next-hop address. |
| 21 | LAST_SWITCHED: The uptime of the device (in milliseconds) at which the last packet of the flow was switched. |
| 22 | FIRST_SWITCHED: The uptime of the device (in milliseconds) at which the first packet of the flow was switched. |
| 29 | IPv6_SRC_MASK: The length of the IPv6 source mask, in contiguous bits. |
| 30 | IPv6_DST_MASK: The length of the IPv6 destination mask, in contiguous bits. |
| 32 | ICMP_TYPE: The ICMP type. |
| 34 | SAMPLING_INTERVAL: The rate at which packets are sampled. As an example, a rate of 100 means that one packet is sampled for every 100 packets in the data flow. |
| 35 | SAMPLING_ALGORITHM: The type of algorithm being used. 0x01 indicates deterministic sampling and 0x02 indicates random sampling. |
| 47 | MPLS_TOP_LABEL_IP_ADDRESS: The MPLS top- label address. |
| 60 | IP_PROTOCOL_VERSION: The IP protocol version being used. |
| 62 | IPv6_NEXT_HOP: The IPv6 address of the next-hop router. |

Table 20: Field Type Definitions Supported in the Junos OS (*continued*)

| Field Type | Description |
|------------|---|
| 70 | MPLS_LABEL_1: The first MPLS label in the stack. |
| 71 | MPLS_LABEL_2: The second MPLS label in the stack. |
| 72 | MPLS_LABEL_3: The third MPLS label in the stack. |
| 128 | DST_PEER_AS: The destination of the BGP peer AS. |

Figure 14: Version 9 Data FlowSet Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|--------------------------|--------|--------------------------|--------|
| Flowset ID = Template ID | | Length | |
| Record 1 - Field Value 1 | | Record 1 - Field Value 2 | |
| Record 1 - Field Value 3 | | ... | |
| Record 2 - Field Value 1 | | Record 2 - Field Value 2 | |
| Record 2 - Field Value 3 | | Record 2 - Field Value 2 | |
| Record 3 - Field Value 1 | | ... | |
| ... | | Padding | |

g016787

Table 21: Version 9 Data FlowSet Format

| Field | Description |
|---|---|
| FlowSet ID = Template ID | Data FlowSet that associated with a FlowSet ID. The FlowSet ID maps to a previously generated template ID. The flow collector must use the FlowSet ID to find the corresponding template record and decode the flow records from the FlowSet. |
| Length | FlowSet length. Data FlowSets are fixed in length. |
| Record Number - Field Value Number | Flow data records, each containing a set of field values. The template record identified by the FlowSet ID dictates the type and length of the field values. |
| Padding | Bytes (in zeros) that the exporter inserts so that the subsequent FlowSet starts at a 4-byte aligned boundary. |

Figure 15: Version 9 Options Template Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|-----------------------|--------|---------------------|--------|
| Flowset ID = 1 | | Length | |
| Template ID | | Option Scope Length | |
| Option Length | | Scope 1 Field Type | |
| Scope 1 Field Length | | ... | |
| Scope N Field Length | | Option 1 Field Type | |
| Option 1 Field Length | | ... | |
| Option M Field Length | | Padding | |

g016786

Table 22: Version 9 Options Template Format

| Field | Description |
|-----------------------------|--|
| FlowSet ID | FlowSet type. FlowSet ID 1 is reserved for the options template. |
| Length | FlowSet length. Option template FlowSets are fixed in length. |
| Template ID | Template ID of the options template. Options template values are greater than 255. |
| Option Scope Length | Length, in bytes, of any scope field definition that is part of the options template record. |
| Scope 1 Field Type | Relevant process. The Junos OS supports the system process (1). |
| Scope 1 Field Length | Length, in bytes, of the option field. |
| Padding | Bytes the exporter inserts so that the subsequent FlowSet starts at a 4-byte aligned boundary. |

Figure 16: Active Flow Monitoring Version 9 Options Data Record Format

| Byte 3 | Byte 2 | Byte 1 | Byte 0 |
|---------------------------------|--------|---------------------------------|--------|
| Flowset ID = Template ID | | Length | |
| Record 1 - Scope 1 Value | | Record 1 - Option Field 1 Value | |
| Record 1 - Option Field 2 Value | | ... | |
| Record 2 - Option Field 2 Value | | ... | |
| Record 3 - Scope 1 Value | | Record 3 - Option Field 1 Value | |
| ... | | Padding | |

g016786

Table 23: Active Flow Monitoring Version 9 Options Data Record Format

| Field | Description |
|------------------------------------|---|
| FlowSet ID = Template ID | ID that precedes each options data flow record. The FlowSet ID maps to a previously generated template ID. The collector must use the FlowSet ID to find the corresponding template record and decode the options data flow records from the FlowSet. |
| Length | FlowSet length. Option FlowSets are fixed in length. |
| Number of Flow Data Records | Remainder of the options data FlowSet is a collection of flow data records, each containing a set of field values. The template record identified by the FlowSet ID dictates the type and length of the field values. |
| Padding | Bytes (in zeros) the exporter inserts so that the subsequent FlowSet starts at a 4-byte aligned boundary. |

More Information About Passive and Active Flow Monitoring

To learn more about passive flow monitoring, active flow monitoring, cflowd versions 5 and 8, and flow monitoring version 9 see the following:

- Version 9: RFC 3954 at <http://www.faqs.org/rfcs/rfc3954.html>
- Versions 5 and 8: Cooperative Association for Internet Data Analysis (CAIDA) website at <http://www.caida.org>.
- *Junos Services Interfaces Configuration Guide*
- *Junos Policy Framework Configuration Guide*
- Internet draft draft-cavuto-dtcp-01.txt, *DTCP: Dynamic Tasking Control Protocol* (expires March 2007)

For more information on IPSec and the ES PIC, see the *Junos System Basics Configuration Guide*.

CHAPTER 4

Glossary

- [Terms and Acronyms on page 37](#)

Terms and Acronyms

A

active flow monitoring Technique to lawfully intercept and observe specified data network traffic on an active router participating in the network.

Adaptive Services PIC Advanced PIC that handles active flow monitoring, Network Address Translation (NAT), stateful firewall, and intrusion detection functions. For more information on the Adaptive Services PIC, see the *Junos Services Interfaces Configuration Guide*.

C

cflowd Version 5 and version 8 flow monitoring process that captures flow information from network traffic and exports this data into summary tables. Once captured, flow data can be analyzed as needed. For more information about cflowd, see <http://www.caida.org>.

content destination A recipient of monitored packets sent by a DTCP or dynamic flow capture-enabled monitoring station.

control source A dynamic flow capture client that wants to monitor electronic data or voice transfer over the network. The control source sends filter requests to the dynamic flow capture-enabled monitoring station by using DTCP.

D

DTCP (Dynamic Tasking Control Protocol) Protocol used to specify filtering criteria in a dynamic flow capture environment.

dynamic flow capture Technique that allows DTCP-enabled control sources to send specified filtering criteria in real time to a monitoring station. The monitoring station passively monitors the specified traffic flows on demand and sends the captured packets to content destinations.

E

ES PIC PIC that handles encryption and security services (such as IP Security [IPSec]).

F

flow collector interface Converted Monitoring Services II PIC that processes multiple flow records into compressed ASCII data files and exports these files to an FTP server.

M

Monitoring Services II PIC Advanced PIC that handles passive flow monitoring functions.

Monitoring Services III PIC Advanced PIC that handles dynamic flow capture functions.

Monitoring Services PIC Original PIC that handles passive and active flow monitoring functions.

MultiServices 100 PIC Also referred to as MultiServices PIC Type 1. Advanced PIC that handles active flow capture functions.

MultiServices 400 PIC Also referred to as MultiServices PIC Type 2. Advanced PIC that handles active flow capture functions.

MultiServices 500 PIC Also referred to as MultiServices PIC Type 3. Advanced PIC that handles active flow capture functions.

P

passive flow monitoring Technique to lawfully intercept and observe specified data network traffic on a passive flow monitoring station not participating in the network.

PART 2

Configuration

- [Passive Flow Monitoring Configuration on page 41](#)
- [Active Flow Monitoring Configuration on page 69](#)

CHAPTER 5

Passive Flow Monitoring Configuration

- [Configuring Passive Flow Monitoring on page 42](#)
- [Applying the Firewall Filter to a Tunnel PIC Interface on page 43](#)
- [Configuring the Capture Group on page 43](#)
- [Configuring the Content Destination on page 44](#)
- [Configuring the Control Source on page 44](#)
- [Configuring the Dynamic Flow Capture Interface on page 45](#)
- [Configuring a Monitoring Group to Send Traffic to the Flow Server on page 46](#)
- [Configuring Input Interfaces, Monitoring Services Interfaces, and Export Interfaces on page 47](#)
- [Configuring Policy Options on page 51](#)
- [Configuring a Routing Table Group to Add Interface Routes into the Forwarding Instance on page 51](#)
- [Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding on page 52](#)
- [Creating a Firewall Filter to Split the Port-Mirrored Traffic into Different Instances on page 53](#)
- [Establishing a VRF Instance for the Monitored Traffic on page 53](#)
- [Monitoring Traffic with a VRF Instance and a Monitoring Group on page 54](#)
- [Specifying a Firewall Filter to Select Traffic to Monitor on page 54](#)
- [Specifying Port Mirroring Input and Output on page 55](#)
- [Using a Dynamic Flow Capture Interface to Monitor Traffic On Demand on page 56](#)
- [Using Filter-Based Forwarding to Export Monitored Traffic to Multiple Destinations on page 57](#)
- [Using a Flow Collector Interface to Process and Export Multiple Flow Records on page 58](#)
- [Option: Applying a Firewall Filter to an Output Interface on page 63](#)
- [Option: Configuring System Logging on page 64](#)
- [Option: Configuring Thresholds on page 64](#)
- [Option: Monitoring Dynamic Flow Capture by Using SNMP on page 64](#)

- [Option: Stripping MPLS Labels on ATM, Ethernet-Based, and SONET/SDH Interfaces on page 64](#)
- [Option: Using an ES PIC to Send Traffic to a Packet Analyzer on page 65](#)

Configuring Passive Flow Monitoring

Table 24 on page 42 shows which Juniper Networks PICs and routers support passive flow monitoring. The PICs receive passively monitored network traffic from an input interface (SONET/SDH, ATM2 IQ, Fast Ethernet, Gigabit Ethernet, or 10-Gigabit Ethernet), convert the received packets into flow records, and export them to a flow server for further analysis.

Table 24: Passive Flow Monitoring PIC Support

| PIC Type | M40e | M160 | T Series/ M320 |
|--------------------------------|------|------|-------------------|
| Monitoring Services PIC | Yes | Yes | No |
| Monitoring Services II PIC | Yes | Yes | Yes |
| Monitoring Services III PIC | Yes | Yes | Yes |
| MultiServices 400 PIC (Type 2) | Yes | No | Yes |

The key configuration hierarchy statement for passive flow monitoring is the **monitoring** statement found at the **[edit forwarding-options]** hierarchy level. At minimum, you must configure a VRF routing instance to direct the traffic to a monitoring services interface for flow processing.

However, there are several options you can use that add complexity to passive flow monitoring. For example, you can configure the router to direct traffic into a routing instance and deliver the traffic into a monitoring group. You can also use port mirroring and filter-based forwarding to copy and redirect traffic. Optionally, you can configure the monitoring station to encrypt flow output before it is sent to a flow server for processing, to send flow records to a flow collector, or to process on-demand monitoring requests with dynamic flow capture.

Related Documentation

- [Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding on page 52](#)
- [Using a Flow Collector Interface to Process and Export Multiple Flow Records on page 58](#)
- [Using a Dynamic Flow Capture Interface to Monitor Traffic On Demand on page 56](#)
- [Hardware and Software Considerations on page 5](#)

Applying the Firewall Filter to a Tunnel PIC Interface

Once the firewall filter is defined, apply it as an input filter on a tunnel interface. This is required if the firewall filter defines two or more types of traffic or export interfaces. However, if the firewall filter only specifies one type of traffic and one export interface, you can apply the filter directly to the export interface.

```
[edit]
interfaces {
  vt-0/2/0 {
    unit 0 {
      family inet {
        filter {
          input tunnel-interface-filter;
        }
      }
    }
  }
}
```

Configuring the Capture Group

A dynamic flow capture capture group defines a profile of dynamic flow capture configuration information. The static configuration includes information about control sources, content destinations, and notification destinations. Dynamic configuration is added through interaction with control sources using a control protocol.

To configure a capture group, include the **capture-group** statement at the **[edit services dynamic-flow-capture]** hierarchy level:

```
[edit services dynamic-flow-capture]
capture-group client-name {
  content-destination identifier {
    address address;
    ttl hops;
  }
  control-source identifier {
    allowed-destinations [ destination ];
    no-syslog;
    notification-targets [ address address port port-number ];
    service-port port-number;
    shared-key value;
    source-addresses [ address ];
  }
  input-packet-rate-threshold rate;
  interfaces interface-name;
  pic-memory-threshold percentage percentage;
}
```

To specify the **capture-group**, assign it a unique **client-name** that associates the information with the requesting control sources.

Configuring the Content Destination

You must specify a destination for the packets that match dynamic flow capture filter criteria. To configure, include the **content-destination** statement at the **[edit services dynamic-flow-capture capture-group *client-name*]** hierarchy level:

```
[edit services dynamic-flow-capture capture-group client-name]  
content-destination identifier {  
  address address;  
  ttl hops;  
}
```

Assign the **content-destination** a unique *identifier*. In addition, you must specify its IP address, and you can optionally set a time-to-live (TTL) value for the IP-IP header:

- **address**—The dynamic flow capture interface appends an IP header with this destination address on the matched packet (with its own IP header and contents intact) and sends it out to the content destination.
- **ttl**—By default, the TTL value is 255, with a range from 0 through 255.

Configuring the Control Source

You configure information about the control source, including allowed source addresses, destinations, and authentication key values. To configure the control source information, include the **control-source** statement at the **[edit services dynamic-flow-capture]** hierarchy level:

```
[edit services dynamic-flow-capture capture-group client-name]  
control-source identifier {  
  allowed-destinations [ destination-identifier ];  
  no-syslog;  
  notification-targets [ address address port port-number ];  
  service-port port-number;  
  shared-key value;  
  source-addresses [ address ];  
}
```

Assign the **control-source** statement with a unique *identifier*. You can also include values for the following statements:

- **allowed-destinations**—One or more content destination identifiers to which this control source can request matched data to be sent in its control protocol requests. If you do not specify any content destinations, all available destinations are allowed.
- **notification-targets**—One or more destinations to which the dynamic flow capture interface can log information about control protocol-related events and other events such as PIC startup messages. You configure each **notification-target** entry with an IP **address** value and a User Datagram Protocol (UDP) **port** number.
- **service-port**—UDP port number to which the control protocol requests are directed. Control protocol requests that are not directed to this port are discarded by dynamic flow capture interfaces.

- **shared-key**—A 20-byte authentication key value shared between the control source and the dynamic flow capture monitoring station.
- **source-addresses**—One or more allowed IP addresses from which the control source can send control protocol requests to the dynamic flow capture monitoring station. These are /32 addresses.

Configuring the Dynamic Flow Capture Interface

You specify the interface that interacts with the control sources configured in the same dynamic flow capture group. A Monitoring Services III PIC can belong to only one capture group, and you can configure only one PIC for each group.

To configure a dynamic flow capture interface, include the **interfaces** statement at the **[edit services dynamic-flow-capture]** hierarchy level:

```
[edit services dynamic-flow-capture capture-group client-name]
  interfaces interface-name;
```

You specify dynamic flow capture interfaces using the **dfc**-identifier at the **[edit interfaces]** hierarchy level. Three logical units are required on each dynamic flow capture interface, numbered **0**, **1**, and **2**. You cannot configure any other logical interfaces.

- **unit 0** processes control protocol requests and responses.
- **unit 1** receives monitored data.
- **unit 2** transmits the matched packets to the destination address.

The following example shows the configuration necessary to set up a dynamic flow capture interface:

```
[edit interfaces dfc-0/0/0]
  unit 0 {
    family inet {
      address 10.1.0.0/32 { # Address of the Routing Engine for the DFC PIC.
        destination 10.36.100.1; # Address of DFC PIC; used by the
          # control source to correspond with the monitoring station.
        }
      }
    }
  unit 1 { # Receives data packets on this logical interface.
    family inet;
  }
  unit 2 { # Sends copies of matched packets from this logical interface.
    family inet;
  }
```

In addition, you must configure the dynamic flow capture application to run on the DFC PIC in the correct chassis location. The following example shows this configuration at the **[edit chassis]** hierarchy level:

```
[edit chassis]
  fpc 0 {
    pic 0 {
```

```

        monitoring-services application dynamic-flow-capture;
    }
}

```

For more information on configuring chassis properties, see the *Junos System Basics Configuration Guide*.

Configuring a Monitoring Group to Send Traffic to the Flow Server

You collect flow records by specifying output interfaces in a monitoring group. In general, the monitoring services interfaces are the output interfaces. The logical unit number on the output interfaces when used in conjunction with a VRF instance must be 1. To configure, include the **output** statement at the **[edit forwarding-options monitoring group-name family inet]** hierarchy level.



NOTE: Because routing instances determine the input interface, the input statement at the **[edit forwarding-options monitoring group-name family inet]** hierarchy level has been removed in Junos OS Release 6.0 and later. If you have a configuration that contains this old statement, we recommend that you update your configuration and remove the statement.

As part of the **mo-fpc/pic/port** statement at the **[edit forwarding-options monitoring group-name family inet output interface]** hierarchy level, you must specify a source address for transmission of flow information. You can use the router ID IP address, the IP address of the input interface, or any local IP address of your choice as the source address. If you provide a different **source-address** statement for each monitoring services output interface, you can track which interface processes a particular flow record.

All other statements at this level (**engine-id**, **engine-type**, **input-interface-index**, and **output-interface-index**) are dynamically generated, but can be configured manually. To reset outgoing interface or incoming interface indexes that were once configured manually, configure the **input-interface-index** or **outgoing-interface-index** statements with a value of 0 at the **[edit forwarding-options monitoring group-name family inet output interface interface-name]** hierarchy level.

To specify the flow server IP address and port number, include the **flow-server ip-address port port-number** statement at the **[edit forwarding-options monitoring group-name family inet output]** hierarchy level. You can specify up to eight flow servers in a monitoring group and the IP address for each server must be unique. Flow records are exported and load-balanced between all active flow servers.

Once you configure the VRF and monitoring group statements, traffic enters the input interfaces, passes to the monitoring services interfaces for processing, and is discarded. The resulting flow description packets exit the monitoring station through the export interface. If you want traffic to travel to destinations other than the monitoring services interfaces, or need to establish additional analysis, see the section [“Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding”](#) on page 52.



NOTE: You must complete interface configuration on the Monitoring Services or Monitoring Services II PIC before an interface can be added into a monitoring group. For more information, see [“Configuring Input Interfaces, Monitoring Services Interfaces, and Export Interfaces”](#) on page 47.

```
[edit]
forwarding-options {
  monitoring-group1 {
    family inet {
      output {
        export-format cflowd-version-5;
        flow-active-timeout 60;
        flow-inactive-timeout 30;
        flow-server 192.168.245.1 port 2055;
        flow-server 192.168.245.2 port 2055;
        interface mo-4/0/0.1 {
          engine-id 1;
          engine-type 1;
          input-interface-index 44;
          output-interface-index 54;
          source-address 192.168.245.1;
        }
        interface mo-4/1/0.1 {
          engine-id 2;
          engine-type 1;
          input-interface-index 45;
          output-interface-index 55;
          source-address 192.168.245.1;
        }
        interface mo-4/2/0.1 {
          engine-id 3;
          engine-type 1;
          input-interface-index 46;
          output-interface-index 56;
          source-address 192.168.245.1;
        }
      }
    }
  }
}
```

Configuring Input Interfaces, Monitoring Services Interfaces, and Export Interfaces

After creating the input filter, you need to configure the interfaces where traffic will enter the router. To enable passive flow monitoring for SONET/SDH input interfaces, include the **passive-monitor-mode** statement at the **[edit interfaces so-fpc/pic/port unit unit-number]** hierarchy level. This mode disables the router from participating in the network as an active device. On SONET/SDH interfaces, passive monitor mode suppresses SONET keepalives.

For ATM2 IQ interfaces, passive monitor mode suppresses the sending and receiving of ATM Operations, Administration, and Maintenance (OAM) and Integrated Local Management Interface (ILMI) control messages. To enable passive flow monitoring for ATM2 IQ input interfaces, include the **passive-monitor-mode** statement at the **[edit interfaces *atm-fpc/pic/port*]** hierarchy level. ATM passive monitoring supports the following interface encapsulation types: Cisco-compatible ATM Network Layer Protocol ID (NLPID) (**atm-cisco-nlpid**), ATM NLPID (**atm-nlpid**), ATM Point-to-Point Protocol (PPP) over ATM Adaptation Layer 5 (AAL5)/ logical link control (LLC) (**atm-ppp-llc**), ATM PPP over raw AAL5 (**atm-ppp-vc-mux**), ATM LLC/ subnetwork attachment point (SNAP) (**atm-snap**), and ATM virtual circuit (VC) multiplexing (**atm-vc-mux**).

Ethernet-based interfaces support both per-port passive monitoring and per-VLAN passive monitoring. For Fast Ethernet interfaces, include the **passive-monitor-mode** statement at the **[edit interfaces *fe-fpc/pic/port*]** hierarchy level. For Gigabit Ethernet interfaces, include the **passive-monitor-mode** statement at the **[edit interfaces *ge-fpc/pic/port*]** hierarchy level. On Ethernet-based interfaces, passive monitor mode disables the Routing Engine from receiving packets and prevents the routing table from transmitting packets. You can verify this by the presence of the **No-receive** and **No-transmit** interface flags in the output of the **show interfaces (*fe | ge*)-fpc/pic/port** command.



NOTE: The following restrictions apply to passive flow monitoring on Ethernet-based interfaces:

- No special encapsulation types are allowed, so you must configure Ethernet encapsulations only.
- When you configure the **passive-monitor-mode** statement, destination MAC address filters applied to incoming interfaces are disabled by default.
- The **flow-control** statement at the **[edit interfaces *ge-fpc/pic/port* *gigether-options*]** or **[edit interfaces *fe-fpc/pic/port* *fastether-options*]** hierarchy level does not work when passive flow monitoring is enabled.

In addition to passive monitor mode, apply the previously defined firewall filter to the interface with the **filter** statement at the **[edit interfaces *interface-name-fpc/pic/port* *unit unit-number* *family inet*]** hierarchy level:

```
[edit]
interfaces {
  so-0/0/0 {
    description "SONET/SDH input interface";
    encapsulation ppp;
    unit 0 {
      passive-monitor-mode;
      family inet {
        filter {
          input input-monitoring-filter;
        }
      }
    }
  }
}
```



```

at-1/0/0 {
  description "ATM2 IQ input interface";
  passive-monitor-mode;
  atm-options {
    pic-type atm2;
    vpi 0 {
      maximum-vcs 255;
    }
  }
  unit 0 {
    encapsulation atm-snap;
    vci 0.100;
    family inet {
      filter {
        input input-monitoring-filter;
      }
    }
  }
}
ge-2/0/0 {
  description "Gigabit Ethernet input interface";
  passive-monitor-mode;
  unit 0 {
    family inet {
      filter {
        input input-monitoring-filter;
      }
    }
  }
}

```

Configure the interfaces on the Monitoring Services PIC or Monitoring Services II PIC with the **family inet** statement at the **[edit interfaces mo-fpc/pic/port unit unit-number]** hierarchy level. The statement allows the interfaces to process IPv4 traffic received from the input interfaces.

When you use VRF instances, you need to configure two logical interfaces. The first (**unit 0**) is part of the inet.0 routing table and sources the flow packets. The second (**unit 1**) is configured as part of the VRF instance so the monitoring services interface can serve as a valid next hop for packets received in the instance.

You can also capture options packets and time-to-live (TTL) exceeded information when the monitoring services interface processes flow records. To configure, include the **receive-options-packets** and **receive-ttl-exceeded** statements at the **[edit interfaces mo-fpc/pic/port unit unit-number family inet]** hierarchy level:

```

[edit]
interfaces {
  mo-4/0/0 {
    unit 0 {
      family inet {
        receive-options-packets;
        receive-ttl-exceeded;
      }
    }
  }
}

```

```
    }
    unit 1 {
        family inet;
    }
}
mo-4/1/0 {
    unit 0 {
        family inet;
    }
    unit 1 {
        family inet;
    }
}
mo-4/2/0 {
    unit 0 {
        family inet;
    }
    unit 1 {
        family inet;
    }
}
mo-4/3/0 {
    unit 0 {
        family inet;
    }
    unit 1 {
        family inet;
    }
}
}
```

You must also configure the export interface where flow packets exit the monitoring station and are sent to the flow server.

On output interfaces, you can apply a firewall filter that leads to a filter-based forwarding routing instance. This is useful if you want to port-mirror traffic to multiple Monitoring Services PICs or flow collection services interfaces. To configure, include the **output** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* family inet filter]** hierarchy level. For more information, see [“Using Filter-Based Forwarding to Export Monitored Traffic to Multiple Destinations”](#) on page 57.

```
[edit]
interfaces
fe-3/0/0 {
    description "export interface to flow server";
    unit 0 {
        family inet;
        address ip-address;
        filter {
            output output-filter-name;
        }
    }
}
```

Configuring Policy Options

When you use a group of next hops in your monitoring group, you can load-balance traffic and distribute it to the export interfaces if you configure policy options. To configure, include the **load-balance per-packet** statement at the **[edit policy-options policy-statement *policy-name* then]** hierarchy level. You can also reject import and export of VRF routes by including the **reject** statement at the **[edit policy-options policy-statement *policy-name* then]** hierarchy level.

```
[edit]
routing-options {
  forwarding-table {
    export pplb;
  }
}
policy-options {
  policy-statement monitoring-vrf-import {
    then {
      reject;
    }
  }
  policy-statement monitoring-vrf-export {
    then {
      reject;
    }
  }
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
```

Configuring a Routing Table Group to Add Interface Routes into the Forwarding Instance

Next, import the interface routes into the forwarding instance. This step is necessary because the next hops specified in the forwarding instances must be installed in the forwarding instances themselves. To configure, include the **import-rib** statement at the **[edit routing-options rib-groups *group-name*]** hierarchy level. The **export** statement at the **[edit routing-options forwarding-table]** hierarchy level and the **pplb** policy enable load balancing.

```
[edit]
routing-options {
  interface-routes {
    rib-group inet bc-vrf;
  }
  rib-groups {
    bc-vrf {
      import-rib [inet.0 tcp-routing-table.inet.0 udp-routing-table.inet.0];
    }
  }
}
```

```
    }  
    forwarding-table {  
        export pplb;  
    }  
}  
policy-options {  
    policy-statement pplb {  
        then {  
            load-balance per-packet;  
        }  
    }  
}
```

Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding

This section discusses additional techniques you can use with the passive flow monitoring application:

- In addition to flow analysis, you can analyze a copy of the original traffic with a single packet analyzer. To implement this technique, divert traffic with a filter-based forwarding routing instance and send the monitored traffic through a physical interface to the packet analyzer.
- You can cluster the traffic into different groups and redirect this traffic to multiple packet analyzers. For example, you can break traffic flows into TCP groups and UDP groups and send these groups of packets to different analyzers. To accomplish this, you use port mirroring and send a copy of the original traffic to a Tunnel PIC. Then you can apply a firewall filter, split the traffic into your desired groups, and send these groups toward different exit interfaces leading to the packet analyzers. This technique provides maximum flexibility for traffic analysis.
- For secure transmission of the copied or grouped traffic, you can encrypt the diverted traffic with an ES PIC and send this traffic to a packet analyzer over an IP Security (IPSec) tunnel.

To implement the filter-based forwarding enhancement methods, see the following sections:

- [Specifying Port Mirroring Input and Output on page 55](#)
- [Creating a Firewall Filter to Split the Port-Mirrored Traffic into Different Instances on page 53](#)
- [Applying the Firewall Filter to a Tunnel PIC Interface on page 43](#)
- [Using Filter-Based Forwarding to Export Monitored Traffic to Multiple Destinations on page 57](#)
- [Configuring a Routing Table Group to Add Interface Routes into the Forwarding Instance on page 51](#)
- [Option: Using an ES PIC to Send Traffic to a Packet Analyzer on page 65](#)
- [Option: Applying a Firewall Filter to an Output Interface on page 63](#)

Creating a Firewall Filter to Split the Port-Mirrored Traffic into Different Instances

If you need to split the copy of the monitored traffic into separate groups and send these filtered packets to different analyzers, devise a firewall filter that selects some traffic for sampling and some traffic for discarding. In this case, UDP traffic is sent into one routing instance, TCP traffic is diverted into a second routing instance, and all other traffic is discarded. In a later step, you will define the filter-based forwarding routing instances specified in the **then** statements shown in this filter.

```
[edit]
firewall {
  family inet {
    filter tunnel-interface-filter {
      term tcp {
        from {
          protocol tcp;
        }
        then {
          count tcp;
          routing-instance tcp-routing-table;
        }
      }
      term udp {
        from {
          protocol udp;
        }
        then {
          count udp;
          routing-instance udp-routing-table;
        }
      }
      term rest {
        then {
          count rest;
          discard;
        }
      }
    }
  }
}
```

Establishing a VRF Instance for the Monitored Traffic

After the firewall filter and interfaces are ready, create a VPN routing and forwarding (VRF) instance. The filtered traffic enters the VRF instance and is shared only between the input interfaces and the monitoring services output interfaces. In this case, a group of four monitoring services interfaces is used as the next hop.

```
[edit]
routing-instances {
  monitoring-vrf {
    instance-type vrf;
```

```
interface so-0/0/0.0;
interface so-0/1/0.0;
interface mo-4/0/0.1;
interface mo-4/1/0.1;
interface mo-4/2/0.1;
route-distinguisher 69:1;
vrf-import monitoring-vrf-import;
vrf-export monitoring-vrf-export;
routing-options {
  static {
    route 0.0.0.0/0 next-hop [mo-4/0/0.1 mo-4/1/0.1 mo-4/2/0.1];
  }
}
}
```

Monitoring Traffic with a VRF Instance and a Monitoring Group

The first way you can implement passive flow monitoring is to direct traffic into a VRF routing instance and use a monitoring group to export this traffic to a flow server for analysis. Complete the following tasks:

- [Specifying a Firewall Filter to Select Traffic to Monitor on page 54](#)
- Configuring Input Interfaces, Monitoring Services Interfaces, and Export Interfaces
- [Establishing a VRF Instance for the Monitored Traffic on page 53](#)
- Configuring a Monitoring Group to Send Traffic to the Flow Server
- Configuring Policy Options
- Option: Stripping MPLS Labels on ATM, Ethernet-Based, and SONET/SDH Interfaces

Specifying a Firewall Filter to Select Traffic to Monitor

When you define a firewall filter, you select the initial traffic to be monitored. To configure a firewall filter, include the **filter** statement at the **[edit firewall family inet]** hierarchy level. All filtered traffic to be monitored must be accepted.

```
[edit]
firewall {
  family inet {
    filter input-monitoring-filter {
      term 1 {
        from {
          destination-address {
            10.7.0.0/16;
          }
        }
        then {
          count counter1;
          accept;
        }
      }
    }
  }
}
```

```

term 2 {
  from {
    destination-address {
      10.6.0.0/16;
    }
  }
  then {
    count counter2;
    accept;
  }
}
}
}

```

Specifying Port Mirroring Input and Output

This step works in conjunction with the action specified by the **port-mirror** statement configured at the **[edit firewall family (inet | inet6) filter *filter-name* term *term-name* then]** hierarchy level. At this point, you select input and output statements to determine where the copies of the IPv4 or IPv6 packets are sent. To configure, include the **input** and **output** statements at the **[edit forwarding-options port-mirroring family *family-name*]** hierarchy level. The traffic to be monitored is copied, port-mirrored, and sent to the packet analyzer for analysis. On M Series routers, you can port-mirror either IPv4 or IPv6 packets at one time. On M120, M320, and T Series routers, you can port-mirror both IPv4 and IPv6 packets simultaneously.



NOTE: On an M320 or T Series router using an Adaptive Services (AS) II PIC or a MultiServices PIC, corrupted IP packets might be sent to the port mirror when traffic passes through an IPSec tunnel. The inbound IP traffic passes through the IPSec tunnel and the **sp** interface is decoded and forwarded to the port mirror correctly, but the return outbound traffic is corrupted and unreadable through the router configured with the port mirror.

The port-mirrored copy of the traffic can travel only to a single next hop. As a result, only one type of analysis can be performed if the packets are sent to a packet analyzer through a physical next hop. If more than one type of analysis is desired, a tunnel interface must be used as the next hop for port mirroring. When the mirrored copy of the traffic arrives at the virtual tunnel interface, it can be filtered, split into groups, and redirected to multiple exit interfaces and packet analyzers.

For your input requirements, include the **rate** and **run-length** statements at the **[edit forwarding-options port-mirroring family *family-name* input]** hierarchy level. For your output requirements, specify the target interface with the **interface** statement at the **[edit forwarding-options port-mirroring family *family-name* output]** hierarchy level.

By default, a filter cannot be applied to an interface where port-mirrored traffic is received. To allow the tunnel services interface to be used as a filtered next hop, include the **no-filter-check** statement at the **[edit forwarding-options port-mirroring family *family-name* output]** hierarchy level.

```
[edit]
forwarding-options {
  port-mirroring {
    family (inet | inet6) {
      input {
        rate 1;
        run-length 5;
      }
      output {
        interface vt-0/2/0.0;
        no-filter-check;
      }
    }
  }
}
```



NOTE: Before Junos OS Release 7.4, you could configure the input and output statements at the [edit forwarding-options port-mirroring] hierarchy level. However, this older syntax has been revised to extend port-mirroring support to IPv6 packets. If you have a configuration that contains the older syntax, we recommend that you update your configuration to the new syntax listed above.

Using a Dynamic Flow Capture Interface to Monitor Traffic On Demand

Dynamic flow capture enables you to capture packet flows based on filtering criteria that you specify in real time. Unlike traditional flow monitoring that requires filtering criteria to be established before operation, dynamic flow capture uses an on demand control protocol that allows you to modify the filtering criteria as network conditions change.

The dynamic flow capture architecture consists of one or more *control sources* that send Dynamic Tasking Control Protocol (DTCP) requests to a *monitoring station*. The requests contain filtering criteria that specify which incoming traffic should be monitored, and the monitoring station forwards any packets that match the filter criteria to a set of one or more *content destinations*.


- **Control source**—A client that wants to monitor electronic data or voice transfer over the network. The control source sends filter requests to the Juniper Networks router using DTCP. The control source is identified by a unique identifier and an optional list of IP addresses.
- **Monitoring station**—A Juniper Networks T Series or M320 router configured with one or more Monitoring Services III PICs which support dynamic flow capture processing. The monitoring station processes the requests from the control sources, creates the filters, monitors incoming data flows, and sends the matched packets to the appropriate content destinations.
- **Content destination**—Recipient of the matched packets from the monitoring station. Typically the matched packets are sent using an IPSec tunnel from the monitoring station to another router connected to the content destination. The content destination and the control source can be located on the same host.



NOTE: The DFC PIC forwards the entire packet content to the content destination, rather than just a content record.

Figure 17 on page 57 shows a sample topology that contains control sources, a monitoring station, and content destinations.

Figure 17: Dynamic Flow Capture Topology

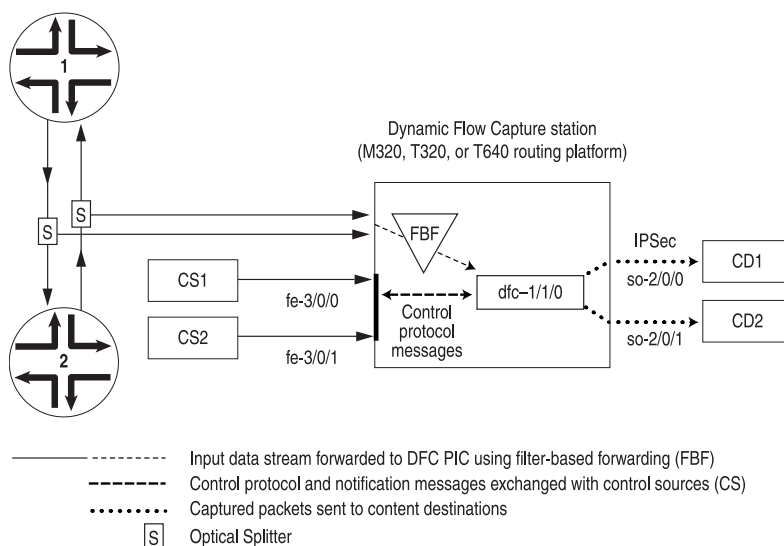

9017075

To configure dynamic flow capture, perform the following tasks:

- [Configuring the Capture Group on page 43](#)
- [Configuring the Content Destination on page 44](#)
- [Configuring the Control Source on page 44](#)
- [Configuring the Dynamic Flow Capture Interface on page 45](#)
- [Option: Configuring Thresholds on page 64](#)
- [Option: Configuring System Logging on page 64](#)
- [Option: Monitoring Dynamic Flow Capture by Using SNMP on page 64](#)

Using Filter-Based Forwarding to Export Monitored Traffic to Multiple Destinations

The firewall filter called **tunnel-interface-filter** that you made earlier sends UDP traffic into one filter-based forwarding routing instance called **udp-routing-table**, sends TCP traffic into a second filter-based forwarding routing instance called **tcp-routing-table**, and discards all other packets. Here you will configure the filter-based forwarding instances.

Configure an export interface for each of your routing instances by including a static next hop. To configure, include the **route** statement at the **[edit routing-instances *instance-name* routing-options static]** hierarchy level and specify a next-hop address or interface.

```
[edit]
routing-instances {
  tcp-routing-table {
    instance-type forwarding;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop es-3/1/0.0;
      }
    }
  }
  udp-routing-table {
    instance-type forwarding;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop 10.9.1.2;
      }
    }
  }
}
```

Using a Flow Collector Interface to Process and Export Multiple Flow Records

Basic passive monitoring can sometimes create a large number of flow records. However, you can manage multiple flow records with a flow collector interface. You can create a flow collector interface from a Monitoring Services II PIC. The flow collector interface combines multiple flow records received from a monitoring services interface into a compressed ASCII data file and exports the file to an FTP server.

To convert a Monitoring Services II PIC into a flow collector interface, include the **flow-collector** statement at the **[edit chassis fpc *fpc-slot* pic *pic-slot* monitoring-services application]** hierarchy level. To restore the monitoring functions of a Monitoring Services II PIC, include the **monitor** statement at the **[edit chassis fpc *fpc-slot* pic *pic-slot* monitoring-services application]** hierarchy level.

After you commit the configuration to convert the PIC between the **monitor** and **flow-collector** service types, you must take the PIC offline and then bring the PIC back online. Rebooting the router does not enable the new service type. You can use the Monitoring Services II PIC for either flow collection or monitoring, but not both types of service simultaneously.

A flow collector interface, designated by the **cp-*fpc/pic/port*** interface name, requires three logical interfaces for correct operation. Units 0 and 1 are used respectively as export channels 0 and 1 to send the compressed ASCII data files to an FTP server. You must include a class-of-service (CoS) configuration for these two export channels to provide adequate bandwidth for file transmission. Unit 2 is used as a flow receive channel to receive flow records from a monitoring services interface.



NOTE: Unlike conventional interfaces, IP addresses for flow collector logical interfaces set up a point-to-point connection between the Routing Engine and the flow collector. The address statement at the [edit interfaces *cp-fpc/pic/port* unit *unit-number* family inet] hierarchy level corresponds to the IP address of the Routing Engine. Likewise, the destination statement at the [edit interfaces *cp-fpc/pic/port* unit *unit-number* family inet address *ip-address*] hierarchy level corresponds to the IP address of the flow collector interface. As a result, you must configure the destination statement for Units 0 and 1 (export channels 0 and 1) with *local* addresses that can reach the FTP server. Similarly, configure the destination statement for Unit 2 (flow receive channel) with a *local* IP address so it can reach the monitoring services interface that sends flow records.

To activate flow collector services after the Monitoring Services II PIC is converted into a flow collector, include the **flow-collector** statement at the [edit services] hierarchy level. You also need to configure several additional components:

- Destination of the FTP server—Determines where the compressed ASCII data files are sent after the flow records are collected and processed. To specify the destination FTP server, include the **destinations** statement at the [edit services flow-collector] hierarchy level. You can specify up to two FTP server destinations and include the password for each configured server. If two FTP servers are configured, the first server in the configuration is the primary server and the second is a backup server.
- File specifications—Preset data file formats, name formats, and transfer characteristics. Files are sent by FTP to the destination FTP server when the timer expires or when a preset number of records are received, whichever comes first. To set the data file format, include the **data-format** statement at the [edit services flow-collector file-specification *file-name*] hierarchy level. The default data format is **flow-compressed**. To set the export timer and file size thresholds, include the **transfer** statement at the [edit services flow-collector file-specification *file-name*] hierarchy level and specify values for the **timeout** and **record-level** options. The default values are 600 seconds for **timeout** and 500,000 records for **record-level**.

To set the filename format, include the **name-format** statement at the [edit services flow-collector file-specification *file-name*] hierarchy level. Common name format macros that you can use in your configuration are included in [Table 25 on page 59](#).

Table 25: Name Format Macros

| Field | Expansion |
|---------------------|--|
| { <i>am_pm</i> } | AM or PM |
| { <i>date</i> } | Expands to the current date, using the { <i>month</i> }, { <i>day</i> }, and { <i>year</i> } macros. |
| { <i>day</i> } | 01 to 31 |
| { <i>day_abbr</i> } | Sun through Sat |

Table 25: Name Format Macros (*continued*)

| Field | Expansion |
|----------------------------------|---|
| <code>{day_full}</code> | Sunday through Saturday |
| <code>{generation_number}</code> | Expands to a unique, sequential number for each new file created. |
| <code>{hour_12}</code> | 01 to 12 |
| <code>{hour_24}</code> | 00 to 23 |
| <code>{ifalias}</code> | Expands to a description string for the logical interface. |
| <code>{minute}</code> | 00 to 59 |
| <code>{month}</code> | 01 to 12 |
| <code>{month_abbr}</code> | Jan through Dec |
| <code>{month_full}</code> | January through December |
| <code>{num_zone}</code> | -2359 to +2359 |
| <code>{second}</code> | 00 to 60 |
| <code>{time}</code> | Expands to the time the file is created, using the <code>{hour_24}</code> , <code>{minute}</code> , and <code>{second}</code> macros. |
| <code>{time_zone}</code> | Time zone code name of the locale (gmt , pst , and so on). |
| <code>{year}</code> | 1970, 2008, and so on. |
| <code>{year_abbr}</code> | 00 to 99 |

- Input interface-to-flow collector interface mappings—Match an input interface with a flow collector interface and apply the preset file specifications to the input interface. To configure the default flow collector and file specifications for all input interfaces, include the **file-specification** and **collector** statements at the **[edit services flow-collector interface-map]** hierarchy level. To override the default settings and apply flow collector and file specifications to a specific input interface, include the **file-specification** and **collector** statements at the **[edit services flow-collector interface-map interface-name]** hierarchy level.
- Transfer log settings—Allow you to configure the destination FTP server where log files containing the transfer activity history for a flow collector interface are to be archived, the name for the log file, and the amount of time the router waits before sending the log file to the FTP server. To configure, include the **archive-sites**, **filename-prefix**, and **maximum-age** statements at the **[edit services flow-collector transfer-log-archive]** hierarchy level. The default value for the **maximum-age** statement is 120 minutes, with

a range of 1 to 360 minutes. Also, you can configure up to five FTP archive site servers to receive log files.

- Miscellaneous settings—Allow you to configure values for the IP address of the analyzer, an identifier for the analyzer, the maximum number of times the flow collector interface attempts to send transfer log files to the FTP server, and the amount of time the flow collector interface waits between retry attempts. To configure, include the **analyzer-address**, **analyzer-id**, **retry**, and **retry-delay** statements at the **[edit services flow-collector]** hierarchy level. The range for the **retry** statement is 0 through 10 retry attempts. The default for the **retry-delay** statement is 30 seconds and the range is 0 through 60 seconds.

To specify a flow collector interface as the destination for flow records coming from a Monitoring Services or Monitoring Services II PIC, include the **collector-pic** statement at the **[edit forwarding-options monitoring group-name family inet output flow-export-destination]** hierarchy level. You can select either the flow collector interface or a flow server as the destination for flow records, but you cannot select both destination types simultaneously.

There is also a Juniper Networks enterprise Management Information Base (MIB) for the flow collector interface. The Flow Collector Services MIB allows you to use SNMP to monitor the flow collector interface. The MIB provides statistics on files, records, memory, FTP, and error states of a flow collector interface. It also provides SNMP traps for unavailable destinations, unsuccessful file transfers, flow overloading, and memory overloading. For more information, see the *Junos Network Management Configuration Guide* or view the enterprise-specific Juniper Networks MIBs at <http://www.juniper.net/techpubs/software/junos/mibs.html>.

In summary, to implement the flow collector service, include statements at the **[edit chassis]**, **[edit interfaces]**, **[edit forwarding-options]**, and **[edit services]** hierarchy levels. The excerpt on the following pages shows the flow collector service configuration hierarchy. For a full configuration example, see “[Example: Flow Collector Interface Configuration](#)” on page 101.

```
[edit]
chassis {
  fpc fpc-slot {
    pic pic-slot {
      monitoring-services {
        application flow-collector;
      }
    }
  }
}
interfaces {
  cp-fpc/pic/port {
    description "flow_collector_interface";
    unit 0 {
      family inet {
        address ip-address {
          destination ip-address;
        }
      }
    }
  }
}
```

```
    }
    unit 1 {
        family inet {
            address ip-address {
                destination ip-address;
            }
        }
    }
    unit 2 {
        family inet {
            address ip-address {
                destination ip-address;
            }
        }
    }
}
interface-fpc/pic/port {
    description "export_interface";
    unit 0 {
        family inet {
            address ip-address;
        }
    }
}
mo-fpc/pic/port {
    description "monitoring_services_interface";
    unit 0 {
        family inet;
    }
}
SONET/SDH, ATM2 IQ, or Ethernet-based-interface-fpc/pic/port {
    description "input_interface";
    encapsulation encapsulation-type;
    passive-monitor-mode; # Apply to the logical interface for SONET/SDH
}
}
forwarding-options {
    monitoring group1 {
        family inet {
            output {
                export-format cflowd-version-5;
                flow-active-timeout value;
                flow-inactive-timeout value;
                flow-export-destination collector-pic;
                interface mo-fpc/pic/port {
                    source-address ip-address;
                }
            }
        }
    }
}
}
services {
    flow-collector {
        analyzer-address ip-address;
        analyzer-id name;
        retry value;
    }
}
```

```

retry-delay seconds;
destinations {
  "ftp://username@ftp-server-address-1//directory/" {
    password "encrypted-password";
  }
  "ftp://username@ftp-server-address-2//directory/" {
    password "encrypted-password";
  }
}
file-specification {
  file-specification-name {
  }
  data-format flow-compressed;
  transfer timeout value record-level size;
}
}
interface-map {
  file-specification file-specification-name;
  collector cp-fpc/pic/port;
  interface-name {
    file-specification file-specification-name;
    collector cp-fpc/pic/port;
  }
}
transfer-log-archive {
  filename-prefix filename;
  maximum-age timeout-value;
  archive-sites {
    "ftp://username@ip-address//directory/" {
      password "encrypted-password";
    }
  }
}
}
}

```

Option: Applying a Firewall Filter to an Output Interface

On output interfaces, you can apply a firewall filter that leads to a filter-based forwarding routing instance. This is useful if you want to port-mirror traffic to multiple Monitoring Services PICs or flow collection services interfaces. To configure, include the **output** statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet filter] hierarchy level.

```

[edit]
interfaces
fe-3/1/0 {
  description "export interface to flow collection services interfaces";
  unit 0 {
    family inet;
    address ip-address;
    filter {
      output output-filter-name;
    }
  }
}
}

```

Option: Configuring System Logging

By default, control protocol activity is logged as a separate system log facility, **dfc**. To modify the filename or level at which control protocol activity is recorded, include the following statements at the **[edit syslog]** hierarchy level:

```
[edit syslog]
file dfc.log {
  dfc any;
}
```

To cancel logging, include the **no-syslog** statement at the **[edit services dynamic-flow-capture capture-group client-name control-source identifier]** hierarchy level:

```
[edit services dynamic-flow-capture capture-group client-name control-source identifier]
no-syslog;
```

Option: Configuring Thresholds

You can optionally specify threshold values for situations in which warning messages will be recorded in the system log:

- Input packet rate to the dynamic flow capture interfaces
- Memory usage on the dynamic flow capture interfaces

To configure, include the **input-packet-rate-threshold** or **pic memory-threshold** statements at the **[edit services dynamic-flow-capture capture-group client-name]** hierarchy level:

```
[edit services dynamic-flow-capture capture-group client-name]
input-packet-rate-threshold rate;
pic-memory-threshold percentage percentage;
```

If these statements are not configured, no threshold messages are logged. The threshold settings are configured for the capture group as a whole.

Option: Monitoring Dynamic Flow Capture by Using SNMP

In Junos OS Release 7.5 and later, the Dynamic Flow Capture MIB provides a way to monitor dynamic flow capture information by using Simple Network Management Protocol (SNMP). The MIB provides the same information that you can view with the **show services dynamic-flow-capture content-destination**, **show services dynamic-flow-capture control-source**, and **show services dynamic-flow-capture statistics** commands. For more information, see the *Junos Network Management Configuration Guide*.

Option: Stripping MPLS Labels on ATM, Ethernet-Based, and SONET/SDH Interfaces

Because flow monitoring can be performed only on IPv4 packets, any packets containing MPLS labels must have the labels removed before monitoring can occur. To remove MPLS labels from packets as they enter an ATM2 IQ, Ethernet-based, or SONET/SDH interface, include the **pop-all-labels** statement at the **[edit interfaces**

interface-name-fpc/pic/port (atm | fastether | gigether | sonet)-options mpls] hierarchy level. If you use static MPLS labels, we recommend you assign label values from 10000 through 99999 to avoid using the label ranges reserved by the Junos OS.

To remove a specified number of labels from selected packets with MPLS labels, include the **required-depth** statement at the [edit interfaces *interface-name-fpc/pic/port* (atm | fastether | gigether | sonet)-options mpls pop-all-labels] hierarchy level. A **required-depth** value of 1 removes labels from all packets containing only one MPLS label, a value of 2 removes labels from all packets containing only two MPLS labels, and a value of [1 2] removes labels from all packets containing either one or two MPLS labels. The **required-depth** value of [1 2] is the default setting. When you configure the **required-depth** statement, you must configure the same value for all ports on the same PIC.

The labels are removed and discarded as soon as they arrive at the interface. As a result, no MPLS filters can be applied to the stripped labels, no statistics are generated for the labels, and you cannot apply an IP filter to the incoming packets. No Tunnel Services PIC is required to perform MPLS label stripping.

```
[edit]
interfaces {
  at-/fpc/pic/port {
    atm-options {
      mpls {
        pop-all-labels {
          required-depth 1;
        }
      }
    }
  }
  (fe | ge)-fpc/pic/port {
    (fastether | gigether)-options {
      mpls {
        pop-all-labels {
          required-depth [1 2];
        }
      }
    }
  }
  so-fpc/pic/port {
    sonet-options {
      mpls {
        pop-all-labels {
          required-depth 2;
        }
      }
    }
  }
}
```

Option: Using an ES PIC to Send Traffic to a Packet Analyzer

You can send some or all of the traffic securely to the packet analyzer using IPSec and an ES PIC. In this case, the TCP traffic is encrypted, sent over an IPSec tunnel, and received

by the packet analyzer. For more information on configuring IPsec on the ES PIC, see the *IPsec Feature Guide* or the *Junos System Basics Configuration Guide*.

```
[edit]
interfaces {
  es-3/1/0 {
    unit 0 {
      tunnel {
        source 10.8.8.1;
        destination 10.8.8.2;
      }
      family inet {
        ipsec-sa sa-esp;
        address 3.3.3.1/32 {
          destination 3.3.3.2;
        }
      }
    }
  }
  fe-3/2/1 {
    unit 0 {
      family inet {
        address 10.8.8.1/30;
      }
    }
  }
}
security {
  ipsec {
    proposal esp-sha1-3des {
      protocol esp;
      authentication-algorithm hmac-sha1-96;
      encryption-algorithm 3des-cbc;
      lifetime-seconds 180;
    }
    policy esp-group2 {
      perfect-forward-secrecy {
        keys group2;
      }
      proposals esp-sha1-3des;
    }
    security-association sa-esp {
      mode tunnel;
      dynamic {
        ipsec-policy esp-group2;
      }
    }
  }
  ike {
    proposal ike-esp {
      authentication-method pre-shared-keys;
      dh-group group2;
      authentication-algorithm sha1;
      encryption-algorithm 3des-cbc;
      lifetime-seconds 180;
    }
  }
}
```

```
policy 10.8.8.2 {  
  mode aggressive;  
  proposals ike-esp;  
  pre-shared-key ascii-text "$9$qmQnuORrIMBlds2oiH0BIESe";  
}  
}  
}
```


CHAPTER 6

Active Flow Monitoring Configuration

- [Configuring Active Flow Monitoring on page 69](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Configuring the Flow-Tap Interface on page 73](#)
- [Configuring the Interfaces That Will Be Actively Monitored on page 73](#)
- [Collecting Flow Records on page 74](#)
- [Collecting Flow Records with an Accounting Group on page 75](#)
- [Collecting Flow Records with a Sampling Group on page 75](#)
- [Collecting Flow Records with a Template on page 77](#)
- [Defining a Firewall Filter to Select Traffic for Active Flow Monitoring on page 78](#)
- [Enabling the Monitoring Services, Adaptive Services, or Multiservices Interfaces and the Export Interface on page 79](#)
- [Replicating Routing Engine-Based Sampling to Multiple Flow Servers on page 79](#)
- [Option: Configuring an Aggregate Export Timer on page 80](#)
- [Option: Configuring Port Mirroring on page 81](#)
- [Option: Configuring Port Mirroring with Filter-Based Forwarding and a Monitoring Group on page 81](#)
- [Option: Sending Traffic to Multiple Export Interfaces by Using Next-Hop Groups on page 82](#)
- [Option: Using the Flow-Tap Application to Send Packets to a Mediation Device on page 83](#)

Configuring Active Flow Monitoring

In active flow monitoring, the router participates in both the monitoring application and in the normal routing functionality of the network. Although the Monitoring Services PIC was designed initially for use as an offline passive flow monitoring tool, it can also be used in an active flow monitoring topology.

[Table 26 on page 70](#) shows which Juniper Networks PICs and corresponding routers support active flow monitoring. For more information on Juniper Networks PICs, see the PIC guide that corresponds to your router.

Table 26: Passive and Active Flow Monitoring PIC Support

| PIC Type and Service | J Series | M5/M10 | M7i/M10i | M20 | M40e | M120 | M160 | T Series/ M320 | TX Matrix |
|--|----------------------|----------------------|----------|-----|------|------|----------------------|-------------------|-----------|
| Monitoring Services PIC: active flow monitoring | No | Yes (version 8 only) | Yes | Yes | Yes | No | Yes (version 8 only) | No | No |
| Monitoring Services II PIC: flow collection services | No | No | No | No | Yes | No | Yes (version 8 only) | No | No |
| Adaptive Services PIC: active flow monitoring | No | Yes (version 8 only) | Yes | Yes | Yes | No | Yes (version 8 only) | No | No |
| Adaptive Services II PIC: active flow monitoring | No | Yes (version 8 only) | Yes | Yes | Yes | Yes | Yes (version 8 only) | Yes | Yes |
| Adaptive Services II PIC: flow-tap services | No | No | Yes | Yes | Yes | Yes | No | Yes | No |
| MultiServices 100 PIC: active flow monitoring | No | No | Yes | No | Yes | No | No | Yes | Yes |
| MultiServices 400 PIC: active flow monitoring | No | No | No | No | Yes | Yes | No | Yes | Yes |
| MultiServices 500 PIC: active flow monitoring | No | No | No | No | Yes | Yes | No | Yes | Yes |
| Junos OS-enabled active flow monitoring | Yes (version 8 only) | No | No | No | No | No | No | No | No |

Specified packets can be filtered and sent to the monitoring interface. For the Monitoring Services PIC, the interface name contains the **mo-** prefix. For the Adaptive Services PICs and MultiServices PICs, the interface name contains the **sp-** prefix.



NOTE: If you upgrade from the Monitoring Services PIC to the Adaptive Services PIC or MultiServices PIC for active flow monitoring, you must modify the interface name of your monitoring interface from *mo-fpc/pic/port* to *sp-fpc/pic/port*.

The major active flow monitoring actions you can configure at the **[edit forwarding-options]** hierarchy level are as follows:

- Sampling, with the **[edit forwarding-options sampling]** hierarchy. This option extracts limited information (such as the source and destination IP address) from a copy of some of the packets in a flow, while the original packets are forwarded to the intended destination. This option is extended to define active sampling on a per Packet Forwarding Engine basis by defining a sampling instance that specifies a name for the sampling parameters and binding the instance to the particular Packet Forwarding Engine.
- Templates, with the **[edit forwarding-options sampling]** and **[edit services monitoring]** hierarchies. With active flow monitoring support for version 5, version 8, and the customizing version 9, you can use templates to organize the data gathered from sampling.
- Discard accounting, with the **[edit forwarding-options accounting]** hierarchy. This option quarantines unwanted packets, creates flow monitoring records that describe the packets, and discards the packets instead of forwarding them.
- Port mirroring, with the **[edit forwarding-options port-mirroring]** hierarchy. This option makes one full copy of all packets in a flow and delivers the copy to a single destination.
- Multiple port mirroring, with the **[edit forwarding-options next-hop-group]** hierarchy. This option allows multiple copies of selected traffic to be delivered to multiple destinations. (Multiple port mirroring requires a Tunnel Services PIC.)
- Flow-tap services processing, with the **[edit services flow-tap]** hierarchy. This option sends copies of packets that match dynamic filter criteria to one or more content destinations.

Unlike passive flow monitoring, you do not need to configure a monitoring group. Instead, you can send filtered packets to a monitoring services or adaptive services interface (**mo-** or **sp-**) by using sampling or discard accounting. Optionally, you can configure port mirroring or multiple port mirroring to direct packets to additional interfaces.

These active flow monitoring options provide a wide variety of actions that can be performed on network traffic flows. However, the following restrictions apply:

- The router can perform either sampling *or* port mirroring at any one time.
- The router can perform either forwarding *or* discard accounting at any one time.

Because the Monitoring Services PIC, Adaptive Services PIC, and MultiServices PIC allow only one action to be performed at any one time, the following configuration options are available:

- Sampling and forwarding
- Sampling and discard accounting
- Port mirroring and forwarding
- Port mirroring and discard accounting
- Sampling and port mirroring on different sets of traffic

To configure active flow monitoring, complete these steps:

- [Defining a Firewall Filter to Select Traffic for Active Flow Monitoring on page 78](#)
- [Configuring the Interfaces That Will Be Actively Monitored on page 73](#)
- [Enabling the Monitoring Services, Adaptive Services, or Multiservices Interfaces and the Export Interface on page 79](#)
- [Collecting Flow Records on page 74](#)
- [Option: Configuring Port Mirroring on page 81](#)
- [Option: Configuring Port Mirroring with Filter-Based Forwarding and a Monitoring Group on page 81](#)
- [Option: Sending Traffic to Multiple Export Interfaces by Using Next-Hop Groups on page 82](#)
- [Option: Using the Flow-Tap Application to Send Packets to a Mediation Device on page 83](#)

Configuring Flow-Tap Security Properties

You can add an extra level of security to DTCP transactions between the mediation device and the router by enabling DTCP sessions on top of the SSH layer. To configure, include the **flow-tap-dtcp** statement at the **[edit system services]** hierarchy level:

```
flow-tap-dtcp {  
  ssh {  
    connection-limit value;  
    rate-limit value;  
  }  
}
```

To configure client permissions for viewing and modifying flow-tap configurations and for receiving tapped traffic, include the **permissions** statement at the **[edit system login class *class-name*]** hierarchy level:

```
permissions [ permissions ];
```

The permissions needed to use flow-tap features are as follows:

- **flow-tap**—Can view flow-tap configuration.

- **flow-tap-control**—Can modify flow-tap configuration.
- **flow-tap-operation**—Can tap flows.

You can also specify user permissions on a RADIUS server, for example:

```
Bob Auth-Type := Local, User-Password = = "abc123"
Juniper-User-Permissions = "flow-tap-operation"
```

For details on **[edit system]** and RADIUS configuration, see the *Junos System Basics Configuration Guide*.

**Related
Documentation**

- [Flow-Tap Architecture on page 9](#)
- [Configuring the Flow-Tap Interface on page 73](#)
- [Flow-Tap Application Restrictions on page 17](#)
- [Example: Flow-Tap Configuration on page 131](#)

Configuring the Flow-Tap Interface

To configure an AS PIC interface for the flow-tap service, include the **interface** statement at the **[edit services flow-tap]** hierarchy level:

```
interface sp-fpc/pic/port.unit-number;
```

You can assign any AS PIC in the active monitoring station for flow-tap service, and use any logical unit on the PIC.



NOTE: You cannot configure dynamic flow capture and flow-tap features on the same router simultaneously.

You must also configure the logical interface at the **[edit interfaces]** hierarchy level:

```
interface sp-fpc/pic/port {
  unit logical-unit-number {
    family inet;
  }
}
```

**Related
Documentation**

- [Flow-Tap Architecture on page 9](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Flow-Tap Application Restrictions on page 17](#)
- [Example: Flow-Tap Configuration on page 131](#)

Configuring the Interfaces That Will Be Actively Monitored

Configure the input interfaces and apply the firewall filter that you defined earlier. Unlike passive flow monitoring, the input interfaces for active flow monitoring are not restricted,

so you can select most standard network interfaces (such as ATM1 or Ethernet-based interfaces) as the input.

If you configure active flow monitoring with sampling, you can configure an interface filter in place of a firewall filter with the **sampling** statement at the **[edit interfaces interface-name-fpc/pic/port unit unit-number family inet]** hierarchy level.

```
[edit]
interfaces {
  so-2/2/0 {
    unit 0 {
      family inet {
        filter {
          input active_filter;
        }
        address 10.36.11.2/32 {
          destination 10.36.11.1;
        }
        sampling {
          (input | output | [input output]);
        }
      }
    }
  }
}
```

Collecting Flow Records

Traffic flows can be exported in flow monitoring version 5, 8, and 9 formats for active flow monitoring. The default export format for flow monitoring records is version 5. To change the export format to flow monitoring version 8, include the **version 8** statement at either the **[edit forwarding-options accounting name output flow-server flow-server-address]** or the **[edit forwarding-options sampling output flow-server flow-server-address]** hierarchy level. To change the export format to flow monitoring version 9, include the **version 9 template template-name** statement at the **[edit forwarding-options sampling output flow-server flow-server-address]** hierarchy level. For more information on flow record formats, see [“Flow Monitoring Output Formats” on page 19](#).

To capture flow data generated by the Monitoring Services PIC, Adaptive Services PIC, or MultiServices PIC and export it to a flow server, you can use one of the following active flow monitoring methods:

- [Collecting Flow Records with a Sampling Group on page 75](#)
- [Collecting Flow Records with an Accounting Group on page 75](#)
- [Replicating Routing Engine-Based Sampling to Multiple Flow Servers on page 79](#)
- [Collecting Flow Records with a Template on page 77](#)
- [Routing Engine-Based Sampling to Multiple Flow Servers on page 131](#)

- Replicating Version 9 Flow Aggregation to Multiple Flow Servers
- [Option: Configuring an Aggregate Export Timer on page 80](#)

Collecting Flow Records with an Accounting Group

To perform discard accounting on specified traffic, you can collect flow records with the **accounting** statement at the **[edit forwarding-options]** hierarchy level. Like sampling, your topology must be simple (for example, one input interface and one export interface).

Again, you can collect flow records by specifying input and output interfaces. You can configure the input interface to perform discard accounting by applying a firewall filter that contains the **then discard accounting** statement. This match condition directs the filtered traffic to be converted into flow records and exported for analysis by the monitoring services or adaptive services interface. The original packets are then sent to the discard process. For the output, remember to specify the IP address and port of your flow server and the services interface you plan to use for processing flow records.

You must configure a source address, but the **engine-id** and **engine-type** output interface statements are added automatically. You can override these values manually to track different flows with a single flow collector. SNMP input and output interface index information is captured in flow records by default when you configure discard accounting.

```
[edit]
forwarding-options {
  accounting counter1 {
    output {
      flow-inactive-timeout 65;
      flow-active-timeout 65;
      flow-server 10.60.2.1 {
        port 2055;
        version 8;
        aggregation {
          protocol-port;
          source-destination-prefix;
        }
      }
    }
    interface sp-2/0/0 {
      engine-id 1;
      engine-type 11;
      source-address 10.60.2.2;
    }
  }
}
```

Collecting Flow Records with a Sampling Group

If your needs for active flow monitoring are simple, you can collect flow records with a sampling group. Sampling does not require you to configure a monitoring group (as required in passive flow monitoring) because you can configure flow server information

in the **sampling** hierarchy. When you wish to sample traffic, include the **sampling** statement at the **[edit forwarding-options]** hierarchy level.

The typical sampling configuration has one input interface and one export interface. The input interface is activated by the **then sample** statement in a firewall filter term. This match condition directs traffic to the sampling process. Alternatively, you can use an interface-based filter in place of a firewall filter if you include the **sampling** statement at the **[edit interfaces *interface-name-fpc/pic/port* unit *unit-number* family inet]** hierarchy level.

There are two types of sampling available: PIC-based sampling and Routing Engine-based sampling. PIC-based sampling occurs when a monitoring services or adaptive services interface is the target for the output of the sampling process. To enable PIC-based sampling, include the **interface** statement at the **[edit forwarding-options sampling output]** hierarchy level and specify a monitoring services or adaptive services interface as the output interface. If an output interface is not specified in the sampling configuration, sampling is performed by the Routing Engine.

To specify a flow server in a sampling configuration, include the **flow-server** statement at the **[edit forwarding-options sampling output]** hierarchy level. You must specify the IP address, port number, and flow monitoring version of the destination flow server. Routing Engine-based sampling supports flow aggregation of up to eight flow servers (version 5 servers and version 8 only) at a time. The export packets are replicated to all flow servers configured to receive them. In contrast, PIC-based sampling allows you to specify just one version 5 flow server and one version 8 server simultaneously. Flow servers operating simultaneously must have different IP addresses.

As part of the output interface statements, you must configure a source address. In contrast, the interface-level statements of **engine-id** and **engine-type** are both added automatically. However, you can override these values with manually configured statements to track different flows with a single flow collector, as needed. When you configure sampling, SNMP input and output interface index information is captured in flow records by default.

```
[edit]
forwarding-options {
  sampling {
    input {
      rate 1;
    }
    family inet {
      output {
        flow-inactive-timeout 15;
        flow-server 10.60.2.1 {
          port 2055;
          version 5;
        }
        interface sp-2/0/0 {
          engine-id 5;
          engine-type 55;
          source-address 10.60.2.2;
        }
      }
    }
  }
}
```

```

    }
  }
}

```

Collecting Flow Records with a Template

Flow monitoring version 9, which is based upon RFC 3954, provides a way to organize flow data into templates. Version 9 also provides a way to actively monitor IPv4, IPv6, MPLS, and peer AS billing traffic. Version 9 is not supported on the AS-I PIC.

To activate templates in flow monitoring, you must configure a template and include that template in the version 9 flow monitoring configuration. Version 9 does not work in conjunction with versions 5 and 8.

To configure a version 9 template, include the **template *template-name*** statement at the [edit services flow-monitoring version9] hierarchy level. The Junos OS supports five different templates: **ipv4-template**, **ipv6-template**, **mpls-template**, **mpls-ipv4-template**, and **peer-as-billing-template**. To view the fields selected in each of these templates, see [“Version 9 Formats and Fields” on page 29](#).

```

[edit]
services flow-monitoring {
  version9 { # Specifies flow monitoring version 9.
    template mpls { # Specifies template you are configuring.
      template-refresh-rate {
        packets 6000; # The default is 4800 packets and the range is 1–480000
        # packets.
      }
      seconds 90; # The default is 60 seconds and the range is 1–600 seconds.
      option--refresh-rate {
        packets 3000; # The default is 4800 packets and the range is 1–480000
        # packets.
      }
      seconds 30; # The default is 60 seconds and the range is 1–600.
      flow-active-timeout 60; # The default is 60 seconds and the range is
        # 10–600.
      flow-inactive-timeout 30; # The default is 60 seconds and the range 10–600.
      template-refresh-rate seconds 10; # The default is 60 seconds and the
        # range is 10–600
      option-refresh-rate seconds 10; # The default is 60 seconds and the range
        # is 10–600 seconds.
      mpls-template {
        label-positions [1 | 2 | 3]; # Specifies label position for the MPLS template.
      }
    }
  }
}

```

You can export to multiple templates at a time to a maximum of eight flow servers for AS PICs and one flow server for all other PICs. To assign a template to a flow output, include the **template *template-name*** statement at the [edit forwarding options sampling output flow-server version9] hierarchy level:

```

[edit]

```

```
forwarding-options {
  sampling {
    input {
      family mpls {
        rate 1;
        run-length 1;
      }
    }
    output {
      flow-server 10.60.2.1 { # The IP address and port of the flow server.
        port 2055;
        source-address 3.3.3.1;
        version 9 { # Records are sent to the flow server using version 9 format.
          template { # Indicates a template will organize records.
            mpls; # Records are sent to the MPLS template.
          }
        }
      }
    }
  }
}
```

Defining a Firewall Filter to Select Traffic for Active Flow Monitoring

The first step in active flow monitoring is to configure the match conditions for acceptable traffic or quarantined traffic. Common match actions for active flow monitoring include **sample**, **discard**, **accounting**, **port-mirror**, and **accept**. To configure, include the desired action statements and a counter as part of the **then** statement in a firewall filter and apply the filter to an interface.

In sampling, the router reviews a portion of the traffic and sends reports about this sample to the flow monitoring server. Discard accounting traffic is counted and monitored, but not forwarded out of the router. Port-mirrored traffic is copied and sent to another interface. Accepted traffic is forwarded to the intended destination.

Most of these match combinations are valid. However, you can either port-mirror or sample with the same traffic at the same time, but not perform more than one action simultaneously on the same packets.

```
[edit]
firewall {
  family inet {
    filter active_filter {
      term quarantined_traffic {
        from {
          source-address {
            10.36.1.2/32;
          }
        }
        then {
          count quarantined-counter;
          sample;
          discard accounting;
        }
      }
    }
  }
}
```

```

    }
    term copy_and_forward_the_rest {
        then {
            port-mirror;
            accept;
        }
    }
}
}
}

```

Enabling the Monitoring Services, Adaptive Services, or Multiservices Interfaces and the Export Interface

You configure the monitoring services, adaptive services, or multiservices interfaces with the **family inet** statement so they can process IPv4 traffic. However, you must remember that a monitoring services interface uses an **mo-** prefix and adaptive services and multiservices interfaces use an **sp-** prefix.

```

[edit]
interfaces {
    sp-2/0/0 {
        unit 0 {
            family inet {
                address 10.36.100.1/32 {
                    destination 10.36.100.2;
                }
            }
        }
    }
}
}

```

Active flow monitoring records leave the router through an export interface to reach the flow monitoring server.

```

[edit]
interfaces {
    fe-1/0/0 {
        unit 0 {
            family inet {
                address 10.60.2.2/30;
            }
        }
    }
}
}

```

Replicating Routing Engine-Based Sampling to Multiple Flow Servers

Routing Engine-based sampling supports up to eight flow servers for both flow monitoring version 5 and version 8 configurations. The total number of flow servers is limited to eight, regardless of how many are configured for version 5 or version 8.

When you configure version 5 or version 8 sampling, the export packets are replicated to all flow servers configured to receive them. If two flow servers are configured to receive version 5 records, both flow servers will receive records for a specified flow.



NOTE: With Routing-Engine-based sampling, if multiple flow servers are configured with version 8 export format, all of them must use the same aggregation type (for example, all flow servers receiving version 8 export could be configured for source-destination aggregation type).

The following configuration example allows replication of export packets to two flow servers.

```
[edit]
forwarding-options {
  sampling {
    input {
      rate 1;
    }
    output {
      flow-server 10.10.3.2 {
        port 2055;
        version 5;
        source-address 192.168.164.119;
      }
      flow-server 172.17.20.62 {
        port 2055;
        version 5;
        source-address 192.168.164.119;
      }
    }
  }
}
```

Option: Configuring an Aggregate Export Timer

When you use flow monitoring version 8 records for active flow monitoring, you can configure an aggregate export timer. To configure this timer, include the **aggregate-export-interval** statement at the **[edit forwarding-options sampling output]** hierarchy level. The timer value has a default minimum setting of 90 seconds and a maximum value of 1800 seconds.

```
[edit]
forwarding-options {
  sampling {
    output {
      aggregate-export-interval duration;
    }
  }
}
```


Option: Configuring Port Mirroring

You can copy packets and reroute them to another interface by using port mirroring. To send packet copies to an interface, include the **interface** statement at the **[edit forwarding-options port-mirroring family *family-name* output]** hierarchy level and specify the interface to receive the traffic.

You can even send port-mirrored traffic to a monitoring services or adaptive services interface. If you choose this option, accepted traffic is copied and the packet copies are sent to the services interface for flow processing.

To configure how often packets are copied from the monitored traffic, include the **rate** statement at the **[edit forwarding-options port-mirroring family *family-name* input]** hierarchy level. A rate of **1** port-mirrors every packet, while a rate of **10** port-mirrors every tenth packet.

```
[edit]
forwarding-options {
  port-mirroring {
    family (inet | inet6) {
      input {
        rate 1;
      }
      output {
        interface sp-2/0/0.0;
      }
    }
  }
}
```

Option: Configuring Port Mirroring with Filter-Based Forwarding and a Monitoring Group

For active flow monitoring, you can load-balance traffic across multiple Monitoring Services PICs using the same method as passive flow monitoring. The only difference is that you do not configure the input interface with the **passive-monitor-mode** statement at the **[edit interfaces *interface-name*]** hierarchy level.

To load-balance traffic for active flow monitoring, port-mirror the incoming packets to a tunnel services interface. Redirect this copy of the traffic to a filter-based forwarding instance by applying a firewall filter to the tunnel services interface. Configure the instance to send the traffic to a group of monitoring services interfaces. Finally, use a monitoring group to send flow records from the monitoring services interfaces to a flow server.



NOTE: When you load-balance port-mirrored traffic across several Monitoring Services interfaces, there are some limitations:

- The original Monitoring Services PIC supports this method. You cannot use a Monitoring Services II PIC.
- You must use the suite of `show passive-monitoring` commands to monitor traffic. The `show services accounting` commands are not supported.
- Because load-balanced traffic is routed through the Tunnel Services PIC, the total throughput of the load-balanced traffic coming from the Monitoring Services PICs cannot exceed the bandwidth of the tunnel interface.

For detailed information on this method, see [“Copying and Redirecting Traffic with Port Mirroring and Filter-Based Forwarding”](#) on page 52.

Option: Sending Traffic to Multiple Export Interfaces by Using Next-Hop Groups

To send port-mirrored traffic to multiple flow servers or packet analyzers, you can use the `next-hop-group` statement. The router can make up to 16 copies of traffic per group and send the traffic to the next-hop group members you configure. A maximum of 30 groups can be configured on a router at any given time. The port-mirrored traffic can be sent to any interface, except aggregated SONET/SDH, aggregated Ethernet, loopback (`lo0`), or administrative (`fxp0`) interfaces. To configure multiple port mirroring with next-hop groups, include the `next-hop-group` statement at the `[edit forwarding-options]` hierarchy level.

You must port-mirror the initial traffic to a tunnel interface so that it can be filtered and duplicated. Also, you need configure only the interface names for point-to-point interfaces, but you must configure the interface names and a next hop for multipoint interfaces (such as Ethernet).

```
[edit]
forwarding-options {
  port-mirroring {
    family inet {
      input {
        rate 1;
      }
      output {
        interface vt-3/3/0.1;
        no-filter-check;
      }
    }
  }
}
next-hop-group ftp-traffic {
  interface so-4/3/0.0;
  interface so-0/3/0.0;
}
next-hop-group http-traffic {
```

```

interface ge-1/1/0.0 {
  next-hop 10.12.1.2;
}
interface ge-1/2/0.0 {
  next-hop 10.13.1.2;
}
}
next-hop-group default-collect {
  interface so-7/0/0.0;
  interface so-7/0/1.0;
}
}

```



NOTE: Next-hop groups are supported on M Series routers only, except the M120 router and the M320 router.

Option: Using the Flow-Tap Application to Send Packets to a Mediation Device

Dynamic flow capture enables you to capture passively monitored packet flows on the basis of dynamic filtering criteria, using Dynamic Tasking Control Protocol (DTCP) requests. The flow-tap application extends the use of DTCP to intercept IPv4 packets in an active flow monitoring station and send a copy of packets that match filter criteria to one or more content destinations. Flow-tap data can be used for lawful intercept purposes and provides flexible trend analysis for detection of new security threats. The flow-tap application is supported on M Series and T Series routers, except M160 routers and TX Matrix platforms.



NOTE: For information about dynamic flow capture, see “[Using a Dynamic Flow Capture Interface to Monitor Traffic On Demand](#)” on page 56. For information about DTCP, see Internet draft draft-cavuto-dtcp-01.txt at <http://www.ietf.org/internet-drafts>.

For detailed information about the flow-tap application, see the following sections:

- [Flow-Tap Architecture on page 9](#)
- [Configuring the Flow-Tap Interface on page 73](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Flow-Tap Application Restrictions on page 17](#)
- [Example: Flow-Tap Configuration on page 131](#)

PART 3

Examples


- [Passive Flow Monitoring Configuration Examples on page 87](#)
- [Active Flow Monitoring Configuration Examples on page 115](#)

Passive Flow Monitoring Configuration Examples

- Example: Passive Flow Monitoring Configuration on page 87
- Example: Flow Collector Interface Configuration on page 101
- Example: Dynamic Flow Capture Configuration on page 111

Example: Passive Flow Monitoring Configuration

Figure 18: Passive Flow Monitoring—Topology Diagram

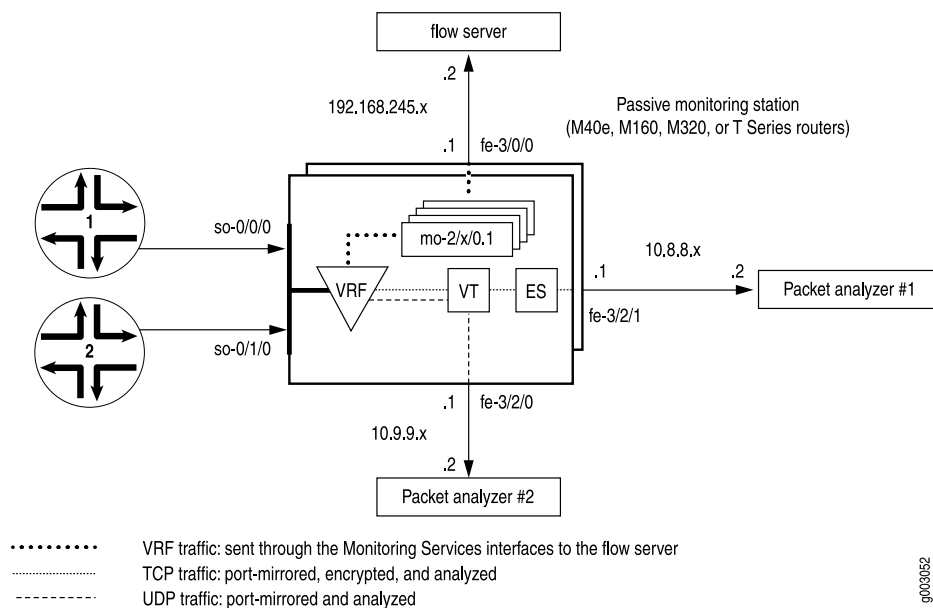

In [Figure 18 on page 87](#), traffic enters the monitoring station through interfaces **so-0/0/0** and **so-0/1/0**. After the firewall filter accepts the traffic to be monitored, the packets enter a VRF instance.

The original packets travel within the VRF instance to the Monitoring Services PIC for flow processing. The final flow packets are sent from the monitoring services interfaces out the **fe-3/0/0** interface to a flow server.

A copy of the accepted traffic is port-mirrored to the Tunnel PIC. As the copied packets enter the tunnel interface, a second firewall filter separates TCP and UDP packets and places them into two filter-based forwarding instances. The UDP instance directs the UDP packets to a packet analyzer attached to **fe-3/2/0**. The TCP instance sends the TCP packets to the ES PIC for encryption and the ES PIC sends the packets to a second packet analyzer connected to **fe-3/2/1**.

Your first step is to define a firewall filter to select packets for monitoring. All filtered traffic must be accepted, and the **port-mirror** statement at the **[edit firewall family inet filter filter-name term term-name then]** hierarchy level facilitates port mirroring.

Next, configure the input SONET/SDH interfaces and apply the firewall filter that you just defined. The **passive-monitor-mode** statement disables SONET keepalives on the SONET/SDH interfaces and enables passive flow monitoring.

Configure all other interfaces that you will use with the monitoring application, including the monitoring services interfaces, the export interfaces, the tunnel interface, and the ES interface. Once the interfaces are in place, configure a VRF instance and monitoring group to direct the original packets from the input interfaces to the monitoring services interfaces for processing. The resulting flow description packets exit **fe-3/0/0** to reach the flow server.

Next, configure statements to port-mirror the monitored traffic to a tunnel interface. Design a firewall filter that selects some of this copied traffic for further analysis and some of the traffic for discarding. In this case, isolate TCP and UDP traffic and direct these two flows into separate filter-based forwarding routing instances. Remember to apply the filter to the tunnel interface to enable the separation of TCP traffic from UDP traffic. Also, import the interface routes into the forwarding instances with a routing table group.

In the filter-based forwarding instances, define static route next hops. The next hop for the TCP instance is the ES interface and the next hop for the UDP instance is the packet analyzer connected to **fe-3/2/0**. Finally, configure IPSec so that the next hop for the TCP traffic is the second packet analyzer attached to **fe-3/2/1**.

```
[edit]
interfaces {
  so-0/0/0 { # Traffic enters the router on this interface.
    description "input interface";
    encapsulation ppp;
    unit 0 {
      passive-monitor-mode; # Disables SONET keepalives.
      family inet {
        filter {
          input input-monitoring-filter; # The firewall filter is applied here.
        }
      }
    }
  }
  so-0/1/0 { # Traffic enters the router on this interface.
    description "input interface";
    encapsulation ppp;
    unit 0 {
```



```

passive-monitor-mode; # Disables SONET keepalives.
family inet {
    filter {
        input input-monitoring-filter; # The firewall filter is applied here.
    }
}
}
}
es-3/1/0 { # This is where the TCP traffic enters the ES PIC.
    unit 0 {
        tunnel {
            source 10.8.8.1;
            destination 10.8.8.2;
        }
        family inet {
            ipsec-sa sa-esp;
            address 3.3.3.1/32 {
                destination 3.3.3.2;
            }
        }
    }
}
fe-3/0/0 { # Flow records exit here and travel to the flow server.
    description " export interface to the flow server";
    unit 0 {
        family inet;
        address 192.168.245.1/30;
    }
}
fe-3/2/0 { # This export interface for UDP traffic leads to a packet analyzer.
    description " export interface to the packet analyzer";
    unit 0 {
        family inet {
            address 10.9.9.1/32;
        }
    }
}
fe-3/2/1 { # This IPSec tunnel source exports TCP traffic to a packet analyzer.
    unit 0 {
        family inet {
            address 10.8.8.1/30;
        }
    }
}
mo-4/0/0 { # This marks the beginning of the monitoring services interfaces.
    unit 0 { # Unit 0 is part of the inet.0 routing table and generates flow records.
        family inet;
    }
    unit 1 { # Unit 1 receives monitored traffic and is part of the VRF instance.
        family inet;
    }
}
mo-4/1/0 {
    unit 0 { # Unit 0 is part of the inet.0 routing table and generates flow records.
        family inet;
    }
}

```

```

    unit 1 { # Unit 1 receives monitored traffic and is part of the VRF instance.
        family inet;
    }
}
mo-4/2/0 {
    unit 0 { # Unit 0 is part of the inet.0 routing table and generates flow records.
        family inet;
    }
    unit 1 { # Unit 1 receives monitored traffic and is part of the VRF instance.
        family inet;
    }
}
mo-4/3/0 {
    unit 0 { # Unit 0 is part of the inet.0 routing table and generates flow records.
        family inet;
    }
    unit 1 { # Unit 1 receives monitored traffic and is part of the VRF instance.
        family inet;
    }
}
vt-0/2/0 { # The tunnel services interface receives the port-mirrored traffic.
    unit 0 {
        family inet {
            filter {
                input tunnel-interface-filter; # The filter splits traffic into TCP and UDP
            }
        }
    }
}
}
forwarding-options {
    monitoring group 1 { # Monitored traffic is processed by the monitoring services
        family inet { # interfaces and flow records are sent to the flow server.
            output {
                export-format cflowd-version-5;
                flow-active-timeout 60;
                flow-inactive-timeout 30;
                flow-server 192.168.245.2 port 2055; # IP address and port for server.
                interface mo-4/0/0.1 { # Use monitoring services interfaces for output.
                    engine-id 1; # engine and interface-index statements are optional.
                    engine-type 1;
                    input-interface-index 44;
                    output-interface-index 54;
                    source-address 192.168.245.1; # This is the IP address of fe-3/0/0.
                }
                interface mo-4/1/0.1 {
                    engine-id 2; # engine and interface-index statements are optional.
                    engine-type 1;
                    input-interface-index 45;
                    output-interface-index 55;
                    source-address 192.168.245.1; # This is the IP address of fe-3/0/0.
                }
                interface mo-4/2/0.1 {
                    engine-id 3; # engine and interface-index statements are optional.
                    engine-type 1;
                    input-interface-index 46;

```

```

        output-interface-index 56;
        source-address 192.168.245.1; # This is the IP address of fe-3/0/0.
    }
    interface mo-4/3/0.1 {
        engine-id 4; # engine and interface-index statements are optional.
        engine-type 1;
        input-interface-index 47;
        output-interface-index 57;
        source-address 192.168.245.1; # This is the IP address of fe-3/0/0.
    }
}
}
}
port-mirroring { # Copies the traffic and sends it to the Tunnel Services PIC.
    family inet {
        input {
            rate 1;
            run-length 1;
        }
        output {
            interface vt-0/2/0.0;
            no-filter-check;
        }
    }
}
}
routing-options { # This installs the interface routes into the forwarding instances.
    interface-routes {
        rib-group inet bc-vrf;
    }
    rib-groups {
        bc-vrf {
            import-rib [inet.0 tcp-routing-table.inet.0 udp-routing-table.inet.0];
        }
    }
    forwarding-table {
        export pplb; # Applies per-packet load balancing to the forwarding table.
    }
}
policy-options {
    policy-statement monitoring-vrf-import {
        then reject;
    }
    policy-statement monitoring-vrf-export {
        then reject;
    }
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}
security { # This sets IPSec options for the ES PIC.
    ipsec {
        proposal esp-sha1-3des {
            protocol esp;

```

```
    authentication-algorithm hmac-sha1-96;
    encryption-algorithm 3des-cbc;
    lifetime-seconds 180;
  }
  policy esp-group2 {
    perfect-forward-secrecy {
      keys group2;
    }
    proposals esp-sha1-3des;
  }
  security-association sa-esp {
    mode tunnel;
    dynamic {
      ipsec-policy esp-group2;
    }
  }
}
ike {
  proposal ike-esp {
    authentication-method pre-shared-keys;
    dh-group group2;
    authentication-algorithm sha1;
    encryption-algorithm 3des-cbc;
    lifetime-seconds 180;
  }
  policy 10.8.8.2 {
    mode aggressive;
    proposals ike-esp;
    pre-shared-key ascii-text "$9$qmQnuORrIMBlds2oiH0BIESe";
  }
}
firewall {
  family inet {
    filter input-monitoring-filter { # This filter selects traffic to send into the VRF
      term 1 { # instance and prepares the traffic for port mirroring.
        from {
          destination-address {
            10.7.0.0/16;
          }
        }
        then {
          port-mirror;
          accept;
        }
      }
      term 2 {
        from {
          destination-address {
            10.6.0.0/16;
          }
        }
        then accept;
      }
    }
    filter tunnel-interface-filter { # This filter breaks the port-mirrored traffic into two
```

```

term tcp { # filter-based forwarding instances: TCP packets and UDP packets.
  from {
    protocol tcp;
  }
  then { # This counts TCP packets and sends them into a TCP instance.
    count tcp;
    routing-instance tcp-routing-table;
  }
}
term udp {
  from {
    protocol udp;
  }
  then { # This counts UDP packets and sends them into a UDP instance.
    count udp;
    routing-instance udp-routing-table;
  }
}
term rest {
  then {
    count rest;
    discard;
  }
}
}
}
}
routing-instances {
  monitoring-vrf { # This is the VRF instance where you send the traffic. It contains
    instance-type vrf; # the input interface and the monitoring services interfaces.
    interface so-0/0/0.0; # Traffic enters the router on these input interfaces.
    interface so-0/1/0.0;
    interface mo-4/0/0.1;
    interface mo-4/1/0.1; # These are output interfaces (use them as
    interface mo-4/2/0.1; # output interfaces in your monitoring group).
    interface mo-4/3/0.1;
    route-distinguisher 69:1;
    vrf-import monitoring-vrf-import;
    vrf-export monitoring-vrf-export;
    routing-options { # Sends traffic to a group of monitoring services interfaces.
      static {
        route 0.0.0.0/0 next-hop [mo-4/0/0.1 mo-4/1/0.1
          mo-4/2/0.1 mo-4/3/0.1];
      }
    }
  }
}
tcp-routing-table { # This is the filter-based forwarding instance for TCP traffic.
  instance-type forwarding;
  routing-options { # The next hop is the ES PIC.
    static {
      route 0.0.0.0/0 next-hop es-3/1/0.0;
    }
  }
}
udp-routing-table { # This is the filter-based forwarding instance for UDP traffic.
  instance-type forwarding;

```

```

        routing-options { # The next hop is the second packet analyzer.
            static {
                route 0.0.0.0/0 next-hop 10.9.1.2;
            }
        }
    }
}

```

Verifying Your Work

To verify that your configuration is correct, use the following commands on the monitoring station that is configured for passive flow monitoring:

- **show route 0/0**
- **show passive-monitoring error**
- **show passive-monitoring flow**
- **show passive-monitoring memory**
- **show passive-monitoring status**
- **show passive-monitoring usage**

To clear statistics for the **show passive-monitoring error** and **show passive-monitoring flow** commands, issue the **clear passive-monitoring (all | *interface-name*)** command.

You can also view passive flow monitoring status with the Simple Network Management Protocol (SNMP). The following Management Information Base (MIB) tables are supported:

- **jnxPMonErrorTable**—Corresponds to the **show passive-monitoring error** command.
- **jnxPMonFlowTable**—Corresponds to the **show passive-monitoring flow** command.
- **jnxPMonMemoryTable**—Corresponds to the **show passive-monitoring memory** command.

The following section shows the output of the **show** commands used with the configuration example:

```

user@mon-station> show route 0/0
<skip inet.0>

# We are only concerned with the routing-instance route.

bc-vrf.inet.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
bc-vrf.inet.0:+ = Active Route, - = Last Active, * = Both
0.0.0.0/0    *[Static/5] 5d 17:34:57
              via mo-4/0/0.1
              > via mo-4/1/0.1
              via mo-4/2/0.1
              via mo-4/3/0.1
tcp-rt.inet.0: 13 destinations, 13 routes (12 active, 0 holddown, 1
hidden)
+ = Active Route, - = Last Active, * = Both
0.0.0.0/0    *[Static/5] 19:24:39
              > via es-3/1/0.0
: <other interface routes>

```

```

udp-rt.inet.0: 13 destinations, 13 routes (12 active, 0 holddown, 1
hidden)
+ = Active Route, - = Last Active, * = Both
0.0.0.0/0          *[Static/5] 19:24:39
                   > to 10.9.1.2 via fe-3/2/0.0
: <other interface routes>

```



NOTE: For all `show passive-monitoring` commands, the output obtained when using a wildcard (such as `*`) or the `all` option is based on the configured interfaces listed at the `[edit forwarding-options monitoring group-name]` hierarchy level. In the output from the configuration example, you see information only for the configured interfaces `mo-4/0/0`, `mo-4/1/0`, `mo-4/2/0`, and `mo-4/3/0`.

Many of the statements you can configure in a monitoring group, such as `engine-id` and `engine-type`, are visible in the output of the `show passive-monitoring` commands.

Table 27: Output Fields for the `show passive-monitoring error` Command

| Field | Explanation |
|------------------------------------|---|
| Packets dropped (no memory) | Number of packets dropped because of memory. |
| Packets dropped (not IP) | Number of non-IP packets dropped. |
| Packets dropped (not IPv4) | Number of packets dropped because they failed the IPv4 check. |
| Packets dropped (header too small) | Number of packets dropped because the packet length or IP header length was too small. |
| Memory allocation failures | Number of flow record memory allocation failures. A small number reflects failures to replenish the free list. A large number indicates the monitoring station is almost out of memory space. |
| Memory free failures | Number of flow record memory frees. |
| Memory free list failures | Number of flow records received from free list that failed. Memory is nearly exhausted or too many new flows greater than 128K are being created in one second. |
| Memory warning | The flows have exceeded 1 million packets per second (Mpps) on a Monitoring Services PIC or 2 Mpps on a Monitoring Services II PIC. The response can be Yes or No . |
| Memory overload | The memory has been overloaded. The response is Yes or No . |
| PPS overload | In packets per second, whether the PIC is receiving more traffic than the configured threshold. The response can be Yes or No . |

Table 27: Output Fields for the show passive-monitoring error Command (*continued*)

| Field | Explanation |
|--------------|---|
| BPS overload | In bytes per second, whether the PIC is receiving more traffic than the configured threshold. The response can be Yes or No . |

```

user@mon-station> show passive-monitoring error all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
  Error information
    Packets dropped (no memory): 0, Packets dropped (not IP): 0
    Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
    Memory allocation failures: 0, Memory free failures: 0
    Memory free list failures: 0
    Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

Passive monitoring interface: mo-4/1/0, Local interface index: 45
  Error information
    Packets dropped (no memory): 0, Packets dropped (not IP): 0
    Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
    Memory allocation failures: 0, Memory free failures: 0
    Memory free list failures: 0
    Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

Passive monitoring interface: mo-4/2/0, Local interface index: 46
  Error information
    Packets dropped (no memory): 0, Packets dropped (not IP): 0
    Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
    Memory allocation failures: 0, Memory free failures: 0
    Memory free list failures: 0
    Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

Passive monitoring interface: mo-4/3/0, Local interface index: 47
  Error information
    Packets dropped (no memory): 0, Packets dropped (not IP): 0
    Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
    Memory allocation failures: 0, Memory free failures: 0
    Memory free list failures: 0
    Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

```

Table 28: Output Fields for the show passive-monitoring flow Command

| Field | Explanation |
|-----------------------------|---|
| Flow packets | Number of packets received by an operational PIC. |
| Flow bytes | Number of bytes received by an operational PIC. |
| Flow packets 10-second rate | Number of packets per second handled by the PIC and displayed as a 10-second average. |
| Flow bytes 10-second rate | Number of bytes per second handled by the PIC and displayed as a 10-second average. |

Table 28: Output Fields for the show passive-monitoring flow Command (*continued*)

| Field | Explanation |
|--------------------------|--|
| Active flows | Number of currently active flows tracked by the PIC. |
| Total flows | Total number of flows received by an operational PIC. |
| Flows exported | Total number of flows exported by an operational PIC. |
| Flows packets exported | Total number of flow packets exported by an operational PIC. |
| Flows inactive timed out | Total number of flows that are exported because of inactivity. |
| Flows active timed out | Total number of long-lived flows that are exported because of an active timeout. |

user@mon-station> show passive-monitoring flow all

Passive monitoring interface: mo-4/0/0, Local interface index: 44

Flow information

Flow packets: 6533434, Flow bytes: 653343400

Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0

Active flows: 0, Total flows: 1599

Flows exported: 1599, Flows packets exported: 55

Flows inactive timed out: 1599, Flows active timed out: 0

Passive monitoring interface: mo-4/1/0, Local interface index: 45

Flow information

Flow packets: 6537780, Flow bytes: 653778000

Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0

Active flows: 0, Total flows: 1601

Flows exported: 1601, Flows packets exported: 55

Flows inactive timed out: 1601, Flows active timed out: 0

Passive monitoring interface: mo-4/2/0, Local interface index: 46

Flow information

Flow packets: 6529259, Flow bytes: 652925900

Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0

Active flows: 0, Total flows: 1599

Flows exported: 1599, Flows packets exported: 55

Flows inactive timed out: 1599, Flows active timed out: 0

Passive monitoring interface: mo-4/3/0, Local interface index: 47

Flow information

Flow packets: 6560741, Flow bytes: 656074100

Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0

Active flows: 0, Total flows: 1598

Flows exported: 1598, Flows packets exported: 55

Flows inactive timed out: 1598, Flows active timed out: 0

Table 29: Output Fields for the show passive-monitoring memory Command

| Field | Explanation |
|------------------------|---|
| Allocation count | Number of flow records allocated. |
| Free count | Number of flow records freed. |
| Maximum allocated | Maximum number of flow records allocated since the monitoring station booted. This number represents the peak number of flow records allocated at a time. |
| Allocations per second | Flow records allocated per second during the last statistics interval on the PIC. |
| Frees per second | Flow records freed per second during the last statistics interval on the PIC. |
| Total memory used | Total amount of memory currently used (in bytes). |
| Total memory free | Total amount of memory currently free (in bytes). |

user@mon-station> show passive-monitoring memory all

Passive monitoring interface: mo-4/0/0, Local interface index: 44

Memory utilization

Allocation count: 1600, Free count: 1599, Maximum allocated: 1600

Allocations per second: 3200, Frees per second: 1438

Total memory used (in bytes): 103579176, Total memory free (in bytes): 163914184

Passive monitoring interface: mo-4/1/0, Local interface index: 45

Memory utilization

Allocation count: 1602, Free count: 1601, Maximum allocated: 1602

Allocations per second: 3204, Frees per second: 1472

Total memory used (in bytes): 103579176, Total memory free (in bytes): 163914184

Passive monitoring interface: mo-4/2/0, Local interface index: 46

Memory utilization

Allocation count: 1600, Free count: 1599, Maximum allocated: 1600

Allocations per second: 3200, Frees per second: 1440

Total memory used (in bytes): 103579176, Total memory free (in bytes): 163914184

Passive monitoring interface: mo-4/3/0, Local interface index: 47

Memory utilization

Allocation count: 1599, Free count: 1598, Maximum allocated: 1599

Allocations per second: 3198, Frees per second: 1468

Total memory used (in bytes): 103579176, Total memory free (in bytes): 163914184

Table 30: Output Fields for the show passive-monitoring status Command

| Field | Explanation |
|-------------------------|---|
| Interface state | Indicates whether the interface is monitoring (operating properly), disabled (administratively disabled), or not monitoring (not configured). |
| Group index | Integer that represents the monitoring group of which the PIC is a member. (This does not indicate the number of monitoring groups.) |
| Export interval | Configured export interval for flow records, in seconds. |
| Export format | Configured export format (only v5 is currently supported). |
| Protocol | Protocol the PIC is configured to monitor (only IPv4 is currently supported). |
| Engine type | Configured engine type that is inserted in output flow packets. |
| Engine ID | Configured engine ID that is inserted in output flow packets. |
| Route record count | Number of routes recorded. |
| IFL to SNMP index count | Number of logical interfaces mapped to an SNMP index. |
| AS count | Number of AS boundaries that the flow has crossed. |
| Time set | Indicates whether the time stamp is in place. |
| Configuration set | Indicates whether the monitoring configuration is set. |
| Route record set | Indicates whether routes are being recorded. |
| IFL SNMP map set | Indicates whether logical interfaces are being mapped to an SNMP index. |

```

user@mon-station> show passive-monitoring status all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
  Interface state: Monitoring
  Group index: 0
  Export interval: 15 secs, Export format: cflowd v5
  Protocol: IPv4, Engine type: 1, Engine ID: 1
  Route record count: 13, IFL to SNMP index count: 30, AS count: 1
  Time set: Yes, Configuration set: Yes
  Route record set: Yes, IFL SNMP map set: Yes

Passive monitoring interface: mo-4/1/0, Local interface index: 45
  Interface state: Monitoring
  Group index: 0
  Export interval: 15 secs, Export format: cflowd v5
  Protocol: IPv4, Engine type: 1, Engine ID: 2
  Route record count: 13, IFL to SNMP index count: 30, AS count: 1
  Time set: Yes, Configuration set: Yes
  Route record set: Yes, IFL SNMP map set: Yes

Passive monitoring interface: mo-4/2/0, Local interface index: 46
  Interface state: Monitoring

```

Group index: 0
 Export interval: 15 secs, Export format: cflowd v5
 Protocol: IPv4, Engine type: 1, Engine ID: 3
 Route record count: 13, IFL to SNMP index count: 30, AS count: 1
 Time set: Yes, Configuration set: Yes
 Route record set: Yes, IFL SNMP map set: Yes

Passive monitoring interface: mo-4/3/0, Local interface index: 47
 Interface state: Monitoring
 Group index: 0
 Export interval: 15 secs, Export format: cflowd v5
 Protocol: IPv4, Engine type: 1, Engine ID: 4
 Route record count: 13, IFL to SNMP index count: 30, AS count: 1
 Time set: Yes, Configuration set: Yes
 Route record set: Yes, IFL SNMP map set: Yes

Table 31: Output Fields for the show passive-monitoring usage Command

| Field | Explanation |
|------------------------|--|
| Uptime | Time, in milliseconds, that the PIC has been operational. |
| Interrupt time | Cumulative time that the PIC spent in processing packets since the last PIC reset. |
| Load (5 second) | CPU load on the PIC averaged over 5 seconds. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time. |
| Load (1 minute) | CPU load on the PIC averaged over 1 minute. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time. |

```

user@mon-station> show passive-monitoring usage *
Passive monitoring interface: mo-4/0/0, Local interface index: 44
CPU utilization
  Uptime: 653155 milliseconds, Interrupt time: 40213754 microseconds
  Load (5 second): 20%, Load (1 minute): 17%

Passive monitoring interface: mo-4/1/0, Local interface index: 45
CPU utilization
  Uptime: 652292 milliseconds, Interrupt time: 40223178 microseconds
  Load (5 second): 22%, Load (1 minute): 15%

Passive monitoring interface: mo-4/2/0, Local interface index: 46
CPU utilization
  Uptime: 649491 milliseconds, Interrupt time: 40173645 microseconds
  Load (5 second): 22%, Load (1 minute): 10098862%

Passive monitoring interface: mo-4/3/0, Local interface index: 47
CPU utilization
  Uptime: 657328 milliseconds, Interrupt time: 40368704 microseconds
  Load (5 second): 1%, Load (1 minute): 15%

```

Example: Flow Collector Interface Configuration

Figure 19: Flow Collector Interface Topology Diagram

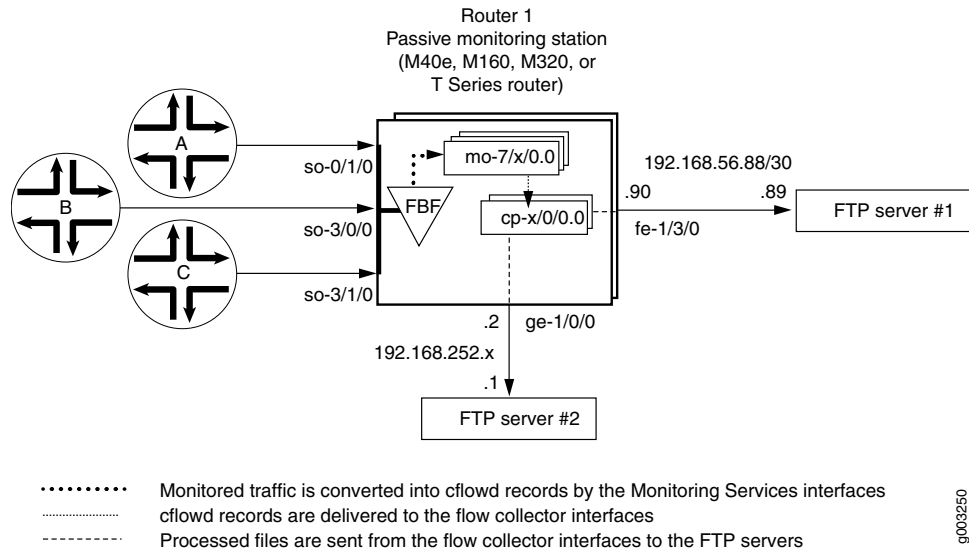


Figure 19 on page 101 shows the path traveled by monitored traffic as it passes through the router. Packets arrive at input interfaces **so-0/1/0**, **so-3/0/0**, and **so-3/1/0**. The raw packets are directed into a filter-based forwarding routing instance and processed into flow records by the monitoring services interfaces **mo-7/1/0**, **mo-7/2/0**, and **mo-7/3/0**. The flow records are compressed into files at the flow collector interfaces **cp-6/0/0** and **cp-7/0/0** and sent to the FTP server for analysis. Finally, a mandatory class-of-service (CoS) configuration is applied to export channels 0 and 1 on the flow collector interfaces to manage the outgoing processed files.

```
Router 1 [edit]
chassis {
  fpc 6 {
    pic 0 {
      monitoring-services {
        application flow-collector; # This converts a Monitoring Services II PIC
      } # into a flow collector interface.
    }
  }
  fpc 7 {
    pic 0 {
      monitoring-services {
        application flow-collector; # This converts a Monitoring Services II PIC
      } # into a flow collector interface.
    }
  }
}
interfaces {
  cp-6/0/0 {
    unit 0 { # Logical interface .0 on a flow collector interface is export
      family inet { # channel 0 and sends records to the FTP server.
        filter {
```

```
        output cp-ftp; # Apply the CoS filter here.
    }
    address 10.0.0.1/32 {
        destination 10.0.0.2;
    }
}
unit 1 { # Logical interface .1 on a flow collector interface is export
    family inet { # channel 1 and sends records to the FTP server.
        filter {
            output cp-ftp; # Apply the CoS filter here.
        }
        address 10.1.1.1/32 {
            destination 10.1.1.2;
        }
    }
}
unit 2 { # Logical interface .2 on a flow collector interface is the flow
    family inet { # receive channel that communicates with the Routing Engine.
        address 10.2.2.1/32 { # Do not apply a CoS filter on logical interface .2.
            destination 10.2.2.2;
        }
    }
}
}
cp-7/0/0 {
    unit 0 { # Logical interface .0 on a flow collector interface is export
        family inet { # channel 0 and sends records to the FTP server.
            filter {
                output cp-ftp; # Apply the CoS filter here.
            }
            address 10.3.3.1/32 {
                destination 10.3.3.2;
            }
        }
    }
}
unit 1 { # Logical interface .1 on a flow collector interface is export
    family inet { # channel 1 and sends records to the FTP server.
        filter {
            output cp-ftp; # Apply the CoS filter here.
        }
        address 10.4.4.1/32 {
            destination 10.4.4.2;
        }
    }
}
unit 2 { # Logical interface .2 on a flow collector interface is the flow
    family inet { # receive channel that communicates with the Routing Engine.
        address 10.5.5.1/32 { # Do not apply a CoS filter on logical interface .2.
            destination 10.5.5.2;
        }
    }
}
}
fe-1/3/0 { # This is the exit interface leading to the first FTP server.
    unit 0 {
```

```

        family inet {
            address 192.168.56.90/30;
        }
    }
}
ge-1/0/0 { # This is the exit interface leading to the second FTP server.
    unit 0 {
        family inet {
            address 192.168.252.2/24;
        }
    }
}
mo-7/1/0 { # This is the first interface that creates flow records.
    unit 0 {
        family inet;
    }
}
mo-7/2/0 { # This is the second interface that creates flow records.
    unit 0 {
        family inet;
    }
}
mo-7/3/0 { # This is the third interface that creates flow records.
    unit 0 {
        family inet;
    }
}
so-0/1/0 { # This is the first input interface that receives traffic to be monitored.
    encapsulation ppp;
    unit 0 {
        passive-monitor-mode; # This allows the interface to be passively monitored.
        family inet {
            filter {
                input catch; # The filter-based forwarding filter is applied here.
            }
        }
    }
}
so-3/0/0 { # This is the second interface that receives traffic to be monitored.
    encapsulation ppp;
    unit 0 {
        passive-monitor-mode; # This allows the interface to be passively monitored.
        family inet {
            filter {
                input catch; # The filter-based forwarding filter is applied here.
            }
        }
    }
}
so-3/1/0 { # This is the third interface that receives traffic to be monitored.
    encapsulation ppp;
    unit 0 {
        passive-monitor-mode; # This allows the interface to be passively monitored.
        family inet {
            filter {
                input catch; # The filter-based forwarding filter is applied here.
            }
        }
    }
}

```

```
    }
  }
}
}
forwarding-options {
  monitoring group1 { # Always define your monitoring group here.
    family inet {
      output {
        export-format cflowd-version-5;
        flow-active-timeout 60;
        flow-inactive-timeout 15;
        flow-export-destination collector-pic; # Sends records to the flow collector.
        interface mo-7/1/0.0 {
          source-address 192.168.252.2;
        }
        interface mo-7/2/0.0 {
          source-address 192.168.252.2;
        }
        interface mo-7/3/0.0 {
          source-address 192.168.252.2;
        }
      }
    }
  }
}
routing-options {
  interface-routes {
    rib-group inet common;
  }
  rib-groups {
    common {
      import-rib [ inet.0 fbf_instance.inet.0 ];
    }
  }
  forwarding-table {
    export pplb;
  }
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
class-of-service { # A class-of-service configuration for the flow collector interface
  interfaces { # is mandatory when implementing flow collector services.
    cp-6/0/0 {
      scheduler-map cp-map;
    }
    cp-7/0/0 {
      scheduler-map cp-map;
    }
  }
  scheduler-maps {
```



```

    cp-map {
        forwarding-class best-effort scheduler Q0;
        forwarding-class expedited-forwarding scheduler Q1;
        forwarding-class network-control scheduler Q3;
    }
}
schedulers {
    Q0 {
        transmit-rate remainder;
        buffer-size percent 90;
    }
    Q1 {
        transmit-rate percent 5;
        buffer-size percent 5;
        priority strict-high;
    }
    Q3 {
        transmit-rate percent 5;
        buffer-size percent 5;
    }
}
}
firewall {
    family inet {
        filter cp-ftp { # This filter provides CoS for flow collector interface traffic.
            term t1 {
                then forwarding-class expedited-forwarding;
            }
        }
    }
    filter catch { # This firewall filter sends incoming traffic into the
        interface-specific; # filter-based forwarding routing instance.
        term def {
            then {
                count counter;
                routing-instance fbf_instance;
            }
        }
    }
}
routing-instances {
    fbf_instance { # This instance sends traffic to the monitoring services interface.
        instance-type forwarding;
        routing-options {
            static {
                route 0.0.0.0/0 next-hop mo-7/1/0.0;
            }
        }
    }
}
}
services {
    flow-collector { # Define properties for flow collector interfaces here.
        analyzer-address 10.10.10.1; # This is the IP address of the analyzer.
        analyzer-id server1; # This helps to identify the analyzer.
        retry 3; # Maximum number of attempts by the PIC to send a file transfer log.
        retry-delay 30; # The time interval between attempts to send a file transfer log.
    }
}

```

```

destinations { # This defines the FTP servers that receive flow collector output.
  "ftp://user@192.168.56.89//tmp/collect1/" { # The primary FTP server.
    password "$9$IJK8xN-w2oZdbZDHmF30O1"; # SECRET-DATA
  }
  "ftp://user@192.168.252.1//tmp/collect2/" { # The second FTP server.
    password "$9$elbvL7-dsgaGVwGjkP3nOBI"; # SECRET-DATA
  }
}
file-specification { # Define sets of flow collector characteristics here.
  def-spec {
  }
  data-format flow-compressed; # The default compressed output format.
}
f1 {
  name-format "cFlowd-py69Ni69-0-%D_%T-%I_%N.bcp.bi.gz";
  data-format flow-compressed; # The default compressed output format.
  transfer timeout 1800 record-level 1000000; # Here are configured values.
}
}
interface-map { # Allows you to map interfaces to flow collector interfaces.
  file-specification def-spec; # Flows generated for default traffic are sent to the
  collector cp-7/0/0; # default flow collector interface cp-7/0/0.
  so-0/1/0.0 { # Flows generated for the so-0/1/0 interface are sent
    collector cp-6/0/0; # to cp-6/0/0, and the file-specification used is "default".
  }
  so-3/0/0.0 { # Flows generated for the so-3/0/0 interface are sent
    file-specification f1; # to cp-6/0/0, and the file-specification used is "f1."
    collector cp-6/0/0;
  }
  so-3/1/0.0; # Because no settings are defined, flows generated for this
}
transfer-log-archive { # Sends flow collector interface log files to an FTP server.
  filename-prefix so_3_0_0_log;
  maximum-age 15;
  archive-sites {
    "ftp://user@192.168.56.89//tmp/transfers/" {
      password "$9$IFaEyevMXNVsWLsgaU.m6/C";
    }
  }
}
}
}

```

Verifying Your Work

To verify that your flow collector configuration is working, use the following commands on the monitoring station that is configured for flow collection:

- **clear services flow-collector statistics**
- **request services flow-collector change-destination (primary | secondary)**
- **request services flow-collector test-file-transfer**
- **show services flow-collector file interface (detail | extensive | terse)**

- **show services flow-collector (detail | extensive)**
- **show services flow-collector input interface (detail | extensive | terse)**

The following section shows the output of the **show** commands used with the configuration example:

```

user@router1> show services flow-collector input interface cp-6/0/0 detail
Interface                               Packets      Bytes
mo-7/1/0.0                             6170         8941592

user@router1> show services flow-collector interface all detail
Flow collector interface: cp-6/0/0
Interface state: Collecting flows
Packets      Bytes      Flows Uncompressed   Compressed   FTP bytes  FTP files
              Bytes      Bytes      Bytes      Bytes
        6736  9757936   195993   21855798   3194148           0           0
Flow collector interface: cp-7/0/0
Interface state: Collecting flows
Packets      Bytes      Flows Uncompressed   Compressed   FTP bytes  FTP files
              Bytes      Bytes      Bytes      Bytes
              0           0           0           0           0           0

user@router1> show services flow-collector input interface cp-6/0/0 extensive
Interface                               Packets      Bytes
mo-7/1/0.0                             6260         9074096

user@router1> show services flow-collector interface cp-6/0/0 extensive
Flow collector interface: cp-6/0/0
Interface state: Collecting flows
Memory:
  Used: 19593212, Free: 479528656
Input:
  Packets: 6658, per second: 0, peak per second: 0
  Bytes: 9647752, per second: 12655, peak per second: 14311
  Flow records processed: 193782, per second: 252, peak per second: 287
Allocation:
  Blocks allocated: 174, per second: 0, peak per second: 0
  Blocks freed: 0, per second: 0, peak per second: 0
  Blocks unavailable: 0, per second: 0, peak per second: 0
Files:
  Files created: 1, per second: 0, peak per second: 0
  Files exported: 0, per second: 0, peak per second: 0
  Files destroyed: 0, per second: 0, peak per second: 0
Throughput:
  Uncompressed bytes: 21075152, per second: 52032, peak per second: 156172
  Compressed bytes: 3079713, per second: 7618, peak per second: 22999
Packet drops:
  No memory: 0, Not IP: 0
  Not IPv4: 0, Too small: 0
  Fragments: 0, ICMP: 0
  TCP: 0, Unknown: 0
  Not JUNOS flow: 0
File Transfer:
  FTP bytes: 0, per second: 0, peak per second: 0
  FTP files: 0, per second: 0, peak per second: 0
  FTP failure: 0
Export channel: 0
  Current server: Secondary
  Primary server state: OK, Secondary server state: OK
Export channel: 1

```

```
Current server: Secondary
Primary server state: OK, Secondary server state: OK
```

```
user@router1> show services flow-collector file interface cp-6/0/0 terse
File name                               Flows State
cFlowd-py69Ni69-0-20031112_014301-so_3_0_0_0.bcp.bi.gz 185643 Active

user@router1> show services flow-collector file interface cp-6/0/0 detail
Filename: cFlowd-py69Ni69-0-20031112_014301-so_3_0_0_0.bcp.bi.gz
Throughput:
  Flow records: 187067, Uncompressed bytes: 21121960, Compressed bytes: 2965643

Status:
  State: Active, Transfer attempts: 0

user@router1> show services flow-collector file interface cp-6/0/0 extensive
Filename: cFlowd-py69Ni69-0-20031112_014301-so_3_0_0_0.bcp.bi.gz
Throughput:
  Flow records: 188365, per second: 238, peak per second: 287
  Uncompressed bytes: 21267756, per second: 27007, peak per second: 32526
  Compressed bytes: 2965643, per second: 0, peak per second: 22999
Status:
  Compressed blocks: 156, Block count: 156
  State: Active, Transfer attempts: 0
```

To clear statistics for a flow collector interface, issue the **clear services flow-collector statistics interface (all | interface-name)** command.

Another useful flow collector option allows you to change the FTP server from primary to secondary and test for FTP transfers. To force the flow collector interface to use a primary or secondary FTP server, include the **primary** or **secondary** option when you issue the **request services flow-collector change-destination interface cp-fpc/pic/port** command.

If you configure only one primary server and issue this command with the **primary** option, you receive the error message “Destination change not needed.” If the secondary server is not configured and you issue this command with the **secondary** option, you receive the error message “Destination not configured.” Otherwise, when both servers are configured properly, successful output appears as follows.

```
user@router1> request services flow-collector change-destination interface cp-6/0/0 primary
Flow collector interface: cp-6/0/0
Interface state: Collecting flows
Destination change successful

user@router1> request services flow-collector change-destination interface cp-6/0/0
secondary
Flow collector interface: cp-6/0/0
Interface state: Collecting flows
Destination change successful
```

Other options for the **request services flow-collector change-destination interface cp-fpc/pic/port** command are **immediately** (which forces an instant switchover), **gracefully** (the default behavior that allows a gradual switchover), **clear-files** (which purges existing data files), and **clear-logs** (which purges existing log files).

To verify that transfer log files are being scheduled for delivery to the FTP servers, issue the **request services flow-collector test-file-transfer filename interface cp-fpc/pic/port**

command. Include the desired export channel (zero or one) and target FTP server (primary or secondary) with this command.

```
user@router> request services flow-collector test-file-transfer test_file interface cp-6/0/0
channel-one primary
Flow collector interface: cp-6/0/0
Interface state: Collecting flows
Response: Test file transfer successfully scheduled
```

Another way you can check for the success of your file transfers is by analyzing the transfer log. A transfer log sends detailed information about files that are collected and processed by the flow collector interface. [Table 32 on page 109](#) explains the various fields available in the transfer log.

Table 32: Flow Collector Interface Transfer Log Fields

| Field | Explanation |
|-----------|---|
| fn | Filename |
| sz | File size |
| nr | Number of records |
| ts | Timestamp with the format of year (4 digits), month (2 digits), day (2 digits), hours (2 digits), minutes (2 digits), and seconds (2 digits). |
| sf | Success flag—The values are 1 for success and 0 for failure. |
| ul | Server URL |
| rc | FTP result code |
| er | FTP error text |
| tt | Transfer time |

This is an example of a successful transfer log:

```
fn="cFlowd-py69Ni69-0-20040227_230438-at_4_0_0_4_3.bcp.bi.gz":sz=552569
:nr=20000:ts="20040227230855":sf=1:ul="ftp://10.63.152.1/tmp/server1/":rc=250:
er="":tt=3280
```

This is an example of a transfer log when an FTP session fails:

```
fn="cFlowd-py69Ni69-0-20040227_230515-at_4_0_0_2_8.bcp.bi.gz":sz=560436
:nr=20000:ts="20040227230855":sf=1:ul="ftp://10.63.152.1/tmp/server1/":rc=250
:er="":tt=3290
```

As the flow collector interface receives and processes flow records, the PIC services logging process (fsad) handles the following tasks:

- When the flow collector interface transfers a file to the FTP server, a temporary log file is created in the `/var/log/flowc` directory. The temporary log file has this file naming convention:

`<hostname>_<filename_prefix>_YYYYMMDD_hhmmss.tmp`

hostname is the hostname of the transfer server, **filename_prefix** is the same value defined with the **filename-prefix** statement at the **[edit services flow-collector transfer-log-archive]** hierarchy level, **YYYYMMDD** is the year, month, and date, and **hhmmss** is the timestamp indicating hours, minutes, and seconds.

- After the log file has been stored in the router for the length of time specified by the **maximum-age** statement at the **[edit services flow-collector transfer-log-archive]** hierarchy level (the default is 120 minutes), the temporary log file is converted to an actual log file and the temporary file is deleted. The new log file retains the same naming conventions, except the extension is `*.log`.
- When the final log file is created and compressed, the PIC services logging process (fsad) tries to send the log file from the `/var/log/flowc` directory to an FTP server. You can specify up to five FTP servers to receive the log files by including the **archive-sites** statement at the **[edit services flow-collector transfer-log-archive]** hierarchy level. The logging process attempts to send the log file to one server at a time, in order of their appearance in the configuration. Upon the first successful transfer, the log file is deleted and the logging process stops sending log files to the remaining FTP servers in the list.
- If the log file transfer is not successful, the log file is moved to the `/var/log/flowc/failed` directory. Every 30 minutes, the logging process tries to resend the log files. After the log files are transferred successfully, they are deleted from the `/var/log/flowc/failed` directory.



NOTE: If the memory for a flow collector interface is full, the interface might drop incoming packets.

After the flow collector interface successfully delivers the processed information file to the FTP server, you can analyze the file. The file contains detailed information about the flows collected and processed by the flow collector interface. [Table 33 on page 110](#) explains the various fields available in the flow collector interface file.

Table 33: Flow Collector Interface File Fields in Order of Appearance

| Field | Explanation |
|-------------------------|--|
| linkDir | Link directory—A randomly generated number used to identify the record |
| analyzer-address | Analyzer address |
| analyzer-ID | Analyzer identifier |

Table 33: Flow Collector Interface File Fields in Order of Appearance (*continued*)

| Field | Explanation |
|----------------------------|-----------------------|
| ifAlias | Interface identifier |
| source-address | Source address |
| destination-address | Destination address |
| packets | Number of packets |
| bytes | Number of bytes |
| start-time | Start time |
| end-time | End time |
| source-port | Source port |
| destination-port | Destination port |
| tcp_flag | TCP flag |
| protocol | IP protocol number |
| src_AS_number | Source AS number |
| dst_AS_number | Destination AS number |

This is an example of output from a flow collector interface file:

```
11799241612374557782|10.10.10.1|server1|at_4_0_0_4|192.168.10.100|10.0.0.1|8|
3136|1077926402|1077926402|8224|12336|27|6|0|0
```

Example: Dynamic Flow Capture Configuration

The following example shows a complete dynamic flow capture configuration. On Router 1, configure the dynamic flow capture interface, the interfaces that connect to the control source and content destination, and the interface that receives passively monitored traffic. Then, configure the capture group and specify your control source and content destination requirements. Next, configure filter-based forwarding (FBF) to send monitored traffic to logical unit 1 of the dynamic flow capture interface. Finally, configure a firewall filter and routing table groups to complete the configuration.

```
[edit]
interfaces {
    dfc-0/0/0 { # DFC PIC that processes requests from the control source.
        unit 0 {
            family inet {
```

```

        address 2.1.0.0/32 { # Address of the Routing Engine for the DFC PIC.
            destination 10.36.100.1; # Address of DFC PIC; used by
        } # the control source to communicate with the monitoring station.
    }
}
unit 1 { # This logical interface receives data packets.
    family inet;
}
unit 2 { # This logical interface sends out copies of matched packets.
    family inet;
}
}
fe-4/1/2 { # Interface that receives filtering requests from cs1.
    unit 0 {
        family inet {
            address 10.36.41.2/30;
        }
    }
}
ge-7/0/0 { # Interface that sends monitored packets to cd1.
    unit 0 {
        family inet {
            address 10.36.70.1/30;
        }
    }
}
so-1/2/0 { # Interface that receives traffic to be monitored.
    encapsulation ppp;
    unit 0 {
        passive-monitor-mode; # Enables this interface to be passively monitored.
        family inet {
            filter {
                input catch;
            }
        }
    }
}
}
services {
    dynamic-flow-capture {
        capture-group g1 {
            interfaces dfc-0/0/0; # Specifies which interface to use for DFC processing.
            input-packet-rate-threshold 90k; # Traffic threshold for system log messages.
            pic-memory-threshold percentage 80; # Memory threshold for log messages.
            control-source cs1 { # Specifies addresses and ports for the control source.
                source-addresses 10.36.41.1;
                service-port 2400;
                notification-targets {
                    10.36.41.1 port 2100;
                }
                shared-key "$9$ASxdsYoX7wg4aHk";
                allowed-destinations cd1;
            }
        }
        content-destination cd1 { # Specifies content destination addresses and TTL.
            address 10.36.70.2;
            ttl 244;
        }
    }
}

```



```

    }
  }
}
firewall {
  filter catch { # Places monitored traffic into the filter-based forwarding instance.
    interface-specific;
    term def {
      then {
        count counter;
        routing-instance fbf_inst;
      }
    }
  }
}
routing-instances {
  fbf_inst { # Sends matching traffic to the DFC PIC for processing.
    instance-type forwarding;
    routing-options {
      static {
        route 0.0.0.0/0 next-hop dfc-0/0/0.1;
      }
    }
  }
}
routing-options {
  interface-routes {
    rib-group inet common;
  }
  rib-groups {
    common { # Shares routes between the instance and the main routing table.
      import-rib [ inet.0 fbf_inst.inet.0 ];
    }
  }
  forwarding-table {
    export pplb;
  }
}
}

```

Verifying Your Work

To verify that your dynamic flow capture configuration is operating correctly, issue the following command:

```
show services dynamic-flow-capture capture-group group-name control-source
source-identifier source-id (detail)
```

The following section shows the output of this command when used with the configuration example.

Router 1

```
user@router1> show services dynamic-flow-capture control-source capture-group g1 source-identifier cs2 detail
```

```
Capture group: g1, Control source: cs2
Criteria added: 1, Criteria add failed: 0
Active criteria: 2
Static criteria: 0, Dynamic criteria: 2
Control protocol requests: 3
```

| | Add | Delete | List | Refresh | No-op | |
|----------|-----|--------|------|---------|-------|---|
| Requests | 1 | 0 | 0 | 1 | 0 | 1 |
| Failed | 0 | 0 | 0 | 0 | 0 | 0 |

```
Add request rate: 0
Add request peak rate: 1
Bandwidth across all criteria: 0
Total notifications: 0
Restart: 0, Rollover: 0, No-op: 0, Timeout: 0, Congestion: 0, Congestion delete: 0,
Dups dropped: 0
Criteria deleted: 0
Timeout idle: 0, Timeout total: 0, Packets: 0, Bytes: 0
Sequence number: 242
```

To clear dynamic flow capture criteria belonging to a particular control source, issue the **clear services dynamic-flow-capture** command. For more information on other dynamic flow capture-related operational mode commands, see the *Junos System Basics and Services Command Reference*.


CHAPTER 8

Active Flow Monitoring Configuration Examples

- [Example: Sampling Configuration on page 115](#)
- [Example: Sampling and Discard Accounting Configuration on page 119](#)
- [Example: Sampling Instance Configuration on page 123](#)
- [Example: Multiple Port Mirroring with Next-Hop Groups Configuration on page 128](#)
- [Routing Engine-Based Sampling to Multiple Flow Servers on page 131](#)
- [Example: Flow-Tap Configuration on page 131](#)
- [Example: IPv6 Support for FlowTapLite on page 132](#)
- [Example: VRF Routing Engine-Based Sampling on page 139](#)

Example: Sampling Configuration

Figure 20: Active Flow Monitoring—Sampling Configuration Topology Diagram

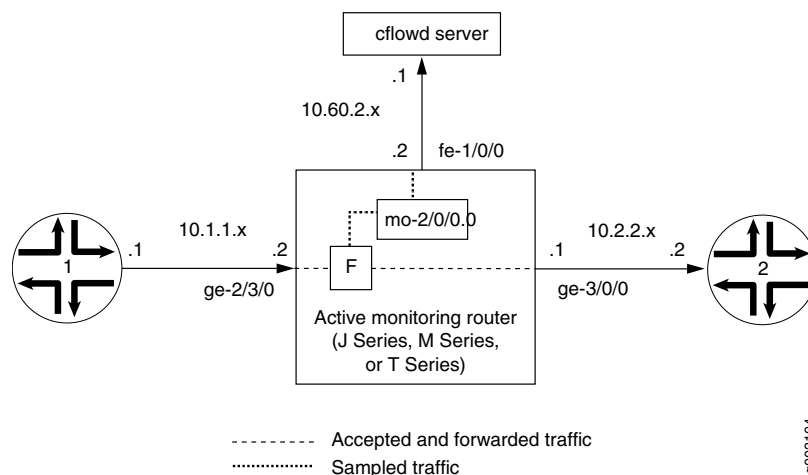

In [Figure 20 on page 115](#), traffic from Router 1 arrives on the monitoring router's Gigabit Ethernet **ge-2/3/0** interface. The exit interface on the monitoring router that leads to destination Router 2 is **ge-3/0/0**. In active flow monitoring, both the input interface and

exit interface can be any interface type (such as SONET/SDH, Gigabit Ethernet, and so on). The export interface leading to the flow server is **fe-1/0/0**.

Configure a firewall filter to sample, count, and accept all traffic. Apply the filter to the input interface, and configure the exit interface (for traffic forwarding), the adaptive services interface (for flow processing), and the export interface (for exporting flow records).

Configure sampling at the **[edit forwarding-options]** hierarchy level. Include the IP address and port of the flow server with the **flow-server** statement and specify the adaptive services interface to be used for flow record processing with the **interface** statement at the **[edit forwarding-options sampling]** hierarchy level.

```
Router 1 [edit]
interfaces {
  sp-2/0/0 { # This adaptive services interface creates the flow records.
    unit 0 {
      family inet {
        address 10.5.5.1/32 {
          destination 10.5.5.2;
        }
      }
    }
  }
  fe-1/0/0 { # This is the interface where records are sent to the flow server.
    unit 0 {
      family inet {
        address 10.60.2.2/30;
      }
    }
  }
  ge-2/3/0 { # This is the input interface where all traffic enters the router.
    unit 0 {
      family inet {
        filter {
          input catch_all; # This is where the firewall filter is applied.
        }
        address 10.1.1.1/20;
      }
    }
  }
  ge-3/0/0 { # This is the interface where the original traffic is forwarded.
    unit 0 {
      family inet {
        address 10.2.2.1/24;
      }
    }
  }
}
forwarding-options {
  sampling { # Traffic is sampled and sent to a flow server.
    input {
      rate 1; # Samples 1 out of x packets (here, a rate of 1 sample per packet).
    }
  }
}
```

```

family inet {
  output {
    flow-server 10.60.2.1 { # The IP address and port of the flow server.
      port 2055;
      version 5; # Records are sent to the flow server using version 5 format.
    }
    flow-inactive-timeout 15;
    flow-active-timeout 60;
    interface sp-2/0/0 { # Adding an interface here enables PIC-based sampling.
      engine-id 5; # Engine statements are dynamic, but can be configured.
      engine-type 55;
      source-address 10.60.2.2; # You must configure this statement.
    }
  }
}
}
firewall {
  family inet {
    filter catch_all { # Apply this filter on the input interface.
      term default {
        then {
          sample;
          count counter1;
          accept;
        }
      }
    }
  }
}
}

```

Verifying Your Work

To verify that your configuration is correct, use the following commands on the monitoring station that is configured for active flow monitoring:

- **show services accounting errors**
- **show services accounting (flow | flow-detail)**
- **show services accounting memory**
- **show services accounting packet-size-distribution**
- **show services accounting status**
- **show services accounting usage**
- **show services accounting aggregation template template-name *name* (detail | extensive | terse) (version 9 only)**

Most active flow monitoring operational mode commands contain equivalent output information to the following passive flow monitoring commands:

- **show services accounting errors = show passive-monitoring error**
- **show services accounting flow = show passive-monitoring flow**

- **show services accounting memory = show passive-monitoring memory**
- **show services accounting status = show passive-monitoring status**
- **show services accounting usage = show passive-monitoring usage**

The active flow monitoring commands can be used with most active flow monitoring applications, including sampling, discard accounting, port mirroring, and multiple port mirroring. However, you can use the passive flow monitoring commands only with configurations that contain a monitoring group at the **[edit forwarding-options monitoring]** hierarchy level.

The following shows the output of the **show** commands used with the configuration example:

```
user@router> show services accounting errors
Service Accounting interface: sp-2/0/0, Local interface index: 542
Service name: (default sampling)
  Error information
    Packets dropped (no memory): 0, Packets dropped (not IP): 0
    Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
    Memory allocation failures: 0, Memory free failures: 0
    Memory free list failures: 0
    Memory overload: No, PPS overload: No, BPS overload: Yes

user@router> show services accounting flow-detail limit 10
Service Accounting interface: sp-2/0/0, Local interface index: 468
Service name: (default sampling)


| Protocol | Source Address | Source Port | Destination Address | Destination Port | Packet count | Byte count |
|----------|----------------|-------------|---------------------|------------------|--------------|------------|
| udp(17)  | 10.1.1.2       | 53          | 10.0.0.1            | 53               | 4329         | 3386035    |
| ip(0)    | 10.1.1.2       | 0           | 10.0.0.2            | 0                | 4785         | 3719654    |
| ip(0)    | 10.1.1.2       | 0           | 10.0.1.2            | 0                | 4530         | 3518769    |
| udp(17)  | 10.1.1.2       | 0           | 10.0.7.1            | 0                | 5011         | 3916767    |
| tcp(6)   | 10.1.1.2       | 20          | 10.3.0.1            | 20               | 1            | 1494       |
| tcp(6)   | 10.1.1.2       | 20          | 10.168.80.1         | 20               | 1            | 677        |
| tcp(6)   | 10.1.1.2       | 20          | 10.69.192.1         | 20               | 1            | 446        |
| tcp(6)   | 10.1.1.2       | 20          | 10.239.240.1        | 20               | 1            | 1426       |
| tcp(6)   | 10.1.1.2       | 20          | 10.126.160.1        | 20               | 1            | 889        |
| tcp(6)   | 10.1.1.2       | 20          | 10.71.224.1         | 20               | 1            | 1046       |



user@router> show services accounting memory
Service Accounting interface: sp-2/0/0, Local interface index: 468
Service name: (default sampling)
  Memory utilization
    Allocation count: 437340, Free count: 430681, Maximum allocated: 6782
    Allocations per second: 3366, Frees per second: 6412
    Total memory used (in bytes): 133416928, Total memory free (in bytes): 133961744

user@router> show services accounting packet-size-distribution
Service Accounting interface: sp-2/0/0, Local interface index: 468
Service name: (default sampling)


| Range start | Range end | Number of packets | Percentage packets |
|-------------|-----------|-------------------|--------------------|
| 64          | 96        | 1705156           | 100                |



user@router> show services accounting status
Service Accounting interface: sp-2/0/0, Local interface index: 468
Service name: (default sampling)
  Interface state: Monitoring
```

```

Group index: 0
Export interval: 60 secs, Export format: cflowd v5
Protocol: IPv4, Engine type: 55, Engine ID: 5
Route record count: 13, IFL to SNMP index count: 30, AS count: 1
Time set: Yes, Configuration set: Yes
Route record set: Yes, IFL SNMP map set: Yes


user@router> show services accounting usage
Service Accounting interface: sp-2/0/0, Local interface index: 468
Service name: (default sampling)
CPU utilization
  Uptime: 4790345 milliseconds, Interrupt time: 1668537848 microseconds
  Load (5 second): 71%, Load (1 minute): 63%

```

Example: Sampling and Discard Accounting Configuration

Discard accounting allows you to sample traffic, send it to a flow server for analysis, and discard all packets without forwarding them to their intended destination. Discard accounting is enabled with the **discard accounting group-name** statement in a firewall filter at the **[edit firewall family inet filter filter-name term term-name then]** hierarchy level. Then, the filter is applied to an interface with the **filter** statement at the **[edit interfaces interface-name unit unit-number family inet]** hierarchy level and processed with the **output** statement at the **[edit forwarding-options accounting group-name]** hierarchy level.

Figure 21: Active Flow Monitoring—Sampling and Discard Accounting Topology Diagram

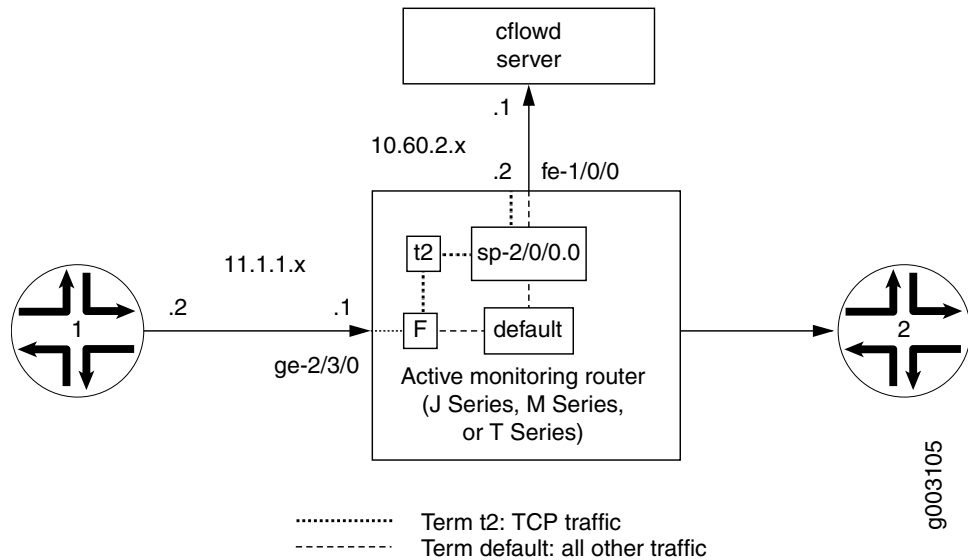

In [Figure 21 on page 119](#), traffic from Router 1 arrives on the monitoring router's Gigabit Ethernet **ge-2/3/0** interface. The export interface leading to the flow server is **fe-1/0/0** and there is no exit interface.

In this example, TCP traffic is sent to one accounting group and all other traffic is diverted to a second group. After being sampled and counted, the two types of traffic are acted upon by the sampling and accounting processes. These processes create flow records and send the records to the version 8 flow server for analysis. Because multiple types of

traffic are sent to the same server, we recommend that you configure the **engine-id**, **engine-type**, and **source-address** statements manually in your accounting and sampling hierarchies. This way, you can differentiate between traffic types when they arrive at the flow server.

```
[edit]
interfaces {
  sp-2/0/0 { # This adaptive services interface creates the flow records.
    unit 0 {
      family inet {
        address 10.5.5.1/32 {
          destination 10.5.5.2;
        }
      }
    }
  }
  fe-1/0/0 { # This is the interface where records are sent to the flow server.
    unit 0 {
      family inet {
        address 10.60.2.2/30;
      }
    }
  }
  ge-2/3/0 { # This is the input interface where traffic enters the router.
    unit 0 {
      family inet {
        filter {
          input catch_all;
        }
        address 10.1.1.1/20;
      }
    }
  }
}
forwarding-options {
  sampling { # The router samples the traffic.
    input {
      rate 100; # One out of every 100 packets is sampled.
    }
    family inet {
      output { # The sampling process creates and exports flow records.
        flow-server 10.60.2.1 { # You can configure a variety of settings.
          port 2055;
          version 8;
          aggregation { # Aggregation is unique to flow version 8.
            protocol-port;
            source-destination-prefix;
          }
        }
      }
      aggregate-export-interval 90;
      flow-inactive-timeout 60;
      flow-active-timeout 60;
      interface sp-2/0/0 { # This statement enables PIC-based sampling.
        engine-id 5; # Engine statements are dynamic, but can be configured.
```



```

        engine-type 55;
        source-address 10.60.2.2; # You must configure this statement.
    }
}
accounting counter1 { # This discard accounting process handles default traffic.
    output { # This process creates and exports flow records.
        flow-inactive-timeout 65;
        flow-active-timeout 65;
        flow-server 10.60.2.1 { # You can configure a variety of settings.
            port 2055;
            version 8;
            aggregation { # Aggregation is unique to version 8.
                protocol-port;
                source-destination-prefix;
            }
        }
    }
    interface sp-2/0/0 { # This statement enables PIC-based discard accounting.
        engine-id 1; # Engine statements are dynamic, but can be configured.
        engine-type 11;
        source-address 10.60.2.3; # You must configure this statement.
    }
}
accounting t2 { # The second discard accounting process handles the TCP traffic.
    output { # This process creates and exports flow records.
        aggregate-export-interval 90;
        flow-inactive-timeout 65;
        flow-active-timeout 65;
        flow-server 10.60.2.1 { # You can configure a variety of settings for the server.
            port 2055;
            version 8;
            aggregation { # Aggregation is unique to version 8.
                protocol-port;
                source-destination-prefix;
            }
        }
    }
    interface sp-2/0/0 { # This statement enables PIC-based discard accounting.
        engine-id 2; # Engine statements are dynamic, but can be configured.
        engine-type 22;
        source-address 10.60.2.4; # You must configure this statement.
    }
}
}
firewall {
    family inet {
        filter catch_all { # Apply the firewall filter on the input interface.
            term t2 { # This places TCP traffic into one group for sampling and
                from { # discard accounting.
                    protocol tcp;
                }
                then {
                    count c2; # The count action counts traffic as it enters the router.
                    sample; # The sample action sends the traffic to the sampling process.
                    discard accounting t2; # The discard accounting discards traffic.
                }
            }
        }
    }
}

```

```
    }  
  }  
  term default { # Performs sampling and discard accounting on all other traffic.  
    then {  
      count counter; # The count action counts traffic as it enters the router.  
      sample# The sample action sends the traffic to the sampling process.  
      discard accounting counter1; # This activates discard accounting.  
    }  
  }  
}  
}
```

Verifying Your Work

To verify that your configuration is correct, use the following commands on the monitoring station that is configured for active flow monitoring:

- **show services accounting aggregation** (for version 8 flows only)
- **show services accounting errors**
- **show services accounting (flow | flow-detail)**
- **show services accounting memory**
- **show services accounting packet-size-distribution**
- **show services accounting status**
- **show services accounting usage**

The following shows the output of the **show** commands used with the configuration example:

```
user@router> show services accounting flow name t2  
Service Accounting interface: sp-2/0/0, Local interface index: 468  
Service name: t2  
Flow information  
Flow packets: 56130820, Flow bytes: 3592372480  
Flow packets 10-second rate: 13024, Flow bytes 10-second rate: 833573  
Active flows: 600, Total flows: 600  
Flows exported: 28848, Flows packets exported: 960  
Flows inactive timed out: 0, Flows active timed out: 35400
```

```
user@router> show services accounting  
Service Name:  
  (default sampling)  
  counter1  
  t2
```

```
user@router> show services accounting aggregation protocol-port detail name t2  
Service Accounting interface: sp-2/0/0, Local interface index: 468  
Service name: t2
```

```
Protocol: 6, Source port: 20, Destination port: 20  
Start time: 442794, End time: 6436260  
Flow count: 1, Packet count: 4294693925, Byte count: 4277471552
```

```
user@router> show services accounting aggregation source-destination-prefix name
```

```
t2 limit 10 order packets
```

```
Service Accounting interface: sp-2/0/0, Local interface index: 542
```

```
Service name: t2
```

| Source Prefix | Destination Prefix | Input SNMP Index | Output SNMP Index | Flow count | Packet count | Byte count |
|------------------|-----------------------|---------------------|----------------------|---------------|-----------------|---------------|
| 10.1.1.2/20 | 10.225.0.1/0 | 24 | 26 | 0 | 13 | 9650 |
| 10.1.1.2/20 | 10.143.80.1/0 | 24 | 26 | 0 | 13 | 10061 |
| 10.1.1.2/20 | 10.59.176.1/0 | 24 | 26 | 0 | 13 | 10426 |
| 10.1.1.2/20 | 10.5.32.1/0 | 24 | 26 | 0 | 13 | 12225 |
| 10.1.1.2/20 | 10.36.16.1/0 | 24 | 26 | 0 | 13 | 9116 |
| 10.1.1.2/20 | 10.1.96.1/0 | 24 | 26 | 0 | 12 | 11050 |
| 10.1.1.2/20 | 10.14.48.1/0 | 24 | 26 | 0 | 13 | 10812 |
| 10.1.1.2/20 | 10.31.192.1/0 | 24 | 26 | 0 | 13 | 11473 |
| 10.1.1.2/20 | 10.129.144.1/0 | 24 | 26 | 0 | 13 | 7647 |
| 10.1.1.2/20 | 10.188.160.1/0 | 24 | 26 | 0 | 13 | 10056 |

```
user@router> show services accounting aggregation source-destination-prefix name
```

```
t2 extensive limit 3
```

```
Service Accounting interface: sp-2/0/0, Local interface index: 542
```

```
Service name: t2
```

```
Source address: 10.1.1.2, Source prefix length: 20
```

```
Destination address: 10.200.176.1, Destination prefix length: 0
```

```
Input SNMP interface index: 24, Output SNMP interface index: 26
```

```
Source-AS: 69, Destination-AS: 69
```

```
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003
```

```
Flow count: 0, Packet count: 6, Byte count: 5340
```

```
Source address: 10.1.1.2, Source prefix length: 20
```

```
Destination address: 10.243.160.1, Destination prefix length: 0
```

```
Input SNMP interface index: 24, Output SNMP interface index: 26
```

```
Source-AS: 69, Destination-AS: 69
```

```
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003
```

```
Flow count: 0, Packet count: 6, Byte count: 5490
```

```
Source address: 10.1.1.2, Source prefix length: 20
```

```
Destination address: 10.162.160.1, Destination prefix length: 0
```

```
Input SNMP interface index: 24, Output SNMP interface index: 26
```

```
Source-AS: 69, Destination-AS: 69
```

```
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003
```

```
Flow count: 0, Packet count: 6, Byte count: 4079
```

Example: Sampling Instance Configuration


You can configure active sampling using a sampling instance and associate that sampling instance to a particular Packet Forwarding Engine. In addition, you can define multiple sampling instances associated with multiple destinations (as many as the number of Packet Forwarding Engines in the chassis), with multiple protocol families per each sampling instance destination. This configuration example shows one sampling instance configured and associated with one Packet Forward Engine. Sampling instance configuration is supported on MX Series, M120, M320, and T Series routers.

- [Example Network Details on page 124](#)
- [Example Router Configuration on page 125](#)
- [Configuration Commands Used for the Configuration Example on page 126](#)
- [Verifying Your Work on page 127](#)

Example Network Details

The following example shows the configuration of one sampling instance on an MX480 router running Junos OS Release 9.6.

Figure 22: Active Flow Monitoring—Sampling Instance Configuration Topology Diagram

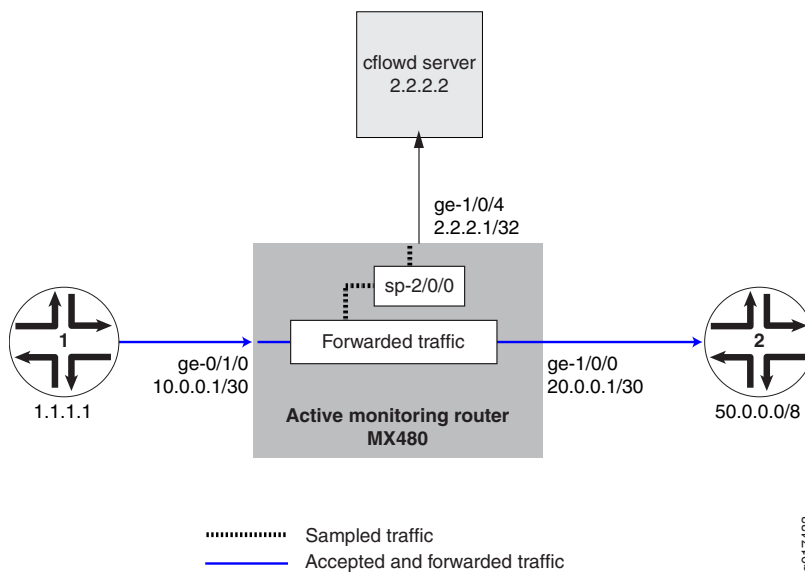

In Figure 22 on page 124, packets from Router 1 arrive on the monitoring router's Gigabit Ethernet **ge-0/1/0** interface, the packets are sampled by the services interface **sp-2/0/0** and sent to the cflowd server by the export interface **ge-1/0/4**. Normal traffic flow from **ge-0/1/0** to **ge-1/0/0** and on to Router 2 continues undisturbed during the sampling process. In active flow monitoring, both the input interface and exit interface can be any interface type (such as SONET/SDH, Gigabit Ethernet, and so on).

The sampling configuration for this example includes the following:

- A sampling instance configured to collect sampling data at the **[edit forwarding-options]** hierarchy level. The **flow-server** statement includes the IP address, port, and template of the flow server. The **interface** statement includes the services interface **sp-2/0/0** for flow record processing.
- The sampling instance associated with the Packet Forwarding Engine using the **sampling-instance** statement at the **[edit chassis fpc slot]** hierarchy level.
- Sampling activated on the input interface **ge-0/1/0** using the **sampling** statement at the **[edit interfaces interface-name unit unit-number family family]** hierarchy level.

In this example, the **ping** command is issued on Router 1 to Router 2 via the MX480 router to generate traffic. After the packets are generated, **show** commands are issued to verify that the sampling configuration is working as expected.

Example Router Configuration

The following output shows the configuration of an MX480 router with a sampling instance.

```
user@MX480-router> show configuration
[...Output Truncated...]
}
chassis {
    fpc 0 { # The fpc number is associated with the interface on which sampling
is enabled, ge-0/1/0 in this example.
        sampling-instance s0;
    }
}
interfaces {
    ge-0/1/0 { # This interfaces has sampling activated.
        unit 0 {
            family inet {
                sampling { # Here sampling is activated.
                    input;
                }
                address 10.0.0.1/30;
            }
        }
    }
    ge-1/0/0 { # The interface on which packets are exiting the router.
        unit 0 {
            family inet {
                address 20.0.0.1/30;
            }
        }
    }
    ge-1/0/4 { # The interface connected to the cflowd server.
        unit 0 {
            family inet {
                address 2.2.2.1/32;
            }
        }
    }
    sp-2/0/0 { # The service interface that samples the packets.
        unit 0 {
            family inet;
        }
    }
}
forwarding-options {
    sampling {
        instance {
            s0 {
                input {
                    rate 1;
                    run-length 0;
                }
                family inet {
                    output {
                        flow-server 2.2.2.2 { # The address of the external server.

                            port 2055;
                            version9 {
                                template {
```

```
v4;
    }
}
interface sp-2/0/0 {
    source-address 1.1.1.1; # Source address of the sampled
packets
}
}
}
}
routing-options {
    static {
        route 50.0.0.0/8 next-hop 20.0.0.2;
    }
}
services {
    flow-monitoring {
        version9 {
            template v4 {
                flow-active-timeout 30;
                flow-inactive-timeout 30;
                ipv4-template;
            }
        }
    }
}
```

Configuration Commands Used for the Configuration Example

The following **set** commands are used for the configuration of the sampling instance in this example. Replace the values in these commands with values relevant to your own network.

- set chassis fpc 0 sampling-instance s0
- set interfaces ge-0/1/0 unit 0 family inet sampling input
- set interfaces ge-0/1/0 unit 0 family inet address
- set interfaces ge-1/0/0 unit 0 family inet address
- set interfaces sp-2/0/0 unit 0 family inet
- set forwarding-options sampling instance s0 input rate 1
- set forwarding-options sampling instance s0 input run-length 0
- set forwarding-options sampling instance s0 family inet output flow-server 2.2.2.2 port 2055
- set forwarding-options sampling instance s0 family inet output flow-server 2.2.2.2 version 9 template v4;
- set forwarding-options sampling instance s0 family inet output interface sp-2/0/0 source-address 1.1.1.1

- **set routing-options static route 50.0.0.0/8 next-hop 20.0.0.2**
- **set services flow-monitoring version9 template v4 flow-active-timeout 30**
- **set services flow-monitoring version9 template v4 flow-inactive-timeout 30**
- **set services flow-monitoring version9 template v4 ipv4-template**

Verifying Your Work

To verify that your configuration is working as expected, use the following commands on the router that is configured with the sampling instance:

- **show services accounting aggregation template template-name *template-name***
- **show services accounting flow**

The following shows the output of the **show** commands issued on the MX480 router used in this configuration example:

```
user@MX480-router> show services accounting aggregation template template-name v4
```

| Source Address | Destination Address | Src | Dst | Proto | TOS | Packet Count |
|----------------|---------------------|-------|-------|-------|-----|--------------|
| | | Port/ | Port/ | | | |
| | | ICMP | ICMP | | | |
| | | Type | Code | | | |
| 10.0.0.6 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 14 |
| 10.0.0.5 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.3 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.2 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.4 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.6 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.4 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.2 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 16 |
| 10.0.0.3 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 15 |
| 10.0.0.5 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 15 |

```
user@MX480-router> show services accounting aggregation template template-name v4
```

| Source Address | Destination Address | Src | Dst | Proto | TOS | Packet Count |
|----------------|---------------------|-------|-------|-------|-----|--------------|
| | | Port/ | Port/ | | | |
| | | ICMP | ICMP | | | |
| | | Type | Code | | | |
| 10.0.0.6 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 16 |
| 10.0.0.5 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 17 |
| 10.0.0.3 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 16 |
| 10.0.0.2 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 16 |
| 10.0.0.4 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 17 |
| 10.0.0.6 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 17 |
| 10.0.0.4 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 16 |
| 10.0.0.2 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 17 |
| 10.0.0.3 | 50.0.0.2 | 100 | 1000 | 17 | 8 | 17 |
| 10.0.0.5 | 50.0.0.3 | 100 | 1000 | 17 | 8 | 16 |

```
user@MX480-router> show services accounting flow
```

Flow information

Interface name: sp-2/0/0, Local interface index: 152

Flow packets: 884, Flow bytes: 56576

Flow packets 10-second rate: 0, Flow bytes 10-second rate: 628

Active flows: 10, Total flows: 35

Flows exported: 75, Flows packets exported: 14

Flows inactive timed out: 25, Flows active timed out: 75

```

user@MX480-router> show services accounting flow
Flow information
  Interface name: sp-2/0/0, Local interface index: 152
  Flow packets: 898, Flow bytes: 57472
  Flow packets 10-second rate: 0, Flow bytes 10-second rate: 628
  Active flows: 10, Total flows: 35
  Flows exported: 75, Flows packets exported: 14
  Flows inactive timed out: 25, Flows active timed out: 75

```

Example: Multiple Port Mirroring with Next-Hop Groups Configuration

When you need to analyze traffic containing more than one packet type, or you wish to perform multiple types of analysis on a single type of traffic, you can implement multiple port mirroring and next-hop groups. You can make up to 16 copies of traffic per group and send the traffic to next-hop group members. A maximum of 30 groups can be configured on a router at any given time. The port-mirrored traffic can be sent to any interface, except aggregated SONET/SDH, aggregated Ethernet, loopback (lo0), or administrative (fxp0) interfaces. To send port-mirrored traffic to multiple flow servers or packet analyzers, you can use the **next-hop-group** statement at the [edit forwarding-options] hierarchy level.

Figure 23: Active Flow Monitoring—Multiple Port Mirroring with Next-Hop Groups Topology Diagram

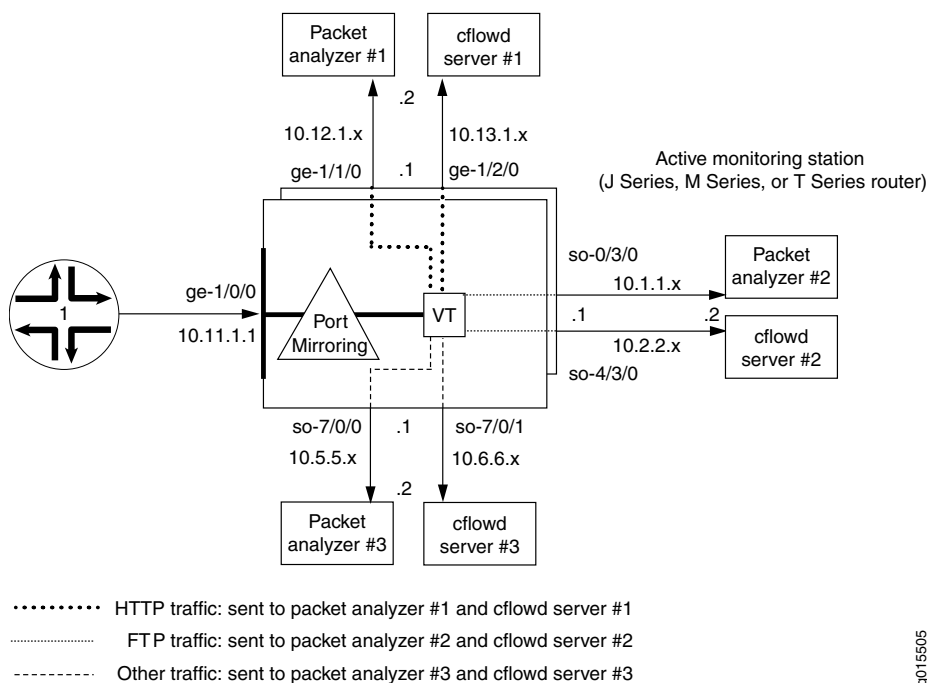


Figure 23 on page 128 shows an example of how to configure multiple port mirroring with next-hop groups. All traffic enters the monitoring router at interface **ge-1/0/0**. A firewall filter counts and port-mirrors all incoming packets to a Tunnel Services PIC. A second filter is applied to the tunnel interface and splits the traffic into three categories: HTTP traffic, FTP traffic, and all other traffic. The three types of traffic are assigned to three

separate next-hop groups. Each next-hop group contains a unique pair of exit interfaces that lead to different groups of packet analyzers and flow servers.

```
[edit]
interfaces {
  ge-1/0/0 { # This is the input interface where packets enter the router.
    unit 0 {
      family inet {
        filter {
          input mirror_pkts; # Here is where you apply the first filter.
        }
        address 10.11.1.1/24;
      }
    }
  }
  ge-1/1/0 { # This is an exit interface for HTTP packets.
    unit 0 {
      family inet {
        address 10.12.1.1/24;
      }
    }
  }
  ge-1/2/0 { # This is an exit interface for HTTP packets.
    unit 0 {
      family inet {
        address 10.13.1.1/24;
      }
    }
  }
  so-0/3/0 { # This is an exit interface for FTP packets.
    unit 0 {
      family inet {
        address 10.1.1.1/30;
      }
    }
  }
  so-4/3/0 { # This is an exit interface for FTP packets.
    unit 0 {
      family inet {
        address 10.2.2.1/30;
      }
    }
  }
  so-7/0/0 { # This is an exit interface for all remaining packets.
    unit 0 {
      family inet {
        address 10.5.5.1/30;
      }
    }
  }
  so-7/0/1 { # This is an exit interface for all remaining packets.
    unit 0 {
      family inet {
        address 10.6.6.1/30;
      }
    }
  }
}
```

```
}
vt-3/3/0 { # The tunnel interface is where you send the port-mirrored traffic.
  unit 0 {
    family inet;
  }
  unit 1 {
    family inet {
      filter {
        input collect_pkts; # This is where you apply the second firewall filter.
      }
    }
  }
}
}
forwarding-options {
  port-mirroring { # This is required when you configure next-hop groups.
    family inet {
      input {
        rate 1; # This port-mirrors all packets (one copy for every packet received).
      }
      output { # Sends traffic to a tunnel interface to enable multipoint mirroring.
        interface vt-3/3/0.1;
        no-filter-check;
      }
    }
  }
}
next-hop-group ftp-traffic { # Point-to-point interfaces require you to specify the
  interface so-4/3/0.0; # interface name.
  interface so-0/3/0.0;
}
next-hop-group http-traffic { # Configure a next hop for all multipoint interfaces.
  interface ge-1/1/0.0 {
    next-hop 10.12.1.2;
  }
  interface ge-1/2/0.0 {
    next-hop 10.13.1.2;
  }
}
next-hop-group default-collect {
  interface so-7/0/0.0;
  interface so-7/0/1.0;
}
}
firewall {
  family inet {
    filter mirror_pkts { # Apply this filter to the input interface.
      term catch_all {
        then {
          count input_mirror_pkts;
          port-mirror; # This action sends traffic to be copied and port-mirrored.
        }
      }
    }
  }
  filter collect_pkts { # Apply this filter to the tunnel interface.
    term ftp-term { # This term sends FTP traffic to an FTP next-hop group.
      from {
```

```

        protocol ftp;
    }
    then next-hop-group ftp-traffic;
}
term http-term { # This term sends HTTP traffic to an HTTP next-hop group.
    from {
        protocol http;
    }
    then next-hop-group http-traffic;
}
term default { # This sends all remaining traffic to a final next-hop group.
    then next-hop-group default-collectors;
}
}
}
}

```

Routing Engine-Based Sampling to Multiple Flow Servers

Routing Engine-based sampling supports up to eight flow servers for both version 5 and version 8 configurations. The total number of collectors is limited to eight, regardless of how many are configured for version 5 or version 8. When you configure sampling, the export packets are replicated to all collectors configured to receive them. If two collectors are configured to receive version 5 records, both collectors will receive records for a specified flow.

The following configuration example allows replication of export packets to two collectors.

```

forwarding-options {
    sampling {
        input {
            family inet {
                rate 1;
            }
        }
        output {
            cflowd 10.10.3.2 {
                port 2055;
                version 5;
                source-address 192.168.164.119;
            }
            cflowd 172.17.20.62 {
                port 2055;
                version 5;
                source-address 192.168.164.119;
            }
        }
    }
}

```

Example: Flow-Tap Configuration

The following example shows all the parts of a complete flow-tap configuration.

```
services {
  flow-tap {
    interface sp-1/2/0.100;
  }
}
interfaces {
  sp-1/2/0 {
    unit 100 {
      family inet;
    }
  }
}
system {
  services {
    flow-tap-dtcp {
      ssh {
        connection-limit 5;
        rate-limit 5;
      }
    }
  }
  login {
    class ft-class {
      permissions flow-tap-operation;
    }
    user ft-user1 {
      class ft-class;
      authentication {
        encrypted-password "xxxx";
      }
    }
  }
}
```

**Related
Documentation**

- [Flow-Tap Architecture on page 9](#)
- [Configuring the Flow-Tap Interface on page 73](#)
- [Configuring Flow-Tap Security Properties on page 72](#)
- [Flow-Tap Application Restrictions on page 17](#)

Example: IPv6 Support for FlowTapLite

This example describes how to configure IPv6 support for FlowTapLite on an M120 router with Enhanced III FPCs. The configuration of FlowTapLite is similar on an M320 router and an MX Series router with Enhanced III FPCs. However, because the MX Series routers do not support Tunnel Services PICs, you configure a DPC and the corresponding Packet Forwarding Engine to use tunneling services at the **[edit chassis]** hierarchy level.

With Junos OS Release 10.1, the FlowTapLite service supports lawful interception of IPv6 packets; previously only interception of IPv4 packets was supported. The intercepted packets are sent to a content destination, while the flow of original packets to the actual destination is unaffected.

A mediation device installs dynamic filters on the router (or server) by sending DTCP requests. These filters include the quintuple information (source address, destination address, source port, destination port, and protocol) about the intercepted flows and the details (IP addresses and port information) of the content destination.

Below is an example of such a filter:

```
ADD DTCP/0.8
Csource-ID: ftap
Cdest-ID: cd1
Source-Address: 7234:5678:ABCD:EF12:3456:78AB:ABC8:1235/112
Dest-Address: affe::1:1
Source-Port: 1234
Dest-Port: 2345
Protocol: *
Priority: 2
X-JTap-Input-Interface: ge-2/0/1
X-JTap-Cdest-Dest-Address: 6.3.4.5
X-JTap-Cdest-Dest-Port: 2300
X-JTap-Cdest-Source-Address: 208.223.208.9
X-JTap-Cdest-Source-Port: 65535
X-JTap-Cdest-TTL: 255
X-JTap-IP-Version: ipv6
Flags: STATIC
```

Following are descriptions of the parameters in the dynamic filter:

- **Csource-ID**—The username configured in the router at the [edit system login user] hierarchy level.
- **Cdest-ID**—The content destination identifier.
- **Source-Address, Dest-Address Source-Port, Dest-Port, Protocol**—Parameters that determine which packet flows need to be intercepted.
- **X-JTap-Input-Interface**—The interface through which the actual flows are coming into the router. Depending on the type of filters installed, the value in this field can include the following: **X-JTap-Output-Interface** to install output interface filters; **X-JTap-VRF-NAME** to install VRF filters; and to install global filters, no parameters are specified.
- **X-JTap-Cdest-Dest**—All parameters that start with this string specify different parameters associated with the content destination.
- **X-JTap-IP-Version**—Differentiates between IPv6 and IPv4 filters.

From the Packet Forwarding Engine console, you can verify that the filters are installed and working correctly.

This example describes how to configure IPv6 support for FlowTapLite on an M120 router:

- [Requirements on page 134](#)
- [Overview and Topology on page 134](#)

- [Configuration on page 134](#)
- [Verification on page 137](#)

Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later
- M120 router with a tunnel (vt) interface


Before you configure IPv6 FlowTapLite on your router, be sure you have:

- A tunnel PIC that is up
- A connection from the router to the mediation device and the content destination
- Traffic flow to and from the router

Overview and Topology

[Figure 24 on page 134](#) shows the FlowTapLite configuration for one M120 router to lawfully intercept packets.

Figure 24: FlowTapLite Topology

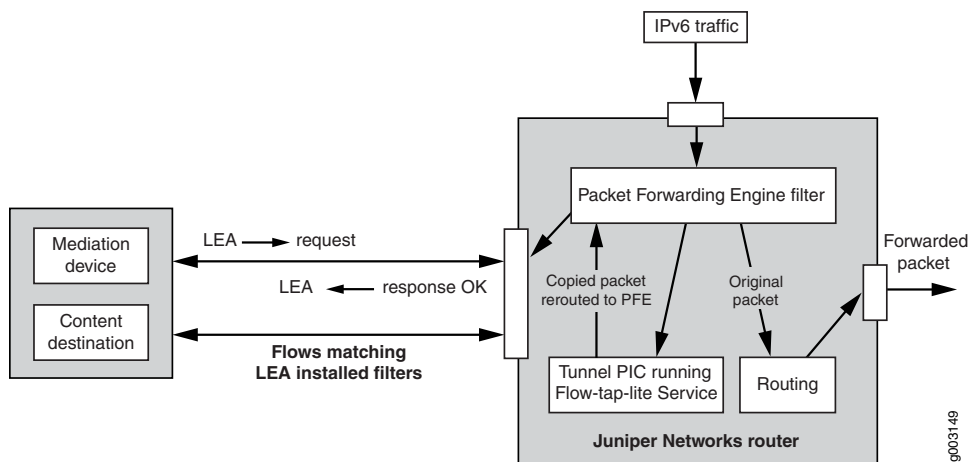

In this example, the IPv6 packets enter the Packet Forwarding Engine and, depending on the filters installed, a new flow is created for the intercepted packets while the original packets are forwarded normally. The new flow is rerouted through the tunnel PIC back to the Packet Forwarding Engine for a route lookup, and then on to the content destination.

Configuration

To configure IPv6 FlowTapLite on an M120 router, perform these tasks:

- [Configuring User Credentials on page 135](#)
- [Configuring the Tunnel Interface for FlowTapLite on page 135](#)
- [Configuring the Logical Tunnel Interface on page 135](#)

- [Configuring FlowTapLite on page 136](#)
- [Results on page 137](#)

CLI Quick Configuration To quickly configure IPv6 FlowTapLite, copy the following commands and paste them into the CLI:

```
set system login class flowtap permissions flow-tap-operation
set system login user ftap uid 2000
set system login user ftap class flowtap
set system login user ftap authentication encrypted-password "xxxxxx"
set system services flow-tap-dtcp ssh
set interfaces vt-4/0/0 unit 0 family inet
set interfaces vt-4/0/0 unit 0 family inet6
set services flow-tap tunnel-interface vt-4/0/0.0
```

Configuring User Credentials

Step-by-Step Procedure The username and password configured here are used by the mediation device when connecting and sending out DTCP requests.

1. Define a login class called **flowtap**:

```
[edit system]
user@router# set login class flowtap permissions flow-tap-operation
```
2. For the meditation device, configure a user called **ftap** with a unique identifier (UID):

```
[edit system]
user@router# set login user ftap uid 2000
```
3. Apply the **flowtap** class to the **ftap** user:

```
[edit system]
user@router# set login user ftap class flowtap
```
4. Configure the password used by the mediation device:

```
[edit system]
user@router# set login user ftap authentication encrypted-password xxxxxx
```
5. Commit the configuration:

```
[edit system]
user@router# commit
```

Configuring the Tunnel Interface for FlowTapLite

Step-by-Step Procedure You can add an extra level of security to DTCP transactions between the mediation device and the router by enabling DTCP sessions on top of the SSH layer.

1. Configure SSH from the **[edit system]** hierarchy level:

```
[edit system]
user@router# set services flow-tap-dtcp ssh
```
2. Commit the configuration:

```
[edit system]
user@router# commit
```

Configuring the Logical Tunnel Interface

Step-by-Step Procedure 1. Configure the logical interface and assign it to the dynamic flow control process (dfcd) at the **[edit interfaces]** hierarchy level:

- ```
[edit interfaces]
user@router# set vt-4/0/0 unit 0 family inet
```
2. Include the mandatory **inet6** statement:  

```
[edit interfaces]
user@router# set vt-4/0/0 unit 0 family inet6
```
  3. Commit the configuration:  

```
[edit interfaces]
user@router# commit
```

---

### Configuring FlowTapLite

---

#### Step-by-Step Procedure

1. Include the **flow-tap** statement and the tunnel interface at the **[edit services]** hierarchy level:  

```
[edit services]
user@router# set flow-tap tunnel-interface vt-4/0/0.0
```
2. Commit the configuration:  

```
[edit services]
user@router# commit
```



## Results

Check the results of the configuration:

```
[edit]
user@router-re0# show
system {
 [...Output Truncated...]
 login {
 class flowtap {
 permissions flow-tap-operation;
 }
 user ftap {
 uid 2000;
 class flowtap;
 authentication {
 encrypted-password "xxxxxx"; ## SECRET-DATA
 }
 }
 }
 services {
 telnet;
 flow-tap-dtcp {
 ssh;
 }
 }
}
interfaces {
 vt-4/0/0 {
 unit 0 {
 family inet;
 family inet6;
 }
 }
}
[...Output Truncated...]
services {
 flow-tap {
 tunnel-interface vt-4/0/0.0;
 }
}
```

## Verification

To confirm that the configuration is working properly, perform the following tasks:

- [Verifying That the Router Received the Filter Request on page 137](#)
- [Checking That Filters Are Installed and Working on the Router on page 138](#)
- [Sending a List Request on page 138](#)

### Verifying That the Router Received the Filter Request

**Purpose** After the mediation device sends the filters to the router, the mediation device must receive a message from the router confirming that the router has received the filter request.

**Action** Check that the mediation device has received a message similar to the one below:

```

DTCP/0.8 200 OK
SEQ: 1
CRITERIA-ID: 1
TIMESTAMP: 2009-09-29 06:12:05.725
AUTHENTICATION-INFO: 55f9dc3debd3c7356951410f165f2a9cc5606063

```

**Meaning** The message above is an example of a successfully received filter request.

### Checking That Filters Are Installed and Working on the Router

**Action** Use the **show filter** and the **show filter index** commands to check that filters are installed:

```

ADPC2(diving vty)# show filter
Program Filters:

```

| Index    | Dir     | Cnt | Text | Bss | Name                                |
|----------|---------|-----|------|-----|-------------------------------------|
| 1        | 104     | 0   | 20   | 20  | __default_bpdu_filter__             |
| 17000    | 52      | 0   | 4    | 4   | __default_arp_policer__             |
| 57007    | 104     | 144 | 16   | 16  | __flowtap_inet__                    |
| 65280    | 52      | 0   | 4    | 4   | __auto_policer_template__           |
| 65281    | 104     | 0   | 16   | 16  | __auto_policer_template_1__         |
| 65282    | 156     | 0   | 32   | 32  | __auto_policer_template_2__         |
| 65283    | 208     | 0   | 48   | 48  | __auto_policer_template_3__         |
| 65284    | 260     | 0   | 64   | 64  | __auto_policer_template_4__         |
| 65285    | 312     | 0   | 80   | 80  | __auto_policer_template_5__         |
| 65286    | 364     | 0   | 96   | 96  | __auto_policer_template_6__         |
| 65287    | 416     | 0   | 112  | 112 | __auto_policer_template_7__         |
| 65288    | 468     | 0   | 128  | 128 | __auto_policer_template_8__         |
| 37748736 | 156 144 | 80  | 80   |     | __ftaplite_filter_ifl_70_out_ipv6__ |
| 37748737 | 156 144 | 80  | 80   |     | __ftaplite_filter_vrf_4_in_ipv6__   |
| 37748738 | 156 144 | 80  | 80   |     | __ftaplite_filter_ifl_71_in_ipv6__  |
| 37748739 | 156 144 | 80  | 80   |     | __ftaplite_filter_vrf_0_in_ipv6__   |

```

ADPC2(diving vty)# show filter index 37748738 counters
Filter Counters/Policers:

```

| Index    | Packets | Bytes     | Name                            |
|----------|---------|-----------|---------------------------------|
| 37748738 | 8851815 | 601923420 | __ftaplite_term_ftap_3__counter |

**Meaning** The last four filters in the output for the **show filter** command above are the filters installed on the Packet Forwarding Engine. The **show filter index** command shows a non-zero packet count, indicating that the packets are hitting the filter.

### Sending a List Request

**Purpose** To verify that the correct filters are installed in the Packet Forwarding Engine.

**Action** Use client software to send a list request to the Packet Forwarding Engine. In your list request, you can include the following three parameters individually or together: **CSource-Id**, **CDest-ID**, and **Criteria-ID**. With all requests, you must include the **CSource-Id**. Below is an example of a list request using the **CSource-Id**:

```
LIST DTCP/0.8
Csource-ID: ftap1
Flags: Both
```

Below is an example of a response:

```
DTCP/0.8 200 OK
SEQ: 51
TIMESTAMP: 2009-10-04 07:56:43.003
CRITERIA-ID: 1
CSOURCE-ID: ftap1
CDEST-ID: cd1
CSOURCE-ADDRESS: 10.209.152.15
FLAGS: Static
AVERAGE-BANDWIDTH: 0
MATCHING-PACKETS: 0
MATCHING-BYTES: 0
NUM-REFRESH: 0
LAST-REFRESH: 2009-10-04 07:54:30.870
X-JTAP-INPUT-INTERFACE: ge-2/1/1.0,ge-2/1/1.1,ge-2/1/1.2
SOURCE-ADDRESS: 40.0.0.1
DEST-ADDRESS: 50.0.0.1/32
SOURCE-PORT: 1000
DEST-PORT: 2000
PROTOCOL: 17
X-JTAP-CDEST-DEST-ADDRESS: 212.25.99.81
X-JTAP-CDEST-DEST-PORT: 8001
X-JTAP-CDEST-SOURCE-ADDRESS: 208.223.208.9
X-JTAP-CDEST-SOURCE-PORT: 34675
X-JTAP-CDEST-TTL: 64
CRITERIA-NUM: 1
CRITERIA-COUNT: 1
AUTHENTICATION-INFO: 0f49ff600a3d8d7d312c5031f74cc17540bc9200
```

You can also delete the request. Below is an example of a delete request:

```
DELETE DTCP/0.8
Csource-ID: ftap
CDEST-ID: cd1
Flags: STATIC
```

- Related Documentation**
- [Configuring FlowTapLite](#)
  - [flow-tap](#)
  - [Configuring Tunnel Interfaces on MX Series Routers](#)

## Example: VRF Routing Engine-Based Sampling

Traffic sampling enables you to copy traffic to a Physical Interface Card (PIC) while the router forwards the packet to its original destination. This example describes how to configure a router to perform sampling on the Routing Engine using the **sampled** process. For this method, you configure a filter (input or output) with a matching term that contains the **then sample** statement. In addition, for VPN routing and forwarding (VRF) Routing Engine-based sampling, you configure a VRF routing instance that maps to an interface.

Each VRF instance corresponds with a forwarding table. Routes on the interface go into the corresponding forwarding table.

For VRF Routing Engine-based sampling, the kernel queries the correct VRF route table based on the ingress interface index for the received packet. For interfaces configured in VRF, the sampled packets contain the correct input and output interface SNMP index, the source and destination AS numbers, and the source and destination mask.



**NOTE:** With Junos OS Release 10.1, VRF Routing Engine-based sampling is performed only on IPv4 traffic. You cannot use Routing Engine-based sampling on IPv6 traffic or on MPLS label-switched paths.

This example describes how to configure and verify VRF Routing Engine-based sampling on one router in a four-router topology.

- [Requirements on page 140](#)
- [Overview and Topology on page 141](#)
- [Configuration on page 141](#)
- [Verification on page 155](#)

## Requirements

This example uses the following hardware and software components:


- Junos OS Release 10.1 or later
- M Series, MX Series, or T Series router

Before you configure VRF Routing Engine-Based sampling on your router, be sure you have an active connection between the routers on which you configure sampling. In addition, you need to have an understanding of VRF to configure the interfaces and routing instances that form the basis of the sampling configuration; and an understanding of the BGP, MPLS, and OSPF protocols to configure the other routers in the network to bring up the sampling configuration.

## Overview and Topology

The scenario in this example illustrates VRF Routing Engine-based sampling configured on the PE1 router in a four-router network. The CE routers use BGP as the routing protocol to communicate with the PE routers. MPLS LSPs pass traffic between the PE routers. Packets from the CE1 router are sampled on the PE1 router. Regular traffic is forwarded to the original destination (the CE2 router).

**Figure 25: Routing Engine-Based Sampling Network Topology**

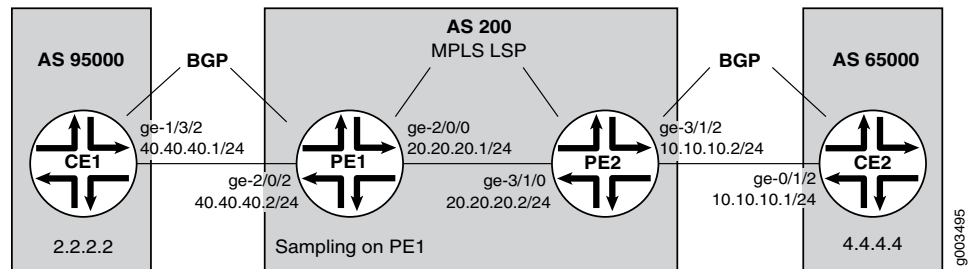

## Configuration

In this configuration example, the VRF Routing Engine-based sampling is configured on the PE1 router that samples the traffic that goes through the interface and routes configured in the VRF. The configurations on the other three routers are included to show the sampling configuration on the PE1 router working in the context of a network.

To configure VRF Routing Engine-based sampling for the network example, perform these tasks:

- [Configuring the CE1 Router on page 141](#)
- [Configuring the PE1 Router on page 143](#)
- [Configuring the PE2 Router on page 148](#)
- [Configuring the CE2 Router on page 153](#)

### Configuring the CE1 Router

#### Step-by-Step Procedure

In this step, you configure interfaces, routing options, protocols, and policy options for the CE1 router. To configure the CE1 router:

1. Configure one interface with two IP addresses. One address is for traffic to the PE1 router; the other address is to check that traffic is flowing to the CE2 router:
 

```
[edit interfaces]
user@router-ce1# set ge-1/3/2 unit 0 family inet address 40.40.40.1/24
user@router-ce1# set ge-1/3/2 unit 0 family inet address 2.2.2.2/8
```
2. Configure the autonomous system to establish a connection between BGP peers:
 

```
[edit routing-options]
user@router-ce1# set autonomous-system 95000
```
3. Configure BGP as the routing protocol between the CE router and the PE router:
 

```
[edit protocols]
user@router-ce1# set bgp group to_r1 type external
```

```
user@router-ce1# set bgp group to_r1 export my_lo0_addr
user@router-ce1# set bgp group to_r1 peer-as 200
user@router-ce1# set bgp group to_r1 neighbor 40.40.40.2
```

4. Configure the policies that ensure that the CE routers exchange routing information. In this example, Router CE1 exchanges routing information with Router CE2:

```
[edit policy-options]
user@router-ce1# set policy-statement my_lo0_addr term one from protocol direct
user@router-ce1# set policy-statement my_lo0_addr term one from route-filter
10.255.15.32/32 exact
user@router-ce1# set policy-statement my_lo0_addr term one then accept
user@router-ce1# set policy-statement my_lo0_addr term four from protocol direct
user@router-ce1# set policy-statement my_lo0_addr term four from route-filter 2.0.0.0/8
exact
user@router-ce1# set policy-statement my_lo0_addr term four then accept
```

**Results** The output below shows the configuration of the CE1 router:

```
[edit]
user@router-ce1# show
[...Output Truncated...]
interfaces {
 ge-1/3/2 {
 unit 0 {
 family inet {
 address 40.40.40.1/24;
 address 2.2.2.2/8;
 }
 }
 }
}
routing-options {
 autonomous-system 95000;
}
protocols {
 bgp {
 group to_r1 {
 type external;
 export my_lo0_addr;
 peer-as 200;
 neighbor 40.40.40.2;
 }
 }
}
policy-options {
 policy-statement my_lo0_addr {
 term one {
 from {
 protocol direct;
 route-filter 10.255.15.32/32 exact;
 }
 then accept;
 }
 term four {
 from {
 protocol direct;
 route-filter 2.0.0.0/8 exact;
 }
 then accept;
 }
 }
}
```

### Configuring the PE1 Router

**Step-by-Step Procedure** In this step, you configure a filter with a matching term that contains the **then sample** statement and apply the filter to the ingress interface. You also configure a VRF routing instance with import and export policies. In addition, you configure interfaces, forwarding options, routing options, protocols, and policy options for the PE1 router. To configure the PE1 router:

1. Create the **fw** firewall filter that is applied to the logical interface being sampled:

```
[edit firewall]
user@router-pe1# set family inet filter fw term 1 from protocol tcp
user@router-pe1# set family inet filter fw term 1 from port bgp
user@router-pe1# set family inet filter fw term 1 then accept
user@router-pe1# set family inet filter fw term 2 then sample
```

2. Configure two interfaces, one interface that connects to the CE1 router (**ge-2/0/2**), and another that connects to the PE2 router (**ge-2/0/0**):

```
[edit interfaces]
user@router-pe1# set ge-2/0/2 unit 0 family inet address 40.40.40.2/24
user@router-pe1# set ge-2/0/0 unit 0 family inet address 20.20.20.1/24
user@router-pe1# set ge-2/0/0 unit 0 family mpls
```

3. Enable MPLS on the interface that connects to the PE2 router (**ge-2/0/0**):

```
[edit interfaces]
user@router-pe1# set ge-2/0/0 unit 0 family mpls
```

4. On the interface that connects to the CE1 router, apply the **fw** filter that was configured in the firewall configuration:

```
[edit interfaces]
user@router-pe1# set ge-2/0/2 unit 0 family inet filter input fw
user@router-pe1# set ge-2/0/2 unit 0 family inet filter output fw
```

5. Configure the management (**fxp0**) and loopback (**lo0**) interfaces:

```
[edit interfaces]
user@router-pe1# set fxp0 unit 0 family inet address 192.168.69.153/21
user@router-pe1# set lo0 unit 0 family inet address 127.0.0.1/32
```

6. Configure the **sampled** log file in the **/var/log** directory to record traffic sampling:

```
[edit forwarding-options]
user@router-pe1# set sampling traceoptions file sampled
user@router-pe1# set sampling traceoptions file world-readable
user@router-pe1# set sampling traceoptions flag all
```

7. Specify the sampling rate and threshold value for traffic sampling:

```
[edit forwarding-options]
user@router-pe1# set sampling input rate 1
user@router-pe1# set sampling input run-length 0
user@router-pe1# set sampling input max-packets-per-second 20000
```

8. Specify active and inactive flow periods, and the router (**2.2.2.2**) that sends out the monitored information:

```
[edit forwarding-options]
user@router-pe1# set sampling family inet output flow-active-timeout 60
user@router-pe1# set sampling family inet output flow-inactive-timeout 60
user@router-pe1# set sampling family inet output flow-server 2.2.2.2 port 2055
user@router-pe1# set sampling family inet output flow-server 2.2.2.2 local-dump
user@router-pe1# set sampling family inet output flow-server 2.2.2.2 version 500
```

9. Configure the autonomous system to establish a connection between BGP peers:

```
[edit routing-options]
user@router-pe1# set autonomous-system 200
```

10. Configure RSVP to support MPLS label-switched paths (LSPs) between the PE routers:

```
[edit protocols]
user@router-pe1# set rsvp interface all
user@router-pe1# set rsvp interface fxp0.0 disable
```

11. Configure an MPLS LSP from the PE1 router to the PE2 router:



- ```
[edit protocols]
user@router-pe1# set mpls label-switched-path R1toR2 from 20.20.20.1
user@router-pe1# set mpls label-switched-path R1toR2 to 20.20.20.2
user@router-pe1# set mpls interface all
user@router-pe1# set mpls interface fxp0.0 disable
```
12. Configure an internal BGP group for the PE routers. Include the **family inet-vpn unicast** statement to enable BGP to carry network layer reachability information (NLRI) parameters and for BGP peers to only carry unicast routes for forwarding:


```
[edit protocols]
user@router-pe1# set bgp group to_r2 type internal
user@router-pe1# set bgp group to_r2 local-address 20.20.20.1
user@router-pe1# set bgp group to_r2 neighbor 20.20.20.2 family inet-vpn unicast
```
 13. Configure OSPF as the interior gateway protocol (IGP) and to compute the MPLS LSPs:


```
user@router-pe1# set ospf traffic-engineering
user@router-pe1# set ospf area 0.0.0.0 interface all
user@router-pe1# set ospf area 0.0.0.0 interface fxp0.0 disable
```
 14. Create the extended community that is applied in the policy options configuration:


```
[edit policy-options]
user@router-pe1# set community vpna-comm members target:200:100
```
 15. Define the **vpna-export** routing policy that is applied in the **vrf-export** statement in the routing instance configuration. Also, apply the **vpna-comm** community from which routes are learned:


```
[edit policy-options]
user@router-pe1# set policy-statement vpna-export term one from protocol bgp
user@router-pe1# set policy-statement vpna-export term one from protocol direct
user@router-pe1# set policy-statement vpna-export term one then community add vpna-comm
user@router-pe1# set policy-statement vpna-export term one then accept
user@router-pe1# set policy-statement vpna-export term two then reject
```
 16. Define the **vpna-import** routing policy that is applied in the **vrf-import** statement in the routing instance configuration. Also, apply the **vpna-comm** community from which routes are learned:


```
[edit policy-options]
user@router-pe1# set policy-statement vpna-import term one from protocol bgp
user@router-pe1# set policy-statement vpna-import term one from community vpna-comm
user@router-pe1# set policy-statement vpna-import term one then accept
user@router-pe1# set policy-statement vpna-import term two then reject
```
 17. Configure a VRF routing instance so that routes received from the provider edge-provider edge (PE-PE) session can be imported into any of the instance's VRF secondary routing tables:


```
[edit routing-instances]
user@router-pe1# set vrf1 instance-type vrf set vrf1 interface ge-2/0/2.0
user@router-pe1# set vrf1 route-distinguisher 10.255.15.51:1
user@router-pe1# set vrf1 vrf-import vpna-import
user@router-pe1# set vrf1 vrf-export vpna-export
user@router-pe1# set vrf1 protocols bgp group customer type external
user@router-pe1# set vrf1 protocols bgp group customer peer-as 95000
user@router-pe1# set vrf1 protocols bgp group customer as-override
user@router-pe1# set vrf1 protocols bgp group customer neighbor 30.30.30.1
user@router-pe1# set vrf1 protocols bgp group customer neighbor 40.40.40.1
```

Results Check the results of the configuration for the PE1 router:

```
user@router-pe1> show configuration
[...Output Truncated...]
}
interfaces {
  ge-2/0/0 {
    unit 0 {
      family inet {
        address 20.20.20.1/24;
      }
      family mpls;
    }
  }
  ge-2/0/2 {
    unit 0 {
      family inet {
        filter {
          input fw;
          output fw;
        }
        address 40.40.40.2/24;
      }
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.69.153/21;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 127.0.0.1/32;
      }
    }
  }
}
forwarding-options {
  sampling {
    traceoptions {
      file sampled world-readable;
      flag all;
    }
    input {
      rate 1;
      run-length 0;
      max-packets-per-second 20000;
    }
    family inet {
      output {
        flow-inactive-timeout 60;
        flow-active-timeout 60;
        flow-server 2.2.2.2 {
          port 2055;
          local-dump;
          version 500;
        }
      }
    }
  }
}
```

```

    }
  }
}
routing-options {
[...Output Truncated...]
  autonomous-system 200;
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    label-switched-path R1toR2 {
      from 20.20.20.1;
      to 20.20.20.2;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  bgp {
    group to_r2 {
      type internal;
      local-address 20.20.20.1;
      neighbor 20.20.20.2 {
        family inet-vpn {
          unicast;
        }
      }
    }
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface all;
      interface fxp0.0 {
        disable;
      }
    }
  }
}
policy-options {
  policy-statement vpna-export {
    term one {
      from protocol [ bgp direct ];
      then {
        community add vpna-comm;
        accept;
      }
    }
    term two {
      then reject;
    }
  }
  policy-statement vpna-import {
    term one {
      from {

```

```

        protocol bgp;
        community vpna-comm;
    }
    then accept;
}
term two {
    then reject;
}
}
community vpna-comm members target:200:100;
}
firewall {
    family inet {
        filter fw {
            term 1 {
                from {
                    protocol tcp;
                    port bgp;
                }
                then accept;
            }
            term 2 {
                then sample;
            }
        }
    }
}
routing-instances {
    vrf1 {
        instance-type vrf;
        interface ge-2/0/2.0;
        route-distinguisher 10.255.15.51:1;
        vrf-import vpna-import;
        vrf-export vpna-export;
        protocols {
            bgp {
                group customer {
                    type external;
                    peer-as 95000;
                    as-override;
                    neighbor 30.30.30.1;
                    neighbor 40.40.40.1;
                }
            }
        }
    }
}
}

```

Configuring the PE2 Router

Step-by-Step Procedure

In this step, you configure a filter with a matching term that contains the **then sample** statement and apply the filter to the ingress interface. You also configure a VRF routing instance with import and export policies. In addition, you configure interfaces, forwarding options, routing options, protocols, and policy options for the PE2 router. To configure the PE2 router:

1. Create the **fw** firewall filter that is applied to the logical interface being sampled:

```
[edit firewall]
user@router-pe2# set family inet filter fw term 1 from protocol tcp
user@router-pe2# set family inet filter fw term 1 from port bgp
user@router-pe2# set family inet filter fw term 1 then accept
user@router-pe2# set family inet filter fw term 2 then sample
user@router-pe2# set family inet filter fw term 2 then accept
```

2. Configure two interfaces, one interface that connects to the CE2 router (**ge-3/1/2**), and another that connects to the PE1 router (**ge-3/1/0**):

```
[edit interfaces]
user@router-pe2# set ge-3/1/0 unit 0 family inet address 20.20.20.2/24
user@router-pe2# set ge-3/1/0 unit 0 family mpls
user@router-pe2# set ge-3/1/2 unit 0 family inet address 10.10.10.2/24
```

3. Enable MPLS on the interface that connects to the PE1 router (**ge-3/1/0**):

```
[edit interfaces]
user@router-pe2# set ge-3/1/0 unit 0 family mpls
```

4. On the interface that connects to the CE2 router, apply the **fw** filter that was configured in the firewall configuration:

```
[edit interfaces]
user@router-pe2# set ge-3/1/2 unit 0 family inet filter input fw
user@router-pe2# set ge-3/1/2 unit 0 family inet filter output fw
```

5. Configure the **sampled** log file in the **/var/log** directory to record traffic sampling:

```
[edit forwarding-options]
user@router-pe2# set sampling traceoptions file sampled
user@router-pe2# set sampling traceoptions file world-readable
user@router-pe1# set sampling traceoptions flag all
```

6. Specify the sampling rate and threshold value for traffic sampling:

```
[edit forwarding-options]
user@router-pe2# set sampling input rate 1
user@router-pe2# set sampling input run-length 0
user@router-pe2# set sampling input max-packets-per-second 20000
```

7. Specify active and inactive flow periods, and the router (**2.2.2.2**) that sends out the monitored information:

```
[edit forwarding-options]
user@router-pe2# set sampling family inet output flow-active-timeout 60
user@router-pe2# set sampling family inet output flow-inactive-timeout 60
user@router-pe2# set sampling family inet output flow-server 2.2.2.2 port 2055
user@router-pe2# set sampling family inet output flow-server 2.2.2.2 local-dump
user@router-pe2# set sampling family inet output flow-server 2.2.2.2 version 500
```

8. Configure the autonomous system to establish a connection between BGP peers:

```
[edit routing-options]
user@router-pe2# set autonomous-system 200
```

9. Configure RSVP to support MPLS label-switched paths (LSPs) between the PE routers:

```
[edit protocols]
user@router-pe2# set rsvp interface all
user@router-pe2# set rsvp interface fxp0.0 disable
```

10. Configure an MPLS LSP from the PE2 router to the PE1 router:

```
[edit protocols]
user@router-pe2# set mpls label-switched-path R2toR1 from 20.20.20.2
user@router-pe2# set mpls label-switched-path R2toR1 to 20.20.20.1
```

- ```

user@router-pe2# set mpls interface all
user@router-pe2# set mpls interface fxp0.0 disable

```
11. Configure an internal BGP group for the PE routers. Include the **family inet-vpn unicast** statement to enable BGP to carry network layer reachability information (NLRI) parameters and for BGP peers to only carry unicast routes for forwarding:
 

```

[edit protocols]
user@router-pe2# set bgp group to_r1 type internal
user@router-pe2# set bgp group to_r1 local-address 20.20.20.2
user@router-pe2# set bgp group to_r1 neighbor 20.20.20.1 family inet-vpn unicast

```
  12. Configure OSPF as the interior gateway protocol (IGP) and to compute the MPLS LSPs:
 

```

[edit protocols]
user@router-pe2# set ospf traffic-engineering
user@router-pe2# set ospf area 0.0.0.0 interface all
user@router-pe2# set ospf area 0.0.0.0 interface fxp0.0 disable

```
  13. Create the extended community that is applied in the policy options configuration:
 

```

[edit policy-options]
user@router-pe2# set community vpna-comm members target:200:100

```
  14. Define the **vpna-export** routing policy that is applied in the **vrf-export** statement in the routing instance configuration. Also, apply the **vpna-comm** community from which routes are learned:
 

```

[edit policy-options]
user@router-pe2# set policy-statement vpna-export term one from protocol bgp
user@router-pe2# set policy-statement vpna-export term one from protocol direct
user@router-pe2# set policy-statement vpna-export term one then community add vpna-comm
user@router-pe2# set policy-statement vpna-export term one then accept
user@router-pe2# set policy-statement vpna-export term two then reject

```
  15. Define the **vpna-import** routing policy that is applied in the **vrf-import** statement in the routing instance configuration. Also, apply the **vpna-comm** community from which routes are learned:
 

```

[edit policy-options]
user@router-pe2# set policy-statement vpna-import term one from protocol bgp
user@router-pe2# set policy-statement vpna-import term one from community vpna-comm
user@router-pe2# set policy-statement vpna-import term one then accept
user@router-pe2# set policy-statement vpna-import term two then reject

```
  16. Configure a VRF routing instance so that routes received from the provider edge-provider edge (PE-PE) session can be imported into any of the instance's VRF secondary routing tables:
 

```

[edit routing-instances]
user@router-pe2# set vrf1 instance-type vrf
user@router-pe2# set vrf1 interface ge-3/1/2.0
user@router-pe2# set vrf1 route-distinguisher 10.255.19.12:1
user@router-pe2# set vrf1 vrf-import vpna-import
user@router-pe2# set vrf1 vrf-export vpna-export
user@router-pe2# set vrf1 protocols bgp group R3-R4 type external
user@router-pe2# set vrf1 protocols bgp group R3-R4 peer-as 65000
user@router-pe2# set vrf1 protocols bgp group R3-R4 as-override
user@router-pe2# set vrf1 protocols bgp group R3-R4 neighbor 10.10.10.1

```

**Results** Check the results of the configuration for the PE2 router:

```

user@router-pe2> show configuration
[...Output Truncated...]
}
interfaces {
 ge-3/1/0 {
 unit 0 {
 family inet {
 address 20.20.20.2/24;
 }
 family mpls;
 }
 }
 ge-3/1/2 {
 unit 0 {
 family inet {
 filter {
 input fw;
 output fw;
 }
 address 10.10.10.2/24;
 }
 }
 }
}
forwarding-options {
 sampling {
 traceoptions {
 file sampled world-readable;
 flag all;
 }
 input {
 rate 1;
 run-length 0;
 max-packets-per-second 20000;
 }
 family inet {
 output {
 flow-inactive-timeout 60;
 flow-active-timeout 60;
 flow-server 2.2.2.2 {
 port 2055;
 local-dump;
 version 500;
 }
 }
 }
 }
}
routing-options {
 [...Output Truncated...]
 autonomous-system 200;
}
protocols {
 rsvp {
 interface all;
 interface fxp0.0 {
 disable;
 }
 }
}

```

```
mpls {
 label-switched-path R2toR1 {
 from 20.20.20.2;
 to 20.20.20.1;
 }
 interface all;
 interface fxp0.0 {
 disable;
 }
}
bgp {
 group to_r1 {
 type internal;
 local-address 20.20.20.2;
 neighbor 20.20.20.1 {
 family inet-vpn {
 unicast;
 }
 }
 neighbor 40.40.40.1;
 }
}
ospf {
 traffic-engineering;
 area 0.0.0.0 {
 interface all;
 interface fxp0.0 {
 disable;
 }
 }
}
}
policy-options {
 policy-statement vpna-export {
 term one {
 from protocol [bgp direct];
 then {
 community add vpna-comm;
 accept;
 }
 }
 term two {
 then reject;
 }
 }
 policy-statement vpna-import {
 term one {
 from {
 protocol bgp;
 community vpna-comm;
 }
 then accept;
 }
 term two {
 then reject;
 }
 }
 community vpna-comm members target:200:100;
}
firewall {
 family inet {
```



```

filter fw {
 term 1 {
 from {
 protocol tcp;
 port bgp;
 }
 then accept;
 }
 term 2 {
 then {
 sample;
 accept;
 }
 }
}
}
}
routing-instances {
 vrf1 {
 instance-type vrf;
 interface ge-3/1/2.0;
 route-distinguisher 10.255.19.12:1;
 vrf-import vpna-import;
 vrf-export vpna-export;
 protocols {
 bgp {
 group R3-R4 {
 type external;
 peer-as 65000;
 as-override;
 neighbor 10.10.10.1;
 }
 }
 }
 }
}
}

```

### Configuring the CE2 Router

**Step-by-Step Procedure** In this step, you configure interfaces, routing options, protocols, and policy options for the CE2 router. To configure the CE2 router:

1. Configure one interface with two IP addresses. One address is for traffic to the PE2 router and the other address is to check that traffic is flowing from the CE1 router:

```

[edit interfaces]
user@router-ce2# set ge-0/1/2 unit 0 family inet address 10.10.10.24
user@router-ce2# set ge-0/1/2 unit 0 family inet address 4.4.4.4/16

```

2. Configure the autonomous system to establish a connection between BGP peers:

```

[edit routing-options]
user@router-ce1# set autonomous-system 65000

```

3. Configure BGP as the routing protocol between the CE and the PE routers:

```

[edit protocols]
user@router-ce2# set bgp group R3-R4 type external
user@router-ce2# set bgp group R3-R4 export l3vpn-policy
user@router-ce2# set bgp group R3-R4 peer-as 200

```

4. `user@router-ce2# set bgp group R3-R4 neighbor 10.10.10.2`
- Configure the policies that ensure that the CE routers exchange routing information. In this example, Router CE2 exchanges routing information with Router CE1:

`[edit policy-options]`

`user@router-ce2# set policy-statement l3vpn-policy term one from protocol direct`

`user@router-ce2# set policy-statement l3vpn-policy term one from route-filter 10.255.15.75/32 exact`

`user@router-ce2# set policy-statement l3vpn-policy term one then accept`

`user@router-ce2# set policy-statement l3vpn-policy term two from protocol direct`

`user@router-ce2# set policy-statement l3vpn-policy term two from route-filter 4.4.0.0/16 exact`

`user@router-ce2# set policy-statement l3vpn-policy term two then accept`

**Results** The output below shows the configuration of the CE2 router:

```
[edit]
user@router-ce2# show
[...Output Truncated...]
interfaces {
 ge-0/1/2 {
 unit 0 {
 family inet {
 address 10.10.10.1/24;
 address 4.4.4.4/16;
 }
 }
 }
}
routing-options {
 autonomous-system 65000;
}
protocols {
 bgp {
 group R3-R4 {
 type external;
 export l3vpn-policy;
 peer-as 200;
 neighbor 10.10.10.2;
 }
 }
}
policy-options {
 policy-statement l3vpn-policy {
 term one {
 from {
 protocol direct;
 route-filter 10.255.15.75/32 exact;
 }
 then accept;
 }
 term two {
 from {
 protocol direct;
 route-filter 4.4.0.0/16 exact;
 }
 then accept;
 }
 }
}
```

## Verification

After you have completed the configuration of the four routers, you can verify that traffic is flowing from the CE1 router to the CE2 router, and you can observe the sampled traffic from two locations. To confirm that the configuration is working properly, perform these tasks:

- [Verifying the Traffic Flow Between the CE Routers on page 156](#)
- [Verifying Sampled Traffic on page 156](#)
- [Cross Verifying Sampled Traffic on page 157](#)

### Verifying the Traffic Flow Between the CE Routers

---

**Purpose** Use the **ping** command to verify traffic between the CE routers.

**Action** From the CE1 router, issue the **ping** command to the CE2 router:

```
user@router-ce2> ping 4.4.4.4 source 2.2.2.2
PING 4.4.4.4 (4.4.4.4): 56 data bytes
64 bytes from 4.4.4.4: icmp_seq=0 ttl=64 time=0.861 ms
64 bytes from 4.4.4.4: icmp_seq=1 ttl=64 time=0.869 ms
64 bytes from 4.4.4.4: icmp_seq=2 ttl=64 time=0.786 ms
^C
--- 4.4.4.4 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.786/0.839/0.869/0.037 ms
```

**Meaning** The output from the **ping** command shows that the **ping** command was successful. Traffic is flowing between the CE routers.

### Verifying Sampled Traffic

---

**Purpose** You can observe the sampled traffic using the **show log sampled** command from the CLI or from the router shell using the **tail -f /var/log/sampled** command. In addition, you can collect the logs in a flowcollector. The same information appears in the output of both commands and in the flow collector. For information about using a flow collector, see “Sending cflowd Records to Flow Collector Interfaces” and “[Example: Flow Collector Interface Configuration](#)” on page 101.”

**Action** From the PE1 router, use the **show log sampled** command:

```
user@router-pe1> show log sampled
[...Output Truncated...]
Nov 16 23:24:19 Src addr: 2.2.2.2
Nov 16 23:24:19 Dst addr: 4.4.4.4
Nov 16 23:24:19 Nhop addr: 20.20.20.2
Nov 16 23:24:19 Input interface: 503 # SNMP index of the incoming interface on PE1
Nov 16 23:24:19 Output interface: 505 # SNMP index of the outgoing interface on
PE1
Nov 16 23:24:19 Pkts in flow: 5
Nov 16 23:24:19 Bytes in flow: 420
Nov 16 23:24:19 Start time of flow: 602411369
Nov 16 23:24:19 End time of flow: 602415369
Nov 16 23:24:19 Src port: 0
Nov 16 23:24:19 Dst port: 2048
Nov 16 23:24:19 TCP flags: 0x0
Nov 16 23:24:19 IP proto num: 1
Nov 16 23:24:19 TOS: 0x0
Nov 16 23:24:19 Src AS: 95000 # The autonomous system of CE1
Nov 16 23:24:19 Dst AS: 65000,,,,, # The autonomous system of CE2
Nov 16 23:24:19 Src netmask len: 8
Nov 16 23:24:19 Dst netmask len: 16
Nov 16 23:24:19 cflowd header:
Nov 16 23:24:19 Num-records: 1
Nov 16 23:24:19 Version: 500
Nov 16 23:24:19 Flow seq num: 13
Nov 16 23:24:19 Sys Uptime: 602450382 (msecs)
Nov 16 23:24:19 Time-since-epoch: 1258413859 (secs)
Nov 16 23:24:19 Engine id: 0
Nov 16 23:24:19 Engine type: 0
Nov 16 23:24:19 Sample interval: 1
[...Output Truncated...]
```

**Meaning** The output from the **show log sampled** command shows the correct SNMP index for the incoming and outgoing interfaces on the PE1 router. Also, the source and destination addresses for the autonomous systems for the two CE routers are correct.

### Cross Verifying Sampled Traffic

**Purpose** You can also double check that the sampled traffic is the correct traffic by using the **show interface interface-name fpc/pic/port.unit-number | match SNMP** command and the **show route route-name detail** command.

**Action** The following output is a cross check of the output in the [“Verifying Sampled Traffic” on page 156](#) task:

```
user@router-pe1> show interfaces ge-2/0/2.0 | match SNMP
Logical interface ge-2/0/2.0 (Index 76) (SNMP ifIndex 503)
Flags: SNMP-Traps 0x4000000 Encapsulation: ENET2

user@router-pe1> show route 4.4.4.4 detail

vrf1.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
4.4.0.0/16 (1 entry, 1 announced)
 *BGP Preference: 170/-101
 Route Distinguisher: 10.255.19.12:1
 Next hop type: Indirect
 Next-hop reference count: 6
 Source: 20.20.20.2
 Next hop type: Router, Next hop index: 659
 Next hop: 20.20.20.2 via ge-2/0/0.0 weight 0x1, selected
 Label operation: Push 299776
 Protocol next hop: 20.20.20.2
 Push 299776
 Indirect next hop: 8e6f780 1048574
 State: <Secondary Active Int Ext>
 Local AS: 200 Peer AS: 200
 Age: 3d 19:49:32 Metric2: 65535
 Task: BGP_200.20.20.20.2+179
 Announcement bits (3): 0-RT 1-BGP RT Background 2-KRT
 AS path: 65000 I
 AS path: Recorded
 Communities: target:200:100
 Import Accepted
 VPN Label: 299776
 Localpref: 100
 Router ID: 10.10.10.2
 Primary Routing Table bgp.13vpn.0
```

**Meaning** The output of the **show interfaces ge-2/0/2.0 | match SNMP** command shows that the SNMP ifIndex field has the same value (503) as the output for the **show log sampled** command in the [“Verifying Sampled Traffic” on page 156](#) task, indicating that the intended traffic is being sampled.

The output of the **show route 4.4.4.4 detail** command shows that the source address 4.4.4.4, the source mask (16), and the source AS (65000) have the same values as the output for the **show log sampled** command in the [“Verifying Sampled Traffic” on page 156](#) task, indicating that the intended traffic is being sampled.

**Related Documentation**

- [Configuring Traffic Sampling](#)
- [Flow Monitoring](#)

## PART 4

# Administration

- [Active Flow Monitoring Commands on page 161](#)
- [Dynamic Flow Capture Commands on page 197](#)
- [Flow Collection Commands on page 207](#)
- [Passive Flow Monitoring Commands on page 223](#)





## CHAPTER 9

# Active Flow Monitoring Commands

## show forwarding-options next-hop-group

|                                 |                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show forwarding-options next-hop-group</b><br><b>&lt;terse   brief   detail&gt;</b><br><b>&lt;group-name&gt;</b>                                                                                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.6.                                                                                                                                                                                       |
| <b>Description</b>              | Display current state of next-hop groups.                                                                                                                                                                                         |
| <b>Options</b>                  | <b>terse   brief   detail</b> —(Optional) Display the specified level of output.<br><br><b>group-name</b> —(Optional) Display a single next-hop group.                                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show forwarding-options port-mirroring on page 166</a></li> </ul>                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">show forwarding-options next-hop-group terse on page 164</a><br><a href="#">show forwarding-options next-hop-group brief on page 164</a><br><a href="#">show forwarding-options next-hop-group detail on page 164</a> |
| <b>Output Fields</b>            | <a href="#">Table 34 on page 162</a> lists the output fields for the <b>show forwarding-options next-hop-group</b> command. Output fields are listed in the approximate order in which they appear.                               |

**Table 34: show forwarding-options next-hop-group Output Fields**

| Field Name                            | Field Description                                            | Level of Output     |
|---------------------------------------|--------------------------------------------------------------|---------------------|
| <b>Next-hop-group</b>                 | Name of next-hop group.                                      | All levels          |
| <b>Type</b>                           | Next-hop group type, such as <b>inet</b> or <b>layer-2</b> . | All levels          |
| <b>State</b>                          | Next-hop group state, either <b>up</b> or <b>down</b> .      | All levels          |
| <b>Members Interfaces</b>             | Names of interfaces to which next-hop group members belong.  | <b>brief detail</b> |
| <b>Members Subgroup</b>               | Names of subgroups to which next-hop group members belong.   | <b>brief detail</b> |
| <b>Number of members configured</b>   | Number of next-hop group members configured.                 | <b>detail</b>       |
| <b>Number of members that are up</b>  | Number of next-hop group members that are up.                | <b>detail</b>       |
| <b>Number of subgroups configured</b> | Number of subgroups configured.                              | <b>detail</b>       |

Table 34: show forwarding-options next-hop-group Output Fields (*continued*)

| Field Name                      | Field Description                | Level of Output |
|---------------------------------|----------------------------------|-----------------|
| Number of subgroups that are up | Number of subgroups that are up. | detail          |

## Sample Output

show  
forwarding-options  
next-hop-group terse

```
user@host> show forwarding-options next-hop-group terse
Next-hop-group Type State
inet_nhg inet up
vpls_nhg layer-2 up
vpls_nhg_2 layer-2 down
```

show  
forwarding-options  
next-hop-group brief

```
user@host> show forwarding-options next-hop-group brief
Next-hop-group: inet_nhg
Type: inet State: up
Members Interfaces:
 ge-2/0/2.101 next-hop 101.2.0.2

Next-hop-group: vpls_nhg
Type: layer-2 State: up
Members Interfaces:
 ge-2/0/1.100
 ge-2/2/9.0
Members Subgroup: vpls_subg
Members Interfaces:
 ge-2/0/1.101
 ge-2/2/9.1

Next-hop-group: vpls_nhg_2
Type: layer-2 State: down
```

show  
forwarding-options  
next-hop-group detail

```
user@host> show forwarding-options next-hop-group detail
Next-hop-group: inet_nhg
Type: inet State: up
Number of members configured : 2
Number of members that are up : 1
Number of subgroups configured : 0
Number of subgroups that are up : 0
Members Interfaces: State
 ge-2/0/2.101 next-hop 101.2.0.2 up
 ge-2/2/8.2 next-hop 2.8.0.2 down

Next-hop-group: vpls_nhg
Type: layer-2 State: up
Number of members configured : 2
Number of members that are up : 2
Number of subgroups configured : 1
Number of subgroups that are up : 1
Members Interfaces: State
 ge-2/0/1.100 up
 ge-2/2/9.0 up
Members Subgroup: vpls_subg up
 Number of members configured : 2
 Number of members that are up : 2
Members Interfaces:
 ge-2/0/1.101 up
 ge-2/2/9.1 up

Next-hop-group: vpls_nhg_2
Number of members configured : 2
Number of members that are up : 0
Number of subgroups configured : 0
```

```
Number of subgroups that are up : 0
Type: layer-2 State: down
Members Interfaces: State
 ge-2/2/1.100 down
 ge-2/3/9.0 down
```

## show forwarding-options port-mirroring

|                                 |                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show forwarding-options port-mirroring</b><br><b>&lt;terse   detail&gt;</b><br><b>&lt;instance-name&gt;</b>                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.6.                                                                                                                                                         |
| <b>Description</b>              | Display current state of port-mirroring instances.                                                                                                                                                  |
| <b>Options</b>                  | <b>terse   detail</b> —(Optional) Display the specified level of output.<br><br><b>instance-name</b> —(Optional) Display a single port-mirroring instance.                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show forwarding-options next-hop-group on page 162</a></li> </ul>                                                                              |
| <b>List of Sample Output</b>    | <a href="#">show forwarding-options port-mirroring terse on page 167</a><br><a href="#">show forwarding-options port-mirroring detail on page 167</a>                                               |
| <b>Output Fields</b>            | <a href="#">Table 35 on page 166</a> lists the output fields for the <b>show forwarding-options port-mirroring</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 35: show forwarding-options port-mirroring Output Fields**

| Field Name            | Field Description                                   | Level of Output |
|-----------------------|-----------------------------------------------------|-----------------|
| Instance Name         | Name of port-mirroring instance.                    | All levels      |
| Instance Id           | Instance identification number.                     | All levels      |
| State                 | Instance state, either <b>up</b> or <b>down</b> .   | All levels      |
| Input parameters      |                                                     |                 |
| Rate                  | Rate (ratio of packets sampled).                    | <b>detail</b>   |
| Run-length            | Run length (number of consecutive packets sampled). | <b>detail</b>   |
| Maximum-packet-length | Maximum packet length.                              | <b>detail</b>   |
| Output parameters     |                                                     |                 |
| Family                | Protocol family.                                    | <b>detail</b>   |
| State                 | Instance state, either <b>up</b> or <b>down</b> .   | <b>detail</b>   |
| Destination           | Destination (next-hop group name).                  | <b>detail</b>   |

## Sample Output

show  
forwarding-options  
port-mirroring terse

```
user@host> show forwarding-options port-mirroring terse
Instance Name Instance Id State
&global_instance 1 up
inst1 2 up
```

show  
forwarding-options  
port-mirroring detail

```
user@host> show forwarding-options port-mirroring detail
Instance Name: &global_instance
Instance Id: 1 State: up
 Input parameters:
 Rate: 10
 Run-length: 4
 Maximum-packet-length: 0
 Output parameters:
 Family: inet State: up Destination: inet_nhg
 Family: vpls/bridge State: up Destination: vpls_nhg

Instance Name: inst1
Instance Id: 2 State: up
 Input parameters:
 Rate: 1
 Run-length: 0
 Maximum-packet-length: 200
 Output parameters:
 Family: inet State: up Destination: inet_nhg
 Family: vpls/bridge State: down Destination: vpls_nhg_2
```

## show services accounting aggregation

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show services accounting aggregation <i>aggregation-type</i> &lt;<i>aggregation-value</i>&gt; &lt;detail   extensive   terse&gt; &lt;limit <i>limit-value</i>&gt; &lt; name <i>service-name</i>&gt; &lt;order (bytes   packets)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Display information about the aggregated active flows being processed by the accounting service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b><i>aggregation-type</i> &lt;<i>aggregation-value</i>&gt;</b>—Display information for a particular aggregation type and optional value:</p> <ul style="list-style-type: none"> <li><b>as &lt;<i>source-as-value</i>   <i>destination-as-value</i>   <i>input-snmp-interface-index-value</i>   <i>output-snmp-interface-index-value</i>&gt;</b>—Aggregate by autonomous system (AS).</li> <li><b>destination-prefix &lt;<i>destination-prefix-value</i>   <i>destination-as-value</i>   <i>output-snmp-interface-index-value</i>&gt;</b>—Aggregate by destination prefix.</li> <li><b>protocol-port &lt;<i>protocol-value</i>   <i>source-port-value</i>   <i>destination-port-value</i>&gt;</b>—Aggregate by protocol and port.</li> <li><b>source-destination-prefix &lt;<i>source-prefix-value</i>   <i>destination-prefix-value</i>   <i>destination-as-value</i>   <i>source-as-value</i>   <i>input-snmp-interface-index-value</i>   <i>output-snmp-interface-index-value</i>&gt;</b>—Aggregate by source and destination prefix.</li> <li><b>source-prefix &lt;<i>source-prefix-value</i>   <i>source-as-value</i>   <i>input-snmp-interface-index-value</i>&gt;</b>—Aggregate by source prefix.</li> </ul> <p><b>detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>limit <i>limit-value</i></b>—(Optional) Limit the display output to this number of flows. The default is no limit.</p> <p><b>name <i>service-name</i></b>—(Optional) Display information about the aggregated flows for a particular service name.</p> <p><b>order (bytes   packets)</b>—(Optional) Display the flow with the ordering of the highest number, either by byte count or by packet count.</p> |
| <b>Additional Information</b>   | For information about aggregation configuration options, see the Junos Services Interfaces Configuration Release 12.3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">show services accounting aggregation protocol-port detail on page 170</a><br><a href="#">show services accounting aggregation source-destination-prefix on page 170</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |



[show services accounting aggregation source-destination- prefix order packet detail on page 170](#)

[show services accounting aggregation source-destination- prefix extensive limit on page 171](#)

[show services accounting aggregation source-destination-prefix name terse on page 171](#)

**Output Fields** [Table 36 on page 169](#) lists the output fields for the **show services accounting aggregation** command. Output fields are listed in the approximate order in which they appear.

**Table 36: show services accounting aggregation Output Fields**

| Field Name                   | Field Description                                                                                                                                                                                                                                 |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                         |
| Local interface index        | Index corresponding to the service accounting interface.                                                                                                                                                                                          |
| Service name                 | Name of a service that was configured at the [edit forwarding-options accounting] hierarchy level. The default display, (default sampling), indicates the service was configured at the [edit forwarding-options sampling-level] hierarchy level. |
| Protocol                     | Protocol identifier and number.                                                                                                                                                                                                                   |
| Source Port                  | Source port identifier and number.                                                                                                                                                                                                                |
| Destination Port             | Destination port identifier and number.                                                                                                                                                                                                           |
| Source-AS                    | Source autonomous system (AS) number.                                                                                                                                                                                                             |
| Destination-AS               | Destination AS number.                                                                                                                                                                                                                            |
| Source Prefix                | Source prefix.                                                                                                                                                                                                                                    |
| Destination Prefix           | Destination prefix.                                                                                                                                                                                                                               |
| Source address               | Source address.                                                                                                                                                                                                                                   |
| Source prefix length         | Source prefix length.                                                                                                                                                                                                                             |
| Destination address          | Destination address.                                                                                                                                                                                                                              |
| Destination prefix length    | Destination prefix length.                                                                                                                                                                                                                        |
| Input SNMP interface index   | SNMP index of the interface the packet came in on.                                                                                                                                                                                                |
| Output SNMP interface index  | SNMP index of the interface the packet went out on.                                                                                                                                                                                               |

Table 36: show services accounting aggregation Output Fields (*continued*)

| Field Name   | Field Description                                               |
|--------------|-----------------------------------------------------------------|
| Start time   | Actual time when the packet in this aggregation was first seen. |
| End time     | Actual time when the packet in this aggregation was last seen.  |
| Flow count   | Number of flows in the aggregation.                             |
| Packet count | Number of packets in the aggregation.                           |
| Byte count   | Number of bytes in the aggregation.                             |

## Sample Output

show services  
accounting  
aggregation  
protocol-port detail

```
user@host> show service accounting aggregation protocol-port detail
Service Accounting interface: mo-2/0/0, Local interface index: 468
Service name: (default sampling)
 Protocol: 6, Source port: 20, Destination port: 20
 Start time: 442349, End time: 6425714
 Flow count: 194, Packet count: 4294964388, Byte count: 4294781184

 Protocol: 0, Source port: 0, Destination port: 0
 Start time: 442349, End time: 6425749
 Flow count: 204, Packet count: 4294964324, Byte count: 4294777088

 Protocol: 17, Source port: 123, Destination port: 123
 Start time: 442364, End time: 6425784
 Flow count: 186, Packet count: 4294964152, Byte count: 4294766080
```

show services  
accounting  
aggregation  
source-destination-prefix

```
user@host> show service accounting aggregation source-destination-prefix
Service Accounting interface: rsp0, Local interface index: 171
Service name: (default sampling)
Interface state: Accounting
Source Destination Input Output Flow Packet
Byte prefix interface interface count count
prefix count
11.1.0.0/20 40.0.0.0/24 ge-5/0/1.0 ge-5/0/0.0 256 491761
31472704
11.1.0.0/20 40.0.1.36/32 ge-5/0/1.0 ge-5/0/0.0 1
1926 123264
11.1.0.0/20 40.0.1.59/32 ge-5/0/1.0 ge-5/0/0.0 1
1926 123264
11.1.0.0/20 40.0.3.63/32 ge-5/0/1.0 ge-5/0/0.0 1
1925 123200
11.1.0.0/20 40.0.3.32/32 ge-5/0/1.0 ge-5/0/0.0 1
1925
```

show services  
accounting  
aggregation  
source-destination-

```
user@host> show service accounting aggregation source-destination-prefix order packet detail
name t2 input-snmp-interface-index 538
Service Accounting interface: mo-2/0/0, Local interface index: 468
Service name: t2
Source Destination Input SNMP Output SNMP Flow Packet Byte
```

prefix order packet  
detail

| Prefix      | Prefix       | Index | Index | Count | Count | Count |
|-------------|--------------|-------|-------|-------|-------|-------|
| 11.1.1.2/20 | 30.0.167.1/0 | 538   | 432   | 1     | 60    | 46483 |
| 11.1.1.2/20 | 30.0.168.1/0 | 538   | 432   | 1     | 60    | 5191  |
| 11.1.1.2/20 | 30.0.154.1/0 | 538   | 432   | 2     | 60    | 45504 |
| 11.1.1.2/20 | 30.0.76.1/0  | 538   | 432   | 1     | 60    | 42177 |
| 11.1.1.2/20 | 30.0.149.1/0 | 538   | 432   | 1     | 60    | 49184 |
| 11.1.1.2/20 | 30.0.113.1/0 | 538   | 432   | 2     | 60    | 48757 |

show services  
accounting  
aggregation  
source-destination-  
prefix extensive limit

user@host> show service accounting aggregation source-destination-prefix name t2 extensive limit 3

Service Accounting interface: mo-2/0/0, Local interface index: 542  
Service name: t2

Source address: 11.1.1.2, Source prefix length: 20  
Destination address: 44.200.176.1, Destination prefix length: 0  
Input SNMP interface index: 24, Output SNMP interface index: 26  
Source-AS: 69, Destination-AS: 69  
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003  
Flow count: 0, Packet count: 6, Byte count: 5340

Source address: 11.1.1.2, Source prefix length: 20  
Destination address: 45.243.160.1, Destination prefix length: 0  
Input SNMP interface index: 24, Output SNMP interface index: 26  
Source-AS: 69, Destination-AS: 69  
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003  
Flow count: 0, Packet count: 6, Byte count: 5490

Source address: 11.1.1.2, Source prefix length: 20  
Destination address: 45.162.160.1, Destination prefix length: 0  
Input SNMP interface index: 24, Output SNMP interface index: 26  
Source-AS: 69, Destination-AS: 69  
Start time: Fri Feb 21 14:16:57 2003, End time: Fri Feb 21 14:22:50 2003  
Flow count: 0, Packet count: 6, Byte count: 4079

show services  
accounting  
aggregation  
source-destination-prefix  
name terse

user@host> show service accounting aggregation source-destination-prefix name T3 terse

Service Accounting interface: rsp0, Local interface index: 171

Service name: T3

Interface state: Accounting

| Source      | Destination  | Input      | Output     | Flow  | Packet |
|-------------|--------------|------------|------------|-------|--------|
| Byte        | prefix       | interface  | interface  | count | count  |
| count       |              |            |            |       |        |
| 11.1.0.0/20 | 50.0.0.0/24  | ge-5/0/1.0 | ge-5/0/0.0 | 256   | 639822 |
| 40948608    |              |            |            |       |        |
| 11.1.0.0/20 | 50.0.2.67/32 | ge-5/0/1.0 | ge-5/0/0.0 | 1     |        |
| 2485        | 159040       |            |            |       |        |
| 11.1.0.0/20 | 50.0.2.92/32 | ge-5/0/1.0 | ge-5/0/0.0 | 1     |        |
| 2485        |              |            |            |       |        |

## show services accounting aggregation template

|                                 |                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show services accounting aggregation template</b><br><b>&lt;template-name <i>template-name</i>&gt;</b>                                                                                                  |
| <b>Release Information</b>      | Command introduced in Junos OS Release 8.3.                                                                                                                                                                |
| <b>Description</b>              | Display information for flow aggregation version 9 templates.                                                                                                                                              |
| <b>Options</b>                  | <b>&lt;template-name <i>template-name</i>&gt;</b> —(Optional) Display information for the specified template only.                                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show services accounting aggregation template on page 172</a>                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 37 on page 172</a> lists the output fields for the <b>show services accounting aggregation template</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 37: show services accounting aggregation template Output Fields**

| Field Name                    | Field Description               |
|-------------------------------|---------------------------------|
| <b>MPLS Label 1</b>           | Position of first MPLS label.   |
| <b>MPLS Label 2</b>           | Position of second MPLS label.  |
| <b>MPLS Label 3</b>           | Position of third MPLS label.   |
| <b>MPLS Top Level Address</b> | Outer top label FEC IP address. |
| <b>Packet Count</b>           | Number of packets sent.         |

## Sample Output

### show services accounting aggregation template

```

user@host> show services accounting aggregation template template-name mpls
MPLS label 1: 299808, MPLS label 2: 0, MPLS label 3: 0
Source address: 11.1.1.2, Destination address: 10.255.15.22, Top Label Address:
22.15.255.10
Source port: 0, Destination port: 0
Protocol: 61, TOS: 0, TCP flags: 0
Source mask: 24, Destination mask: 32
Input SNMP interface index: 503, Output SNMP interface index: 505
Start time: 40780, End time: 157330
Packet count: 3949198, Byte count: 181663062

```

## show services accounting errors

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show services accounting errors</code><br><code>&lt;inline-jflow   name (*   all   service-name)&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Display active flow error statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>none</b>—Display error statistics for all services accounting instances.</p> <p><b>inline-jflow fpc-slot slot-number</b>—(Optional) Display error statistics for inline jflow.</p> <p><b>name (*   all   service-name)</b>—(Optional) Display active flow error statistics. Use a wildcard character, specify all services, or provide a specific service name.</p>                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <p><a href="#">show services accounting errors (Monitoring PIC interface) on page 174</a></p> <p><a href="#">show services accounting errors (Service PIC interface) on page 175</a></p> <p><a href="#">show services accounting errors inline-jflow fpc-slot slot-number (when only IPv6 is configured) on page 175</a></p> <p><a href="#">show services accounting errors inline-jflow fpc-slot slot-number (when both IPv4 and IPv6 are configured) on page 175</a></p> <p><a href="#">show services accounting errors inline-jflow (MX80 Router when both IPv4 and IPv6 are configured) on page 175</a></p> |
| <b>Output Fields</b>            | Table 38 on page 173 lists the output fields for the <b>show services accounting errors</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                    |

**Table 38: show services accounting errors Output Fields**

| Field                        | Field Description                                                                                                                                                                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                                               |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                                   |
| FPC slot                     | Slot number of the FPC for which the flow information is displayed. (Available only when the <b>inline-jflow fpc-slot slot-number</b> option is used.)                                                                                                                  |
| Service name                 | Name of a service that was configured at the <b>[edit forwarding-options accounting]</b> hierarchy level. The default display, <b>(default sampling)</b> , indicates the service was configured at the <b>[edit forwarding-options sampling-level]</b> hierarchy level. |
| Error Information            |                                                                                                                                                                                                                                                                         |
| Packets dropped (no memory)  | Number of packets dropped because of memory shortage.                                                                                                                                                                                                                   |

Table 38: show services accounting errors Output Fields (*continued*)

| Field                                     | Field Description                                                                                                                                                                             |
|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Packets dropped (not IP)</b>           | Number of non-IP packets dropped.                                                                                                                                                             |
| <b>Packets dropped (not IPv4)</b>         | Number of packets dropped because they failed the IPv4 version check.                                                                                                                         |
| <b>Packets dropped (header too small)</b> | Number of packets dropped because the packet length or IP header length was too small.                                                                                                        |
| <b>Memory allocation failures</b>         | Number of flow record memory allocation failures. A small number reflects failures to replenish the free list. A large number indicates the monitoring station is almost out of memory space. |
| <b>Memory free failures</b>               | Number of flow record memory free failures.                                                                                                                                                   |
| <b>Memory free list failures</b>          | Number of flow records received from the free list that failed. Memory is nearly exhausted, or too many new flows greater than 128 KB are being created per second.                           |
| <b>Memory overload</b>                    | Whether the memory has been overloaded. The response can be <b>Yes</b> or <b>No</b> .                                                                                                         |
| <b>PPS overload</b>                       | Whether the PIC is receiving more packets per second than the configured threshold. The response can be <b>Yes</b> or <b>No</b> .                                                             |
| <b>BPS overload</b>                       | Whether the PIC is receiving more bits per second than the configured threshold. The response can be <b>Yes</b> or <b>No</b> .                                                                |
| <b>Flow Creation Failures</b>             | Number of times flow creation failed.                                                                                                                                                         |
| <b>Route Record Lookup Failures</b>       | Number of times the route record lookup failed.                                                                                                                                               |
| <b>AS Lookup Failures</b>                 | Number of times autonomous system lookup failed.                                                                                                                                              |
| <b>Export Packet Failures</b>             | Number of times packet export failed.                                                                                                                                                         |

## Sample Output

**show services  
accounting errors**

```
user@host> show services accounting errors
Service Accounting interface: mo-1/1/0, Local interface index: 15
Service name: (default sampling)
```

**(Monitoring PIC interface)**

```
Error information
Packets dropped (no memory): 0, Packets dropped (not IP): 0
Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
Memory allocation failures: 0, Memory free failures: 0
Memory free list failures: 0
Memory overload: No, PPS overload: No, BPS overload: No
```

**Sample Output****show services  
accounting errors  
(Service PIC interface)**

```
user@host> show services accounting errors
Service Accounting interface: sp-0/1/0
Service name: (default sampling)
Error information
Service sets dropped: 0, Active timeout failures: 0
Export packet failures: 0, Flow creation failures: 0
Memory overload: No

Service Accounting interface: sp-1/0/0
Service name: (default sampling)
Error information
Service sets dropped: 0, Active timeout failures: 0
Export packet failures: 0, Flow creation failures: 0
Memory overload: No
```

**show services  
accounting errors  
inline-jflow fpc-slot  
slot-number (when  
only IPv6 is  
configured)**

```
user@host> show services accounting errors inline-jflow fpc-slot 5
Error information
FPC Slot: 5
Flow Creation Failures: 0
Route Record Lookup Failures: 0, AS Lookup Failures: 0
Export Packet Failures: 0
Memory Overload: No, Memory Alloc Fail Count: 0
```

**show services  
accounting errors  
inline-jflow fpc-slot  
slot-number (when  
both IPv4 and IPv6 are  
configured)**

```
user@host> show services accounting errors inline-jflow fpc-slot 5
Error information
FPC Slot: 5
Flow Creation Failures: 0
Route Record Lookup Failures: 0, AS Lookup Failures: 0
Export Packet Failures: 0
Memory Overload: No, Memory Alloc Fail Count: 0

IPv4:
IPv4 Flow Creation Failures: 0
IPv4 Route Record Lookup Failures: 0, IPv4 AS Lookup Failures: 0
IPv4 Export Packet Failures: 0

IPv6:
IPv6 Flow Creation Failures: 0
IPv6 Route Record Lookup Failures: 0, IPv6 AS Lookup Failures: 0
IPv6 Export Packet Failures: 0
```

**show services  
accounting errors  
inline-jflow (MX80  
Router when both IPv4**

```
user@host> show services accounting errors inline-jflow
Error information
TFEB Slot: 0
Flow Creation Failures: 0
Route Record Lookup Failures: 0, AS Lookup Failures: 0
```

and IPv6 are  
configured)

Export Packet Failures: 0  
Memory Overload: No

IPv4:

IPv4 Flow Creation Failures: 0  
IPv4 Route Record Lookup Failures: 0, IPv4 AS Lookup Failures: 0  
IPv4 Export Packet Failures: 0

IPv6:

IPv6 Flow Creation Failures: 0  
IPv6 Route Record Lookup Failures: 0, IPv6 AS Lookup Failures: 0  
IPv6 Export Packet Failures: 0



## show services accounting flow

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show services accounting flow</code><br><code>&lt;inline-jflow   logical-system   name (*   all   service-name)&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Junos OS Release 10.0 added the capability to display output from multiple sampling instances.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Display active flow statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>none</b>—Display active flow statistics for all service instances.</p> <p><b>logical-system (all   logical-system)</b>—(Optional) Display active flow statistics for the specified logical system or all logical systems on the device.</p> <p><b>inline-jflow (fpc-slot slot-number)</b>—(Optional) Display inline flow statistics for the specified FPC.</p> <p><b>name (*   all   service-name)</b>—(Optional) Display services accounting active flow statistics. Use a wildcard character, specify all services, or provide a specific service name.</p>                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <a href="#">show services accounting flow (flow aggregation v5/v8 configuration) on page 178</a><br><a href="#">show services accounting flow (flow aggregation v9 configuration) on page 178</a><br><a href="#">show services accounting flow name on page 179</a><br><a href="#">show services accounting flow name all on page 179</a><br><a href="#">show services accounting flow (multiple sampling instances) on page 179</a><br><a href="#">show services accounting flow inline-jflow fpc-slot slot-number (for IPv4 flow) on page 180</a><br><a href="#">show services accounting flow inline-jflow fpc-slot slot-number (with IPv4 and IPv6 Configuration) on page 180</a><br><a href="#">show services accounting flow inline-jflow (MX80 Router with IPv4 and IPv6 Configuration) on page 180</a> |
| <b>Output Fields</b>            | <a href="#">Table 39 on page 177</a> lists the output fields for the <b>show services accounting flow</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

Table 39: show services accounting flow Output Fields

| Output Field                 | Output Field Description                                                                                                                                                                                                                                                |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                                               |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                                   |
| Service name                 | Name of a service that was configured at the <b>[edit forwarding-options accounting]</b> hierarchy level. The default display, <b>(default sampling)</b> , indicates the service was configured at the <b>[edit forwarding-options sampling-level]</b> hierarchy level. |

Table 39: show services accounting flow Output Fields (*continued*)

| Output Field                       | Output Field Description                                                                                                                                     |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Flow Information</b>            |                                                                                                                                                              |
| <b>FPC Slot</b>                    | Slot number of the FPC for which the flow information is displayed. (Available only when the <code>inline-jflow fpc-slot slot-number</code> option is used.) |
| <b>Flow packets</b>                | Number of packets received by an operational PIC.                                                                                                            |
| <b>Flow bytes</b>                  | Number of bytes received by an operational PIC.                                                                                                              |
| <b>Flow packets 10-second rate</b> | Number of packets per second handled by the PIC and displayed as a 10-second average.                                                                        |
| <b>Flow bytes 10-second rate</b>   | Number of bytes per second handled by the PIC and displayed as a 10-second average.                                                                          |
| <b>Active flows</b>                | Number of currently active flows tracked by the PIC.                                                                                                         |
| <b>Total flows</b>                 | Total number of flows received by an operational PIC.                                                                                                        |
| <b>Flows exported</b>              | Total number of flows exported by an operational PIC.                                                                                                        |
| <b>Flows packets exported</b>      | Total number of cflowd packets exported by an operational PIC.                                                                                               |
| <b>Flows inactive timed out</b>    | Total number of flows that are exported because of inactivity.                                                                                               |
| <b>Flows active timed out</b>      | Total number of long-lived flows that are exported because of an active timeout.                                                                             |

## Sample Output

**show services  
accounting flow (flow  
aggregation v5/v8  
configuration)**

```
user@host> show services accounting flow
Service Accounting interface: rsp0, Local interface index: 171
Service name: (default sampling)
Interface state: Accounting
Flow information
 Flow packets: 87168293, Flow bytes: 5578770752
 Flow packets 10-second rate: 45762, Flow bytes 10-second rate: 2928962
 Active flows: 1000, Total flows: 2000
 Flows exported: 19960, Flows packets exported: 582
 Flows inactive timed out: 1000, Flows active timed out: 29000
```

**show services  
accounting flow (flow**

```
user@host> show services accounting flow
Flow information
 Service Accounting interface: sp-7/1/0, Local interface index: 149
```

**aggregation v9  
configuration)**

```

Flow packets: 0, Flow bytes: 0
Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
Active flows: 0, Total flows: 0
Flows exported: 0, Flows packets exported: 1
Flows inactive timed out: 0, Flows active timed out: 0

```

**show services  
accounting flow name**

```

user@host> show services accounting flow count2
Service Accounting interface: mo-1/1/0, Local interface index: 15
Service name: count2
Flow information
 Flow packets: 0, Flow bytes: 0
 Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
 Active flows: 0, Total flows: 0
 Flows exported: 0, Flows packets exported: 0
 Flows inactive timed out: 0, Flows active timed out: 0

```

**show services  
accounting flow name  
all**

```

user@host> show services accounting flow name all
Service Accounting interface: rsp0, Local interface index: 171
Service name: T2
Interface state: Accounting
Flow information
 Flow packets: 37609891, Flow bytes: 2407033024
 Flow packets 10-second rate: 45762, Flow bytes 10-second rate: 2928953
 Active flows: 1000, Total flows: 1000
 Flows exported: 6705, Flows packets exported: 198
 Flows inactive timed out: 0, Flows active timed out: 13000

Service Accounting interface: rsp0, Local interface index: 171
Service name: T3
Interface state: Accounting
Flow information
 Flow packets: 37750807, Flow bytes: 2416051712
 Flow packets 10-second rate: 45762, Flow bytes 10-second rate: 2928940
 Active flows: 1000, Total flows: 1000
 Flows exported: 13437, Flows packets exported: 378
 Flows inactive timed out: 0, Flows active timed out: 13000

Service Accounting interface: rsp0, Local interface index: 171
Service name: T4
Interface state: Accounting
Flow information
 Flow packets: 0, Flow bytes: 0
 Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
 Active flows: 0, Total flows: 0
 Flows exported: 0, Flows packets exported: 0
 Flows inactive timed out: 0, Flows active timed out: 0

Service Accounting interface: rsp0, Local interface index: 171
Service name: count1
Interface state: Accounting
Flow information
 Flow packets: 0, Flow bytes: 0
 Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
 Active flows: 0, Total flows: 0
 Flows exported: 0, Flows packets exported: 0
 Flows inactive timed out: 0, Flows active timed out: 0

```

**show services**

```

user@host> show services accounting flow
Flow information

```

**accounting flow  
(multiple sampling  
instances)**

```
Service Accounting interface: sp-2/0/0, Local interface index: 215
Flow packets: 9867, Flow bytes: 631488
Flow packets 10-second rate: 0, Flow bytes 10-second rate: 628
Active flows: 2, Total flows: 10
Flows exported: 4028, Flows packets exported: 6150
Flows inactive timed out: 8, Flows active timed out: 4026
```

```
Service Accounting interface: sp-2/1/0, Local interface index: 223
Flow packets: 0, Flow bytes: 0
Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
Active flows: 0, Total flows: 0
Flows exported: 0, Flows packets exported: 1
Flows inactive timed out: 0, Flows active timed out: 0
```

**show services  
accounting flow  
inline-jflow fpc-slot  
slot-number (for IPv4  
flow)**

```
user@host> show services accounting flow inline-jflow fpc-slot 5
Flow information
 FPC Slot: 5
 Flow Packets: 0, Flow Bytes: 0
 Active Flows: 0, Total Flows: 0
 Flows Exported: 0, Flow Packets Exported: 0
 Flows Inactive Timed Out: 0, Flows Active Timed Out: 0
```

**show services  
accounting flow  
inline-jflow fpc-slot  
slot-number (with IPv4  
and IPv6  
Configuration)**

```
user@host> show services accounting flow inline-jflow fpc-slot 5
Flow information
 FPC Slot: 5
 Flow Packets: 0, Flow Bytes: 0
 Active Flows: 0, Total Flows: 0
 Flows Exported: 0, Flow Packets Exported: 0
 Flows Inactive Timed Out: 0, Flows Active Timed Out: 0

 IPv4 Flows:
 IPv4 Flow Packets: 0, IPv4 Flow Bytes: 0
 IPv4 Active Flows: 0, IPv4 Total Flows: 0
 IPv4 Flows Exported: 0, IPv4 Flow Packets exported: 0
 IPv4 Flows Inactive Timed Out: 0, IPv4 Flows Active Timed Out: 0

 IPv6 Flows:
 IPv6 Flow Packets: 0, IPv6 Flow Bytes: 0
 IPv6 Active Flows: 0, IPv6 Total Flows: 0
 IPv6 Flows Exported: 0, IPv6 Flow Packets Exported: 0
 IPv6 Flows Inactive Timed Out: 0, IPv6 Flows Active Timed Out: 0
```

**show services  
accounting flow  
inline-jflow (MX80)**

```
user@host> show services accounting flow inline-jflow
Flow information
 TFEB Slot: 0
 Flow Packets: 0, Flow Bytes: 0
```

**Router with IPv4 and  
IPv6 Configuration)**

Active Flows: 0, Total Flows: 0  
Flows Exported: 0, Flow Packets Exported: 0  
Flows Inactive Timed Out: 0, Flows Active Timed Out: 0

**IPv4 Flows:**

IPv4 Flow Packets: 0, IPv4 Flow Bytes: 0  
IPv4 Active Flows: 0, IPv4 Total Flows: 0  
IPv4 Flows Exported: 0, IPv4 Flow Packets exported: 0  
IPv4 Flows Inactive Timed Out: 0, IPv4 Flows Active Timed Out: 0

**IPv6 Flows:**

IPv6 Flow Packets: 0, IPv6 Flow Bytes: 0  
IPv6 Active Flows: 0, IPv6 Total Flows: 0  
IPv6 Flows Exported: 0, IPv6 Flow Packets Exported: 0  
IPv6 Flows Inactive Timed Out: 0, IPv6 Flows Active Timed Out: 0

## show services accounting flow-detail

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                 | <pre>show services accounting flow-detail &lt;detail   extensive   terse&gt; &lt;filters&gt; &lt;limit limit-value&gt; &lt;name (*   all   service-name)&gt; &lt;order (bytes   packets)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>    | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>            | Display information about the flows being processed by the accounting service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                | <p><b>detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>filters</b>—(Optional) Filter the display output of the currently active flow records. The following filters query actively changing data structures and result in different results for multiple invocations:</p> <ul style="list-style-type: none"> <li>• <b>destination-as</b>—Display flow records filtered by destination autonomous system information.</li> <li>• <b>destination-port</b>—Display flow records filtered by destination port information.</li> <li>• <b>destination-prefix</b>—Display flow records filtered by destination prefix information.</li> <li>• <b>input-snmp-interface-index</b>—Display flow records filtered by SNMP input interface index information.</li> <li>• <b>output-snmp-interface-index</b>—Display flow records filtered by SNMP output interface index information.</li> <li>• <b>proto</b>—Display flow records filtered by protocol type.</li> <li>• <b>source-as</b>—Display flow records filtered by source autonomous system information.</li> <li>• <b>source-port</b>—Display flow records filtered by source port information.</li> <li>• <b>source-prefix</b>—Display flow records filtered by source prefix information.</li> <li>• <b>tos</b>—Display flow records filtered by type of service classification.</li> </ul> <p><b>limit limit-value</b>—(Optional) Limit the display output to the specified number of flows. The default is no limit.</p> <p><b>name (*   all   service-name)</b>—(Optional) Display information about the flows being processed. Use a wildcard character, specify all services, or provide a specific services name.</p> <p><b>order (bytes   packets)</b>—(Optional) Display the flow with the ordering of the highest number, either by byte count or by packet count.</p> |
| <b>Additional Information</b> | When no PIC is active, or when no route record has been downloaded from the PIC, this command reports no flows, even though packets are being sampled. This command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

displays information about two concurrent sessions only. If a third session is attempted, the command pauses with no output until one of the previous sessions is completed.

**Required Privilege Level** view

**List of Sample Output** [show services accounting flow-detail on page 185](#)  
[show services accounting flow-detail limit on page 185](#)  
[show services accounting flow-detail name extensive on page 185](#)  
[show services accounting flow-detail limit order bytes on page 185](#)  
[show services accounting flow-detail source-port on page 186](#)

**Output Fields** [Table 40 on page 183](#) lists the output fields for the **show services accounting flow-detail** command. Output fields are listed in the approximate order in which they appear.

**Table 40: show services accounting flow-detail Output Fields**

| Field Name                          | Field Description                                                                                                                                                                                                                                                 | Output Level     |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Service Accounting interface</b> | Name of the service accounting interface.                                                                                                                                                                                                                         | All levels       |
| <b>Service name</b>                 | Name of a service that was configured at the <b>[edit forwarding-options accounting]</b> hierarchy level. The default display, <b>(default sampling)</b> , indicates the service was configured at the <b>[edit forwarding-options sampling]</b> hierarchy level. | All levels       |
| <b>Local interface index</b>        | Index counter of the local interface.                                                                                                                                                                                                                             | All levels       |
| <b>TOS</b>                          | Type-of-service value from the IP header.                                                                                                                                                                                                                         | <b>extensive</b> |
| <b>Input SNMP interface index</b>   | SNMP index of the interface on which the packet came in.                                                                                                                                                                                                          | <b>extensive</b> |
| <b>Output SNMP interface index</b>  | SNMP index of the interface on which the packet went out.                                                                                                                                                                                                         | <b>extensive</b> |
| <b>Source-AS</b>                    | Source AS number.                                                                                                                                                                                                                                                 | <b>extensive</b> |
| <b>Destination-AS</b>               | Destination AS number.                                                                                                                                                                                                                                            | <b>extensive</b> |
| <b>Protocol</b>                     | Name of the protocol used for the packet flow from the corresponding source address.                                                                                                                                                                              | All levels       |
| <b>Input interface</b>              | Interface on which the packets were received.                                                                                                                                                                                                                     | All levels       |
| <b>Output interface</b>             | Interface on which the packets were transmitted.                                                                                                                                                                                                                  | All levels       |
| <b>TCP flags</b>                    | Number of TCP header flags detected in the flow.                                                                                                                                                                                                                  | <b>extensive</b> |
| <b>Source address</b>               | Address where the flow originated.                                                                                                                                                                                                                                | All levels       |
| <b>Source port</b>                  | Name of the source port.                                                                                                                                                                                                                                          | All levels       |

Table 40: show services accounting flow-detail Output Fields (*continued*)

| Field Name                           | Field Description                                                                     | Output Level     |
|--------------------------------------|---------------------------------------------------------------------------------------|------------------|
| Source prefix length                 | Source prefix length.                                                                 | extensive        |
| Destination address                  | Address where the flow is sent.                                                       | All levels       |
| Destination prefix length            | Destination prefix length.                                                            | extensive        |
| Destination port                     | Name of the destination port.                                                         | All levels       |
| Start time                           | Actual time when the packet in this aggregation was first seen.                       | detail extensive |
| End time                             | Actual time when the packet in this aggregation was last seen.                        | detail extensive |
| Packet count                         | Number of packets in the aggregation.                                                 | All levels       |
| Byte count                           | Number of bytes in the aggregation.                                                   | All levels       |
| Time since last active timeout       | Amount of time elapsed since the last active timeout, in the format <i>hh:mm:ss</i> . | None specified   |
| Packet count for last active timeout | Number of packets in the aggregation since the last active timeout.                   | None specified   |
| Byte count for last active timeout   | Number of bytes in the aggregation since the last active timeout.                     | None specified   |



## Sample Output

### show services accounting flow-detail

In this sample, the output is split into three sections, with ellipses (...) indicating where the sections are continued.

```
user@host> show services accounting flow-detail
Service Accounting interface: rsp0, Local interface index: 171
Service name: (default sampling)
Interface state: Accounting
Protocol Input Source Source Output
 interface address port interface...
tcp(6) ge-5/0/1.0 11.1.1.2 0 ge-5/0/0.0
tcp(6) ge-5/0/1.0 11.1.1.2 0 ge-5/0/0.0

Destination Destination Packet Byte Time since last
address port count count active timeout...
40.0.3.149 0 2660 170240 00:00:58
40.0.3.138 0 2660 170240 00:00:58

Packet count for Byte count for
last active timeout last active timeout
2805 179520
2805 179520
```

### show services accounting flow-detail limit

In this sample, the output is split into three sections, with ellipses (...) indicating where the sections are continued.

```
user@host> show services accounting flow-detail limit 1
Service Accounting interface: rsp0, Local interface index: 171
Service name: (default sampling)
Interface state: Accounting
Protocol Input Source Source Output
 interface address port interface...
tcp(6) ge-5/0/1.0 11.1.1.2 0 ge-5/0/0.0

Destination Destination Packet Byte Time since last
address port count count active timeout...
40.0.3.149 0 2158 138112 00:00:47

Packet count for Byte count for
last active timeout last active timeout
2827 180928
```

### show services accounting flow-detail name extensive

```
user@host> show services accounting flow-detail name cf-2 extensive
Service Accounting interface: mo-0/2/0, Local interface index: 145
Service name: cf-2
 TOS: 0, Protocol: udp(17), TCP flags: 0
 Source address: 10.10.10.1, Source prefix length: 0, Destination address:
20.20.20.20,
 Destination prefix length: 0, Source port: 1173, Destination port: 69
 Input SNMP interface index: 65, Output SNMP interface index: 0, Source-AS: 0,
 Destination-AS: 0
 Start time: 62425, End time: 635265, Packet count: 165845, Byte count: 9453165
```

### show services accounting flow-detail

The output of the following command is displayed over 141 columns, not the standard 80 columns. In this sample, the output is split into three sections, with ellipses (...)

**limit order bytes**

indicating where the sections are continued.

```
user@host> show services accounting flow-detail limit 5 order bytes
```

```
Service Accounting interface: mo-2/0/0, Local interface index: 356
```

```
Service name: (default sampling)
```

| Protocol | Input interface | Source address | Source port | Output interface... |
|----------|-----------------|----------------|-------------|---------------------|
| icmp(1)  | ge-2/3/0.0      | 11.1.1.2       | 0           | .local.             |
| icmp(1)  | ge-2/3/0.0      | 11.1.1.2       | 0           | .local.             |
| icmp(1)  | ge-2/3/0.0      | 11.1.1.2       | 0           | .local.             |
| icmp(1)  | ge-2/3/0.0      | 11.1.1.2       | 0           | .local.             |
| icmp(1)  | ge-2/3/0.0      | 11.1.1.2       | 0           | .local.             |

| Destination address | Destination port | Packet count | Byte count | Time since last active timeout... |
|---------------------|------------------|--------------|------------|-----------------------------------|
| 51.88.128.2         | 0                | 16           | 12148      | Not applicable                    |
| 52.78.144.2         | 0                | 16           | 15229      | Not applicable                    |
| 51.147.192.2        | 0                | 16           | 13296      | Not applicable                    |
| 51.136.16.2         | 0                | 16           | 13924      | Not applicable                    |
| 50.214.48.2         | 0                | 16           | 13428      | Not applicable                    |

| Packet count for last active timeout | Byte count for last active timeout |
|--------------------------------------|------------------------------------|
| Not applicable                       | Not applicable                     |
| Not applicable                       | Not applicable                     |
| Not applicable                       | Not applicable                     |
| Not applicable                       | Not applicable                     |
| Not applicable                       | Not applicable                     |

**show services accounting flow-detail source-port**

```
user@host> show services accounting flow-detail name cf-2 detail source-port 1173
```

```
Service Accounting interface: mo-0/2/0, Local interface index: 145
```

```
Service name: cf-2
```

```
Protocol: udp(17), Source address: 10.10.10.1, Source port: 1173, Destination address:
```

```
20.20.20.20, Destination port: 69
```

```
Start time: 62425, End time: 811115, Packet count: 142438, Byte count: 8118966
```

## show services accounting memory

|                                 |                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services accounting memory                                                                                                                                               |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                               |
| <b>Description</b>              | Display memory and flow record statistics.                                                                                                                                    |
| <b>Options</b>                  | This command has no options.                                                                                                                                                  |
| <b>Required Privilege Level</b> | view                                                                                                                                                                          |
| <b>List of Sample Output</b>    | <a href="#">show services accounting memory (Monitoring PIC interface) on page 187</a><br><a href="#">show services accounting memory (Service PIC interface) on page 188</a> |
| <b>Output Fields</b>            | Table 41 on page 187 lists the output fields for the <b>show services accounting memory</b> command. Output fields are listed in the approximate order in which they appear.  |

Table 41: show services accounting memory Output Fields

| Output Field                 | Output Field Description                                                                                                                                  |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                 |
| Memory Utilization           |                                                                                                                                                           |
| Local interface index        | Index counter of the local interface.                                                                                                                     |
| Allocation count             | Number of flow records allocated.                                                                                                                         |
| Free count                   | Number of flow records freed.                                                                                                                             |
| Maximum allocated            | Maximum number of flow records allocated since the monitoring station booted. This number represents the peak number of flow records allocated at a time. |
| Allocations per second       | Flow records allocated per second during the last statistics interval on the PIC.                                                                         |
| Frees per second             | Flow records freed per second during the last statistics interval on the PIC.                                                                             |
| Total memory used            | Total amount of memory currently used (in bytes).                                                                                                         |
| Total memory free            | Total amount of memory currently free (in bytes).                                                                                                         |

## Sample Output

```

show services accounting memory
user@host> show services accounting memory
Service Accounting interface: mo-2/0/0, Local interface index: 468
Memory utilization

```

(Monitoring PIC  
interface)

Allocation count: 437340, Free count: 433699, Maximum allocated: 6782  
Allocations per second: 3366, Frees per second: 6412  
Total memory used (in bytes): 133460320,  
Total memory free (in bytes): 133918352

## Sample Output

show services  
accounting memory  
(Service PIC interface)

```
user@host> show services accounting memory
Service Accounting interface: sp-0/1/0
 Memory utilization
 Allocation count: 1000, Free count: 0
 Allocations per second: 0, Frees per second: 0
 Total memory used (in bytes): 218158272
 Total memory free (in bytes): 587147696

Service Accounting interface: sp-1/0/0
 Memory utilization
 Allocation count: 1000, Free count: 0
 Allocations per second: 0, Frees per second: 0
 Total memory used (in bytes): 218157592
 Total memory free (in bytes): 587148376
```

## show services accounting packet-size-distribution

|                                 |                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services accounting packet-size-distribution<br><name (*   all   <i>service-name</i> )>                                                                                                                                                                                                 |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                              |
| <b>Description</b>              | Display a packet size distribution histogram.                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>none</b>—Display a packet size distribution histogram of all accounting services.</p> <p><b>name (*   all   <i>service-name</i>)</b>—(Optional) Display a packet size distribution histogram. Use a wildcard character, specify all services, or provide a specific services name.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>    | <a href="#">show services accounting packet-size-distribution name on page 189</a>                                                                                                                                                                                                           |
| <b>Output Fields</b>            | <a href="#">Table 42 on page 189</a> lists the output fields for the <b>show services accounting packet-size-distribution</b> command. Output fields are listed in the approximate order in which they appear.                                                                               |

Table 42: show services accounting packet-size-distribution Output Fields

| Field Name                   | Field Description                                                                                                                                                                                                                                 |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                         |
| Service name                 | Name of a service that was configured at the [edit-forwarding-options accounting] hierarchy level. The default display, (default sampling), indicates the service was configured at the [edit-forwarding-options sampling-level] hierarchy level. |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                             |
| Range start                  | Smallest packet length (in bytes) to count.                                                                                                                                                                                                       |
| Range end                    | Largest packet length (in bytes) to count.                                                                                                                                                                                                        |
| Number of packets            | Count of packets detected in the size between Range start and Range end.                                                                                                                                                                          |
| Percentage packets           | Percentage of the total number of packets that are in this size range.                                                                                                                                                                            |

## Sample Output

```

show services accounting
user@host> show services accounting packet-size-distribution name test3
Service Accounting interface: mo-0/2/0, Local interface index: 163
Service name: test3

```

| packet-size-distribution<br>name | Range start | Range end | Number of packets | Percentage packets |
|----------------------------------|-------------|-----------|-------------------|--------------------|
|                                  | 32          | 64        | 2924              | 100                |

## show services accounting status

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services accounting status<br><inline-jflow   name (*   all   <i>service-name</i> )>                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Display available Physical Interface Cards (PICs) for accounting services.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>none</b>—Display available PICs for all accounting services.</p> <p><b>inline-jflow fpc-slot <i>slot-number</i></b>—(Optional) Display inline flow accounting status for the specified FPC.</p> <p><b>name (*   all   <i>service-name</i>)</b>—(Optional) Display available PICs. Use a wildcard character, specify all services, or provide a specific services name.</p>                                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>    | <p><a href="#">show services accounting status name (Monitoring PIC interface) on page 192</a></p> <p><a href="#">show services accounting status name (Service PIC interface) on page 192</a></p> <p><a href="#">show services accounting status inline-jflow fpc-slot <i>slot-number</i> (when both IPv4 and IPv6 are configured) on page 193</a></p> <p><a href="#">show services accounting status inline-jflow (MX80 Router when both IPv4 and IPv6 are configured) on page 193</a></p> |
| <b>Output Fields</b>            | Table 43 on page 191 lists the output fields for the <b>show services accounting status</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                 |

Table 43: show services accounting status Output Fields

| Field                        | Field Description                                                                                                                                                                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                                               |
| Service name                 | Name of a service that was configured at the <b>[edit-forwarding-options accounting]</b> hierarchy level. The default display, <b>(default sampling)</b> , indicates the service was configured at the <b>[edit-forwarding-options sampling-level]</b> hierarchy level. |
| FPC Slot                     | Slot number of the FPC for which the flow information is displayed. (Available only when the <b>inline-jflow fpc-slot <i>slot-number</i></b> option is used.)                                                                                                           |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                                   |

Table 43: show services accounting status Output Fields (*continued*)

| Field                        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface state              | Accounting state of the passive monitoring interface. <ul style="list-style-type: none"> <li>• <b>Accounting</b>—PIC is actively accounting.</li> <li>• <b>Disabled</b>—PIC has been disabled from the CLI.</li> <li>• <b>Not accounting</b>—PIC is up but not accounting. This can happen while the PIC is coming online, or when the PIC is up but has no logical unit configured under the physical interface.</li> <li>• <b>Unknown</b></li> </ul> |
| Group index                  | Integer that represents the monitoring group of which the PIC is a member. <b>Group index</b> is a mapping from the group name to an index. It is not related to the number of monitoring groups.                                                                                                                                                                                                                                                      |
| Export interval (in seconds) | Configured export interval for cflowd records, in seconds.                                                                                                                                                                                                                                                                                                                                                                                             |
| Export format                | Configured export format .                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Protocol                     | Protocol the PIC is configured to monitor .                                                                                                                                                                                                                                                                                                                                                                                                            |
| Engine type                  | Configured engine type that is inserted in output cflowd packets.                                                                                                                                                                                                                                                                                                                                                                                      |
| Engine ID                    | Configured engine ID that is inserted in output cflowd packets.                                                                                                                                                                                                                                                                                                                                                                                        |
| Route Record Count           | Number of routes recorded.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| AS Record Count              | Number of autonomous systems recorded.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Route Records Set            | Status of route recording; whether routes are recorded or not.                                                                                                                                                                                                                                                                                                                                                                                         |
| Configuration Set            | Status of monitoring configuration; whether monitoring configuration is set or not.                                                                                                                                                                                                                                                                                                                                                                    |

## Sample Output

**show services  
accounting status  
name (Monitoring PIC  
interface)**

```
user@host> show services accounting status name count1
Service Accounting interface: mo-2/0/0, Local interface index: 468
Service name: count1
Interface state: Accounting
 Group index: 0
 Export interval (in seconds): 60, Export format: cflowd v8
 Protocol: IPv4, Engine type: 55, Engine ID: 5
```

## Sample Output

**show services  
accounting status**

```
user@host> show services accounting status name
Service Accounting interface: sp-0/1/0
Interface state: Accounting
```



name (Service PIC  
interface)

Export format: 9, Route record count: 0  
IFL to SNMP index count: 7, AS count: 0  
Configuration set: Yes, Route record set: No, IFL SNMP map set: Yes

Service Accounting interface: sp-1/0/0

Interface state: Accounting

Export format: 9, Route record count: 33  
IFL to SNMP index count: 7, AS count: 1  
Configuration set: Yes, Route record set: Yes, IFL SNMP map set: Yes

show services  
accounting status  
inline-jflow fpc-slot  
slot-number (when  
both IPv4 and IPv6 are  
configured)

```
user@host> show services accounting status inline-jflow fpc-slot 5
FPC Slot: 5
 IPv4 export format: Version-IPFIX, IPv6 export format: Version-IPFIX
 VPLS export format: Not set
 IPv4 Route Record Count: 5, IPv6 Route Record Count: 7
 Route Record Count: 12, AS Record Count: 1
 Route-Records Set: Yes, Config Set: Yes
```

show services  
accounting status  
inline-jflow (MX80  
Router when both IPv4  
and IPv6 are  
configured)

```
user@host> show services accounting status inline-jflow

Status information
 TFEB Slot: 0
 Export format: IP-FIX
 IPv4 Route Record Count: 6, IPv6 Route Record Count: 8
 Route Record Count: 14, AS Record Count: 1
 Route-Records Set: Yes, Config Set: Yes
```

## show services accounting usage

|                                 |                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services accounting usage<br><name <i>service-name</i> >                                                                                                               |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                             |
| <b>Description</b>              | Display the CPU usage of PIC used for active flow monitoring.                                                                                                               |
| <b>Options</b>                  | <p><b>none</b>—Display CPU usage for all service names.</p> <p><b>name <i>service-name</i></b>—(Optional) Display CPU usage for the specified service name.</p>             |
| <b>Additional Information</b>   | When no route record has been downloaded from the PIC, this command reports no flows, even though packets are being sampled.                                                |
| <b>Required Privilege Level</b> | view                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <a href="#">show services accounting usage (Monitoring PIC interface) on page 195</a><br><a href="#">show services accounting usage (Service PIC interface) on page 195</a> |
| <b>Output Fields</b>            | Table 44 on page 194 lists the output fields for the <b>show services accounting usage</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 44: show services accounting usage Output Fields**

| Output Field                 | Output Field Description                                                                                                                                                                                                                                   |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Accounting interface | Name of the service accounting interface.                                                                                                                                                                                                                  |
| Service name                 | Name of a service that was configured at the [edit-forwarding-options accounting] hierarchy level. The default display, ( <b>default sampling</b> ), indicates the service was configured at the [edit-forwarding-options sampling-level] hierarchy level. |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                      |
| Uptime                       | Time that the PIC has been operational (in milliseconds).                                                                                                                                                                                                  |
| Interrupt time               | Total time that the PIC has spent processing packets since the last PIC reset (in microseconds).                                                                                                                                                           |
| Load (5 second)              | CPU load on the PIC, averaged more than 5 seconds. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time.                                                                                               |
| Load (1 minute)              | CPU load on the PIC, averaged more than 1 minute. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time.                                                                                                |

## Sample Output

**show services  
accounting usage  
(Monitoring PIC  
interface)**

```
user@host> show services accounting usage
Service Accounting interface: mo-1/1/0, Local interface index: 15
Service name: (default sampling)
CPU utilization
 Uptime: 600413856 milliseconds, Interrupt time: 2403 microseconds
 Load (5 second): 43%, Load (1 minute): 24%
```

## Sample Output

**show services  
accounting usage  
(Service PIC interface)**

```
user@host> show services accounting usage
Service Accounting interface: sp-0/1/0
Service name: (default sampling)
CPU utilization
 Uptime: 7853940 milliseconds, Interrupt time: 0 microseconds
 Load (5 second): 2%, Load (1 minute): 0%
```

```
Service Accounting interface: sp-0/1/0
Service name: (default sampling)
CPU utilization
 Uptime: 331160 milliseconds, Interrupt time: 0 microseconds
 Load (5 second): 2%, Load (1 minute): 0%
```



## CHAPTER 10

# Dynamic Flow Capture Commands

## clear services dynamic-flow-capture

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear services dynamic-flow-capture capture-group <i>group-name</i></code><br><code>&lt;criteria-identifier <i>identifier</i>&gt;</code><br><code>&lt;destination-identifier <i>identifier</i>&gt;</code><br><code>&lt;force&gt;</code><br><code>&lt;static&gt;</code>                                                                                                                                |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | (M320 routers and T Series routers only) Clear dynamic flow capture information for specified capture group.                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <code>capture-group <i>group-name</i></code> —Capture-group identifier.<br><br><code>criteria-identifier <i>identifier</i></code> —(Optional) Criteria identifier.<br><br><code>destination-identifier <i>identifier</i></code> —(Optional) Content destination identifier.<br><br><code>force</code> —(Optional) Force clearing of criteria.<br><br><code>static</code> —(Optional) Clear static criteria. |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>    | <a href="#">clear services dynamic-flow-capture on page 198</a>                                                                                                                                                                                                                                                                                                                                             |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                       |

## Sample Output

|                                                      |                                                                                     |
|------------------------------------------------------|-------------------------------------------------------------------------------------|
| <code>clear services<br/>dynamic-flow-capture</code> | <code>user@host&gt; clear services dynamic-flow-capture capture-group flow-a</code> |
|------------------------------------------------------|-------------------------------------------------------------------------------------|

## show services dynamic-flow-capture content-destination

|                                 |                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services dynamic-flow-capture content-destination capture-group <i>group-name</i><br>destination-identifier <i>identifier</i><br><terse>                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.4.                                                                                                                                                                                |
| <b>Description</b>              | (M320 routers and T Series routers only) Display information about the content destination that receives packets from the dynamic flow capture (DFC) interface.                                                            |
| <b>Options</b>                  | <p><b>capture-group <i>group-name</i></b>—Capture-group identifier.</p> <p><b>destination-identifier <i>identifier</i></b>—Content destination identifier.</p> <p><b>terse</b>—(Optional) Display summary information.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show services dynamic-flow-capture content-destination on page 200</a>                                                                                                                                         |
| <b>Output Fields</b>            | <a href="#">Table 45 on page 199</a> lists the output fields for the <b>show services dynamic-flow-capture content-destination</b> command. Output fields are listed in the approximate order in which they appear.        |

**Table 45: show services dynamic-flow-capture content-destination Output Fields**

| Output Field                    | Output Field Description                                   | Level of Output |
|---------------------------------|------------------------------------------------------------|-----------------|
| <b>Capture group</b>            | Name of the capture group.                                 | to be provided  |
| <b>Content destination</b>      | Name of the content destination.                           | to be provided  |
| <b>Criteria</b>                 | Number of criteria specified.                              | to be provided  |
| <b>Bandwidth</b>                | Bandwidth used by the matched traffic.                     | to be provided  |
| <b>Matched packets</b>          | Number of matched packets sent to the content destination. | to be provided  |
| <b>Matched bytes</b>            | Number of matched bytes sent to the content destination.   | to be provided  |
| <b>Congestion notifications</b> | Number of notification messages sent.                      | to be provided  |

## Sample Output

```
show services user@host> show services dynamic-flow-capture content-destination capture-group g1
dynamic-flow-capture destination-identifier cd1 terse
content-destination Capture group: g1, Content destination: cd1, Criteria: 0, Bandwidth: 0, Matched
 packets: 0, Matched bytes: 0, Congestion notifications: 0
```



## show services dynamic-flow-capture control-source

|                                 |                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show services dynamic-flow-capture control-source capture-group <i>group-name</i> control-source <i>identifier</i> &lt;detail   terse&gt;</code>                                                                                             |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.4.                                                                                                                                                                                                        |
| <b>Description</b>              | (M320 routers and T Series routers only) Display information about the control source that makes dynamic flow capture requests to the dynamic flow capture interface.                                                                              |
| <b>Options</b>                  | <p><code>capture-group <i>group-name</i></code>—Capture group identifier.</p> <p><code>control-source <i>identifier</i></code>—Control source identifier.</p> <p><code>detail   terse</code>—(Optional) Display the specified level of output.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">show services dynamic-flow-capture control-source on page 202</a><br><a href="#">show services dynamic-flow-capture control-source detail on page 202</a>                                                                              |
| <b>Output Fields</b>            | Table 46 on page 201 lists the output fields for the <code>show services dynamic-flow-capture control-source</code> command. Output fields are listed in the approximate order in which they appear.                                               |

**Table 46: show services dynamic-flow-capture control-source Output Fields**

| Output Field                        | Output Field Description                                                                                                 |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Capture group                       | Name of the capture group.                                                                                               |
| Control source                      | Name of the control source.                                                                                              |
| Criteria added, Criteria add failed | Number of criteria added or added and failed.                                                                            |
| Active criteria                     | Number of active criteria.                                                                                               |
| Static criteria, Dynamic criteria   | Number of static or dynamic criteria.                                                                                    |
| Control protocol requests           | Total number of control protocol requests.                                                                               |
| Requests                            | Number of <b>Add</b> , <b>Delete</b> , <b>List</b> , <b>Refresh</b> , and <b>No-op</b> control protocol requests.        |
| Failed                              | Number of <b>Add</b> , <b>Delete</b> , <b>List</b> , <b>Refresh</b> , and <b>No-op</b> failed control protocol requests. |
| Add request rate                    | Rate of add requests.                                                                                                    |

Table 46: show services dynamic-flow-capture control-source Output Fields (*continued*)

| Output Field                  | Output Field Description                                                                                                                                                                                                 |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add request peak rate         | Peak rate of add requests.                                                                                                                                                                                               |
| Bandwidth across all criteria | Bandwidth used by all the requests.                                                                                                                                                                                      |
| Total notifications           | Total number of notifications sent and the number of notifications by category: <b>Restart</b> , <b>Rollover</b> , <b>Timeout</b> , <b>Congestion</b> , <b>Congestion delete</b> , and <b>Dups</b> (duplicates) dropped. |
| Criteria deleted              | Total number of criteria deleted and the number of deleted criteria by category: <b>Timeout idle</b> , <b>Timeout total</b> , <b>Packets</b> , and <b>Bytes</b> .                                                        |
| Sequence number               | Sequence number.                                                                                                                                                                                                         |

## Sample Output

### show services dynamic-flow-capture control-source

```
user@host> show services dynamic-flow-capture control-source source-identifier cs0_cg0
capture-group cg_0
Capture group: cg_0, Control source: cs0_cg0
Criteria added: 28, Criteria add failed: 0, Active criteria: 0, Control protocol
requests: 28, Add request rate: 0,
Add request peak rate: 1, Bandwidth across all criteria: 0, Total notifications:
1, Criteria deleted: 28, Sequence number: 0
```

### show services dynamic-flow-capture control-source detail

```
user@host> show services dynamic-flow-capture control-source source-identifier cs0_cg0
capture-group cg_0 detail
Capture group: cg_0, Control source: cs0_cg0
Criteria added: 28, Criteria add failed: 0
Active criteria: 0
Static criteria: 0, Dynamic criteria: 0
Control protocol requests: 28
```

|          | Add | Delete | List | Refresh | No-op |
|----------|-----|--------|------|---------|-------|
| Requests | 28  | 0      | 0    | 0       | 0     |
| Failed   | 0   | 0      | 0    | 0       | 0     |

```

Add request rate: 0
Add request peak rate: 1
Bandwidth across all criteria: 0
Total notifications: 1
Restart: 1, Rollover: 0, No-op: 0, Timeout: 0, Congestion: 0, Congestion
delete: 0, Dups dropped: 0
Criteria deleted: 28
Timeout idle: 0, Timeout total: 0, Packets: 0, Bytes: 0
Sequence number: 0
```

## show services dynamic-flow-capture statistics

|                                 |                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services dynamic-flow-capture statistics capture-group <i>group-name</i>                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.4.                                                                                                                                                                |
| <b>Description</b>              | (M320 routers and T Series routers only) Display statistics information about the capture group specified for dynamic flow capture.                                                                        |
| <b>Options</b>                  | capture-group <i>group-name</i> —Capture group identifier.                                                                                                                                                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show services dynamic-flow-capture statistics on page 205</a>                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 47 on page 203</a> lists the output fields for the <b>show services dynamic-flow-capture statistics</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 47: show services dynamic-flow-capture statistics Output Fields**

| Output Field           | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Input                  | <p>Incoming dynamic flow capture packet statistics:</p> <ul style="list-style-type: none"> <li>• <b>Control protocol packets</b>—Number of control protocol packets received.</li> <li>• <b>Captured data packets</b>—Number of data packets captured.</li> <li>• <b>Control IRI packets</b>—Number of control IRI packets received.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Control protocol drops | <p>Control protocol packets dropped for the following reasons:</p> <ul style="list-style-type: none"> <li>• <b>Not IP packets</b>—Dropped packets were not IP packets.</li> <li>• <b>Not UDP packets</b>—Dropped packets were not User Datagram Protocol (UDP) packets.</li> <li>• <b>Invalid destination address</b>—Dropped packets had invalid destination addresses.</li> <li>• <b>No memory</b>—Packets dropped because of insufficient memory.</li> <li>• <b>Unauthorized control source</b>—Packets dropped because the control source was not authenticated.</li> <li>• <b>Bad request</b>—Packets dropped because the request was invalid.</li> <li>• <b>Unknown control source</b>—Packets dropped because the control source was not known.</li> <li>• <b>Not DTCP</b>—Dropped packets did not adhere to the control protocol format.</li> <li>• <b>Bad command line</b>—Packets dropped because of a version mismatch.</li> <li>• <b>Bandwidth exceeded</b>—Packets dropped because the bandwidth was exceeded.</li> <li>• <b>Drop rate due to exceeded bandwidth</b>—Rate of traffic dropped because the bandwidth was exceeded.</li> <li>• <b>Other</b>—Packets dropped for other reasons or undetermined causes.</li> </ul> |

Table 47: show services dynamic-flow-capture statistics Output Fields (*continued*)

| Output Field           | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Input drops</b>     | <p>Incoming dynamic flow capture packets dropped for the following reasons:</p> <ul style="list-style-type: none"> <li>• <b>Unknown packets</b>—Packets dropped because the packet type was not recognized.</li> <li>• <b>Captured data not IPv4</b>—Packets dropped because they were not IPv4 packets.</li> <li>• <b>Captured data too small</b>—Packets dropped because they were smaller than the size reported in their headers.</li> <li>• <b>Captured data drops</b>—Data packets dropped because of undetermined causes.</li> <li>• <b>Captured data not matched</b>—Packets dropped because they did not match filter criteria.</li> <li>• <b>Bandwidth exceeded</b>—Packets dropped because the bandwidth was exceeded.</li> <li>• <b>Drop rate due to exceeded bandwidth</b>—Rate of traffic dropped because the bandwidth was exceeded.</li> </ul> |
| <b>Output</b>          | <p>Outgoing dynamic flow capture packet statistics:</p> <ul style="list-style-type: none"> <li>• <b>Control protocol packets</b>—Number of control protocol packets sent.</li> <li>• <b>Captured data packets</b>—Number of captured data packets sent.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Output drops</b>    | <p>Outgoing packets dropped:</p> <ul style="list-style-type: none"> <li>• <b>Control protocol drops</b>—Number of control protocol packets dropped.</li> <li>• <b>Captured data drops</b>—Number of captured data packets dropped.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Flow Statistics</b> | <p>DFC flow statistics:</p> <ul style="list-style-type: none"> <li>• <b>Active flow cache entries</b></li> <li>• <b>Active flow cache usage percentage</b></li> <li>• <b>Flow cache entries allocated</b></li> <li>• <b>Number of control sources</b></li> <li>• <b>Number of content destinations</b></li> <li>• <b>Number of criteria</b></li> <li>• <b>Maximum criteria matching one flow</b></li> <li>• <b>Cached flows purged for memory</b></li> <li>• <b>Maximum filters matching one packet</b></li> </ul>                                                                                                                                                                                                                                                                                                                                             |

## Sample Output

`show services  
dynamic-flow-capture  
statistics`

`user@host> show services dynamic-flow-capture statistics capture-group gl`

Input:

Control protocol packets: 643, Captured data packets: 69977, Control IRI packets: 337

Control protocol drops:

Not IP packets: 0, Not UDP packets: 3, Invalid destination address: 0, No memory: 0, Unauthorized control source: 0,

Bad request: 0, Unknown control source: 0, Not DTCP: 0, Bad command line: 0, Bandwidth exceeded: 0,

Drop rate due to exceeded bandwidth: 0, Other: 0

Input drops:

Unknown packets: 0, Captured data not IPv4: 0, Captured data too small: 0, Captured data drops: 0, Captured data not matched: 0,

Bandwidth exceeded: 0, Drop rate due to exceeded bandwidth: 0

Output:

Control protocol packets: 644, Captured data packets: 1119624

Output drops:

Control protocol drops: 0, Captured data drops: 0

Flow Statistics:

Active flow cache entries: 40, Active flow cache usage percentage: 0, Flow cache entries allocated: 40,

Number of control sources: 4, Number of content destinations: 64, Number of criteria: 640,

Maximum criteria matching one flow: 16, Cached flows purged for memory: 0, Maximum filters matching one packet: 16



## CHAPTER 11

# Flow Collection Commands

## clear services flow-collector statistics

---

|                                 |                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear services flow-collector statistics (all   interface <i>interface-name</i> )                                                                                                                                 |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                   |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Clear statistics for one flow collector interface or for all flow collector interfaces.                                                                  |
| <b>Options</b>                  | <b>all</b> —Clear statistics for all configured flow collector interfaces.<br><br><b>interface <i>interface-name</i></b> —Clear statistics for the specified flow collector interface ( <i>cp-fpc/pic/port</i> ). |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <a href="#">clear services flow-collector statistics on page 208</a>                                                                                                                                              |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                             |

### Sample Output

|                                                               |                                                                                                                                                                                           |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>clear services<br/>flow-collector<br/>statistics</code> | <pre>user@host&gt; clear services flow-collector statistics interface cp-5/0/0 Flow collector interface: cp-5/0/0 Interface state: Collecting flows Statistics cleared successfully</pre> |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



## request services flow-collector change-destination primary interface

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | request services flow-collector change-destination primary interface <i>cp-fpc/pic/port</i><br><clear-files><br><clear-logs><br><immediately   gracefully>                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Switch to the primary File Transfer Protocol (FTP) server that is configured as a flow collector.                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>none</b>—Switch to the primary FTP server.</p> <p><b>cp-fpc/pic/port</b>—Specify the flow collector interface name for the primary destination.</p> <p><b>clear-files</b>—(Optional) Request clearing of existing data files in the FTP wait queue when the switch takes place.</p> <p><b>clear-logs</b>—(Optional) Request clearing of existing logs when the switch takes place.</p> <p><b>immediately   gracefully</b>—(Optional) Specify whether you want the switch to take place immediately, or to affect only newly created files.</p> |
| <b>Required Privilege Level</b> | maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>    | <a href="#">request services flow-collector change-destination primary interface on page 209</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

### Sample Output

|                                                                                         |                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>request services<br/>flow-collector<br/>change-destination<br/>primary interface</b> | <pre>user@host&gt; request services flow-collector change-destination primary interface cp-6/0/0 Flow collector interface: cp-6/0/0 Interface state: Collecting flows Destination change successful</pre> |
|-----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## request services flow-collector change-destination secondary interface

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>request services flow-collector change-destination secondary interface <i>cp-fpc/pic/port</i></code><br><code>&lt;clear-files&gt;</code><br><code>&lt;clear-logs&gt;</code><br><code>&lt;immediately   gracefully&gt;</code>                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Switch to the secondary File Transfer Protocol (FTP) server that is configured as a flow collector.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><b>none</b>—Switch to the secondary FTP server.</p> <p><b><i>cp-fpc/pic/port</i></b>—Specify the flow collector interface name (<b><i>cp-fpc/pic/port</i></b>) for the secondary destination.</p> <p><b>clear-files</b>—(Optional) Request clearing of existing data files in the FTP wait queue when the switch takes place.</p> <p><b>clear-logs</b>—(Optional) Request clearing of existing logs when the switch takes place.</p> <p><b>immediately   gracefully</b>—(Optional) Specify whether you want the switch to take place immediately, or to affect only newly created files.</p> |
| <b>Required Privilege Level</b> | maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>    | <a href="#">request services flow-collector change-destination secondary interface on page 210</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

### Sample Output

|                                                                                                 |                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>request services<br/>flow-collector<br/>change-destination<br/>secondary interface</code> | <pre>user@host&gt; request services flow-collector change-destination secondary interface cp-6/0/0 Flow collector interface: cp-6/0/0 Interface state: Collecting flows Destination change successful</pre> |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## request services flow-collector test-file-transfer

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>request services flow-collector test-file-transfer <i>filename</i> interface (all   <i>cp-fpc/pic/port</i>) (channel-zero   channel-one) (primary   secondary)</code>                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | (M40e, M160, and M320 routers, PTX Series, and T Series routers only) Transfer a test file to the primary or secondary File Transfer Protocol (FTP) server that is configured as a flow collector. This command verifies that the output side of the flow collector interface is operating properly.                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b><i>filename</i></b>—Name of the test file to transfer.</p> <p><b>interface all   <i>cp-fpc/pic/port</i></b>—Transfer a test file of flows from all configured flow collector interfaces or from only the specified interface.</p> <p><b>channel-zero   channel-one</b>—Transfer a file from export channel 0 (unit 0) or channel 1 (unit 1) of the PIC.</p> <p><b>primary   secondary</b>—Transfer a file to the primary or secondary server configured as a flow collector.</p> |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>List of Sample Output</b>    | <a href="#">request services flow-collector test-file-transfer on page 211</a>                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                                  |

### Sample Output

```

request services flow-collector test-file-transfer
user@router> request services flow-collector test-file-transfer test_file interface cp-7/1/0
channel-one primary

Flow collector interface: cp-7/1/0
Interface state: Collecting flows
Response: Test file transfer successfully scheduled

```

## show services flow-collector file interface

|                                 |                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services flow-collector file interface (all   cp-fpc/pic/port)<br><detail   extensive   terse>                                                                                                                                  |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                      |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display information about flow collector files.                                                                                                                             |
| <b>Options</b>                  | <p><b>all   cp-fpc/pic/port</b>—Display file information for all configured flow collector interfaces or for the specified interface.</p> <p><b>detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> |
| <b>Additional Information</b>   | No entries are displayed for files that have been successfully transferred.                                                                                                                                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <a href="#">show services flow-collector file interface extensive on page 213</a>                                                                                                                                                    |
| <b>Output Fields</b>            | <a href="#">Table 48 on page 212</a> lists the output fields for the <b>show services flow-collector file interface</b> command. Output fields are listed in the approximate order in which they appear.                             |

**Table 48: show services flow-collector file interface Output Fields**

| Output Field      | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Level of Output  |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Filename</b>   | Name of the file created on the flow collector interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All levels       |
| <b>Flows</b>      | Total number of collector flows for which records are present in the file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | none specified   |
| <b>Throughput</b> | Throughput statistics: <ul style="list-style-type: none"> <li>• <b>Flow records</b>—Number of flow records in the file.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of flow records per second.</li> <li>• <b>peak per second</b>—Peak number of flow records per second.</li> </ul> </li> <li>• <b>Uncompressed bytes</b>—Total file size before compression.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of uncompressed bytes per second.</li> <li>• <b>peak per second</b>—Peak number of uncompressed bytes per second.</li> </ul> </li> <li>• <b>Compressed bytes</b>—Total file size after compression.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of compressed bytes per second.</li> <li>• <b>peak per second</b>—Peak number of compressed bytes per second.</li> </ul> </li> </ul> | <b>extensive</b> |

Table 48: show services flow-collector file interface Output Fields (*continued*)

| Output Field | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Status       | <p>File statistics:</p> <ul style="list-style-type: none"> <li>• <b>Compressed blocks</b>—(extensive output only) Data blocks in the file that have been compressed. The file is exported only when the compressed block count and block count become the same.</li> <li>• <b>Block count</b>—(extensive output only) Total number of data blocks in the file.</li> <li>• <b>State</b>—Processing state of the file. <ul style="list-style-type: none"> <li>• <b>Active</b>—The flow collector interface is writing to the file.</li> <li>• <b>Export 1</b>—File export is in progress to the primary server.</li> <li>• <b>Export 2</b>—File export is in progress to the secondary server.</li> <li>• <b>Wait</b>—File is pending export.</li> </ul> </li> <li>• <b>Transfer attempts 0</b>—Number of attempts made to transfer the file. If the file is successfully transferred in the first attempt, this field is 0.</li> </ul> | All levels      |

## Sample Output

show services  
flow-collector file  
interface extensive

```
user@host> show services flow-collector file interface cp-3/2/0 extensive
Filename: cFlowd-py69Ni69-0-20031112_014301-so_3_0_0_0.bcp.bi.gz
Throughput:
 Flow records: 188365, per second: 238, peak per second: 287
 Uncompressed bytes: 21267756, per second: 27007, peak per second: 32526
 Compressed bytes: 2965643, per second: 0, peak per second: 22999
Status:
 Compressed blocks: 156, Block count: 156
 State: Active, Transfer attempts: 0
```

## show services flow-collector input interface

|                                 |                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services flow-collector input interface (all   <i>cp-fpc/pic/port</i> )<br><detail   extensive   terse>                                                                                                                              |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                           |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display the number of packets received by collector interfaces from monitoring interfaces.                                                                                       |
| <b>Options</b>                  | <p><b>all   <i>cp-fpc/pic/port</i></b>—Display packets received by all configured flow collector interfaces or by the specified interface.</p> <p><b>detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">show services flow-collector input interface on page 215</a><br><a href="#">show services flow-collector input interface all on page 215</a>                                                                                  |
| <b>Output Fields</b>            | Table 49 on page 214 lists the output fields for the <b>show services flow-collector input interface</b> command. Output fields are listed in the approximate order in which they appear.                                                 |

**Table 49: show services flow-collector input interface Output Fields**

| Output Field     | Output Field Description                                                                   |
|------------------|--------------------------------------------------------------------------------------------|
| <b>Interface</b> | Name of the monitoring interface.                                                          |
| <b>Packets</b>   | Number of packets traveling from the monitoring interface to the flow collector interface. |
| <b>Bytes</b>     | Number of bytes traveling from the monitoring interface to the flow collector interface.   |

## Sample Output

show services  
flow-collector input  
interface

```
user@host> show services flow-collector input interface cp-3/2/0
Interface Packets Bytes
mo-3/0/0.0 21706 32328568
mo-3/1/0.0 21706 32329096
```

show services  
flow-collector input  
interface all

```
user@host> show services flow-collector input interface all
Flow collector interface: cp-6/1/0
Interface state: Collecting flows
Interface Packets Bytes
mo-3/0/0.0 274 416232
mo-3/3/0.0 274 416184
mo-1/0/0.0 274 416232
mo-1/1/0.0 274 416232
mo-1/2/0.0 274 416232
mo-1/3/0.0 274 416232
mo-3/1/0.0 274 416232
mo-4/0/0.0 274 416232
mo-4/1/0.0 274 416232
mo-4/2/0.0 274 416184
mo-4/3/0.0 274 416232
mo-5/0/0.0 274 416232
mo-5/1/0.0 274 416232
mo-5/2/0.0 274 416232
mo-5/3/0.0 274 416232
mo-6/0/0.0 274 416232
```

```
Flow collector interface: cp-6/3/0
Interface state: Collecting flows
```

## show services flow-collector interface

|                                 |                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show services flow-collector interface (all   <i>cp-fpc/pic/port</i> )<br><detail   extensive   terse>                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display overall statistics for the flow collector application.                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>all   <i>cp-fpc/pic/port</i></b>—Display statistics for flow collector applications on all interfaces or for the specified interface.</p> <p><b>detail   extensive   terse</b>—(Optional) Display the specified level of output.</p>                                                                                        |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">show services flow-collector interface all detail on page 219</a><br><a href="#">show services flow-collector interface all extensive on page 219</a><br><a href="#">show services flow-collector interface all terse on page 221</a><br><a href="#">show services flow-collector interface extensive on page 221</a> |
| <b>Output Fields</b>            | Table 50 on page 216 lists the output fields for the <b>show services flow-collector interface</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                               |

Table 50: show services flow-collector interface Output Fields

| Output Field             | Output Field Description                                                                      | Level of Output  |
|--------------------------|-----------------------------------------------------------------------------------------------|------------------|
| Flow collector interface | Name of the flow collector interface.                                                         | All levels       |
| Interface state          | Collecting flow state for the interface.                                                      | All levels       |
| Packets                  | Total number of packets received.                                                             | none specified   |
| Flows Uncompressed Bytes | Total uncompressed data size for all files created on this PIC.                               | none specified   |
| Compressed Bytes         | Total compressed data size for all files created on this PIC.                                 | none specified   |
| FTP bytes                | Total number of bytes transferred to the FTP server, including those dropped during transfer. | none specified   |
| FTP files                | Total number of FTP transfers attempted by the server.                                        | none specified   |
| Memory                   | Bytes used on the PIC and bytes free.                                                         | detail extensive |



Table 50: show services flow-collector interface Output Fields (*continued*)

| Output Field      | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Level of Output         |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Input</b>      | Incoming flow collector packet statistics: <ul style="list-style-type: none"> <li>• <b>Packets</b>—Number of packets received on the unit.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of packets per second.</li> <li>• <b>peak per second</b>—Peak number of packets per second.</li> </ul> </li> <li>• <b>Bytes</b>—Number of bytes received on the unit.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of bytes per second.</li> <li>• <b>peak per second</b>—Peak number of bytes per second.</li> </ul> </li> <li>• <b>Flow records processed</b>—Number of records in the flow collector packets that were processed by the flow-collector interface.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of flow records processed per second.</li> <li>• <b>peak per second</b>—Peak number of flow records per second.</li> </ul> </li> </ul>                                                                 | <b>detail extensive</b> |
| <b>Allocation</b> | Data block statistics: <ul style="list-style-type: none"> <li>• <b>Blocks allocated</b>—Total number of data blocks (containing flow records) allocated to the files created on this PIC.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of blocks allocated per second.</li> <li>• <b>peak per second</b>—Peak number of blocks allocated per second.</li> </ul> </li> <li>• <b>Blocks freed</b>—Total number of data blocks freed.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of blocks freed per second.</li> <li>• <b>peak per second</b>—Peak number of blocks freed per second.</li> </ul> </li> <li>• <b>Blocks unavailable</b>—Total number of data block requests denied, typically because of a memory shortage.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of blocks unavailable per second.</li> <li>• <b>peak per second</b>—Peak number of blocks unavailable per second.</li> </ul> </li> </ul> | <b>extensive</b>        |
| <b>Files</b>      | File statistics, incremented since the PIC last booted: <ul style="list-style-type: none"> <li>• <b>Files created</b>—Total number of files created on this PIC.</li> <li>• <b>Files exported</b>— Number of files successfully created and exported.</li> <li>• <b>Files destroyed</b>— (<b>extensive</b> output only) Number of files successfully exported and files dropped by the flow collection interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail extensive</b> |
| <b>Throughput</b> | Throughput statistics: <ul style="list-style-type: none"> <li>• <b>Uncompressed bytes</b>—Total uncompressed data size for all files created on this PIC.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of uncompressed bytes per second.</li> <li>• <b>peak per second</b>—Peak number of uncompressed bytes per second.</li> </ul> </li> <li>• <b>Compressed bytes</b>—Total compressed data size for all files created on this PIC.               <ul style="list-style-type: none"> <li>• <b>per second</b>—Average number of compressed bytes per second.</li> <li>• <b>peak per second</b>—Peak number of compressed bytes per second.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b> |

Table 50: show services flow-collector interface Output Fields (*continued*)

| Output Field                    | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output         |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Packet drops</b>             | <p>Number of packets dropped for the following causes:</p> <ul style="list-style-type: none"> <li>• <b>No memory</b>—Packets dropped because of insufficient memory.</li> <li>• <b>Not IP</b>—Packets dropped because they are not IP packets.</li> <li>• <b>Not IPv4</b>—Packets dropped because they are not IP version 4 packets.</li> <li>• <b>Too small</b>—Packets dropped because each packet was smaller than the size reported in its header.</li> <li>• <b>Fragments</b>—Packets dropped because of fragmentation. Fragments are not reassembled.</li> <li>• <b>ICMP</b>—Packets dropped because they are not ICMP packets.</li> <li>• <b>TCP</b>—Packets dropped because they are not TCP packets.</li> <li>• <b>Unknown</b>—Packets dropped because of undetermined causes.</li> <li>• <b>Not Junos flow</b>—Packets dropped because they are not interpreted by the Junos OS. The Junos OS interprets only IPv4, UDP cflowd version 5 packets.</li> </ul>                                                                                                                                                                                                                                                                                                                 | <b>extensive</b>        |
| <b>File transfer</b>            | <p>File transfer statistics:</p> <ul style="list-style-type: none"> <li>• <b>FTP bytes</b>—Total number of bytes transferred to the FTP server, including those dropped during transfer.</li> <li>• <b>FTP files</b>—Total number of FTP transfers attempted by the server.</li> <li>• <b>FTP failure</b>—Total number of FTP failures encountered by the server.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>Flow collector interface</b> | Physical interface acting as a flow collector.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>           |
| <b>Export channel</b>           | <p>Export channel 0 is unit 0. Export channel 1 is unit 1. Flow receive channel is unit 2. Server status statistics are the following:</p> <ul style="list-style-type: none"> <li>• <b>Current server Primary or Secondary</b>—Current FTP server being used. Value is</li> <li>• <b>Primary server state</b>—State of the server: <ul style="list-style-type: none"> <li>• <b>OK</b>—Server is operating without problems.</li> <li>• <b>FTP error</b>—Server encountered an FTP protocol error while sending files.</li> <li>• <b>Network error</b>—Flow-collector interface has errors when contacting the primary FTP server.</li> <li>• <b>Unknown</b>—First file transfer has not been sent to the primary server.</li> </ul> </li> <li>• <b>Secondary server state</b>—State of the server: <ul style="list-style-type: none"> <li>• <b>OK</b>—Server is operating without errors.</li> <li>• <b>FTP error</b>—Server encountered an FTP protocol error while sending files.</li> <li>• <b>Network error</b>—Flow-collector interface has errors when contacting the secondary FTP server.</li> <li>• <b>Unknown</b>—First file transfer has not been sent to the secondary server.</li> </ul> </li> <li>• <b>Not configured</b>—Secondary server is not configured.</li> </ul> | <b>detail extensive</b> |

## Sample Output

show services  
flow-collector  
interface all detail

```
user@host> show services flow-collector interface all detail
Flow collector interface: cp-6/1/0
Interface state: Collecting flows
Memory:
 Used: 51452732, Free: 440329088
Input:
 Packets: 4384, per second: 0, peak per second: 156
 Bytes: 6659616, per second: 0, peak per second: 249695
 Flow records processed: 131070, per second: 0, peak per second: 4914
Files:
 Files created: 1, per second: 0, peak per second: 0
 Files exported: 1, per second: 0, peak per second: 0
Throughput:
 Uncompressed bytes: 13742307, per second: 0, peak per second: 593564
 Compressed bytes: 3786177, per second: 0, peak per second: 162826
File Transfer:
 FTP bytes: 3786247, per second: 0, peak per second: 378620
 FTP files: 1, per second: 0, peak per second: 0
 FTP failure: 0
Export channel: 0
 Current server: Primary
 Primary server state: OK, Secondary server state: OK
Export channel: 1
 Current server: Primary
 Primary server state: Unknown, Secondary server state: OK

Flow collector interface: cp-6/3/0
Interface state: Collecting flows
Memory:
 Used: 51452732, Free: 440329088
Input:
 Packets: 0, per second: 0, peak per second: 0
 Bytes: 0, per second: 0, peak per second: 0
 Flow records processed: 0, per second: 0, peak per second: 0
Files:
 Files created: 0, per second: 0, peak per second: 0
 Files exported: 0, per second: 0, peak per second: 0
Throughput:
 Uncompressed bytes: 0, per second: 0, peak per second: 0
 Compressed bytes: 0, per second: 0, peak per second: 0
File Transfer:
 FTP bytes: 70, per second: 0, peak per second: 6
 FTP files: 0, per second: 0, peak per second: 0
 FTP failure: 0
Export channel: 0
 Current server: Primary
 Primary server state: Unknown, Secondary server state: OK
Export channel: 1
 Current server: Primary
 Primary server state: Unknown, Secondary server state: OK
```

show services  
flow-collector  
interface all extensive

```
user@host> show services flow-collector interface all extensive
Flow collector interface: cp-6/1/0
Interface state: Collecting flows
Memory:
 Used: 51452732, Free: 440329088
Input:
```

Packets: 4384, per second: 0, peak per second: 156  
Bytes: 6659616, per second: 0, peak per second: 249695  
Flow records processed: 131070, per second: 0, peak per second: 4914

Allocation:  
Blocks allocated: 108, per second: 0, peak per second: 0  
Blocks freed: 108, per second: 0, peak per second: 10  
Blocks unavailable: 0, per second: 0, peak per second: 0

Files:  
Files created: 1, per second: 0, peak per second: 0  
Files exported: 1, per second: 0, peak per second: 0  
Files destroyed: 1, per second: 0, peak per second: 0

Throughput:  
Uncompressed bytes: 13742307, per second: 0, peak per second: 593564  
Compressed bytes: 3786177, per second: 0, peak per second: 162826

Packet drops:  
No memory: 0, Not IP: 0  
Not IPv4: 0, Too small: 0  
Fragments: 0, ICMP: 0  
TCP: 0, Unknown: 0  
Not JUNOS flow: 0

File Transfer:  
FTP bytes: 3786247, per second: 0, peak per second: 378620  
FTP files: 1, per second: 0, peak per second: 0  
FTP failure: 0

Export channel: 0  
Current server: Primary  
Primary server state: OK, Secondary server state: OK

Export channel: 1  
Current server: Primary  
Primary server state: Unknown, Secondary server state: OK

Flow collector interface: cp-6/3/0  
Interface state: Collecting flows

Memory:  
Used: 51452732, Free: 440329088

Input:  
Packets: 0, per second: 0, peak per second: 0  
Bytes: 0, per second: 0, peak per second: 0  
Flow records processed: 0, per second: 0, peak per second: 0

Allocation:  
Blocks allocated: 0, per second: 0, peak per second: 0  
Blocks freed: 0, per second: 0, peak per second: 0  
Blocks unavailable: 0, per second: 0, peak per second: 0

Files:  
Files created: 0, per second: 0, peak per second: 0  
Files exported: 0, per second: 0, peak per second: 0  
Files destroyed: 0, per second: 0, peak per second: 0

Throughput:  
Uncompressed bytes: 0, per second: 0, peak per second: 0  
Compressed bytes: 0, per second: 0, peak per second: 0

Packet drops:  
No memory: 0, Not IP: 0  
Not IPv4: 0, Too small: 0  
Fragments: 0, ICMP: 0  
TCP: 0, Unknown: 0  
Not JUNOS flow: 0

File Transfer:  
FTP bytes: 70, per second: 0, peak per second: 6  
FTP files: 0, per second: 0, peak per second: 0  
FTP failure: 0

Export channel: 0

```

Current server: Primary
Primary server state: Unknown, Secondary server state: OK
Export channel: 1
Current server: Primary
Primary server state: Unknown, Secondary server state: OK

```

#### show services flow-collector interface all terse

```

user@host> show services flow-collector interface all terse
Flow collector interface: cp-6/1/0
Interface state: Collecting flows

```

| Packets | Bytes   | Flows  | Uncompressed<br>Bytes | Compressed<br>Bytes | FTP bytes | FTP files |
|---------|---------|--------|-----------------------|---------------------|-----------|-----------|
| 4384    | 6659616 | 131070 | 13742307              | 3786177             | 3786247   | 1         |

```

Flow collector interface: cp-6/3/0
Interface state: Collecting flows

```

| Packets | Bytes | Flows | Uncompressed<br>Bytes | Compressed<br>Bytes | FTP bytes | FTP files |
|---------|-------|-------|-----------------------|---------------------|-----------|-----------|
| 0       | 0     | 0     | 0                     | 0                   | 70        | 0         |

#### show services flow-collector interface extensive

```

user@host> show services flow-collector interface cp-5/2/0 extensive
Flow collector interface: cp-5/2/0
Interface state: Collecting flows
Memory:
 Used: 458311860, Free: 40810008
Input:
 Packets: 922629, per second: 2069, peak per second: 3266
 Bytes: 1376559252, per second: 3096940, peak per second: 4880051
 Flow records processed: 25764957, per second: 42564, peak per second: 98124
Allocation:
 Blocks allocated: 20862, per second: 31, peak per second: 72
 Blocks freed: 17161, per second: 40, peak per second: 202
 Blocks unavailable: 58786, per second: 652, peak per second: 1120
Files:
 Files created: 52, per second: 0, peak per second: 0
 Files exported: 42, per second: 0, peak per second: 0
 Files destroyed: 42, per second: 0, peak per second: 0
Throughput:
 Uncompressed bytes: 2592070401, per second: 7297307,
 peak per second: 8630023
 Compressed bytes: 659600068, per second: 1858458, peak per second: 2198471
Packet drops:
 No memory: 58786, Not IP: 0
 Not IPv4: 0, Too small: 0
 Fragments: 0, ICMP: 0
 TCP: 0, Unknown: 0
 Not JUNOS flow: 0
File Transfer:
 FTP bytes: 585981447, per second: 1313320, peak per second: 4857798
 FTP files: 48, per second: 0, peak per second: 0
 FTP failure: 8
Export channel: 0
 Current server: Primary
 Primary server state: FTP error, Secondary server state: Not configured
Export channel: 1
 Current server: Primary
 Primary server state: OK, Secondary server state: Not configured

```



## CHAPTER 12

# Passive Flow Monitoring Commands

## clear passive-monitoring statistics

---

|                                 |                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear passive-monitoring statistics (all   interface <i>interface-name</i> )                                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 7.6.                                                                                                                                                                               |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Clear statistics for one passive monitoring interface or for all passive monitoring interfaces.                                                                  |
| <b>Options</b>                  | <b>all</b> —Clear statistics for all configured passive monitoring interfaces.<br><br><b>interface <i>interface-name</i></b> —Clear statistics for the specified passive monitoring interface ( <i>mo-fpc/pic/port</i> ). |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                                   |
| <b>List of Sample Output</b>    | <a href="#">clear passive-monitoring statistics on page 224</a>                                                                                                                                                           |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                     |

### Sample Output

clear  
passive-monitoring  
statistics

```
user@host> clear passive-monitoring statistics interface mo-5/0/0
```



## show passive-monitoring error

|                                 |                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show passive-monitoring error (*   all   mo-fpc/pic/port)</code>                                                                                                                     |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                            |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display passive monitoring error statistics.                                                                                      |
| <b>Options</b>                  | <code>*   all   mo-fpc/pic/port</code> —Display error statistics for monitoring interfaces. Use a wildcard character, specify all interfaces, or provide a specific interface name.        |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">show passive-monitoring error all on page 226</a>                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 51 on page 225</a> lists the output fields for the <b>show passive-monitoring error</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 51: show passive-monitoring error Output Fields**

| Field Name                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Passive monitoring interface       | Name of the passive monitoring interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Local interface index              | Index counter of the local interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Interface state                    | State of the passive monitoring interface: <ul style="list-style-type: none"> <li>• <b>Monitoring</b>—Specified interface is actively monitoring.</li> <li>• <b>Disabled</b>—Specified interface has been disabled from the CLI.</li> <li>• <b>Not monitoring</b>—The interface is operational, but not monitoring. This condition occurs when an interface first comes online, or when the interface is operational, but no logical unit has been configured under the physical interface.</li> <li>• <b>Unknown</b>—Unknown state.</li> <li>• <b>Error</b>—An error occurred during the process of determining the state of the interface.</li> </ul> |
| <b>Error information</b>           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Packets dropped (no memory)        | Number of packets dropped because of memory shortage.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Packets dropped (not IP)           | Number of non-IP packets dropped.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Packets dropped (not IPv4)         | Number of packets dropped because they failed the IPv4 version check.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Packets dropped (header too small) | Number of packets dropped because the packet length or IP header length was too small.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 51: show passive-monitoring error Output Fields (*continued*)

| Field Name                        | Field Description                                                                                                                                                                             |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Memory allocation failures</b> | Number of flow record memory allocation failures. A small number reflects failures to replenish the free list. A large number indicates the monitoring station is almost out of memory space. |
| <b>Memory free failures</b>       | Number of flow record memory free failures.                                                                                                                                                   |
| <b>Memory free list failures</b>  | Number of flow records received from free list that failed. Memory is nearly exhausted or too many new flows greater than 128 KB are being created per second.                                |
| <b>Memory warning</b>             | Whether the flows have exceeded 1 million packets per second (Mpps) on a Monitoring Services PIC or 2 Mpps on a Monitoring Services II PIC. The response can be <b>Yes</b> or <b>No</b> .     |
| <b>Memory overload</b>            | Whether the memory has been overloaded. The response can be <b>Yes</b> or <b>No</b> .                                                                                                         |
| <b>PPS overload</b>               | Whether the PIC is receiving more packets per second than the configured threshold. The response can be <b>Yes</b> or <b>No</b> .                                                             |
| <b>BPS overload</b>               | Whether the PIC is receiving more bits per second than the configured threshold. The response can be <b>Yes</b> or <b>No</b> .                                                                |

## Sample Output

**show  
passive-monitoring  
error all**

```

user@host> show passive-monitoring error all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
Interface state: Monitoring
Error information
 Packets dropped (no memory): 0, Packets dropped (not IP): 0
 Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
 Memory allocation failures: 0, Memory free failures: 0
 Memory free list failures: 0
 Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

Passive monitoring interface: mo-4/1/0, Local interface index: 45
Interface state: Not monitoring
Error information
 Packets dropped (no memory): 0, Packets dropped (not IP): 0
 Packets dropped (not IPv4): 0, Packets dropped (header too small): 0
 Memory allocation failures: 0, Memory free failures: 0
 Memory free list failures: 0
 Memory warning: No, Memory overload: No, PPS overload: No, BPS overload: No

```

## show passive-monitoring flow

|                                 |                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show passive-monitoring flow (*   all   mo-<i>fpc/pic/port</i>)</code>                                                                                                                      |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                   |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display passive flow statistics.                                                                                                         |
| <b>Options</b>                  | <code>*   all   mo-<i>fpc/pic/port</i></code> —Display passive flow statistics for monitoring interfaces. Use a wildcard character, specify all interfaces, or provide a specific interface name. |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">show passive-monitoring flow all on page 228</a>                                                                                                                                      |
| <b>Output Fields</b>            | <a href="#">Table 52 on page 227</a> lists the output fields for the <code>show passive-monitoring flow</code> command. Output fields are listed in the approximate order in which they appear.   |

**Table 52: show passive-monitoring flow Output Fields**

| Field Name                   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Passive monitoring interface | Name of the passive monitoring interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Interface state              | State of the passive monitoring interface: <ul style="list-style-type: none"> <li>• <b>Monitoring</b>—Specified interface is actively monitoring.</li> <li>• <b>Disabled</b>—Specified interface has been disabled from the CLI.</li> <li>• <b>Not monitoring</b>—The interface is operational, but not monitoring. This condition occurs when an interface first comes online, or when the interface is operational, but no logical unit has been configured under the physical interface.</li> <li>• <b>Unknown</b>—Unknown state.</li> <li>• <b>Error</b>—An error occurred during the process of determining the state of the interface.</li> </ul> |
| Flow information             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Flow packets                 | Number of packets received by an operational PIC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Flow bytes                   | Number of bytes received by an operational PIC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Flow packets 10-second rate  | Number of packets per second handled by the PIC and displayed as a 10-second average.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Flow bytes 10-second rate    | Number of bytes per second handled by the PIC and displayed as a 10-second average.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Active flows                 | Number of currently active flows tracked by the PIC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Total flows                  | Total number of flows received by an operational PIC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 52: show passive-monitoring flow Output Fields (*continued*)

| Field Name                      | Field Description                                                                |
|---------------------------------|----------------------------------------------------------------------------------|
| <b>Flows exported</b>           | Total number of flows exported by an operational PIC.                            |
| <b>Flows packets exported</b>   | Total number of cflowd packets exported by an operational PIC.                   |
| <b>Flows inactive timed out</b> | Total number of flows that are exported because of inactivity.                   |
| <b>Flows active timed out</b>   | Total number of long-lived flows that are exported because of an active timeout. |

## Sample Output

**show  
passive-monitoring  
flow all**

```

user@host> show passive-monitoring flow all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
Interface state: Monitoring
Flow information
 Flow packets: 6533434, Flow bytes: 653343400
 Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
 Active flows: 0, Total flows: 1599
 Flows exported: 1599, Flows packets exported: 55
 Flows inactive timed out: 1599, Flows active timed out: 0

Passive monitoring interface: mo-4/1/0, Local interface index: 45
Interface state: Monitoring
Flow information
 Flow packets: 6537780, Flow bytes: 653778000
 Flow packets 10-second rate: 0, Flow bytes 10-second rate: 0
 Active flows: 0, Total flows: 1601
 Flows exported: 1601, Flows packets exported: 55
 Flows inactive timed out: 1601, Flows active timed out: 0

```

## show passive-monitoring memory

|                                 |                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show passive-monitoring memory (*   all   mo-<i>fpc/pic/port</i>)</code>                                                                                                                              |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                             |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display passive monitoring memory and flow record statistics                                                                                       |
| <b>Options</b>                  | <code>*   all   mo-<i>fpc/pic/port</i></code> —Display memory and flow record statistics for monitoring interfaces. Use a wildcard character, specify all interfaces, or provide a specific interface name. |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <a href="#">show passive-monitoring memory all on page 230</a>                                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 53 on page 229</a> lists the output fields for the <code>show passive-monitoring memory</code> command. Output fields are listed in the approximate order in which they appear.           |

**Table 53: show passive-monitoring memory Output Fields**

| Field Name                           | Field Description                                                                                                                                         |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Passive monitoring interface         | Name of the passive monitoring interface.                                                                                                                 |
| Local interface index                | Index counter of the local interface.                                                                                                                     |
| Memory utilization                   |                                                                                                                                                           |
| Allocation count                     | Number of flow records allocated.                                                                                                                         |
| Free count                           | Number of flow records freed.                                                                                                                             |
| Maximum allocated                    | Maximum number of flow records allocated since the monitoring station booted. This number represents the peak number of flow records allocated at a time. |
| Allocations per second               | Flow records allocated per second during the last statistics interval on the PIC.                                                                         |
| Frees per second                     | Flow records freed per second during the last statistics interval on the PIC.                                                                             |
| Total memory used, Total memory free | Total memory currently used and total amount of memory currently free (in bytes).                                                                         |

## Sample Output

**show**  
**passive-monitoring**  
**memory all**

```
user@host> show passive-monitoring memory all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
Memory utilization
 Allocation count: 1600, Free count: 1599, Maximum allocated: 1600
 Allocations per second: 3200, Frees per second: 1438
 Total memory used (in bytes): 103579176, Total memory free (in bytes):
 163914184
```

## show passive-monitoring status

|                                 |                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show passive-monitoring status (* all mo-fpc/pic/port)</code>                                                                                                                         |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                             |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display passive monitoring status.                                                                                                 |
| <b>Options</b>                  | <code>* all mo-fpc/pic/port</code> —Display status for monitoring interfaces. Use a wildcard character, specify all interfaces, or provide a specific interface name.                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                        |
| <b>List of Sample Output</b>    | <a href="#">show passive-monitoring status all on page 232</a>                                                                                                                              |
| <b>Output Fields</b>            | <a href="#">Table 54 on page 231</a> lists the output fields for the <b>show passive-monitoring status</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 54: show passive-monitoring status Output Fields**

| Output Field                 | Output Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Passive monitoring interface | Name of the passive monitoring interface.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Local interface index        | Index counter of the local interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Interface state              | Monitoring state of the passive monitoring interface. <ul style="list-style-type: none"> <li>• <b>Monitoring</b>—PIC is actively monitoring.</li> <li>• <b>Disabled</b>—PIC has been disabled using the CLI.</li> <li>• <b>Not monitoring</b>—PIC is operational, but not monitoring. This condition can happen while the PIC is coming online, or when the PIC is operational but has no logical unit configured under the physical interface.</li> <li>• <b>Unknown</b></li> </ul> |
| Group index                  | Integer that represents the monitoring group of which the PIC is a member. <b>Group index</b> is a mapping from the group name to an index. It is not related to the number of monitoring groups.                                                                                                                                                                                                                                                                                    |
| Export interval              | Configured export interval for cflowd records, in seconds.                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Export format                | Configured export format (only cflowd version 5 is supported).                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Protocol                     | Protocol the PIC is configured to monitor (only IPv4 is supported).                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Engine type                  | Configured engine type that is inserted in output cflowd packets.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Engine ID                    | Configured engine ID that is inserted in output cflowd packets.                                                                                                                                                                                                                                                                                                                                                                                                                      |

## Sample Output

`show  
passive-monitoring  
status all`

```
user@host> show passive-monitoring status all
Passive monitoring interface: mo-4/0/0, Local interface index: 44
Interface state: Monitoring
 Group index: 0
 Export interval: 15 secs, Export format: cflowd v5
 Protocol: IPv4, Engine type: 1, Engine ID: 1

Passive monitoring interface: mo-4/1/0, Local interface index: 45
Interface state: Disabled

Passive monitoring interface: mo-4/2/0, Local interface index: 46
Interface state: Not monitoring
```



## show passive-monitoring usage

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show passive-monitoring usage (*   all   mo-fpc/pic/port)</code>                                                                                                                           |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                  |
| <b>Description</b>              | (M40e, M160, and M320 routers and T Series routers only) Display passive monitoring usage statistics.                                                                                            |
| <b>Options</b>                  | <code>*   all   mo-fpc/pic/port</code> —Display usage statistics for monitoring interfaces. Use a wildcard character, specify all interfaces, or provide a specific interface name.              |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                             |
| <b>List of Sample Output</b>    | <a href="#">show passive-monitoring usage all on page 234</a>                                                                                                                                    |
| <b>Output Fields</b>            | <a href="#">Table 55 on page 233</a> lists the output fields for the <code>show passive-monitoring usage</code> command. Output fields are listed in the approximate order in which they appear. |

**Table 55: show passive-monitoring usage Output Fields**

| Output Field                 | Output Field Description                                                                                                                                     |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Passive monitoring interface | Name of the passive monitoring interface.                                                                                                                    |
| Local interface index        | Index counter of the local interface.                                                                                                                        |
| CPU utilization              |                                                                                                                                                              |
| Uptime                       | Time, in milliseconds, that the PIC has been operational.                                                                                                    |
| Interrupt time               | Total time that the PIC has spent processing packets since the last PIC reset.                                                                               |
| Load (5 second)              | CPU load on the PIC, averaged more than 5 seconds. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time. |
| Load (1 minute)              | CPU load on the PIC, averaged more than 1 minute. The number is a percentage obtained by dividing the time spent on active tasks by the total elapsed time.  |

## Sample Output

`show`  
`passive-monitoring`  
`usage all`

```
user@host> show passive-monitoring usage
Passive monitoring interface: mo-4/0/0, Local interface index: 44
CPU utilization
 Uptime: 653155 milliseconds, Interrupt time: 40213754 microseconds
 Load (5 second): 20%, Load (1 minute): 17%

Passive monitoring interface: mo-4/1/0, Local interface index: 45
CPU utilization
 Uptime: 652292 milliseconds, Interrupt time: 40223178 microseconds
 Load (5 second): 22%, Load (1 minute): 15%

Passive monitoring interface: mo-4/2/0, Local interface index: 46
CPU utilization
 Uptime: 649491 milliseconds, Interrupt time: 40173645 microseconds
 Load (5 second): 22%, Load (1 minute): 10098862%
```

## PART 5

# Index

- [Index on page 237](#)



# Index

## Symbols

|                                              |     |
|----------------------------------------------|-----|
| #, comments in configuration statements..... | xiv |
| ( ), in syntax descriptions.....             | xiv |
| < >, in syntax descriptions.....             | xiv |
| [ ], in configuration statements.....        | xiv |
| { }, in configuration statements.....        | xiv |
| (pipe), in syntax descriptions.....          | xiv |

## A

|                                              |     |
|----------------------------------------------|-----|
| active flow monitoring                       |     |
| aggregated flows, displaying.....            | 168 |
| available PICs, displaying.....              | 191 |
| CPU usage, displaying.....                   | 194 |
| destination-based example configuration      |     |
| .....                                        | 123 |
| error statistics, displaying.....            | 173 |
| flow statistics, displaying.....             | 177 |
| flows, detailed information, displaying..... | 182 |
| memory statistics, displaying.....           | 187 |
| packet size distribution, displaying.....    | 189 |
| aggregated flows, displaying.....            | 168 |

## B

|                                          |     |
|------------------------------------------|-----|
| braces, in configuration statements..... | xiv |
| brackets                                 |     |
| angle, in syntax descriptions.....       | xiv |
| square, in configuration statements..... | xiv |

## C

|                                                  |     |
|--------------------------------------------------|-----|
| clear passive-monitoring statistics command..... | 224 |
| clear services dynamic-flow-capture              |     |
| command.....                                     | 198 |
| clear services flow-collector statistics         |     |
| command.....                                     | 208 |
| comments, in configuration statements.....       | xiv |
| configuration                                    |     |
| flow-tap application.....                        | 131 |
| content destination                              |     |
| dynamic flow capture, displaying.....            | 199 |
| content destinations                             |     |
| flow-tap.....                                    | 9   |

|                                                |      |
|------------------------------------------------|------|
| control source,                                |      |
| dynamic flow capture, displaying.....          | 201  |
| conventions                                    |      |
| text and syntax.....                           | xiii |
| curly braces, in configuration statements..... | xiv  |
| customer support.....                          | xv   |
| contacting JTAC.....                           | xv   |

## D

|                                           |     |
|-------------------------------------------|-----|
| documentation                             |     |
| comments on.....                          | xv  |
| DTCP.....                                 | 83  |
| dynamic flow capture                      |     |
| configuration procedure.....              | 57  |
| content destination, displaying.....      | 199 |
| control source, displaying.....           | 201 |
| example configuration.....                | 111 |
| operational mode commands.....            | 113 |
| options                                   |     |
| configuring system logging.....           | 64  |
| configuring thresholds.....               | 64  |
| monitoring with SNMP.....                 | 64  |
| overview.....                             | 56  |
| statistics                                |     |
| clearing.....                             | 198 |
| displaying.....                           | 203 |
| Dynamic Tasking Control Protocol See DTCP |     |

## E

|                         |     |
|-------------------------|-----|
| example configurations  |     |
| active flow monitoring, |     |
| destination-based.....  | 123 |

## F

|                                              |     |
|----------------------------------------------|-----|
| flow aggregation                             |     |
| templates.....                               | 172 |
| flow collector interface See flow monitoring |     |
| flow collector services                      |     |
| interface files, displaying.....             | 212 |
| packets received, displaying.....            | 214 |
| primary server, switching to.....            | 209 |
| secondary server, switching to.....          | 210 |
| statistics                                   |     |
| displaying.....                              | 216 |
| interface, clearing.....                     | 208 |
| test file, transferring.....                 | 211 |

|                                              |     |                                           |      |
|----------------------------------------------|-----|-------------------------------------------|------|
| flow monitoring.....                         | 82  | general.....                              | 3    |
| active                                       |     | passive flow monitoring.....              | 4    |
| aggregated flows, displaying.....            | 168 | passive                                   |      |
| CPU usage, displaying.....                   | 194 | flow statistics, displaying.....          | 227  |
| detailed information, displaying.....        | 182 | memory and flow statistics,               |      |
| error statistics, displaying.....            | 173 | displaying.....                           | 229  |
| flow statistics, displaying.....             | 177 | status, displaying.....                   | 231  |
| memory statistics, displaying.....           | 187 | usage statistics, displaying.....         | 233  |
| packet size distribution, displaying.....    | 189 | flow-tap                                  |      |
| PICs, displaying available.....              | 191 | application.....                          | 83   |
| configuration procedure                      |     | architecture.....                         | 9    |
| active flow monitoring.....                  | 69  | permissions statement.....                | 72   |
| dynamic flow capture.....                    | 57  | RADIUS configuration.....                 | 73   |
| flow collector interface.....                | 58  | restrictions.....                         | 17   |
| passive flow monitoring.....                 | 42  | security.....                             | 72   |
| destination-based example configuration..... | 123 | flow-tap application                      |      |
| example configuration                        |     | example configuration.....                | 131  |
| active flow monitoring.....                  | 115 | flow-tap-dtcp statement.....              | 72   |
| discard accounting.....                      | 119 | font conventions.....                     | xiii |
| dynamic flow capture.....                    | 111 |                                           |      |
| multiple port mirroring.....                 | 128 | <b>L</b>                                  |      |
| next-hop groups.....                         | 128 | lawful intercept architecture.....        | 9    |
| operational mode commands                    |     | <b>M</b>                                  |      |
| active flow monitoring.....                  | 117 | manuals                                   |      |
| discard accounting.....                      | 122 | comments on.....                          | xv   |
| dynamic flow capture.....                    | 113 | mediation devices                         |      |
| flow collector interface.....                | 106 | flow-tap.....                             | 9    |
| passive flow monitoring.....                 | 94  | <b>N</b>                                  |      |
| options                                      |     | next-hop groups.....                      | 82   |
| applying a firewall filter to an output      |     | <b>P</b>                                  |      |
| interface.....                               | 63  | packet size distribution, displaying..... | 189  |
| configuring an aggregate export              |     | parentheses, in syntax descriptions.....  | xiv  |
| timer.....                                   | 80  | passive flow monitoring                   |      |
| ES PIC.....                                  | 65  | error statistics, displaying.....         | 225  |
| next-hop groups.....                         | 82  | flow statistics, displaying.....          | 227  |
| port mirroring.....                          | 81  | memory statistics, displaying.....        | 229  |
| port mirroring with filter-based             |     | PICs, displaying available.....           | 231  |
| forwarding.....                              | 81  | statistics, clearing.....                 | 224  |
| stripping MPLS labels.....                   | 64  | usage statistics, displaying.....         | 233  |
| templates.....                               | 77  | PICs                                      |      |
| overview                                     |     | active flow monitoring                    |      |
| active flow monitoring.....                  | 6   | available PICs, displaying.....           | 191  |
| dynamic flow capture.....                    | 56  | CPU usage, displaying.....                | 194  |
| flow collector interface.....                | 58  | port mirroring                            |      |
|                                              |     | displaying.....                           | 166  |

**R**

|                                                                                        |     |
|----------------------------------------------------------------------------------------|-----|
| request services flow-collector change-destination<br>primary interface command.....   | 209 |
| request services flow-collector change-destination<br>secondary interface command..... | 210 |
| request services flow-collector test-file-transfer<br>command.....                     | 211 |

**S**

|                                                                        |     |
|------------------------------------------------------------------------|-----|
| sampling                                                               |     |
| next-hop-groups, displaying.....                                       | 162 |
| port-mirroring instances, displaying.....                              | 166 |
| show forwarding-options next-hop-group<br>command.....                 | 162 |
| show forwarding-options port-mirroring<br>command.....                 | 166 |
| show passive-monitoring error command.....                             | 225 |
| show passive-monitoring flow command.....                              | 227 |
| show passive-monitoring memory command.....                            | 229 |
| show passive-monitoring status command.....                            | 231 |
| show passive-monitoring usage command.....                             | 233 |
| show services accounting aggregation<br>command.....                   | 168 |
| show services accounting aggregation template<br>command.....          | 172 |
| show services accounting errors command.....                           | 173 |
| show services accounting flow command.....                             | 177 |
| show services accounting flow-detail<br>command.....                   | 182 |
| show services accounting memory command.....                           | 187 |
| show services accounting packet-size-distribution<br>command.....      | 189 |
| show services accounting status command.....                           | 191 |
| show services accounting usage command.....                            | 194 |
| show services dynamic-flow-capture<br>content-destination command..... | 199 |
| show services dynamic-flow-capture control-source<br>command.....      | 201 |
| show services dynamic-flow-capture statistics<br>command.....          | 203 |
| show services flow-collector file interface<br>command.....            | 212 |
| show services flow-collector input interface<br>command.....           | 214 |
| show services flow-collector interface<br>command.....                 | 216 |
| statistics                                                             |     |
| active flow error.....                                                 | 173 |
| active flow instances.....                                             | 177 |

|                                          |      |
|------------------------------------------|------|
| active flow memory utilization.....      | 187  |
| aggregated active flow.....              | 168  |
| dynamic flow capture                     |      |
| clearing.....                            | 198  |
| displaying.....                          | 203  |
| support, technical See technical support |      |
| syntax conventions.....                  | xiii |

**T**

|                       |     |
|-----------------------|-----|
| technical support     |     |
| contacting JTAC.....  | xv  |
| templates             |     |
| flow aggregation..... | 172 |

