



Junos[®] OS

MAC Address Validation on Static Ethernet Interfaces Feature Guide for Routing Devices



Published: 2013-08-01

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Junos® OS MAC Address Validation on Static Ethernet Interfaces Feature Guide for Routing Devices

Copyright © 2013, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	vii
	Documentation and Release Notes	vii
	Supported Platforms	vii
	Using the Examples in This Manual	vii
	Merging a Full Example	viii
	Merging a Snippet	viii
	Documentation Conventions	ix
	Documentation Feedback	xi
	Requesting Technical Support	xi
	Self-Help Online Tools and Resources	xi
	Opening a Case with JTAC	xii
Part 1	Overview	
Chapter 1	MAC Address Validation on Static Ethernet Interfaces	3
	MAC Address Validation on Static Ethernet Interfaces Overview	3
Part 2	Configuration	
Chapter 2	MAC Address Validation on Static Ethernet Interfaces	7
	Configuring MAC Address Validation on Static Ethernet Interfaces	7
	Example of Strict MAC Validation on a Static Ethernet Interface	7
	Disabling MAC Address Learning of Neighbors Through ARP or Neighbor Discovery for IPv4 and IPv6 Neighbors	8
Chapter 3	Network Interfaces Configuration Statements and Hierarchy	9
	[edit interfaces] Hierarchy Level	9
	[edit logical-systems] Hierarchy Level	25
Chapter 4	Statement Summary	31
	family	32
	fast-aps-switch	36
	mac-validate	37
Part 3	Administration	
Chapter 5	Monitoring Commands	41
	show interfaces demux0 (Demux Interfaces)	42
Chapter 6	Command Summary	51
	Ethernet Interface Operational Mode Commands	51

Part 4	Troubleshooting	
Chapter 7	Ethernet	59
	tracert ethernet	60
Chapter 8	Interface Diagnostics	63
	Interface Diagnostics	63
	Configuring Loopback Testing	63
	Interface Diagnostics	65
	Starting and Stopping a BERT Test	69
	Example: Configuring Bit Error Rate Testing	69
Part 5	Index	
	Index	73

List of Tables

	About the Documentation	vii
	Table 1: Notice Icons	ix
	Table 2: Text and Syntax Conventions	ix
Part 3	Administration	
Chapter 5	Monitoring Commands	41
	Table 3: Demux show interfaces Output Fields	42
Chapter 6	Command Summary	51
	Table 4: Ethernet Interface Operational Mode Commands	51
Part 4	Troubleshooting	
Chapter 7	Ethernet	59
	Table 5: traceroute ethernet Output Fields	60
Chapter 8	Interface Diagnostics	63
	Table 6: Loopback Modes by Interface Type	64
	Table 7: BERT Capabilities by Interface Type	68

About the Documentation

- Documentation and Release Notes on page vii
- Supported Platforms on page vii
- Using the Examples in This Manual on page vii
- Documentation Conventions on page ix
- Documentation Feedback on page xi
- Requesting Technical Support on page xi

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX Series
- J Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:


```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page ix defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page ix defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies book names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS System Basics Configuration Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Enclose optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Enclose a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to techpubs-comments@juniper.net, or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>

- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [MAC Address Validation on Static Ethernet Interfaces on page 3](#)

CHAPTER 1

MAC Address Validation on Static Ethernet Interfaces

- [MAC Address Validation on Static Ethernet Interfaces Overview on page 3](#)

MAC Address Validation on Static Ethernet Interfaces Overview

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

MAC address validation is supported on AE, Fast Ethernet, Gigabit Ethernet, and 10–Gigabit Ethernet interfaces (with or without VLAN tagging) on MX Series routers only.

There are two types of MAC address validation that you can configure:

- **Loose**—Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not support the MAC address of the tuple

Continues to forward packets when the source address of the incoming packet does not match any of the trusted IP addresses.

- **Strict**—Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.

Related Documentation

- [Configuring MAC Address Validation on Static Ethernet Interfaces on page 7](#)
- [Disabling MAC Address Learning of Neighbors Through ARP or Neighbor Discovery for IPv4 and IPv6 Neighbors on page 8](#)
- [Ethernet Interfaces](#)

PART 2

Configuration

- [MAC Address Validation on Static Ethernet Interfaces on page 7](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 9](#)
- [Statement Summary on page 31](#)

CHAPTER 2

MAC Address Validation on Static Ethernet Interfaces

- [Configuring MAC Address Validation on Static Ethernet Interfaces on page 7](#)
- [Disabling MAC Address Learning of Neighbors Through ARP or Neighbor Discovery for IPv4 and IPv6 Neighbors on page 8](#)

Configuring MAC Address Validation on Static Ethernet Interfaces

To configure MAC address validation on static Ethernet interfaces, include the **mac-validate** (**loose** | **strict**) statement in the **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]** hierarchy:

```
[edit interfaces interface-name unit logical-unit-number family family]  
  mac-validate (loose | strict);
```

Example of Strict MAC Validation on a Static Ethernet Interface

This example shows strict MAC address validation on a static Ethernet interface without VLAN tagging.

```
[edit interfaces]  
ge-2/1/9 {  
  unit 0 {  
    proxy-arp;  
    family inet {  
      mac-validate strict;  
      address 88.22.100.1/24 {  
        arp 88.22.100.3 mac 00:00:58:16:64:03;  
      }  
    }  
  }  
}
```

- Related Documentation
- [family on page 32](#)
 - [mac-validate on page 37](#)
 - [Ethernet Interfaces](#)

Disabling MAC Address Learning of Neighbors Through ARP or Neighbor Discovery for IPv4 and IPv6 Neighbors

The Junos OS provides the **no-neighbor-learn** configuration statement at the **[edit interfaces *interface-name* unit *interface-unit-number* family inet]** and **[edit interfaces *interface-name* unit *interface-unit-number* family inet6]** hierarchy levels.

To disable ARP address learning by not sending arp-requests and not learning from ARP replies for IPv4 neighbors, include the **no-neighbor-learn** statement at the **[edit interfaces *interface-name* unit *interface-unit-number* family inet]** hierarchy level:

```
[edit interfaces interface-name unit interface-unit-number family inet]
no-neighbor-learn;
```

To disable neighbor discovery for IPv6 neighbors, include the **no-neighbor-learn** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* family inet6]** hierarchy level:

```
[edit interfaces interface-name unit interface-unit-number family inet6]
no-neighbor-learn;
```

Related Documentation

- *Configuring the Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses*
- *Ethernet Interfaces*

CHAPTER 3

Network Interfaces Configuration Statements and Hierarchy

- [\[edit interfaces\] Hierarchy Level on page 9](#)
- [\[edit logical-systems\] Hierarchy Level on page 25](#)

[\[edit interfaces\] Hierarchy Level](#)

The statements at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level can also be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.



NOTE: The *accounting-profile* statement is an exception to this rule. The *accounting-profile* statement can be configured at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level, but it cannot be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    account-layer2-overhead (Interface Level) {
      value;
      egress bytes;
      ingress bytes;
    }
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
          (revertive | non-revertive);
        }
      }
    }
  }
}
```

```
    periodic interval;  
    system-priority priority;  
}  
link-protection;  
link-speed speed;  
(loopback | no-loopback);  
mc-ae {  
    chassis-id chassis-id;  
    mc-ae-id mc-ae-id;  
    mode (active-active | active-standby);  
    redundancy-group group-id;  
    status-control (active | standby);  
}  
minimum-links number;  
source-address-filter {  
    mac-address;  
}  
(source-filtering | no-source-filtering);  
}  
shared-scheduler;  
aggregated-sonet-options {  
    link-speed speed | mixed;  
    minimum-links number;  
}  
atm-options {  
    cell-bundle-size cells;  
    ilmi;  
    linear-red-profiles profile-name {  
        high-plp-max-threshold percent;  
        low-plp-max-threshold percent;  
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;  
    }  
}  
mpls {  
    pop-all-labels {  
        required-depth number;  
    }  
}  
pic-type (atm1 | atm2);  
plp-to-clp;  
promiscuous-mode {  
    vpi vpi-identifier;  
}  
scheduler-maps map-name {  
    forwarding-class class-name {  
        epd-threshold cells plp1 cells;  
        linear-red-profile profile-name;  
        priority (high | low);  
        transmit-weight (cells number | percent number);  
    }  
    vc-cos-mode (alternate | strict);  
}  
use-null-cw;  
vpi vpi-identifier {  
    maximum-vcs maximum-vcs;  
    oam-liveness {  
        down-count cells;
```

```

        up-count cells;
    }
    oam-period (seconds | disable);
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
         burst length);
        queue-length number;
    }
}
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}

```

```
disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
}
source-address-filter {
    mac-address;
```

13

```
frame-length (32 | 64 | 128 | 256);
frame-synchronization {
    alpha number;
    beta number;
    gamma number;
}
minimum-links number;
symmetry (symmetrical-config-and-operation |
    symmetrical-config-asymmetrical-operation);
test-procedure {
    ima-test-start;
    ima-test-stop;
    interface name;
    pattern number;
    period number;
}
transmit-clock (common | independent);
version (1.0 | 1.1);
}
ima-link-options group-id group-id;
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit unit-number | vlan-tags-outer vlan-tag);
    }
    interface interface-name {
        (unit unit-number);
    }
}
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
```

```

mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    drop-timeout milliseconds;
    fragment-threshold bytes;
    cisco-interoperability send-lip-remove-link-for-link-reject;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multi-chassis-protection {
    peer a.b.c.d {
        interface interface-name;
    }
}
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
no-vpivci-swapping;
optics-options {
    alarm low-light-alarm {
        (link-down | syslog);
    }
    tx-power dbm;
    warning low-light-warning {
        (link-down | syslog);
    }
    wavelength nm;
}
otn-options {
    bytes transmit-payload-type value;
    fec (efec | gfec | gfec-sdfec | none);
    (is-ma | no-is-ma);
    (laser-enable | no-laser-enable);
}

```

```
(line-loopback | no-line-loopback);
(local-loopback | no-local-loopback);
(odu-ttim-action-enable | no-odu-ttim-action-enable);
(otu-ttim-action-enable | no-otu-ttim-action-enable);
odu-delay-management {
    (bypass | no-bypass);
    (monitor-end-point | no-monitor-end-point);
    (number-of-frames | no-number-of-frames);
    (start-measurement | no-start-measurement);
}
(prbs | no-prbs);
preemptive-fast-reroute {
    (backward-frr-enable | no-backward-frr-enable);
    (signal-degrade-monitor-enable | no-signal-degrade-monitor-enable);
}
rate {
    (fixed-stuff-bytes | no-fixed-stuff-bytes);
    otu4;
    (pass-through | no-pass-through);
}
signal-degrade {
    ber-threshold-clear value;
    ber-threshold-signal-degrade value;
    interval value;
}
trigger trigger-identifier;
tti tti-identifier;
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        compression;
    }
}
}
psn-vcip psn-vci-identifier;
psn-vpip psn-vpi-identifier;
receive-bucket {
    overflow (discard | tag);
```

```

    rate percentage;
    threshold bytes;
}
redundancy-options {
    priority sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
    hot-standby;
}
satop-options {
    payload-size n;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
    session-limit {
        maximum number;
    }
}

```

```
    rate new-sessions-per-second;
  }
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}
shdsl-options {
  annex (annex-a | annex-b);
  line-rate line-rate;
  loopback (local | remote);
  snr-margin {
    current margin;
    snext margin;
  }
}
sonet-options {
  aggregate asx;
  aps {
    advertise-interval milliseconds;
    annex-b;
    authentication-key key;
    fast-aps-switch;
    force;
    hold-time milliseconds;
    lockout;
    neighbor address;
    paired-group group-name;
    preserve-interface;
    protect-circuit group-name;
    request;
    revert-time seconds;
    switching-mode (bidirectional | unidirectional);
    working-circuit group-name;
  }
  bytes {
    c2 value;
    e1-quiet value;
    f1 value;
    f2 value;
    s1 value;
    z3 value;
    z4 value;
  }
  fcs (16 | 32);
  loopback (local | remote);
  mpls {
    pop-all-labels {
      required-depth number;
    }
  }
}
path-trace trace-string;
(payload-scrambler | no-payload-scrambler);
```

```

rfc-2615;
trigger {
    defect ignore;
    hold-time up milliseconds down milliseconds;
}
vtmapping (itu-t | klm);
(z0-increment | no-z0-increment);
}
speed (10m | 100m | 1g | oc3 | oc12 | oc48);
stacked-vlan-tagging;
switch-options {
    switch-port port-number {
        (auto-negotiation | no-auto-negotiation);
        speed (10m | 100m | 1g);
        link-mode (full-duplex | half-duplex);
    }
}
}
t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
        value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
}
}
traceoptions {
    flag flag <flag-modifier> <disable>;

```

```
}
transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
    accept-source-mac {
        mac-address mac-address {
            policer {
                input cos-policer-name;
                output cos-policer-name;
            }
        }
    }
}
account-layer2-overhead {
    value;
    egress bytes;
    ingress bytes;
}
accounting-profile name;
advisory-options {
    downstream-rate rate;
    upstream-rate rate;
}
allow-any-vci;
atm-scheduler-map (map-name | default);
backup-options {
    interface interface-name;
}
bandwidth rate;
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        maximum-contexts number <force>;
        queues [ queue-numbers ];
        port {
            minimum port-number;
            maximum port-number;
        }
    }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
    underlying-interface interface-name;
}
description text;
```



```

interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    incoming-map {
        caller (caller-id | accept-all);
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
            [ routes ];
        }
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;

```

```

multipoint;
oam-liveness {
    down-count cells;
    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
        pap;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
    dynamic-profile profile-name;
    lcp-max-conf-req number;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-max-conf-req number;
    ncp-restart-timer milliseconds;
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;

```

```

(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id];
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
access-concentrator name;
address address {
    destination address;
}
bundle ml-fpc/pic/port | ls-fpc/pic/port);
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names ];
        output filter-name;
    }
    output-list {
        [filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
max-sessions number;
max-sessions-vsa-ignore;
mtu bytes;
multicast-only;
negotiate-address;
no-redirects;
policer {
    arp policer-template-name;

```

```

    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name;
    mode loose;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-names <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
    profile-name | preferred-source-address address>;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
    }
}

```

```

        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                bandwidth-threshold bits-per-second {
                    priority;
                }
            }
            interface priority;
        }
        route ip-address/mask routing-instance instance-name priority-cost cost;
    }
    virtual-address [ addresses ];
}
}
}
}
}
}
}

```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
 - [Ethernet Interfaces](#)
 - [Junos OS Network Interfaces Library for Routing Devices](#)

[\[edit logical-systems\] Hierarchy Level](#)

The following lists the statements that can be configured at the **[edit logical-systems]** hierarchy level that are also documented in this manual. For more information about logical systems, see the *Logical Systems Feature Guide for Routing Devices*.

```

logical-systems logical-system-name {
    interfaces interface-name {
        unit logical-unit-number {
            accept-source-mac {
                mac-address mac-address {
                    policer {
                        input cos-policer-name;
                        output cos-policer-name;
                    }
                }
            }
        }
    }
}

```

```
allow-any-vci;
atm-scheduler-map (map-name | default);
bandwidth rate;
backup-options {
    interface interface-name;
}
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        port {
            minimum port-number;
            maximum port-number;
        }
        queues [ queue-numbers ];
    }
}
compression-device interface-name;
description text;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    initial-route-check seconds;
    load-threshold number;
    pool pool;
    remote-name remote-callers;
    watch-list {
        [ routes ];
    }
}
disable;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
```

```

layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
}
dynamic-profile profile-name;
pap {
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
}
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}

```

```
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id]
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id]
vpi vpi-identifier;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
bundle interface-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names ];
    }
    output filter-name;
    output-list {
        [filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name> {
```



```

    <mode loose>;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile
    profile-name;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                interface priority;
            }
        }
    }
}

```

```
        bandwidth-threshold bits-per-second {  
            priority;  
        }  
    }  
    route ip-address/mask routing-instance instance-name priority-cost cost;  
    }  
    }  
    virtual-address [ addresses ];  
    }  
    }  
    }  
    }
```

**Related
Documentation**

- *Junos OS Hierarchy and RFC Reference*
- *Ethernet Interfaces*
- *Junos OS Network Interfaces Library for Routing Devices*

CHAPTER 4

Statement Summary

family

```

Syntax  family family {
        accounting {
            destination-class-usage;
            source-class-usage {
                (input | output | input output);
            }
        }
        access-concentrator name;
        address address {
            ... the address subhierarchy appears after the main [edit interfaces interface-name unit
                logical-unit-number family family-name] hierarchy ...
        }
        bridge-domain-type (bvlan | svlan);
        bundle interface-name;
        core-facing;
        demux-destination {
            destination-prefix;
        }
        demux-source {
            source-prefix;
        }
        duplicate-protection;
        dynamic-profile profile-name;
        filter {
            group filter-group-number;
            input filter-name;
            input-list [ filter-names ];
            output filter-name;
            output-list [ filter-names ];
        }
        interface-mode (access | trunk);
        ipsec-sa sa-name;
        isid-list all-service-groups;
        keep-address-and-control;
        mac-validate (loose | strict);
        max-sessions number;
        max-sessions-vsa-ignore;
        mtu bytes;
        multicast-only;
        negotiate-address;
        no-redirects;
        policer {
            arp policer-template-name;
            input policer-template-name;
            output policer-template-name;
        }
        primary;
        protocols [inet iso mpls];
        proxy inet-address address;
        receive-options-packets;
        receive-ttl-exceeded;
        remote (inet-address address | mac-address address);

```

```

rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    master-only;
    multipoint-destination address dlci dlci-identifier;
    multipoint-destination address {
        epd-threshold cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (disable | seconds);
        shaping {
            (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
                sustained rate);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
}
preferred;
primary;
vrrp-group group-id {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-key key;
    authentication-type authentication;
}

```

```
fast-interval milliseconds;  
(preempt | no-preempt) {  
    hold-time seconds;  
}  
priority number;  
track {  
    interface interface-name {  
        bandwidth-threshold bits-per-second priority-cost priority;  
        priority-cost priority;  
    }  
    priority-hold-time seconds;  
    route prefix routing-instance instance-name priority-cost priority;  
}  
    virtual-address [ addresses ];  
}  
virtual-link-local-address ipv6-address;  
}
```

Hierarchy Level [edit interfaces *interface-name* unit *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Release Information Statement introduced before Junos OS Release 7.4.
Option **max-sessions-vs-a-ignore** introduced in Junos OS Release 11.4.

Description Configure protocol family information for the logical interface.



NOTE: Not all subordinate stanzas are available to every protocol family.

Options *family*—Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering



NOTE: This option is not supported on T4000 Type 5 FPCs.

- **ethernet-switching**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite
- **inet**—Internet Protocol version 4 suite
- **inet6**—Internet Protocol version 6 suite
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16
- **multilink-ppp**—Multilink Point-to-Point Protocol
- **mpls**—Multiprotocol Label Switching (MPLS)
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite
- **tnp**—Trivial Network Protocol
- **vpls**—(M Series and T Series routers only) Virtual private LAN service


The remaining statements are explained separately.

Required Privilege Level *interface*—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Documentation

- *Configuring the Protocol Family*
- *Example: Configuring E-LINE and E-LAN Services for a PBB Network on MX Series Routers*
- *Junos OS Services Interfaces Library for Routing Devices*

fast-aps-switch

Syntax	fast-aps-switch;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced in Junos OS Release 12.1.
Description	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only and EX Series switches) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.
	<div> NOTE:<ul style="list-style-type: none">Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.</div>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><i>Reducing APS Switchover Time in Layer 2 Circuits</i>

mac-validate

Syntax	mac-validate (loose strict);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]
Release Information	Statement introduced in Junos OS Release 9.3.
Description	Enable IP and MAC address validation for static Ethernet and IP demux interfaces. Supported on MX Series routers only.
Options	<p>loose—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not match the MAC address of the tuple. Continues to forward incoming packets when the source address of the incoming packet does not match any of the trusted IP addresses.</p> <p>strict—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none">• MAC Address Validation on Static Ethernet Interfaces Overview on page 3• <i>Configuring MAC Address Validation on Static Demux Interfaces</i>

PART 3

Administration

- [Monitoring Commands on page 41](#)
- [Command Summary on page 51](#)

CHAPTER 5

Monitoring Commands

show interfaces demux0 (Demux Interfaces)

Syntax	<pre>show interfaces demux0.logical-interface-number <brief detail extensive terse> <descriptions> <media> <snmp-index snmp-index> <statistics></pre>
Release Information	Command introduced in Junos OS Release 9.0.
Description	(MX Series and M Series routers only) Display status information about the specified demux interface.
Options	<p>none—Display standard information about the specified demux interface.</p> <p>brief detail extensive terse—(Optional) Display the specified level of output.</p> <p>descriptions—(Optional) Display interface description strings.</p> <p>media—(Optional) Display media-specific information about network interfaces.</p> <p>snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.</p> <p>statistics—(Optional) Display static interface statistics.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration
List of Sample Output	show interfaces (Demux) on page 48 show interfaces (PPPoE over Aggregated Ethernet) on page 49 show interfaces extensive (Targeted Distribution for Aggregated Ethernet Links) on page 49 show interfaces demux0 (ACI Interface Set Configured) on page 50
Output Fields	Table 3 on page 42 lists the output fields for the show interfaces (demux interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 3: Demux show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	brief detail extensive none
Interface index	Index number of the physical interface, which reflects its initialization sequence.	brief detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Physical link	Status of the physical link (Up or Down).	detail extensive none
Admin	Administrative state of the interface (Up or Down).	terse
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Link	Status of the physical link (Up or Down).	terse
Targeting summary	Status of aggregated Ethernet links that are configured with targeted distribution (primary or backup)	extensive
Bandwidth	Bandwidth allocated to the aggregated Ethernet links that are configured with targeted distribution.	extensive
Proto	Protocol family configured on the interface.	terse
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	brief detail extensive none
Link-level type	Encapsulation being used on the physical interface.	brief detail extensive
MTU	Maximum transmission unit size on the physical interface.	brief detail extensive
Clocking	Reference clock source: Internal (1) or External (2).	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	brief detail extensive none
Link type	Data transmission type.	detail extensive none
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Physical info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Alternate link address	Backup address of the link.	detail extensive
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled. <p>NOTE: These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface whose definitions are as follows:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant packet threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious: <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	extensive
Output Rate	Output rate in bps and pps.	none
Logical Interface		
Logical interface	Name of the logical interface.	brief detail extensive none
Index	Index number of the logical interface, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number for the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail
Flags	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <i>Common Output Fields Description</i> .	brief detail extensive none
Encapsulation	Encapsulation on the logical interface.	brief extensive none
ACI VLAN: Dynamic Profile	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying demux interface to create dynamic VLAN subscriber interfaces based on ACI information.	brief detail extensive none
Demux	Specific IP demultiplexing (demux) values: <ul style="list-style-type: none"> • Underlying interface—The underlying interface that the demux interface uses. • Index—Index number of the logical interface. • Family—Protocol family configured on the logical interface. • Source prefixes, total—Total number of source prefixes for the underlying interface. • Destination prefixes, total—Total number of destination prefixes for the underlying interface. • Prefix—inet family prefix. 	detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<i>protocol-family</i>	Protocol family configured on the logical interface.	brief
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface set. • Input packets, Output packets—Number of packets received and transmitted on the interface set. • IPv6 transit statistics—Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled. <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Local statistics	<p>Number of transit bytes and packets received and transmitted on the local interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Transit statistics	<p>Number and rate of bytes and packets transiting the switch.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
IPv6 Transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p>NOTE: The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Input packets	Number of packets received on the interface.	none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output packets	Number of packets transmitted on the interface.	none
Protocol	Protocol family. Possible values are described in the “Protocol Field” section under <i>Common Output Fields Description</i> .	detail extensive none
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Mac-Validate Failures	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive statistics none
Local	IP address of the logical interface.	detail extensive terse none
Remote	IP address of the remote interface.	terse
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	detail extensive none
Dynamic-profile	Name of the PPPoE dynamic profile assigned to the underlying interface.	detail extensive none
Service Name Table	Name of the PPPoE service name table assigned to the PPPoE underlying interface.	detail extensive none
Max Sessions	Maximum number of dynamic PPPoE logical interfaces that the router can activate on the underlying interface.	detail extensive none

Table 3: Demux show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Duplicate Protection	State of duplicate protection: On or Off . Duplicate protection prevents the activation of another dynamic PPPoE logical interface on the same underlying interface when a dynamic PPPoE logical interface for a client with the same MAC address is already active on that interface.	detail extensive none
AC Name	Name of the access concentrator.	detail extensive none

Sample Output

show interfaces (Demux)

```

user@host> show interfaces demux0
Physical interface: demux0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 79, Generation: 129
Type: Software-Pseudo, Link-level type: Unspecified, MTU: 9192, Clocking: 1,
Speed: Unspecified
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type      : Full-Duplex
Link flags     : None
Physical info   : Unspecified
Hold-times     : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                0                0 bps
  Input packets :                0                0 pps
  Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes   :                0
  Output bytes  :                0
  Input packets :                0
  Output packets:                0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface demux0.0 (Index 87) (SNMP ifIndex 84) (Generation 312)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Demux:
  Underlying interface: ge-2/0/1.0 (Index 74)
Family Inet Source prefixes, total 1
Prefix: 1.1.1/24
Traffic statistics:
  Input bytes   :                0
  Output bytes  :             1554
  Input packets :                0
  Output packets:             37
IPv6 transit statistics:

```

```

      Input bytes :          0
      Output bytes :          0
      Input packets:          0
      Output packets:         0
Local statistics:
      Input bytes :          0
      Output bytes :        1554
      Input packets:          0
      Output packets:         37
Transit statistics:
      Input bytes :          0          0 bps
      Output bytes :          0          0 bps
      Input packets:          0          0 pps
      Output packets:         0          0 pps
IPv6 transit statistics:
      Input bytes :          0
      Output bytes :          0
      Input packets:          0
      Output packets:         0
Protocol inet, MTU: 1500, Generation: 395, Route table: 0
  Flags: Is-Primary, Mac-Validate-Strict
  Mac-Validate Failures: Packets: 0, Bytes: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 11.1.1/24, Local: 11.1.1.1, Broadcast: 11.1.1.255,
    Generation: 434

```

show interfaces (PPPoE over Aggregated Ethernet)

```

user@host> show interfaces demux0.100
Logical interface demux0.100 (Index 76) (SNMP ifIndex 61160)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ]
  Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 199)
  Link:
    ge-1/0/0
    ge-1/1/0
  Input packets : 0
  Output packets: 0
  Protocol pppoe
    Dynamic Profile: pppoe-profile,
    Service Name Table: service-table1,
    Max Sessions: 100, Duplicate Protection: On,
    AC Name: pppoe-server-1

```

show interfaces extensive (Targeted Distribution for Aggregated Ethernet Links)

```

user@host> show interfaces demux0.1073741824 extensive

Logical interface demux0.1073741824 (Index 75) (SNMP ifIndex 558) (Generation
346)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Demux:
    Underlying interface: ae0 (Index 201)
  Link:
    ge-1/0/0
    ge-1/1/0
    ge-2/0/7
    ge-2/0/8
  Targeting summary:
    ge-1/1/0, primary, Physical link is Up

```

```
ge-2/0/8, backup, Physical link is Up  
Bandwidth: 1000mbps
```

show interfaces demux0 (ACI Interface Set Configured)

```
user@host> show interfaces demux0.1073741827  
Logical interface demux0.1073741827 (Index 346) (SNMP ifIndex 527)  
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1802 0x8100.302 ] Encapsulation:  
ENET2  
Demux: Source Family Inet  
ACI VLAN:  
    Dynamic Profile: aci-vlan-set-profile  
Demux:  
    Underlying interface: ge-1/0/0 (Index 138)  
Input packets : 18  
Output packets: 16  
Protocol inet, MTU: 1500  
    Flags: Sendbcst-pkt-to-re, Unnumbered  
    Donor interface: lo0.0 (Index 322)  
    Preferred source address: 100.20.200.202  
    Addresses, Flags: Primary Is-Default Is-Primary  
        Local: 10.4.12.119  
Protocol pppoe  
    Dynamic Profile: aci-vlan-pppoe-profile,  
    Service Name Table: None,  
    Max Sessions: 32000, Max Sessions VSA Ignore: Off,  
    Duplicate Protection: On, Short Cycle Protection: Off,  
    AC Name: nbc
```

CHAPTER 6

Command Summary

- [Ethernet Interface Operational Mode Commands on page 51](#)

Ethernet Interface Operational Mode Commands

[Table 4 on page 51](#) summarizes the command-line interface (CLI) commands that you can use to monitor and troubleshoot aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces. Commands are listed in alphabetical order.

Table 4: Ethernet Interface Operational Mode Commands

Task	Command
Clear dynamic VLAN interfaces.	<i>clear auto-configuration interfaces</i>
Clear a specified dynamic agent circuit identifier (ACI) interface set configured on the router. You can clear only those ACI interface sets that have no subscriber interface members.	<i>clear auto-configuration interfaces interface-set</i>
Clear Link Aggregation Control Protocol (LACP) statistics.	<i>clear lacp statistics</i>
Clear Link Aggregation Control Protocol (LACP) timeout entries.	<i>clear lacp timeouts</i>
Clear learned MAC addresses from the hardware and MAC database. Static MAC addresses are not cleared.	<i>clear interfaces mac-database</i>
Clear statistics that are collected for every MAC address, including policer statistics, on a given physical or logical interface.	<i>clear interfaces mac-database statistics</i>
Clear statistics that are collected for interface sets.	<i>clear interfaces interface-set statistics</i>
Clear the existing continuity measurement and restart counting the operational uptime.	<i>clear oam ethernet connectivity-fault-management continuity-measurement</i>

Table 4: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Clear ITU-T Y.1731 Ethernet frame delay measurement (ETH-DM) delay statistics and ETH-DM frame counts. (MX Series routers)	<i>clear oam ethernet connectivity-fault-management delay-statistics</i>
Clear Operation, Administration, and Management (OAM) and connectivity fault management (CFM) linktrace database information.	<i>clear oam ethernet connectivity-fault-management linktrace path-database</i>
Clear all loss statistics maintained by CFM for a given maintenance domain and maintenance association.	<i>clear oam ethernet connectivity-fault-management loss-statistics</i>
Clear connectivity-fault-management policer statistics.	<i>clear oam ethernet connectivity-fault-management policer</i>
Clear the Ethernet OAM service-level agreement (SLA) iterator statistics.	<i>clear oam ethernet connectivity-fault-management sla-iterator-statistics</i>
Clear all statistics maintained by CFM. (Routers that support IEEE 802.1ag OAM CFM) In addition, for interfaces that support ITU-T Y.1731 Ethernet frame delay measurement (ETH-DM), also clear any ETH-DM statistics and frame counts for CFM maintenance association end points (MEPs).	<i>clear oam ethernet connectivity-fault-management statistics</i>
Clear ITU-T Y.1731 Ethernet synthetic loss measurement (ETH-SLM) delay statistics and ETH-SLM frame counts. (MX Series routers, Modular Port Concentrators only)	<i>clear oam ethernet connectivity-fault-management synthetic-loss-measurement</i>
Clear Operation, Administration, and Management (OAM) link fault management state information and restart the link discovery process on Ethernet interfaces.	<i>clear oam ethernet link-fault-management state</i>
Clear Operation, Administration, and Management (OAM) statistics link fault management statistics for Ethernet interfaces.	<i>clear oam ethernet link-fault-management statistics</i>
Clear the statistics for all Ethernet ring protection groups or a specific Ethernet ring protection group.	<i>clear protection-group ethernet-ring statistics</i>
Check the reachability of a remote IEEE 802.1ag OAM maintenance association end point (MEP) or maintenance association intermediate point (MIP).	<i>ping ethernet</i>

Table 4: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Manually rebalance the subscribers on an aggregated Ethernet bundle with targeted distribution enabled.	<i>request interface rebalance (Aggregated Ethernet for Subscriber Management)</i>
Manually revert egress traffic from the designated backup link to the designated primary link of an aggregated Ethernet interface for which link protection is enabled, or manually switch egress traffic from the primary link to the backup link.	<i>request interface (revert switchover) (Aggregated Ethernet Link Protection)</i>
Force LACP link switchover.	<i>request lacp link-switchover</i>
Clear the lockout, force switch, manual switch, exercise, and wait-to-restore states.	<i>request protection-group ethernet-aps clear</i>
Test if APS is operating correctly.	<i>request protection-group ethernet-aps exercise</i>
Force traffic to switch from the active path to the alternate path.	<i>request protection-group ethernet-aps force-switch</i>
Lock the protection path, forcing the use of the working path.	<i>request protection-group ethernet-aps lockout</i>
Force traffic to switch from the active path to the alternate path.	<i>request protection-group ethernet-aps manual-switch</i>
Display status information about aggregated Fast Ethernet or Gigabit Ethernet router interfaces.	<i>show interfaces (Aggregated Ethernet)</i> <i>show interfaces (far-end-interval)</i>
Display status information about Fast Ethernet interfaces.	<i>show interfaces (Fast Ethernet)</i>
Display status information about the specified Gigabit Ethernet interface.	<i>show interfaces (Gigabit Ethernet)</i>
Display status information about 10-Gigabit Ethernet router interfaces.	<i>show interfaces (10-Gigabit Ethernet)</i>

Table 4: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2 and IQ2E PICs on standalone T640 routers and on T640 routers in a TX Matrix or in a TXP Matrix.	<i>show interfaces extensive</i>
Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2 PICs on M10i and M120 routers.	
Display IPv6 interface statistics for IPv6 traffic traversing through the IQ2E PICs on M10i, M120, and M320 routers.	
Display information about Gigabit Ethernet or 10-Gigabit Ethernet router interface sets.	<i>show interfaces interface-set (Ethernet Interface Set)</i>
Display information about Gigabit Ethernet or 10-Gigabit Ethernet router interface set queues.	<i>show interfaces interface-set queue</i>
Display the transceiver temperature, laser bias current, laser output power, receive optical power, and related alarms for 10-Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces.	<i>show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and 100-Gigabit Ethernet)</i>
Display information about integrated routing and bridging interfaces.	<i>show interfaces irb</i>
Display status information about the distribution of subscribers on different links in an aggregated Ethernet bundle.	<i>show interfaces targeting (Aggregated Ethernet for Subscriber Management)</i>
Display Link Aggregation Control Protocol (LACP) information for aggregated, Fast Ethernet, or Gigabit Ethernet router interfaces.	<i>show lacp interfaces</i>
Display Link Aggregation Control Protocol (LACP) statistics.	<i>show lacp statistics</i>
Display Link Aggregation Control Protocol timeout entries.	<i>show lacp timeouts</i>
Display MAC address information for Gigabit Ethernet router interfaces.	<i>show interfaces mac-database (Gigabit Ethernet)</i>
Display information on a specified interface that is part of a multichassis link aggregation configuration.	<i>show interfaces mc-ae</i>
Display ETH-DM statistics for CFM MEPs. (MX Series routers, Ethernet DPCs).	<i>show oam ethernet connectivity-fault-management delay-statistics</i>

Table 4: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Display IEEE 802.1ag OAM connectivity fault management forwarding state information for Ethernet interfaces.	<i>show oam ethernet connectivity-fault-management forwarding-state</i>
Display OAM connectivity fault management information for Ethernet interfaces. For interfaces that support ETH-DM, also display any ETH-DM frame counts when the detail or extensive option is included. In all other cases, ETH-DM frame counts are zero.	<i>show oam ethernet connectivity-fault-management interfaces</i>
Display OAM connectivity fault management linktrace path database information.	<i>show oam ethernet connectivity-fault-management linktrace path-database</i>
Display OAM connectivity fault management maintenance association end point (MEP) database information. For interfaces that support ETH-DM, also display any ETH-DM frame counts. In all other cases, ETH-DM frame counts are zero.	<i>show oam ethernet connectivity-fault-management mep-database</i>
Display ETH-DM statistics and frame counts for CFM MEPs. (MX Series routers, Ethernet DPCs)	<i>show oam ethernet connectivity-fault-management mep-statistics</i>
Display ETH-LM statistics for on-demand mode only.	<i>show oam ethernet connectivity-fault-management loss-statistics</i>
Display information about maintenance intermediate points (MIPs) for the Ethernet OAM 802.1ag standard for connectivity fault management (CFM).	<i>show oam ethernet connectivity-fault-management mip</i>
Display OAM connectivity fault management path database information for hosts configured with MEP.	<i>show oam ethernet connectivity-fault-management path-database</i>
Displays connectivity-fault-management policer statistics.	<i>show oam ethernet connectivity-fault-management policer</i>
Display the Ethernet OAM service-level agreement (SLA) iterator statistics.	<i>show oam ethernet connectivity-fault-management sla-iterator-statistics</i>
Display ETH-SLM statistics for CFM MEPs (on-demand mode only). (MX Series routers, Ethernet MPCs)."	<i>show oam ethernet connectivity-fault-management synthetic-loss-statistics</i>

Table 4: Ethernet Interface Operational Mode Commands (*continued*)

Task	Command
Display OAM Ethernet Virtual Connection (EVC) information for hosts configured with Ethernet Local Management Interface (E-LMI). (MX series only)	<i>show oam ethernet evc</i>
Display OAM fault management statistics for Ethernet interfaces.	<i>show oam ethernet link-fault-management</i>
Display OAM Ethernet Local Management Interface status information for an LMI configured interface. (MX series only)	<i>show oam ethernet lmi</i>
Display OAM Ethernet Local Management Interface statistics for an LMI configured interface. (MX series only)	<i>show oam ethernet lmi statistics</i>
Display protection group Ethernet ring Automatic Protection Switching (APS).	<i>show protection-group ethernet-ring aps</i>
Display data channel information for all Ethernet ring protection groups or for a specific Ethernet ring protection group.	<i>show protection-group ethernet-ring data-channel</i>
Display protection group Ethernet ring interfaces.	<i>show protection-group ethernet-ring interface</i>
Display protection group Ethernet ring nodes.	<i>show protection-group ethernet-ring node-state</i>
Display protection group Ethernet ring statistics.	<i>show protection-group ethernet-ring statistics</i>
Display all data channel logical interfaces and the VLAN IDs controlled by a ring instance data channel.	<i>show protection-group ethernet-ring vlan</i>
Trace the path between two Ethernet OAM end points.	<i>traceroute ethernet</i>

PART 4

Troubleshooting

- [Ethernet on page 59](#)
- [Interface Diagnostics on page 63](#)

CHAPTER 7

Ethernet

traceroute ethernet

Syntax	traceroute ethernet (<i>mac-address</i> <i>mep-id</i>) maintenance-association <i>ma-name</i> maintenance-domain <i>md-name</i> ttl <i>value</i> <wait seconds>
Release Information	Command introduced in Junos OS Release 9.0. mep-id option introduced in Junos OS Release 9.1.
Description	<p>Triggers the linktrace protocol to trace the route between two maintenance points. The result of the traceroute protocol is stored in the path database. To display the path database, use the show oam ethernet connectivity-fault-management path-database command.</p> <p>Before using the traceroute command, you can verify the remote MEP's MAC address using the show oam ethernet connectivity-fault-management path-database command.</p>
Options	<p>mac-address—Destination unicast MAC address of the remote maintenance point.</p> <p>mep-id—MEP identifier of the remote maintenance point. The range of values is 1 through 8191.</p> <p>maintenance-association <i>ma-name</i>—Specifies an existing maintenance association from the set of configured maintenance associations.</p> <p>maintenance-domain <i>md-name</i>—Specifies an existing maintenance domain from the set of configured maintenance domains.</p> <p>ttl <i>value</i>—Number of hops to use in the linktrace request. The range is 1 to 255 hops. The default is 4.</p> <p>wait <i>seconds</i>—(Optional) Maximum time to wait for a response to the traceroute request. The range is 1 to 255 seconds. The default is 5.</p>
Required Privilege Level	network
List of Sample Output	traceroute ethernet on page 61
Output Fields	<p>Table 5 on page 60 lists the output fields for the traceroute ethernet command. Output fields are listed in the approximate order in which they appear.</p>

Table 5: traceroute ethernet Output Fields

Field Name	Field Description
Linktrace to	MAC address of the destination maintenance point.
Interface	Local interface used to send the linktrace message (LTM).

Table 5: traceroute ethernet Output Fields (*continued*)

Field Name	Field Description
Maintenance Domain	Maintenance domain specified in the traceroute command.
Level	Maintenance domain level configured.
Maintenance Association	Maintenance association specified in the traceroute command.
Local Mep	The local maintenance end point identifier.
Transaction Identifier	4-byte identifier maintained by the MEP. Each LTM uses a transaction identifier. The transaction identifier is maintained globally across all Maintenance Domains. Use the transaction identifier to match an incoming linktrace response (LTR), with a previously sent LTM.
Hop	Sequential hop count of the linktrace path.
TTL	Number of hops remaining in the linktrace message. The time to live (TTL) is decremented at each hop.
Source MAC address	MAC address of the 802.1ag maintenance point that is sending the linktrace message.
Next-hop MAC address	MAC address of the 802.1ag node that is the next hop in the LTM path.

Sample Output

traceroute ethernet

```
user@host> traceroute ethernet maintenance-domain md1 maintenance-association ma1
00:90:69:7e:01:ff
```

```
Linktrace to 00:01:02:03:04:05, Interface : ge-5/0/0.0
```

```
Maintenance Domain: MD1, Level: 7
```

```
Maintenance Association: MA1, Local Mep: 1
```

Hop	TTL	Source MAC address	Next hop MAC address
Transaction Identifier:100001			
1	63	00:00:aa:aa:aa:aa	00:00:bb:bb:bb:bb
2	62	00:00:bb:bb:bb:bb	00:00:cc:cc:cc:cc
3	61	00:00:cc:cc:cc:cc	00:01:02:03:04:05
4	60	00:01:02:03:04:05	00:00:00:00:00:00

CHAPTER 8

Interface Diagnostics

- [Interface Diagnostics on page 63](#)

Interface Diagnostics

You can use two diagnostic tools to test the physical layer connections of interfaces: loopback testing and bit error rate test (BERT) testing. Loopback testing enables you to verify the connectivity of a circuit. BERT testing enables you to identify poor signal quality on a circuit. This section contains the following topics:

- [Configuring Loopback Testing on page 63](#)
- [Interface Diagnostics on page 65](#)

Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDS0, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own data link layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own data link layer packets, you can assume the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

There are several types of loopback testing supported by the Junos OS, as follows:

- DCE local—Loops packets back on the local DCE.
- DCE remote—Loops packets back on the remote DCE.

- **Local**—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- **Payload**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- **Remote**—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 6 on page 64 shows the loopback modes supported on the various interface types.

Table 6: Loopback Modes by Interface Type

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	<i>Configuring Ethernet Loopback Capability</i>
Circuit Emulation E1	Local and remote	<i>Configuring E1 Loopback Capability</i>
Circuit Emulation T1	Local and remote	<i>Configuring T1 Loopback Capability</i>
E1 and E3	Local and remote	<i>Configuring E1 Loopback Capability and Configuring E3 Loopback Capability</i>
NxDSO	Payload	<i>Configuring Channelized E1 IQ and IQE Interfaces, Configuring T1 and NxDSO Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Channelized STM1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces</i>
Serial (V.35 and X.21)	Local and remote	<i>Configuring Serial Loopback Capability</i>
Serial (EIA-530)	DCE local, DCE remote, local, and remote	<i>Configuring Serial Loopback Capability</i>
SONET/SDH	Local and remote	<i>Configuring SONET/SDH Loopback Capability</i>

Table 6: Loopback Modes by Interface Type (*continued*)

Interface	Loopback Modes	Usage Guidelines
T1 and T3	Local, payload, and remote	<i>Configuring T1 Loopback Capability and Configuring T3 Loopback Capability</i> <i>See also Configuring the T1 Remote Loopback Response</i>

To configure loopback testing, include the **loopback** statement:

loopback mode;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ds0-options]
- [edit interfaces *interface-name* e1-options]
- [edit interfaces *interface-name* e3-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* gigether-options]
- [edit interfaces *interface-name* serial-options]
- [edit interfaces *interface-name* sonet-options]
- [edit interfaces *interface-name* t1-options]
- [edit interfaces *interface-name* t3-options]

Interface Diagnostics

BERT allows you to troubleshoot problems by checking the quality of links. You can configure any of the following interfaces to execute a BERT when the interface receives a request to run this test: E1, E3, T1, T3; the channelized DS3, OC3, OC12, and STM1 interfaces; and the channelized DS3 IQ, E1 IQ, and OC12 IQ interfaces.

A BERT test requires a line loop to be in place on either the transmission devices or the far-end router. The local router generates a known bit pattern and sends it out the transmit path. The received pattern is then verified against the sent pattern. The higher the bit error rate of the received pattern, the worse the noise is on the physical circuit. As you move the position of the line loop increasingly downstream toward the far-end router, you can isolate the troubled portion of the link.

To configure BERT, you must configure the duration of the test, the bit pattern to send on the transmit path, and the error rate to monitor when the inbound pattern is received.

To configure the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream, include the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements, respectively, at the [edit interfaces *interface-name* *interface-type*-options] hierarchy level:

```
[edit interfaces interface-name interface-type-options]
bert-algorithm algorithm;
bert-error-rate rate;
bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

rate is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from 10^{-0} (1 error per bit) to 10^{-7} (1 error per 10 million bits).

algorithm is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]
user@host# set bert-algorithm ?
Possible completions:
pseudo-2e11-o152    Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151    Pattern is 2^15 - 1 (per 0.152 standard)
pseudo-2e20-o151    Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153    Pattern is 2^20 - 1 (per 0.153 standard)
...
```

For specific hierarchy information, see the individual interface types.



NOTE: The 4-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7            Pattern is 2^7 - 1
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: The IQE PICs support only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 - 1 (per 0.151 standard)
repeating-1-in-4       1 bit in 4 is set
repeating-1-in-8       1 bit in 8 is set
repeating-3-in-24      3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



NOTE: BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is $2^{23} - 1$ (per 0.151 standard)

Table 7 on page 68 shows the BERT capabilities for various interface types.

Table 7: BERT Capabilities by Interface Type

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)		<ul style="list-style-type: none"> Limited algorithms
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)		<ul style="list-style-type: none"> Limited algorithms
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time Limited algorithms
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> Single port at a time
Channelized OC12	N/A	Yes (channel 0–11)	<ul style="list-style-type: none"> Single channel at a time Limited algorithms No bit count
Channelized STM1	Yes (channel 0–62)	N/A	<ul style="list-style-type: none"> Multiple channels Only one algorithm No error insert No bit count
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> Multiple ports and channels Limited algorithms for T1 No error insert for T1 No bit count for T1

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see *Channelized IQ and IQE Interfaces Properties*.

Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name* *interface-type*-bert-start** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you wish to terminate the test sooner, issue the **test interface *interface-name* *interface-type*-bert-stop** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the *Junos OS Operational Mode Commands*.



NOTE: To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

Example: Configuring Bit Error Rate Testing

Configure a BERT test on a T3 interface. In this example, the run duration lasts for 120 seconds. The configured error rate is 0, which corresponds to a bit error rate of 10^{-0} (1 error per bit). The configured bit pattern of **all-ones-repeating** means that every bit the interface sends is a set to a value of 1.

```
[edit interfaces]
t3-1/2/0 {
  t3-options {
    bert algorithm all-ones-repeating;
    bert-error-rate 0;
    bert-period 120;
```

```
}  
}
```

PART 5

Index

- [Index on page 73](#)

Index

Symbols

#, comments in configuration statements.....	x
(), in syntax descriptions.....	x
< >, in syntax descriptions.....	x
[], in configuration statements.....	x
{ }, in configuration statements.....	x
(pipe), in syntax descriptions.....	x

B

BERT	
configuring interface diagnostics.....	65
bert-algorithm statement	
usage guidelines.....	65
bert-error-rate statement	
usage guidelines.....	65
bert-period statement	
usage guidelines.....	65
bit error rate test See BERT	
braces, in configuration statements.....	x
brackets	
angle, in syntax descriptions.....	x
square, in configuration statements.....	x

C

comments, in configuration statements.....	x
conventions	
text and syntax.....	ix
curly braces, in configuration statements.....	x
customer support.....	xi
contacting JTAC.....	xi

D

documentation	
comments on.....	xi

F

family statement.....	32
fast-aps-switch statement.....	36
font conventions.....	ix

G

Gigabit Ethernet interfaces	
demultiplexing interface information,	
displaying.....	42

I

interfaces	
configuration statements.....	9

L

linktrace	
tracing.....	60
logical systems	
configuration statements.....	25
loopback testing.....	63

M

mac-validate statement.....	37
manuals	
comments on.....	xi

P

parentheses, in syntax descriptions.....	x
--	---

S

show interfaces demux0 (Demux Interfaces)	
command.....	42
support, technical See technical support	
syntax conventions.....	ix

T

technical support	
contacting JTAC.....	xi
traceroute ethernet.....	60
traceroute ethernet command.....	60

