



---

Junos<sup>®</sup> OS

## E3 Interfaces Feature Guide for Routing Devices



---

Published: 2013-08-01

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*Junos® OS E3 Interfaces Feature Guide for Routing Devices*

Copyright © 2013, Juniper Networks, Inc.

All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	ix
	Documentation and Release Notes . . . . .	ix
	Supported Platforms . . . . .	ix
	Using the Examples in This Manual . . . . .	ix
	Merging a Full Example . . . . .	x
	Merging a Snippet . . . . .	x
	Documentation Conventions . . . . .	xi
	Documentation Feedback . . . . .	xiii
	Requesting Technical Support . . . . .	xiii
	Self-Help Online Tools and Resources . . . . .	xiii
	Opening a Case with JTAC . . . . .	xiv
<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>E3 Interfaces . . . . .</b>	<b>3</b>
	E3 Interfaces Overview . . . . .	3
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>E3 Interfaces . . . . .</b>	<b>7</b>
	Configuring E3 Physical Interface Properties . . . . .	7
	Configuring E3 BERT Properties . . . . .	8
	Configuring the E3 CSU Compatibility Mode . . . . .	9
	Configuring the E3 Frame Checksum . . . . .	10
	Configuring the E3 Idle Cycle Flag . . . . .	11
	Configuring E3 Data Inversion . . . . .	11
	Configuring E3 Loopback Capability . . . . .	12
	Example: Configuring E3 Loopback Capability . . . . .	12
	Configuring E3 HDLC Payload Scrambling . . . . .	13
	Configuring the E3 Start and End Flags . . . . .	13
	Configuring E3 IQ and IQE Unframed Mode . . . . .	14
<b>Chapter 3</b>	<b>Network Interfaces Configuration Statements and Hierarchy . . . . .</b>	<b>15</b>
	[edit interfaces] Hierarchy Level . . . . .	15
	[edit logical-systems] Hierarchy Level . . . . .	31
<b>Chapter 4</b>	<b>Statement Summary . . . . .</b>	<b>37</b>
	bert-algorithm . . . . .	38
	bert-error-rate . . . . .	40
	bert-period . . . . .	42
	compatibility-mode . . . . .	44
	e3-options . . . . .	45

	fast-aps-switch .....	46
	fcs .....	47
	idle-cycle-flag .....	48
	invert-data .....	49
	loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) .....	50
	payload-scrambler .....	52
	start-end-flag .....	53
	unframed .....	54
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 5</b>	<b>Monitoring Commands .....</b>	<b>57</b>
	show interfaces (T3 or E3) .....	58
<b>Chapter 6</b>	<b>Command Summary .....</b>	<b>75</b>
<b>Part 4</b>	<b>Troubleshooting</b>	
<b>Chapter 7</b>	<b>Interface Diagnostics .....</b>	<b>79</b>
	Interface Diagnostics .....	79
	Configuring Loopback Testing .....	79
	Interface Diagnostics .....	81
	Starting and Stopping a BERT Test .....	85
	Example: Configuring Bit Error Rate Testing .....	85
	Interface Diagnostics Operational Mode Commands .....	86
<b>Part 5</b>	<b>Index</b>	
	Index .....	91

# List of Figures

Part 2	Configuration	
Chapter 2	E3 Interfaces .....	7
	Figure 1: Remote and Local E3 Loopback .....	12



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>ix</b>
	Table 1: Notice Icons . . . . .	xi
	Table 2: Text and Syntax Conventions . . . . .	xi
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 2</b>	<b>E3 Interfaces</b> . . . . .	<b>7</b>
	Table 3: Subrate Values for E3 Digital Link Compatibility Mode . . . . .	9
<b>Part 3</b>	<b>Administration</b>	
<b>Chapter 5</b>	<b>Monitoring Commands</b> . . . . .	<b>57</b>
	Table 4: T3 or E3 show interfaces Output Fields . . . . .	58
<b>Part 4</b>	<b>Troubleshooting</b>	
<b>Chapter 7</b>	<b>Interface Diagnostics</b> . . . . .	<b>79</b>
	Table 5: Loopback Modes by Interface Type . . . . .	80
	Table 6: BERT Capabilities by Interface Type . . . . .	84
	Table 7: Interface Diagnostics Operational Mode Commands . . . . .	86





# About the Documentation

- Documentation and Release Notes on page ix
- Supported Platforms on page ix
- Using the Examples in This Manual on page ix
- Documentation Conventions on page xi
- Documentation Feedback on page xiii
- Requesting Technical Support on page xiii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- M Series
- MX Series
- T Series
- J Series

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xi defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.

Table 2 on page xi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b> No alarms currently active

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies book names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS System Basics Configuration Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Enclose optional keywords or variables.	<b>stub &lt;default-metric metric&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <i>(string1   string2   string3)</i>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Enclose a variable for which you can substitute one or more values.	<b>community name members [ community-ids ]</b>
Indentation and braces ( { } )	Identify a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
<b>GUI Conventions</b>		
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

---

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>. If you are using e-mail, be sure to include the following information with your comments:

- Document or topic name
- URL or page number
- Software release version (if applicable)

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>

- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Overview

- [E3 Interfaces on page 3](#)





## CHAPTER 1

# E3 Interfaces

- [E3 Interfaces Overview on page 3](#)

### E3 Interfaces Overview

---

E3 is a high-speed WAN digital communication technique designed to operate over copper facilities at a rate of 34.368 Mbps. Widely used outside North America, it is the time-division multiplexing scheme used to carry 16 E1 circuits. The following standards apply to E3 interfaces:

- ITU-T Recommendation G.703, *Physical/electrical characteristics of hierarchical digital interfaces*, describes data rates and multiplexing schemes for the E Series.
- ITU-T Recommendation G.751, *General Aspects of Digital Transmission Systems: Terminal Equipment*, describes framing methods.
- ITU-T Recommendation G.775, *Loss of Signal (LOS) and Alarm Indication Signal (AIS) Defect Detection and Clearance Criteria*, describes alarm reporting methods.

The Junos OS supports the E3 Physical Interface Card (PIC) and the E3 Intelligent Queuing (IQ and IQE) PICs. The E3 IQ and E3 IQE PICs supports transmission scheduling on logical interfaces. For more information, see the *Junos OS Class of Service Library for Routing Devices*.



**NOTE:** In unframed mode, the E3 IQ and E3 IQE PICs do not detect yellow or loss-of-frame alarms.

#### Related Documentation

- [Physical Interfaces](#)



## PART 2

# Configuration

- [E3 Interfaces on page 7](#)
- [Network Interfaces Configuration Statements and Hierarchy on page 15](#)
- [Statement Summary on page 37](#)



## CHAPTER 2

# E3 Interfaces

- [Configuring E3 Physical Interface Properties on page 7](#)
- [Configuring E3 BERT Properties on page 8](#)
- [Configuring the E3 CSU Compatibility Mode on page 9](#)
- [Configuring the E3 Frame Checksum on page 10](#)
- [Configuring the E3 Idle Cycle Flag on page 11](#)
- [Configuring E3 Data Inversion on page 11](#)
- [Configuring E3 Loopback Capability on page 12](#)
- [Configuring E3 HDLC Payload Scrambling on page 13](#)
- [Configuring the E3 Start and End Flags on page 13](#)
- [Configuring E3 IQ and IQE Unframed Mode on page 14](#)

## Configuring E3 Physical Interface Properties

---

To configure E3-specific physical interface properties, include the **e3-options** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
e3-options {  
  bert-algorithm algorithm;  
  bert-error-rate rate;  
  bert-period seconds;  
  compatibility-mode (digital-link | kentrox | larscom) <subrate value>;  
  fcs (16 | 32);  
  idle-cycle-flag value;  
  invert-data;  
  loopback (local | remote);  
  (payload-scrambler | no-payload-scrambler);  
  start-end-flag value;  
  (unframed | no-unframed);  
}
```

**Related Documentation**

- [Physical Interfaces](#)

## Configuring E3 BERT Properties

This section discusses BERT properties for the E3 interface specifically. For general information about the Junos implementation of the BERT procedure, see [“Interface Diagnostics” on page 81](#).

You can configure an E3 interface to execute a bit error rate test (BERT) when the interface receives a request to run this test. You specify the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream by including the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements at the **[edit interfaces interface-name e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

**rate** is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from  $10^{-0}$  (0, which corresponds to no errors) to  $10^{-7}$  (1 error per 10 million bits).

**algorithm** is the pattern to send in the bit stream. On E3 interfaces, you can also select the pattern to send in the bit stream by including the **bert-algorithm** statement at the **[edit interfaces interface-name interface-options]** hierarchy level:

```
[edit interfaces interface-name interface-options]
  bert-algorithm algorithm;
```

For a list of supported algorithms, enter a **?** after the **bert-algorithm** statement; for example:

```
[edit interfaces e3-0/0/0 e3-options]
user@host# set bert-algorithm ?
Possible completions:
pseudo-2e11-o152 Pattern is 2^11 - 1 (per O.152 standard)
pseudo-2e15-o151 Pattern is 2^15 - 1 (per O.151 standard)
pseudo-2e20-o151 Pattern is 2^20 - 1 (per O.151 standard)
pseudo-2e20-o153 Pattern is 2^20 - 1 (per O.153 standard)
```

For specific hierarchy information, see individual interface types. For information about running the BERT procedure, see the *Junos OS Operational Mode Commands*.

### Related Documentation

- [Configuring T3 BERT Properties](#)
- [Interface Diagnostics on page 79](#)
- [Interface Diagnostics Operational Mode Commands on page 86](#)

## Configuring the E3 CSU Compatibility Mode

Subrating an E3 interface reduces the maximum allowable peak rate by limiting the High-level Data Link Control (HDLC)-encapsulated payload. Subrate modes configure the PIC to connect with channel service units (CSUs) that use proprietary methods of multiplexing.

On M Series and T Series routers, you can configure E3 interfaces to be compatible with a Digital Link, Kentrox, or Larscom CSU. On J Series Services Routers, you can configure E3 interfaces to be compatible with a Digital Link or Kentrox CSU.



**NOTE:** To subrate an E3 interface to be compatible with a Kentrox CSU, you must have an IQ-based PIC. Non-IQ PICs allow a commit of the configuration, but the interfaces remain at the full E3 rate for the Kentrox compatibility mode.

For E3 interfaces on IQE PICs, subrate is not supported and the `E3-options compatibility-mode` and `payload-scrambler` are invalid. Although Junos OS CLI allows a commit of this configuration, the interfaces remain at the full E3 rate and implicitly default to only Kentrox compatibility mode.

To configure an E3 interface so that it is compatible with the CSU at the remote end of the line, include the `compatibility-mode` statement at the `[edit interfaces interface-name e3-options]` hierarchy level:

```
[edit interfaces interface-name e3-options]
  compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
```

The subrate of an E3 interface must exactly match that of the remote CSU. To specify the subrate, include the `subrate` statement in the configuration:

- For Kentrox CSUs, specify the subrate as a number from 1 through 48 that exactly matches the value configured on the CSU. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps.
- For Digital Link CSUs, you can specify the subrate value to match the data rate configured on the CSU in the format `xkb` or `x.xMb`. You can configure the subrate values shown in [Table 3 on page 9](#).
- Larscom CSUs do not support the E3 subrate.

**Table 3: Subrate Values for E3 Digital Link Compatibility Mode**

358 Kbps	7.2 Mbps	14.0 Mbps	20.8 Mbps	27.6 Mbps
716 Kbps	7.5 Mbps	14.3 Mbps	21.1 Mbps	27.9 Mbps
1.1 Mbps	7.9 Mbps	14.7 Mbps	21.5 Mbps	28.3 Mbps
1.4 Mbps	8.2 Mbps	15.0 Mbps	21.8 Mbps	28.6 Mbps

**Table 3: Subrate Values for E3 Digital Link Compatibility Mode (*continued*)**

1.8 Mbps	8.6 Mbps	15.4 Mbps	22.2 Mbps	29.0 Mbps
2.1 Mbps	9.0 Mbps	15.8 Mbps	22.6 Mbps	29.4 Mbps
2.5 Mbps	9.3 Mbps	16.1 Mbps	22.9 Mbps	29.7 Mbps
2.9 Mbps	9.7 Mbps	16.5 Mbps	23.3 Mbps	30.1 Mbps
3.2 Mbps	10.0 Mbps	16.8 Mbps	23.6 Mbps	30.4 Mbps
3.6 Mbps	10.4 Mbps	17.2 Mbps	24.0 Mbps	30.8 Mbps
3.9 Mbps	10.7 Mbps	17.5 Mbps	24.3 Mbps	31.1 Mbps
4.3 Mbps	11.1 Mbps	17.9 Mbps	24.7 Mbps	31.5 Mbps
4.7 Mbps	11.5 Mbps	18.3 Mbps	25.1 Mbps	31.9 Mbps
5.0 Mbps	11.8 Mbps	18.6 Mbps	25.4 Mbps	32.2 Mbps
5.4 Mbps	12.2 Mbps	19.0 Mbps	25.8 Mbps	32.6 Mbps
5.7 Mbps	12.5 Mbps	19.3 Mbps	26.1 Mbps	32.9 Mbps
6.1 Mbps	12.9 Mbps	19.7 Mbps	26.5 Mbps	33.3 Mbps
6.4 Mbps	13.2 Mbps	20.0 Mbps	26.9 Mbps	33.7 Mbps
6.8 Mbps	13.6 Mbps	20.4 Mbps	27.2 Mbps	

For information about subrating a T3 interface, see *Configuring the T3 CSU Compatibility Mode*.

#### Related Documentation

- *Configuring the T3 CSU Compatibility Mode*

## Configuring the E3 Frame Checksum

You can configure a 32-bit checksum, which provides more reliable packet verification. However, some older equipment might not support 32-bit checksums.

On a channelized OC12 interface, the **fcs** statement is not supported. To configure FCS on each E3 channel, you must include the **e3-options fcs** statement in the configuration for each channel.

To configure a 32-bit checksum, include the **fcs** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
```



```
fcs 32;
```

To return to the default 16-bit frame checksum, delete the **fcs 32** statement from the configuration:

```
[edit]
user@host# delete interfaces e3-fpc/pic/port e3-options fcs 32
```

To explicitly configure a 16-bit checksum, include the **fcs** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
fcs 16;
```

Related  
Documentation

- [fcs on page 47](#)

## Configuring the E3 Idle Cycle Flag

By default, an E3 interface transmits the value 0x7E in the idle cycles. To have the interface transmit the value 0xFF (all ones) instead, include the **idle-cycle-flag** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level, specifying the **ones** option:

```
[edit interfaces interface-name e3-options]
idle-cycle-flag ones;
```

To explicitly configure the default value of 0x7E, include the **idle-cycle-flag** statement with the **flags** option:

```
[edit interfaces interface-name e3-options]
idle-cycle-flag flags;
```

Related  
Documentation

- [idle-cycle-flag on page 48](#)

## Configuring E3 Data Inversion

By default, data inversion is disabled. To enable data inversion at the HDLC level, include the **invert-data** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
invert-data;
```

When you enable data inversion, unused data bits in the data stream are transmitted inverted; that is, zeroes are transmitted as ones and ones as zeroes. Enable inversion to be compatible with another vendor's E3 interface.


Related  
Documentation

- [invert-data on page 49](#)

## Configuring E3 Loopback Capability

You can configure loopback capability between the local E3 interface and the remote CSU. You can configure the loopback to be local or remote. With local loopback, the E3 interface can transmit packets to the CSU, but receives its own transmission back again and ignores data from the CSU. With remote loopback, packets sent from the CSU are received by the E3 interface, forwarded if there is a valid route, and immediately retransmitted to the CSU (see [Figure 1 on page 12](#)).

**Figure 1: Remote and Local E3 Loopback**

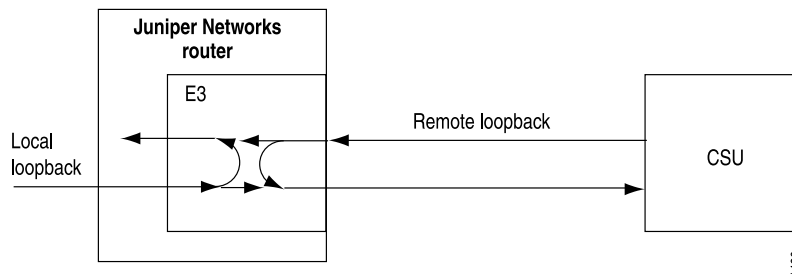

To configure loopback capability on an E3 interface, include the **loopback** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
  loopback (local | remote);
```

Packets can be looped on either the local router or the remote CSU.

To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, you issue the **test interface** command.

For more information about configuring BERT, see [“Interface Diagnostics” on page 81](#). For more information about using operational mode commands to test interfaces, see the *Junos OS Operational Mode Commands*.

To turn off the loopback capability, remove the **loopback** statement from the configuration:

```
[edit]
user@host# delete interfaces e3-fpc/port e3-options loopback
```

You can determine whether there is an internal problem or an external problem by checking the error counters in the output of the **show interface *interface-name* extensive** command:

```
user@host> show interfaces interface-name extensive
```

### Example: Configuring E3 Loopback Capability

To determine whether a problem is internal or external, loop packets on both the local and the remote router. To do this, include the **no-keepalives** and **encapsulation cisco-hdlc** statements at the **[edit interfaces *interface-name*]** hierarchy level and the **loopback local** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level. With this

configuration, the link stays up, so you can loop ping packets to a remote router. The **loopback local** statement causes the interface to loop within the PIC just before the data reaches the transceiver.

```
[edit interfaces]
e3-1/0/0 {
  no-keepalives;
  encapsulation cisco-hdlc;
  e3-options {
    loopback local;
  }
  unit 0 {
    family inet {
      address 10.100.100.1/24;
    }
  }
}
```

Related Documentation

- [loopback on page 50](#)

## Configuring E3 HDLC Payload Scrambling

E3 HDLC payload scrambling, which is disabled by default, provides better link stability. Both sides of a connection must either use or not use scrambling.

To configure scrambling on the interface, you can include the **payload-scrambler** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
payload-scrambler;
```

To explicitly disable HDLC payload scrambling, include the **no-payload-scrambler** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]
no-payload-scrambler;
```

To disable payload scrambling again (return to the default), delete the **payload-scrambler** statement from the configuration:

```
[edit]
user@host# delete interfaces e3-fpc/pic/port e3-options payload-scrambler
```

Related Documentation

- [payload-scrambler on page 52](#)

## Configuring the E3 Start and End Flags

By default, an E3 interface shares the transmission of the start and end flags

To configure an E3 interface to wait two idle cycles between the start and end flags, include the **start-end-flag** statement with the **filler** option at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]  
start-end-flag filler;
```

To revert to the default behavior, sharing the transmission of start and end flags, include the **start-end-flag** statement with the **shared** option at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]  
start-end-flag shared;
```

Related Documentation

- [start-end-flag on page 53](#)

---

## Configuring E3 IQ and IQE Unframed Mode

---

For E3 IQ and IQE interfaces only, you can enable or disable unframed mode. In unframed mode, the E3 IQ and IQE interfaces do not detect yellow (**ylw**) or loss-of-frame (**lof**) alarms.

By default, unframed mode is disabled. To enable unframed mode, include the **unframed** statement at the **[edit interfaces *interface-name* e3-options]** hierarchy level:

```
[edit interfaces interface-name e3-options]  
unframed;
```

To explicitly configure the default of framed mode, include the **no-unframed** statement:

```
[edit interfaces interface-name e3-options]  
no-unframed;
```

Related Documentation

- [unframed on page 54](#)

## CHAPTER 3

# Network Interfaces Configuration Statements and Hierarchy

- [\[edit interfaces\] Hierarchy Level on page 15](#)
- [\[edit logical-systems\] Hierarchy Level on page 31](#)

### [\[edit interfaces\] Hierarchy Level](#)

---

The statements at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level can also be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.



**NOTE:** The *accounting-profile* statement is an exception to this rule. The *accounting-profile* statement can be configured at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level, but it cannot be configured at the `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
interfaces {
  traceoptions {
    file filename <files number> <match regular-expression> <size size> <world-readable |
      no-world-readable> ;
    flag flag <disable>;
  }
  interface-name {
    account-layer2-overhead (Interface Level) {
      value;
      egress bytes;
      ingress bytes;
    }
    accounting-profile name;
    aggregated-ether-options {
      (flow-control | no-flow-control);
      lacp {
        (active | passive);
        link-protection {
          disable;
          (revertive | non-revertive);
        }
      }
    }
  }
}
```

```

    periodic interval;
    system-priority priority;
}
link-protection;
link-speed speed;
(loopback | no-loopback);
mc-ae{
    chassis-id chassis-id;
    mc-ae-id mc-ae-id;
    mode (active-active | active-standby);
    redundancy-group group-id;
    status-control (active | standby);
}
minimum-links number;
source-address-filter {
    mac-address;
}
(source-filtering | no-source-filtering);
}
shared-scheduler;
aggregated-sonet-options {
    link-speed speed | mixed;
    minimum-links number;
}
atm-options {
    cell-bundle-size cells;
    ilmi;
    linear-red-profiles profile-name {
        high-plp-max-threshold percent;
        low-plp-max-threshold percent;
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;
    }
}
mpls {
    pop-all-labels {
        required-depth number;
    }
}
pic-type (atm1 | atm2);
plp-to-clp;
promiscuous-mode {
    vpi vpi-identifier;
}
scheduler-maps map-name {
    forwarding-class class-name {
        epd-threshold cells plp1 cells;
        linear-red-profile profile-name;
        priority (high | low);
        transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
}
use-null-cw;
vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
        down-count cells;
    }
}

```

```

        up-count cells;
    }
    oam-period (seconds | disable);
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
         burst length);
        queue-length number;
    }
}
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}

```

```
disable;
ds0-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    framing feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
}
source-address-filter {
    mac-address;
```



---

19

```
frame-length (32 | 64 | 128 | 256);
frame-synchronization {
    alpha number;
    beta number;
    gamma number;
}
minimum-links number;
symmetry (symmetrical-config-and-operation |
    symmetrical-config-asymmetrical-operation);
test-procedure {
    ima-test-start;
    ima-test-stop;
    interface name;
    pattern number;
    period number;
}
transmit-clock (common | independent);
version (1.0 |1.1);
}
ima-link-options group-id group-id;
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit unit-number | vlan-tags-outer vlan-tag);
    }
    interface interface-name {
        (unit unit-number);
    }
}
}
isdn-options {
    bchannel-allocation (ascending | descending);
    calling-number number;
    pool pool-name <priority priority>;
    spid1 spid-string;
    spid2 spid-string;
    static-tei-val value;
    switch-type (att5e | etsi | nil | ntdms100 | ntt);
    t310 seconds;
    tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
```

```

mlfr-uni-nni-bundle-options {
  acknowledge-retries number;
  acknowledge-timer milliseconds;
  action-red-differential-delay (disable-tx | remove-link);
  drop-timeout milliseconds;
  fragment-threshold bytes;
  cisco-interoperability send-lip-remove-link-for-link-reject;
  hello-timer milliseconds;
  link-layer-overhead percent;
  lmi-type (ansi | itu | c-lmi);
  minimum-links number;
  mrru bytes;
  n391 number;
  n392 number;
  n393 number;
  red-differential-delay milliseconds;
  t391 seconds;
  t392 seconds;
  yellow-differential-delay milliseconds;
}
modem-options {
  dialin (console | routable);
  init-command-string initialization-command-string;
}
mtu bytes;
multi-chassis-protection {
  peer a.b.c.d {
    interface interface-name;
  }
}
multiservice-options {
  (core-dump | no-core-dump);
  (syslog | no-syslog);
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
  interface-type type;
}
no-vpivci-swapping;
optics-options {
  alarm low-light-alarm {
    (link-down | syslog);
  }
  tx-power dbm;
  warning low-light-warning {
    (link-down | syslog);
  }
  wavelength nm;
}
otn-options {
  bytes transmit-payload-type value;
  fec (efec | gfec | gfec-sdfec | none);
  (is-ma | no-is-ma);
  (laser-enable | no-laser-enable);
}

```

```

(line-loopback | no-line-loopback);
(local-loopback | no-local-loopback);
(odu-ttim-action-enable | no-odu-ttim-action-enable);
(otu-ttim-action-enable | no-otu-ttim-action-enable);
odu-delay-management {
    (bypass | no-bypass);
    (monitor-end-point | no-monitor-end-point);
    (number-of-frames | no-number-of-frames);
    (start-measurement | no-start-measurement);
}
(prbs | no-prbs);
preemptive-fast-reroute {
    (backward-frr-enable | no-backward-frr-enable);
    (signal-degrade-monitor-enable | no-signal-degrade-monitor-enable);
}
rate {
    (fixed-stuff-bytes | no-fixed-stuff-bytes);
    otu4;
    (pass-through | no-pass-through);
}
signal-degrade {
    ber-threshold-clear value;
    ber-threshold-signal-degrade value;
    interval value;
}
trigger trigger-identifier;
tti tti-identifier;
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        compression;
    }
}
psn-vcip psn-vci-identifier;
psn-vpip psn-vpi-identifier;
receive-bucket {
    overflow (discard | tag);
}

```

```

    rate percentage;
    threshold bytes;
}
redundancy-options {
    priority sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
    hot-standby;
}
satop-options {
    payload-size n;
}
schedulers number;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
services-options {
    inactivity-timeout seconds;
    open-timeout seconds;
    session-limit {
        maximum number;
    }
}

```

```

        rate new-sessions-per-second;
    }
    syslog {
        host hostname {
            facility-override facility-name;
            log-prefix prefix-number;
            services priority-level;
        }
    }
}
shdsl-options {
    annex (annex-a | annex-b);
    line-rate line-rate;
    loopback (local | remote);
    snr-margin {
        current margin;
        snext margin;
    }
}
sonet-options {
    aggregate asx;
    aps {
        advertise-interval milliseconds;
        annex-b;
        authentication-key key;
        fast-aps-switch;
        force;
        hold-time milliseconds;
        lockout;
        neighbor address;
        paired-group group-name;
        preserve-interface;
        protect-circuit group-name;
        request;
        revert-time seconds;
        switching-mode (bidirectional | unidirectional);
        working-circuit group-name;
    }
}
bytes {
    c2 value;
    e1-quiet value;
    f1 value;
    f2 value;
    s1 value;
    z3 value;
    z4 value;
}
fcs (16 | 32);
loopback (local | remote);
mpls {
    pop-all-labels {
        required-depth number;
    }
}
}
path-trace trace-string;
(payload-scrambler | no-payload-scrambler);

```

```

    rfc-2615;
    trigger {
        defect ignore;
        hold-time up milliseconds down milliseconds;
    }
    vtmapping (itu-t | klm);
    (z0-increment | no-z0-increment);
}
speed (10m | 100m | 1g | oc3 | oc12 | oc48);
stacked-vlan-tagging;
switch-options {
    switch-port port-number {
        (auto-negotiation | no-auto-negotiation);
        speed (10m | 100m | 1g);
        link-mode (full-duplex | half-duplex);
    }
}
t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
        value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
}
traceoptions {
    flag flag <flag-modifier> <disable>;
}

```

```

}
transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
    accept-source-mac {
        mac-address mac-address {
            policer {
                input cos-policer-name;
                output cos-policer-name;
            }
        }
    }
}
account-layer2-overhead {
    value;
    egress bytes;
    ingress bytes;
}
accounting-profile name;
advisory-options {
    downstream-rate rate;
    upstream-rate rate;
}
allow-any-vci;
atm-scheduler-map (map-name | default);
backup-options {
    interface interface-name;
}
bandwidth rate;
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        maximum-contexts number <force>;
        queues [ queue-numbers ];
        port {
            minimum port-number;
            maximum port-number;
        }
    }
}
compression-device interface-name;
copy-tos-to-outer-ip-header;
demux-destination family;
demux-source family;
demux-options {
    underlying-interface interface-name;
}
description text;

```



```

interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    incoming-map {
        caller (caller-id | accept-all);
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
            [ routes ];
        }
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;

```

```

multipoint;
oam-liveness {
    down-count cells;
    up-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
        pap;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
    dynamic-profile profile-name;
    lcp-max-conf-req number;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-max-conf-req number;
    ncp-restart-timer milliseconds;
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
    service-name name;
    underlying-interface interface-name;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}
short-sequence;
transmit-weight number;

```

```

(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id-vlan-id];
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags-outer tpid.vlan-id inner-list [vlan-id vlan-id-vlan-id];
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
access-concentrator name;
address address {
    destination address;
}
bundle ml-fpc/pic/port | ls-fpc/pic/port);
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names ];
        output filter-name;
    }
    output-list {
        [filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
max-sessions number;
max-sessions-vs-a-ignore;
mtu bytes;
multicast-only;
negotiate-address;
no-redirects;
policer {
    arp policer-template-name;

```

```

    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name;
    mode loose;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-names <service-filter filter-name>;
    }
}
service-name-table table-name;
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name <destination address destination-profile
    profile-name | preferred-source-address address>;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
    }
}

```

```

        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                bandwidth-threshold bits-per-second {
                    priority;
                }
            }
            interface priority;
        }
        route ip-address/mask routing-instance instance-name priority-cost cost;
    }
    virtual-address [ addresses ];
}
}
}
}
}
}
}

```

- Related Documentation**
- [Junos OS Hierarchy and RFC Reference](#)
  - [Ethernet Interfaces](#)
  - [Junos OS Network Interfaces Library for Routing Devices](#)

## [\[edit logical-systems\] Hierarchy Level](#)

The following lists the statements that can be configured at the **[edit logical-systems]** hierarchy level that are also documented in this manual. For more information about logical systems, see the *Logical Systems Feature Guide for Routing Devices*.

```

logical-systems logical-system-name {
    interfaces interface-name {
        unit logical-unit-number {
            accept-source-mac {
                mac-address mac-address {
                    policer {
                        input cos-policer-name;
                        output cos-policer-name;
                    }
                }
            }
        }
    }
}

```

```
allow-any-vci;
atm-scheduler-map (map-name | default);
bandwidth rate;
backup-options {
    interface interface-name;
}
cell-bundle-size cells;
clear-dont-fragment-bit;
compression {
    rtp {
        f-max-period number;
        port {
            minimum port-number;
            maximum port-number;
        }
        queues [ queue-numbers ];
    }
}
compression-device interface-name;
description text;
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    deactivation-delay seconds;
    dial-string [ dial-string-numbers ];
    idle-timeout seconds;
    initial-route-check seconds;
    load-threshold number;
    pool pool;
    remote-name remote-callers;
    watch-list {
        [ routes ];
    }
}
disable;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
fragment-threshold bytes;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
```

```

layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (seconds | disable);
output-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
}
dynamic-profile profile-name;
pap {
    default-pap-password password;
    local-name name;
    local-password password;
    passive;
}
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
    burst length);
    queue-length number;
}

```

```
short-sequence;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vlan-id number;
vlan-id-list [vlan-id vlan-id–vlan-id]
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
vlan-tags outer tpid.vlan-id inner-list [vlan-id vlan-id–vlan-id]
vpi vpi-identifier;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            direction;
        }
    }
}
bundle interface-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list {
        [filter-names ];
    }
    output filter-name;
    output-list {
        [filter-names ];
    }
}
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name> {
```



```

    <mode loose>;
}
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
unnumbered-address interface-name destination address destination-profile
    profile-name;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address (dlci dlci-identifier | vci vci-identifier);
    multipoint-destination address {
        epd-threshold cells plp1 cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (seconds | disable);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
                rate burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    preferred;
    primary;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                interface priority;
            }
        }
    }
}

```

```
        bandwidth-threshold bits-per-second {  
            priority;  
        }  
    }  
    route ip-address/mask routing-instance instance-name priority-cost cost;  
    }  
    }  
    virtual-address [ addresses ];  
    }  
    }  
    }  
    }
```

**Related  
Documentation**

- *Junos OS Hierarchy and RFC Reference*
- *Ethernet Interfaces*
- *Junos OS Network Interfaces Library for Routing Devices*

## CHAPTER 4

# Statement Summary

## bert-algorithm

<b>Syntax</b>	<code>bert-algorithm <i>algorithm</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>ce1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>ct1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> <i>ds0-options</i>],</code> <code>[edit interfaces <i>interface-name</i> <i>e1-options</i>],</code> <code>[edit interfaces <i>interface-name</i> <b>e3-options</b>],</code> <code>[edit interfaces <i>interface-name</i> <i>t1-options</i>],</code> <code>[edit interfaces <i>interface-name</i> <i>t3-options</i>]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
<b>Description</b>	Configure the pattern to send in the bit stream during a bit error rate test (BERT). Applies to T1, E3, T3, and multichannel DS3 interfaces, the channelized interfaces (DS3, OC12, STM1), and channelized IQ and IQE interfaces (E1, E3 and DS3).



**NOTE:** When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `bert-algorithm` statement must be included at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

<b>Options</b>	<p><b><i>algorithm</i></b>—Pattern to send in the bit stream. There are two categories of test patterns: pseudorandom and repetitive. Both patterns conform to CCITT/ITU O.151, O.152, O.153, and O.161 standards. The algorithm can be one of the following patterns:</p> <ul style="list-style-type: none"> <li>• <b>all-ones-repeating</b>—Pattern is all ones.</li> <li>• <b>all-zeros-repeating</b>—Pattern is all zeros.</li> <li>• <b>alternating-double-ones-zeros</b>—Pattern is alternating pairs of ones and zeros.</li> <li>• <b>alternating-ones-zeros</b>—Pattern is alternating ones and zeros.</li> <li>• <b>pseudo-2e3</b>—Pattern is <math>2^3 - 1</math>.</li> <li>• <b>pseudo-2e4</b>—Pattern is <math>2^4 - 1</math>.</li> <li>• <b>pseudo-2e5</b>—Pattern is <math>2^5 - 1</math>.</li> <li>• <b>pseudo-2e6</b>—Pattern is <math>2^6 - 1</math>.</li> <li>• <b>pseudo-2e7</b>—Pattern is <math>2^7 - 1</math>.</li> <li>• <b>pseudo-2e9-o153</b>—Pattern is <math>2^9 - 1</math>, as defined in the O153 standard.</li> <li>• <b>pseudo-2e10</b>—Pattern is <math>2^{10} - 1</math>.</li> <li>• <b>pseudo-2e11-o152</b>—Pattern is <math>2^{11} - 1</math>, as defined in the O152 standard.</li> </ul>
----------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- **pseudo-2e15-o151**—Pattern is  $2^{15} - 1$ , as defined in the O151 standard.
- **pseudo-2e17**—Pattern is  $2^{17} - 1$ .
- **pseudo-2e18**—Pattern is  $2^{18} - 1$ .
- **pseudo-2e20-o151**—Pattern is  $2^{20} - 1$ , as defined in the O151 standard.
- **pseudo-2e20-o153**—Pattern is  $2^{20} - 1$ , as defined in the O153 standard.
- **pseudo-2e21**—Pattern is  $2^{21} - 1$ .
- **pseudo-2e22**—Pattern is  $2^{22} - 1$ .
- **pseudo-2e23-o151**—Pattern is  $2^{23} - 1$ , as defined in the O151 standard.
- **pseudo-2e25**—Pattern is  $2^{25} - 1$ .
- **pseudo-2e28**—Pattern is  $2^{28} - 1$ .
- **pseudo-2e29**—Pattern is  $2^{29} - 1$ .
- **pseudo-2e31**—Pattern is  $2^{31} - 1$ .
- **pseudo-2e32**—Pattern is  $2^{32} - 1$ .
- **repeating-1-in-4**—One bit in four is set to 1; the others are set to 0.
- **repeating-1-in-8**—One bit in eight is set to 1; the others are set to 0.
- **repeating-3-in-24**—Three bits in twenty four are set to 1; the others are set to 0.

**Default:** pseudo-2e3

<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Interface Diagnostics on page 81</a></li> <li>• <i>Configuring E1 BERT Properties</i></li> <li>• <a href="#">Configuring E3 BERT Properties on page 8</a></li> <li>• <i>Configuring T1 BERT Properties</i></li> <li>• <i>Configuring T3 BERT Properties</i></li> <li>• <i>Examples: Configuring T3 Interfaces</i></li> <li>• <a href="#">bert-error-rate on page 40</a></li> <li>• <a href="#">bert-period on page 42</a></li> </ul>

## bert-error-rate

<b>Syntax</b>	<code>bert-error-rate rate;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
<b>Description</b>	Configure the bit error rate to use in a BERT procedure. Applies to E1, E3, T1, or T3 interfaces, and to the channelized interfaces (DS3, OC3, OC12, and STM1).




**NOTE:** When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `bert-error-rate` statement must be included at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

When configuring `t3-options bert-error-rate` on J Series routers, only 0 and 3 through 7 are valid values. If you enter 1 or 2, Junos OS will return the error message `configuration check-out failed`.

<b>Options</b>	<p><b>rate</b>—Bit error rate.</p> <p><b>Range:</b> 0 through 7, which corresponds to <math>10^{-1}</math> (1 error per bit) to <math>10^{-7}</math> (1 error per 10 million bits)</p> <p><b>Default:</b> 0</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">bert-algorithm on page 38</a></li> <li>• <a href="#">bert-period on page 42</a></li> <li>• <code>ds0-options</code></li> <li>• <code>e1-options</code></li> <li>• <a href="#">e3-options on page 45</a></li> <li>• <code>t1-options</code></li> <li>• <code>t3-options</code></li> </ul>

- [Interface Diagnostics on page 81](#)
- *Configuring E1 BERT Properties*
- [Configuring E3 BERT Properties on page 8](#)
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- *Examples: Configuring T3 Interfaces*

## bert-period

<b>Syntax</b>	<code>bert-period <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>ce1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>ct1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> ds0-options],</code> <code>[edit interfaces <i>interface-name</i> e1-options],</code> <code>[edit interfaces <i>interface-name</i> <b>e3-options</b>],</code> <code>[edit interfaces <i>interface-name</i> t1-options],</code> <code>[edit interfaces <i>interface-name</i> t3-options]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
<b>Description</b>	<p>Configure the duration of a BERT test. Applies to E1, E3, T1, and T3 interfaces, and to E1, E3, T1, and T3 partitions on the channelized interfaces (CE1, CT1, DS3, OC3, OC12, OC48, STM1, STM4, and STM16).</p> <p>E1 and T1 IQ, IQE, and standard interfaces support an extended BERT period range, up to 86,400 seconds (24 hours).</p> <div style="margin-top: 20px;">  <p><b>NOTE:</b> When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-period</code> statement must be included at the <code>[edit interfaces <i>ce1-fpc/pic/port</i>]</code> or <code>[edit interfaces <i>ct1-fpc/pic/port</i>]</code> hierarchy level as appropriate.</p> </div>
<b>Options</b>	<p><b><i>seconds</i></b>—Test duration. Range and default values vary by interface type.</p> <p><b>Range:</b></p> <ul style="list-style-type: none"> <li>PIC-dependent—Normal BERT period: either 1 through 239 seconds or 1 through 240 seconds</li> <li>PIC-dependent—Extended BERT period: from 1 through 86,400 seconds</li> </ul> <p><b>Default:</b></p> <ul style="list-style-type: none"> <li>Normal BERT period: 10 seconds</li> <li>Extended BERT period (on supported E1 interfaces): 10 seconds</li> <li>Extended BERT period (on supported T1 interfaces): 240 seconds</li> </ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Interface Diagnostics on page 81</a></li> <li><a href="#">Configuring E1 BERT Properties</a></li> </ul>



- [Configuring E3 BERT Properties on page 8](#)
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- [bert-algorithm on page 38](#)
- [bert-error-rate on page 40](#)


## compatibility-mode

---

<b>Syntax</b>	<code>compatibility-mode (adtran   digital-link   kentrox   larscom   verilink) &lt;subrate value&gt;;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the E3 or T3 interface to be compatible with the channel service unit (CSU) at the remote end of the line.



**NOTE:** The `compatibility-mode` statement at the [edit interfaces *interface-name* **e3-options**] hierarchy level is not valid for IQE PICs.


<b>Default</b>	If you omit this option, the full E3 or T3 rate is used.
<b>Options</b>	<p><b>adtran</b>—For T3 IQ interfaces only, configure compatibility with Adtran CSUs.</p> <p><b>digital-link</b>—Configure compatibility with Digital Link CSUs. If you include this option on an E3 interface, you must also disable payload scrambling.</p> <p><b>kentrox</b>—Configure compatibility with Kentrox CSUs. Kentrox subrate is valid for E3 IQ and T3 IQ interfaces only.</p> <p><b>larscom</b>—For T3 and T3 IQ interfaces only, configure compatibility with Larscom CSUs.</p> <p><b>verilink</b>—For T3 IQ and T3 IQE interfaces only, configure compatibility with Verilink CSUs.</p>
	 <p><b>NOTE:</b> Verilink configuration is not functional if an IQ interface is paired with an IQE interface.</p>
	<p><b>subrate value</b>—Subrate of the E3 or T3 line.</p> <p><b>Range:</b> For Kentrox CSUs on E3 IQ interfaces and T3 IQ interfaces the subrate value must match the value configured on the CSU. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the E3 CSU Compatibility Mode on page 9</a></li><li>• <a href="#">Configuring the T3 CSU Compatibility Mode</a></li><li>• <a href="#">payload-scrambler on page 52</a></li></ul>

## e3-options


<b>Syntax</b>	<pre>e3-options {   atm-encapsulation (direct   plcp);   bert-algorithm <i>algorithm</i>;   bert-error-rate <i>rate</i>;   bert-period <i>seconds</i>;   buildout <i>feet</i>;   compatibility-mode (digital-link   kentrox   larscom) &lt;subrate <i>value</i>&gt;;   fcs (16   32);   framing (g.751   g.832);   idle-cycle-flag <i>value</i>;   invert-data;   invert-data;   loopback (local   remote);   (payload-scrambler   no-payload-scrambler);   start-end-flag <i>value</i>;   (unframed   no-unframed); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure E3-specific physical interface properties.</p> <p>For ATM1 interfaces, you can configure a subset of E3 options statements.</p> <p>The statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">E3 Interfaces Overview on page 3</a></li> <li>• <i>T3 Interfaces Overview</i></li> <li>• <i>atm-options</i></li> </ul>

## fast-aps-switch


---

<b>Syntax</b>	fast-aps-switch;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options aps]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only and EX Series switches) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.
	<div> <b>NOTE:</b><ul style="list-style-type: none"><li>• Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.</li><li>• When the fast-aps-switch statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.</li><li>• To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.</li><li>• The fast-aps-switch statement cannot be configured when the APS annex-b option is configured.</li><li>• The interfaces that have the fast-aps-switch statement configured cannot be used in virtual private LAN service (VPLS) environments.</li></ul></div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Reducing APS Switchover Time in Layer 2 Circuits</i></li></ul>

## fcs

<b>Syntax</b>	fcs (16   32);
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
<b>Description</b>	<p>For E1/E3, SONET/SDH, and T1/T3 interfaces, configure the frame checksum (FCS) on the interface. The checksum must be the same on both ends of the interface.</p> <p>On a channelized OC12 interface, the SONET/SDH <b>fcs</b> statement is not supported. To configure FCS on each DS3 channel, you must include the <b>t3-options fcs</b> statement in the configuration for each channel. For SONET/SDH, the channelized OC12 interface supports DS3 to STS-1 to OC12. For SDH, the channelized OC12 interface supports NxDS3 to NxVC3 to AU3 to STM.</p> <div style="margin-top: 20px;">  <p><b>NOTE:</b> When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <b>fcs</b> statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>
<b>Options</b>	<p><b>16</b>—Use a 16-bit frame checksum on the interface.</p> <p><b>32</b>—Use a 32-bit frame checksum on the interface. Using a 32-bit checksum provides more reliable packet verification, but some older equipment might not support 32-bit checksums.</p> <p><b>Default:</b> 16</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the E1 Frame Checksum</a></li> <li>• <a href="#">Configuring the E3 Frame Checksum on page 10</a></li> <li>• <a href="#">Configuring the SONET/SDH Frame Checksum</a></li> <li>• <a href="#">Configuring the T1 Frame Checksum</a></li> <li>• <a href="#">Configuring the T3 Frame Checksum</a></li> </ul>

## idle-cycle-flag

<b>Syntax</b>	<code>idle-cycle-flag value;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces e1-fpc/pic/port],</code> <code>[edit interfaces t1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name serial-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
<b>Description</b>	Configure the value that the DS0, E1, E3, T1, or T3 interface transmits during idle cycles.
<div>  <p><b>NOTE:</b> When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>idle-cycle-flag</code> statement must be included at the <code>[edit interfaces e1-fpc/pic/port]</code> or <code>[edit interfaces t1-fpc/pic/port]</code> hierarchy level as appropriate.</p> </div>	
<b>Options</b>	<p><b>value</b>—Value to transmit in the idle cycles:</p> <ul style="list-style-type: none"> <li><b>flags</b>—Transmit the value 0x7E.</li> <li><b>ones</b>—Transmit the value 0xFF (all ones).</li> </ul> <p><b>Default:</b> <b>Flags</b></p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring the E1 Idle Cycle Flag</a></li> <li><a href="#">Configuring the E3 Idle Cycle Flag on page 11</a></li> <li><a href="#">Configuring the T1 Idle Cycle Flag</a></li> <li><a href="#">Configuring the T3 Idle Cycle Flag</a></li> </ul>

## invert-data



<b>Syntax</b>	invert-data;
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> e3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
<b>Description</b>	Invert the transmission of unused data bits on the DS0, E1, E3, and T1 interface.



**NOTE:** When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the invert-data statement must be included at the [edit interfaces e1-*fpc/pic/port*] or [edit interfaces t1-*fpc/pic/port*] hierarchy level as appropriate.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E1 Data Inversion</i></li> <li>• <a href="#">Configuring E3 Data Inversion on page 11</a></li> <li>• <i>Configuring T1 Data Inversion</i></li> </ul>

## loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)

<b>Syntax</b>	<code>loopback (local   payload   remote);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces t1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name dsl-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name shdsl-options],</code> <code>[edit interfaces interface-name sonet-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.</p>
<b>Description</b>	Configure a loopback connection. To turn off the loopback capability, remove the <b>loopback</b> statement from the configuration.
<div>  <p><b>NOTE:</b> When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <b>loopback</b> statement must be included with the <b>local</b> or <b>remote</b> option at the <code>[edit interfaces ce1-fpc/pic/port]</code> or <code>[edit interfaces ct1-fpc/pic/port]</code> hierarchy level as appropriate.</p> <p>When configuring T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <b>loopback</b> statement must be included with the <b>payload</b> option at the <code>[edit interfaces t1-fpc/pic/port]</code> hierarchy level.</p> </div>	
<div>  <p><b>NOTE:</b> When configuring CE1 or CT1 interfaces on the 16-port Channelized E1/T1 MIC (MIC-3D-16CHE1-T1-CE), you must include the <b>loopback</b> statement at the <code>[edit interfaces ce1-fpc/pic/port]</code> hierarchy level, or <code>[edit interfaces ct1-fpc/pic/port]</code></p> </div>	
<p>To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the <b>sonet-options loopback</b> statement <b>local</b> and <b>remote</b> options at the controller interface (coc48, cstm16, coc12, cstm4, coc3, cstm1). It is ignored for path-level interfaces <b>so-fpc/pic/port</b> or <b>so-fpc/pic/port:channel</b>.</p>	
<b>Options</b>	<p><b>local</b>—Loop packets, including both data and timing information, back on the local router's PIC. NxDS0 IQ interfaces do not support local loopback.</p>



**payload**—For channelized T3, T1, and NxDSO IQ interfaces only, loop back data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated. Neither ATM-over-asymmetrical digital subscriber line (ADSL) interfaces nor ATM-over-SHDSL interfaces support payload loopback.

**remote**—Loop packets, including both data and timing information, back on the remote router's interface card. NxDSO IQ interfaces do not support remote loopback.


**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**


- *Configuring E3 and T3 Parameters on ATM Interfaces*
- *Configuring E1 Loopback Capability*
- [Configuring E3 Loopback Capability on page 12](#)
- *Configuring SONET/SDH Loopback Capability*
- *Configuring SHDSL Operating Mode on an ATM Physical Interface*
- *Configuring T1 Loopback Capability*
- *Configuring T3 Loopback Capability*
- *feac-loop-respond*

## payload-scrambler

---

<b>Syntax</b>	(payload-scrambler   no-payload-scrambler);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the <b>sonet payload-scrambler</b> statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the <b>t3-options payload-scrambler</b> statement in the configuration for each DS3 channel.</p>
	<div> <b>NOTE:</b> The <b>payload-scrambler</b> statement at the [edit interfaces <i>interface-name</i> <b>e3-options</b>] hierarchy level is not valid for IQE PICs.</div>
<b>Default</b>	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li><li>• <a href="#">Configuring E3 HDLC Payload Scrambling on page 13</a></li><li>• <i>Configuring SONET/SDH HDLC Payload Scrambling</i></li><li>• <i>Configuring T3 HDLC Payload Scrambling</i></li><li>• <i>Examples: Configuring T3 Interfaces</i></li><li>• <a href="#">compatibility-mode on page 44</a></li></ul>

## start-end-flag

<b>Syntax</b>	start-end-flag (filler   shared);
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers.
<b>Description</b>	For DS0, E1, E3, T1, and T3 interfaces, configure the interface to share the transmission of start and end flags.
<div>  <p><b>NOTE:</b> When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the start-end-flag statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>	
<b>Options</b>	filler—Wait two idle cycles between the start and end flags.  shared—Share the transmission of the start and end flags. This is the default.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring E1 Start and End Flags</a></li> <li>• <a href="#">Configuring the E3 Start and End Flags on page 13</a></li> <li>• <a href="#">Configuring T1 Start and End Flags</a></li> <li>• <a href="#">Configuring T3 Start and End Flags</a></li> </ul>

## unframed

---

<b>Syntax</b>	(unframed   no-unframed);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">e3-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow ( <b>ylw</b> ) or loss-of-frame ( <b>lof</b> ) alarms.
<b>Default</b>	Unframed mode is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring E3 IQ and IQE Unframed Mode on page 14</a></li></ul>

## PART 3

# Administration

- [Monitoring Commands on page 57](#)
- [Command Summary on page 75](#)



## CHAPTER 5

# Monitoring Commands

## show interfaces (T3 or E3)

<b>Syntax</b>	<pre>show interfaces <i>interface-type</i> &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified T3 or E3 interface.
<b>Options</b>	<p><b><i>interface-type</i></b>—On M Series and T Series routers, the T3 interface type is <b>t3-fpc/pic/port</b>, whereas the E3 interface type is <b>e3-fpc/pic/port</b>. On the J Series routers, the T3 interface type is <b>t3-pim/0/port</b>, whereas the E3 interface type is <b>e3-pim/0/port</b>.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces (T3, PPP) on page 67</a></p> <p><a href="#">show interfaces detail (T3, PPP) on page 68</a></p> <p><a href="#">show interfaces extensive (T3, PPP) on page 69</a></p> <p><a href="#">show interfaces (E3, Frame Relay) on page 70</a></p> <p><a href="#">show interfaces detail (E3, Frame Relay) on page 71</a></p> <p><a href="#">show interfaces extensive (E3, Frame Relay) on page 72</a></p>
<b>Output Fields</b>	Table 4 on page 58 lists the output fields for the <b>show interfaces</b> (T3 or E3) command. Output fields are listed in the approximate order in which they appear.

Table 4: T3 or E3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none



Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Mode</b>	(T3 only) Whether C-bit parity mode or M13 mode is enabled.	All levels
<b>Long buildout</b>	(T3 only) Buildout setting: less than 255 feet (68 meters) or greater than 255 feet and shorter than 450 feet (137 meters).	All levels
<b>Framing</b>	(E3 only) Physical layer framing format used on the link. It can be <b>G751</b> or <b>Unframed</b> . The default is <b>G751</b> .	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>interval seconds</b>—Time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li><b>down-count number</b>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li><b>up-count number</b>—Number of keepalive packets a destination must receive to change a link’s status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	<b>detail extensive</b> none

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Keepalive statistics or Keepalive	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li>(<b>last seen 00:00:00 ago</b>)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li>(<b>last seen 00:00:00 ago</b>)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
LMI settings	<p>(Frame Relay) Local Management Interface (LMI) settings (ANSI or ITU). ANSI LMI settings is the default. The format is <b>LMI settings: value, value... xx seconds</b>, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1–255)</li> <li><b>n392dce</b>—DCE error threshold (1–10)</li> <li><b>n392dte</b>—DTE error threshold (1–10)</li> <li><b>n393dce</b>—DCE monitored event count (1–10)</li> <li><b>n393dte</b>—DTE monitored event count (1–10)</li> <li><b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	detail extensive none
LMI	<p>(Frame Relay) LMI statistics:</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> <li><b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li><b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li><b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li><b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li><b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li><b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li><b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li><b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	detail extensive none

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	<b>detail extensive none</b>
<b>LCP state</b>	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>NCP state</b>	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> <li>• <b>Chap-Resp-received</b>—Response received for the challenge sent, but CHAP not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response sent for the challenge received.</li> <li>• <b>Chap-Chal-sent</b>—Challenge sent.</li> <li>• <b>Chap-Chal-received</b>—Challenge received but response not yet sent.</li> <li>• <b>Down</b>—CHAP authentication is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Opened</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (year-month-day hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets received on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—(T3 only) Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—(T3 only) Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is <b>off</b>.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Active alarms</b> <b>Active defects</b>	<p>E3 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>FERF</b>—Far-end receive failures</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>LCD</b>—Loss of cell delineation</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>PLL</b>—Phase-locked loop</li> <li>• <b>YLW</b>—Remote defect indication</li> </ul>	<b>detail extensive none</b>

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>DS3 media or E3 media</b>	<p>Counts of DS3 (T3) or E3 media-specific errors.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than OK indicates a problem.</li> </ul> <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop out of lock</li> <li>• <b>Reframing</b>—Frame alignment recovery time</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—(DS3 only) Pulse code violation</li> <li>• <b>CCV</b>—(DS3 only) C-bit coding violation</li> <li>• <b>FEBE</b>—(DS3 only) Far-end block error</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>PES</b>—(DS3 only) P-bit errored seconds</li> <li>• <b>PSSES</b>—(DS3 only) P-bit errored seconds (section)</li> <li>• <b>CES</b>—(DS3 only) C-bit errored seconds</li> <li>• <b>CSES</b>—(DS3 only) C-bit severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>
<b>HDLC configuration</b>	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Idle cycle flag</b>—Idle cycle flags.</li> <li>• <b>Start end flag</b>—Start and end flag.</li> </ul>	<b>extensive</b>

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
DSU configuration	<p>Information about the DSU configuration. The last three lines (<b>Bit count</b>, <b>Error bit count</b>, and <b>LOS information</b>) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Compatibility mod</b>—CSU/DSU compatibility mode: <b>None</b>, <b>Larscom</b>, <b>Kentrox</b>, or <b>Digital-Link</b>.</li> <li>• <b>Scrambling</b>—Payload scrambling: <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Subrate</b>—Configured subrate setting. Applies only when <b>Digital-Link</b> compatibility mode is used. The subrate can be <b>Disabled</b> or display units in Kbps.</li> <li>• <b>FEAC loopbac</b>—(T3) Whether a far-end alarm and control (FEAC) loopback is <b>Active</b> or <b>Inactive</b>. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal.</li> <li>• <b>Response</b>—Whether the FEAC signal is <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Count</b>—Number of FEAC loopbacks.</li> </ul>	extensive
DS3 (or E3) BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	extensive

---

Logical Interface

---

Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Logical interface</b>	Name of the logical interface.	<b>detail extensive none</b>
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>extensive</b>
<b>Flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <i>Common Output Fields Description</i> .	<b>detail extensive none</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>detail extensive none</b>
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Traffic statistics</b>	<p>(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Transit statistics</b>	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mlfr</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>Multilink bundle</b>	(Multilink) Interface name for the multilink bundle.	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the "Family Flags" section under <i>Common Output Fields Description</i> .	<b>detail extensive none</b>



Table 4: T3 or E3 show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive none</b>
<b>DLCI</b>	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b>, <b>Total down time</b>, <b>Last down</b>, and <b>Traffic statistics</b> (or <b>Input packets</b>, <b>Output packets</b>). <b>Flags</b> is one or more of the following:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>DCE Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>DCE-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces (T3, PPP)

```

user@host> show interfaces t3-0/2/0
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues     : 4 supported, 4 in use
  Last flapped   : 2005-12-05 08:43:06 PST (02:18:40 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 72 bps (0 pps)

```

```

Active alarms : None
Active defects : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

```

```

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

### show interfaces detail (T3, PPP)

```

user@host> show interfaces t3-0/2/0 detail
Physical interface: t3-0/2/0, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 35, Generation: 22
Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
Loopback: None, FCS: 16, Mode: C/Bit parity,
Long buildout: Shorter than 255 feet
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : Keepalives
Hold-times : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues : 4 supported, 4 in use
Last flapped : 2005-12-05 08:43:06 PST (02:18:45 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 152 0 bps
Input packets: 0 0 pps
Output packets: 8 0 pps
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0
1 expedited-fo 0 0 0
2 assured-forw 0 0 0
3 network-cont 6 6 0

Active alarms : None
Active defects : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
Flags: Protocol-Down

```

Addresses, Flags: Dest-route-down Is-Preferred Is-Primary  
 Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,  
 Generation: 24

### show interfaces extensive (T3, PPP)

```

user@host> show interfaces t3-0/2/0 extensive
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:47 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :        171         72 bps
    Input packets:          0          0 pps
    Output packets:         9          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    SRAM errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

    Resource errors: 0
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort          0              0              0

    1 expedited-fo        0              0              0

    2 assured-forw        0              0              0

    3 network-cont        7              7              0

  Active alarms : None
  Active defects : None
  DS3 media:
    Seconds      Count  State
    PLL Lock      0      0 OK
    Reframing      0      0 OK
    AIS            0      0 OK
    LOF            0      0 OK
    LOS            0      0 OK
    IDLE           0      0 OK
    YELLOW         0      0 OK

```

```

BPV                0          0
EXZ                0          0
LCV                1          4
PCV                0          0
CCV                0          0
FEBE               1          11
LES                1
PES                0
PSES               0
CES                0
CSES               0
SEFS               0
UAS                0
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
  Idle cycle flag: flags, Start end flag: shared
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
  FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue    Bandwidth    Buffer    Priority    Limit
                        %      bps      %      usec
0 best-effort           95    42499200  95      0      low    none
3 network-control       5     2236800   5      0      low    none

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 24

```

### show interfaces (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0
Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags    : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags      : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 4 (00:00:06 ago)
DTE statistics:
  Enquiries sent                : 4
  Full enquiries sent           : 0
  Enquiry responses received    : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received            : 0
  Full enquiries received       : 0
  Enquiry responses sent        : 0

```

```

    Full enquiry responses sent      : 0
Common statistics:
    Unknown messages received       : 0
    Asynchronous updates received   : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout     : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:17 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:00:06 sec, Last down: 00:00:06 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

### show interfaces detail (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 detail
Physical interface: e3-1/2/0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 49, Generation: 36
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
  Loopback: None, FCS: 16, Framing: G751
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives DTE
  Hold-times     : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 5 (last sent 00:00:07 ago)
  DTE statistics:
    Enquiries sent      : 5
    Full enquiries sent  : 0
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received   : 0
    Full enquiries received : 0
    Enquiry responses sent : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues      : 4 supported, 4 in use
  Last flapped   : 2005-12-05 08:46:14 PST (02:27:27 ago)

```

```

Statistics last cleared: Never
Traffic statistics:
Input bytes :                0                0 bps
Output bytes :               806                0 bps
Input packets:                0                0 pps
Output packets:              44                0 pps
Queue counters:      Queued packets  Transmitted packets  Dropped packets

0 best-effort                0                0                0

1 expedited-fo               0                0                0

2 assured-forw               0                0                0

3 network-cont              43                43                0

Active alarms : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:               0
Local statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:               0
Transit statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:               0                0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 38
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:00:16 sec, Last down: 00:00:16 ago
Traffic statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:               0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

### show interfaces extensive (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 extensive
Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49, Generation: 36
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000

```

```

Link flags      : Keepalives DTE
Hold-times     : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 6 (last sent 00:00:02 ago)
DTE statistics:
  Enquiries sent           : 5
  Full enquiries sent      : 1
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues      : 4 supported, 4 in use
Last flapped   : 2005-12-05 08:46:14 PST (02:27:30 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 821 56 bps
  Input packets: 0 0 pps
  Output packets: 45 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 21118, Bucket drops: 0,
  Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	44	44	0

```

Active alarms : None
Active defects : None
E3 media:

```

	Seconds	Count	State
PLL Lock	0	0	OK
Reframing	187	1	OK
AIS	0	0	OK
LOF	187	1	OK
LOS	187	1	OK
IDLE	0	0	OK
YELLOW	0	0	OK
BPV	0	0	
EXZ	0	0	
LCV	188	12303167	

```

LES                                188
SEFS                               187
UAS                                195
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled
E3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced Error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %             bps        %          usec
0 best-effort             95      32649600   95          0          low    none
3 network-control         5       1718400    5          0          low    none

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
    Generation: 38
DLCI 100
  Flags: Down, DCE-Unconfigured
  Total down time: 00:00:19 sec, Last down: 00:00:19 ago
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```



## CHAPTER 6

# Command Summary



## PART 4

# Troubleshooting

- [Interface Diagnostics on page 79](#)



## CHAPTER 7

# Interface Diagnostics

- [Interface Diagnostics on page 79](#)
- [Interface Diagnostics Operational Mode Commands on page 86](#)

## Interface Diagnostics

---

You can use two diagnostic tools to test the physical layer connections of interfaces: loopback testing and bit error rate test (BERT) testing. Loopback testing enables you to verify the connectivity of a circuit. BERT testing enables you to identify poor signal quality on a circuit. This section contains the following topics:

- [Configuring Loopback Testing on page 79](#)
- [Interface Diagnostics on page 81](#)

## Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDS0, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own data link layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own data link layer packets, you can assume the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

There are several types of loopback testing supported by the Junos OS, as follows:

- DCE local—Loops packets back on the local DCE.
- DCE remote—Loops packets back on the remote DCE.
- Local—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- Payload—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- Remote—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 5 on page 80 shows the loopback modes supported on the various interface types.

**Table 5: Loopback Modes by Interface Type**

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	<i>Configuring Ethernet Loopback Capability</i>
Circuit Emulation E1	Local and remote	<i>Configuring E1 Loopback Capability</i>
Circuit Emulation T1	Local and remote	<i>Configuring T1 Loopback Capability</i>
E1 and E3	Local and remote	<i>Configuring E1 Loopback Capability and "Configuring E3 Loopback Capability" on page 12</i>
NxDS0	Payload	<i>Configuring Channelized E1 IQ and IQE Interfaces, Configuring T1 and NxDS0 Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Channelized STM1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces</i>
Serial (V.35 and X.21)	Local and remote	<i>Configuring Serial Loopback Capability</i>

Table 5: Loopback Modes by Interface Type (*continued*)

Interface	Loopback Modes	Usage Guidelines
Serial (EIA-530)	DCE local, DCE remote, local, and remote	<i>Configuring Serial Loopback Capability</i>
SONET/SDH	Local and remote	<i>Configuring SONET/SDH Loopback Capability</i>
T1 and T3	Local, payload, and remote	<i>Configuring T1 Loopback Capability and Configuring T3 Loopback Capability</i>  <i>See also Configuring the T1 Remote Loopback Response</i>

To configure loopback testing, include the **loopback** statement:

**loopback mode;**

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* aggregated-ether-options]
- [edit interfaces *interface-name* ds0-options]
- [edit interfaces *interface-name* e1-options]
- [edit interfaces *interface-name* e3-options]
- [edit interfaces *interface-name* fastether-options]
- [edit interfaces *interface-name* gigether-options]
- [edit interfaces *interface-name* serial-options]
- [edit interfaces *interface-name* sonet-options]
- [edit interfaces *interface-name* t1-options]
- [edit interfaces *interface-name* t3-options]

## Interface Diagnostics

BERT allows you to troubleshoot problems by checking the quality of links. You can configure any of the following interfaces to execute a BERT when the interface receives a request to run this test: E1, E3, T1, T3; the channelized DS3, OC3, OC12, and STM1 interfaces; and the channelized DS3 IQ, E1 IQ, and OC12 IQ interfaces.

A BERT test requires a line loop to be in place on either the transmission devices or the far-end router. The local router generates a known bit pattern and sends it out the transmit path. The received pattern is then verified against the sent pattern. The higher the bit error rate of the received pattern, the worse the noise is on the physical circuit. As you move the position of the line loop increasingly downstream toward the far-end router, you can isolate the troubled portion of the link.

To configure BERT, you must configure the duration of the test, the bit pattern to send on the transmit path, and the error rate to monitor when the inbound pattern is received.

To configure the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream, include the **bert-period**, **bert-algorithm**, and **bert-error-rate** statements, respectively, at the **[edit interfaces *interface-name* *interface-type* *options*]** hierarchy level:

```
[edit interfaces interface-name interface-type options]
bert-algorithm algorithm;
bert-error-rate rate;
bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

**rate** is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from  $10^{-0}$  (1 error per bit) to  $10^{-7}$  (1 error per 10 million bits).

**algorithm** is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]
user@host# set bert-algorithm ?
Possible completions:
pseudo-2e11-o152      Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.152 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
...
```

For specific hierarchy information, see the individual interface types.



**NOTE:** The 4-port E1 PIC supports only the following algorithms:

pseudo-2e11-o152	Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151	Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151	Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151	Pattern is 2^23 (per 0.151 standard)

When you issue the **help** command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.





**NOTE:** The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```

all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152     Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151     Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151     Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7            Pattern is 2^7 - 1
pseudo-2e9-o153      Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set

```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** The IQE PICs support only the following algorithms:

```

all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153       Pattern is 2^9 - 1 (per 0.153 (511 type) standard)
pseudo-2e11-o152      Pattern is 2^11 - 1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151      Pattern is 2^23 - 1 (per 0.151 standard)
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set

```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

all-ones-repeating	Repeating one bits
all-zeros-repeating	Repeating zero bits
alternating-double-ones-zeros	Alternating pairs of ones and zeros
alternating-ones-zeros	Alternating ones and zeros
repeating-1-in-4	1 bit in 4 is set
repeating-1-in-8	1 bit in 8 is set
repeating-3-in-24	3 bits in 24 are set
pseudo-2e9-o153	Pattern is $2^9 - 1$ (per 0.153 standard)
pseudo-2e11-o152	Pattern is $2^{11} - 1$ (per 0.152 standard)
pseudo-2e15-o151	Pattern is $2^{15} - 1$ (per 0.151 standard)
pseudo-2e20-o151	Pattern is $2^{20} - 1$ (per 0.151 standard)
pseudo-2e20-o153	Pattern is $2^{20} - 1$ (per 0.153 standard)
pseudo-2e23-o151	Pattern is $2^{23} - 1$ (per 0.151 standard)

Table 6 on page 84 shows the BERT capabilities for various interface types.

**Table 6: BERT Capabilities by Interface Type**

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)		<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)		<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> <li>Limited algorithms</li> </ul>
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> </ul>
Channelized OC12	N/A	Yes (channel 0–11)	<ul style="list-style-type: none"> <li>Single channel at a time</li> <li>Limited algorithms</li> <li>No bit count</li> </ul>
Channelized STM1	Yes (channel 0–62)	N/A	<ul style="list-style-type: none"> <li>Multiple channels</li> <li>Only one algorithm</li> <li>No error insert</li> <li>No bit count</li> </ul>
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> <li>Multiple ports and channels</li> <li>Limited algorithms for T1</li> <li>No error insert for T1</li> <li>No bit count for T1</li> </ul>

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see *Channelized IQ and IQE Interfaces Properties*.

### Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name interface-type-bert-start*** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you wish to terminate the test sooner, issue the **test interface *interface-name interface-type-bert-stop*** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the *Junos OS Operational Mode Commands*.



**NOTE:** To exchange BERT patterns between a local router and a remote router, include the **loopback remote** statement in the interface configuration at the remote end of the link. From the local router, issue the **test interface** command.

### Example: Configuring Bit Error Rate Testing

Configure a BERT test on a T3 interface. In this example, the run duration lasts for 120 seconds. The configured error rate is 0, which corresponds to a bit error rate of  $10^{-0}$  (1 error per bit). The configured bit pattern of **all-ones-repeating** means that every bit the interface sends is a set to a value of 1.

```
[edit interfaces]
t3-1/2/0 {
  t3-options {
    bert algorithm all-ones-repeating;
    bert-error-rate 0;
    bert-period 120;
```

```

    }
}

```

## Interface Diagnostics Operational Mode Commands

Table 7 on page 86 summarizes the command-line interface (CLI) commands you can use to run diagnostics on router interfaces. Commands are listed in alphabetical order.

**Table 7: Interface Diagnostics Operational Mode Commands**

Task	Command
Start a bit error rate test (BERT) on a DS0 interface.	<i>test interface ds0-bert-start</i>
Stop a BERT on a DS0 interface.	<i>test interface ds0-bert-stop</i>
Start a BERT on an E1 interface.	<i>test interface e1-bert-start</i>
Stop a BERT on an E1 interface.	<i>test interface e1-bert-stop</i>
Start a BERT on an E3 interface.	<i>test interface e3-bert-start</i>
Stop a BERT on an E3 interface.	<i>test interface e3-bert-stop</i>
Transmit over a facilities data link (FDL) to initiate or terminate a far-end line loopback.	<i>test interface fdl-line-loop</i>
Transmit over an FDL to initiate or terminate a far-end payload loopback.	<i>test interface fdl-payload-loop</i>
Transmit the line loopback activate code word sequence on the interface's far-end alarm and control (FEAC) channel.	<i>test interface feac-loop-initiate</i>
Transmit the line loopback deactivate code word sequence on the interface's FEAC channel.	<i>test interface feac-loop-terminate</i>
Initiate or terminate a far-end line loopback.	<i>test interface inband-line-loop</i>
Initiate or terminate a far-end payload loopback.	<i>test interface inband-payload-loop</i>
Restart auto-negotiation on a Fast Ethernet or Gigabit Ethernet interface.	<i>test interface restart-auto-negotiation</i>
Start a BERT on a T1 interface.	<i>test interface t1-bert-start</i>
Stop a BERT on a T1 interface.	<i>test interface t1-bert-stop</i>
Start a BERT on a T3 interface.	<i>test interface t3-bert-start</i>
Stop a BERT on a T3 interface.	<i>test interface t3-bert-stop</i>



.....

**NOTE:** For information about how to configure interface test parameters, see the *Junos OS Network Interfaces Library for Routing Devices*. For information about related tasks performed by network operations center (NOC) personnel, see the *Junos Interfaces Network Operations Guide*.

.....



## PART 5

# Index

- [Index on page 91](#)





# Index

## Symbols

#, comments in configuration statements.....	xii
( ), in syntax descriptions.....	xii
< >, in syntax descriptions.....	xii
[ ], in configuration statements.....	xii
{ }, in configuration statements.....	xii
(pipe), in syntax descriptions.....	xii

## B

BERT	
configuring interface diagnostics.....	81
bert-algorithm statement.....	38
usage guidelines.....	8, 81
bert-error-rate statement.....	40
usage guidelines.....	81
bert-period statement.....	42
usage guidelines.....	81
bit error rate test See BERT	
braces, in configuration statements.....	xii
brackets	
angle, in syntax descriptions.....	xii
square, in configuration statements.....	xii

## C

comments, in configuration statements.....	xii
compatibility-mode statement.....	44
conventions	
text and syntax.....	xi
curly braces, in configuration statements.....	xii
customer support.....	xiii
contacting JTAC.....	xiii

## D

documentation	
comments on.....	xiii

## E

E3 interfaces	
status information, displaying.....	58
e3-options statement.....	45

## F

fast-aps-switch statement.....	46
fcs statement.....	47
font conventions.....	xi

## I

idle-cycle-flag statement.....	48
interface diagnostics operational mode	
commands.....	86
interfaces	
configuration statements.....	15
invert-data statement.....	49

## L

logical systems	
configuration statements.....	31
loopback capability	
E3 interfaces	
example configuration.....	12
loopback statement	
ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and	
T1/T3.....	50
loopback testing.....	79

## M

manuals	
comments on.....	xiii

## N

no-payload-scrambler statement.....	52
no-unframed statement.....	54

## P

parentheses, in syntax descriptions.....	xii
payload-scrambler statement.....	52

## S

show interfaces (T3 or E3) command.....	58
start-end-flag statement.....	53
support, technical See technical support	
syntax conventions.....	xi

## T

T3 interfaces	
status information, displaying.....	58
technical support	
contacting JTAC.....	xiii

## U

unframed statement.....	54
-------------------------	----

